




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP LC32LD145V. You'll find the answers to all your questions on the SHARP LC32LD145V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP LC32LD145V
User guide SHARP LC32LD145V
Operating instructions SHARP LC32LD145V
Instructions for use SHARP LC32LD145V
Instruction manual SHARP LC32LD145V

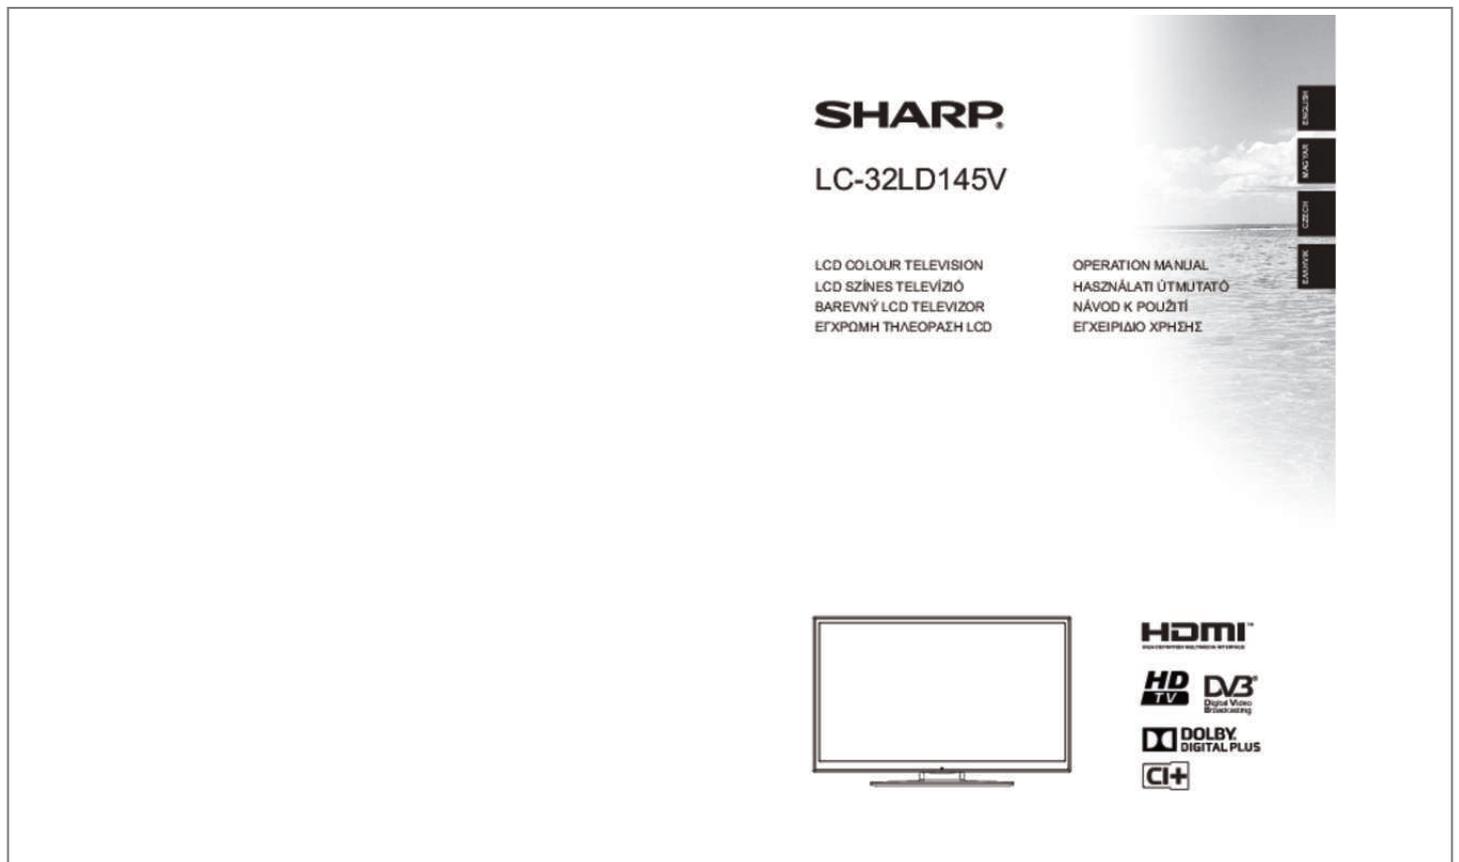

[You're reading an excerpt. Click here to read official SHARP LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)
<http://yourpdfguides.com/dref/5431977>

Manual abstract:

Never use the plug without the fuse cover fitted. @DANGER: The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner. Under no circumstances should the cut-off plug be inserted elsewhere into a 5A socket outlet, as a serious electric shock may occur. To fit an appropriate plug to the mains lead, follow the instructions below: IMPORTANT: The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: • The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black. • The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red. Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three pin plug. Before replacing the plug cover make sure that: • If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug. • The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires. IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN. English - 2 - Features • Remote controlled colour TV.

- Fully integrated digital/cable TV (DVB-T/C) • HDMI inputs are for connecting a device that has a HDMI socket. • USB input. • Programme recording. • Programme timeshifting. • OSD menu system.
- Scart socket for external devices (such as DVD Players, PVR, video games, etc.) • Stereo sound system. • Teletext. • Headphone connection. • Automatic programming system.
- Manual tuning. • Automatic power down after up to six hours. • Sleep timer. • Child lock. • Automatic sound mute when no transmission. • NTSC playback. • AVL (Automatic Volume Limiting). • PLL (Frequency Search). • PC input. • Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7.

- Game Mode. • • • • The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations. • The examples used throughout this manual are based on the LC-32LD145V model. • Dear SHARP customer Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read Important safety precautions carefully before using this product. Introduction Please read the corresponding instructions of this handbook prior to the first usage of the device, even when the usage of electronic devices is familiar to you. Please take notice of the chapter SAFETY PRECAUTIONS. Carefully keep the handbook as future reference. When selling the device or giving it away, provide these direction for use. Thank you for choosing this product.

This manual will guide you for the proper operation of your TV. Before operating the TV, please read this manual thoroughly. Please do keep this manual in a safe place for future references. This device is intended to receive and display TV programs. The different connection options make an additional expansion of the reception and display sources possible (receiver, DVD player, DVD recorder, VCR, PC etc.

). This device is only suitable for the operation in dry interiors. This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or unauthorized modifications have been made. To operate your LCD TV in extreme ambient conditions may cause the damage of the device.

English - 3 - Important safety precautions • Cleaning—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners. • Use a soft damp cloth to gently wipe the panel when it is dirty. To protect the panel, do not use a chemical cloth to clean it. Chemicals may cause damage or cracks in the cabinet of the TV. • Water and moisture—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement. • Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock. • Stand—Do not place the product on an unstable cart, stand, tripod or table.

Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer. • When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart. • Ventilation—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or impact applied. If the LCD panel is broken, be careful not to be injured by broken glass. • Heat sources—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers). • To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

- To prevent fire or shock hazard, do not place the AC cord under the TV set or other heavy items. • Headphones—Do not set the volume at a high level. Hearing experts advise against extended listening at high volume levels. • Do not display a still picture for a long time, as this could cause an afterimage to remain. • There is power consumption always if main plug is connected.

- Servicing—Do not attempt to service the product yourself. Removing covers can expose you to high voltage and other dangerous conditions. Request a qualified person to perform servicing. The LCD panel is a very high technology product, giving you fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of blue, green or red.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/5431977)

[LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)

<http://yourpdfguides.com/dref/5431977>

This is within product specifications and does not constitute a fault. Precautions when transporting the TV When transporting the TV, never carry it by holding onto the speakers. Be sure to always carry the TV by two people holding it with two hands—one hand on each side of the TV. WARNING To prevent the spread of fire, keep candles or other open flames away from this product at all times. English - 4 - Safety Precautions Read the following recommended safety precautions carefully for your safety.

Lightning In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet. Power Source The TV set should be operated only from a 220-240V AC, 50Hz outlet. Ensure that you select the correct voltage setting for your convenience. Replacement Parts When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock or other hazards. Power Cord Do not place the set, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords.

The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be replaced, it should be done by qualified personnel. Servicing Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock.

Waste Disposal • Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as a foil bag should be kept away from children • Batteries, including those which are heavy metal free, should not be disposed of with household waste. Plce consumes power in the standby operation. In order to separate the device completely from mains, the mains plug has to be pulled from the mains socket. Because of that the device should be set up in a way, that an unobstructed access to mains socket is guaranteed, so that in case of emergency the mains plug can be pulled immediately.

To exclude the danger of fire, the power cord should principally be separated from the mains socket prior to a longer period of non-usage, i.e. during vacations. English - 6 - Environmental Information This television is designed to consume less energy to help save the environment. To reduce energy consumption, you should take the following steps: If you set the Power Save Mode as Eco, the TV will switch to energy-saving mode. The Power Save Mode settings can be found In the 'Picture' section of the Main Menu. Note that some picture settings will be unavailable to be changed. Package Contents LED TV When you press the right button on the remote while Power Save Mode is set to "Eco", "Screen will be off in 15 seconds." message will be displayed on the screen. If the Power Save Mode option is set to "Disabled" press the left button.

Select PROCEED and press OK to continue. The screen will turn off immediately. If do not press any buttons the screen will turn off in 15 seconds. If you disable Power Save Mode, the Picture Mode will be automatically set to Dynamic except the Mode is set to Game or Sports. When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce energy consumption. Disconnect power when going away for longer time. It is highly recommended to activate Power Save Mode setting to reduce your annual power consumption. And also it is recommended to disconnect the TV from the mains plug to save energy more when you do not use. Please helps us to save environment by following these steps.

Repair Information Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV. Please contact your local dealer, where you have purchased this TV for further information. Instruction Book Batteries: 2 X AAA Remote Control Quick Guide Note: You should check the accessories after purchasing. Make sure that each accessory is included.

As the manufacturer 's specification supports communication on cable lengths shall be smaller than 3m. English - 7 - Viewing the TV Inserting the Batteries into the Remote Insert batteries in the remote before operating your TV. Lift the cover on the back of the remote upward gently. Install two AAA batteries.

Make sure to match the + and - ends of the batteries in the battery compartment (observe the correct polarity) Replace the cover.

Connect Power IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz socket. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet. Antenna/Cable Connection Connect the "aerial" or "cable TV" plug to the AERIAL INPUT (ANT) socket located on the back of the TV. TV Control button & Operation Notification Manufactured under license from Dolby Laboratories. TRADEMARK ACKNOWLEDGMENT 1. Up direction 2. Down direction 3. Programme/Volume / AV / Standby-On selection switch The Control button allows you to control the Volume/ Programme/ Source and Standby-On functions of the TV. To change volume: Increase the volume by pushing the button up.

Decrease the volume by pushing the button down. To change channel: Press the middle of the button, the channel information banner will appear on screen.

Scroll through the stored channels by pushing the button up or down To change source: Press the middle of the button twice, the source list will appear on screen. Scroll through the available sources by pushing the button up or down. To turn the TV off: Press the middle of the button down and hold it down for a few seconds, the TV will turn into standby mode. English - 8 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. "HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC." Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling. Notice: □ he sign Pb below the symbol for batteries indicates T that this battery contains lead.

Specification TV Broadcasting Receiving Channels Number of Preset Channels Channel Indicator RF Aerial Input Operating Voltage Audio PAL B/G D/K I/I' SECAM D/K VHF (BAND I/III) - UHF (BAND U) - HYPERBAND 1000 On Screen Display 75 Ohm (unbalanced) 220-240V AC, 50Hz.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/5431977)

[LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)

<http://yourpdfguides.com/dref/5431977>

German+Nicam Stereo 2 x 6w 65w 6,90 kg 185 x 744 x 494 mm 90 x 744 x 451 mm 16:9 DVB-T MPEG2 DVB-T MPEG4 HD DVB-T MHEG-5 Engine (for UK only) DVB-C MPEG2 DVB-C MPEG4 HD Battery Products Audio Output Power (WRMS.) (10% THD) Power Consumption Weight TV Dimensions DxLxH (with foot) TV Dimensions DxLxH (without foot) Panel DIGITAL RECEPTION Operation temperature and operation humidity: 5°C up to 45°C, 85% humidity max English - 9 - Viewing remote control 1. Standby / On 2. TV - AV / TV Channel list 3.

Volume up/down 4. Menu on/off 5. OK (Confirm) / Hold (in TXT mode) 6. Return / Back / Index page (in TXT mode) 7. No function 8. My button 1 (*) 9. My button 2 (**) 10. Coloured buttons (Red, Green, Yellow, Blue) 11. Mono-Stereo Dual I-II / Current language (in DVB channels) 12. Rapid reverse (in media browser mode) 13. Pause (in media browser mode) / Timeshift recording 14. Programme recording 15. Play (in media browser mode) 16. Stop (in media browser mode) 17. Rapid advance (in media browser mode) 18.

Subtitle on-off (in DVB channels & media browser mode) 19. Image size 20. Teletext - Mix 21. Media Browser 22. Electronic programme guide (in DVB channels) 23. Exit 24. Navigation buttons 25. Quick Menu 26. Info / Reveal (in TXT mode) 27. Programme up-down 28. Mute 29. Previous programme 30. Numeric buttons 31. AV / Source NOTE: The Remote Control range is approximately 7m / 23ft. Teletext Press "Using My button 1 (*) Press MY BUTTON 1 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen.

This confirms that the selected MY BUTTON is now associated with the selected function. Using My Button 2 (**) Press MY BUTTON 2 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen. This confirms that the selected MY BUTTON is now associated with the selected function. " button to enter. Activates video text mode when pressed once (if available in your broadcast).

Press again to view analogue teletext page. Press again to place the teletext screen over the programme (mix). Pressing again will quit the teletext mode. Digital Teletext (for UK only) Press " " button to view digital teletext information. Operate it with the coloured buttons, cursor buttons and the OK button. The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on the digital teletext screen. When the " " button is pressed again, the TV returns to television broadcast. English - 10 - Connections Connector Type Scart Connection (back) VGA Connection (back) SIDE AV PC/YPbPr Audio Connection (side) HDMI Connection (back) SPDIF Connection (back) SIDE AV Side AV (Audio/Video) Connection (side) HEADPHONE Headphone Connection (side) YPbPr Video Connection (back) USB Connection (side) CI Connection (side) PC to YPbPr Connection Cable Side Audio YPbPr or PC Connection Cable (Not supplied) Cables Device NOTE: When connecting a device via the YPbPr or Side AV input, you must use a connection cable to enable connection. See the illustrations above.

! You can use YPbPr to VGA cable (not supplied) to enable YPbPr signal via VGA input. !You cannot use VGA and YPbPr at the same time. ! To enable PC audio, you will need to use the SIDE AV CONNECTION cable's WHITE & RED inputs. ! If an external device is connected via the SCART socket, the TV will automatically switch to AV mode. ! When receiving DTV channels (Mpeg4 H.264) or while in Media Browser mode, output will not be available via the scart socket. ! When using the wall mounting kit (available from third party in the market), we recommend that you plug all your cables into the back of the TV before mounting on the wall. ! Insert or remove the CI module only when the TV is SWITCHED OFF. You should refer to the module instruction manual for details of the settings. English - 11 - First Time Installation - USB Connections Switching On/Off Cable Installation If you select CABLE option and press OK button on the remote control.

To continue, please select YES and press OK. To cancel operation, select NO and press OK. You can select frequency ranges from this screen. Enter the frequency range manually by using the numeric button. Note: Searching duration will change depending on the selected search step. To Switch the TV On Connect the power cord to the 220-240V AC, 50 Hz. To switch on the TV from standby mode either: Press the " " button, P+ / P- or a numeric button on the remote control. Press the side function switch until the TV comes on from standby. To Switch the TV Off Press the " " button on the remote control or press the side function switch until the TV switches into standby mode. To power down the TV completely, unplug the power cord from the mains socket.

Note: When the TV is switched to standby mode, the standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active. The LED can also blink when you switch on the TV from standby mode. Media Playback via USB Input You can connect a 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives or USB memory stick to your TV by using the USB inputs of the TV. First Time Installation When turned on for the first time, the language selection screen is displayed. Select the desired language and press OK. The First Time Installation (FTI) screen will be displayed next. Set your preferences using the navigation buttons and when finished, press OK to continue. You can activate Store mode option to be available in "Other settings" menu and your TV's features will be illustrated on the top of the screen.

A confirmation screen will be displayed. Select YES to proceed. If Home Mode is selected, Store mode will not be available after the First Time Installation. Press OK button to continue. IMPORTANT! Back up your files before making any connections to the TV. Manufacturer will not be responsible for any file damage or data loss. Certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV. The TV supports FAT32 and NTFS disk formatting but recording will not be available with NTFS formatted disks.

While formatting a USB hard disk that has ITB (Tera Byte) or more file capacity, you can experience problems with the formatting process. Do not repeatedly quickly plug and unplug the drive. This may cause physical damage to the USB player and USB device itself. Do not pull out USB module while playing a file. Recording a Programme IMPORTANT: When using a new USB hard disk drive, it is recommended that you first format the disk using your TV's "Format Disk" option.

Note : To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature.



[You're reading an excerpt. Click here to read official SHARP LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)
<http://yourpdfguides.com/dref/5431977>

Activates or deactivates the blue background system when the signal is weak or absent. To ensure that your TV always has the most up to date firmware. Displays application version. Enables any special feature sent from the broadcaster. Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. You can use this feature, only if the broadcaster supports that additional narration track. Note: Audio description sound feature cannot be available in recording or time shifting mode. Settings Menu Contents Other Settings: Displays other setting options of the TV set: Auto TV Off You can set the timeout value of auto off feature. When the timeout value is reached and the TV has not been operated for a selected time, the TV will go into standby mode. English - 15 - TV Menu Features and Functions Store Mode Power Up Mode If you are displaying the TV in a store, you can activate this mode.

Whilst Store Mode is enabled, some items in the TV menu may not be available. This setting configures the power up mode preference. Displays automatic tuning options. Digital Aerial: Searches and stores aerial DVB stations. Digital Cable: Searches and stores cable DVB stations. Analogue: Searches and stores analogue stations. Digital Aerial & Analogue: Searches and stores aerial DVB and analogue stations. Digital Cable & Analogue: Searches and stores cable DVB and analogue stations. This feature can be used for direct broadcast entry. Searches for the linked channels in the broadcast system.

You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored. Deletes all stored channels and settings, resets TV to factory settings. Install and Retune Menu Contents Automatic Channel Scan (Retune) (If available) Manual Channel Scan Network Channel Scan Analogue Fine Tune First Time Installation General TV Operation Using the Channel List The TV sorts all stored stations in the Channel List. You can edit this channel list, set favourites or set active stations to be listed by using the Channel List options.

Configuring Parental Settings To prohibit viewing of certain programmes, channels and menus can be locked by using the parental control system. To display parental lock menu options, the PIN number should be entered. The factory default PIN number is 0000. After coding the correct PIN number, parental settings menu will be displayed. Menu Lock: Menu lock setting enables or disables the menu access.

Maturity Lock: When set, this option gets the maturity information from the broadcast and if this maturity level is disabled, disables access to the broadcast. Child Lock: When Child Lock is set, the TV can only be controlled by the remote control. In this case the control panel buttons will not work. Set PIN: Defines a new PIN number. Default PIN code can change depending on the selected country. If you are asked to enter a PIN code for viewing a menu option, use one of the following codes: 4725, 0000 or 1234. Electronic Programme Guide (EPG) Some, but not all channels send information about the current and next programmes. Press the " to view the EPG menu. Red button (Prev Day): Displays the programmes of previous day. Green button (Next day): Displays the programmes of the next day.

Yellow button (Zoom): Expands programme information. Blue button (Filter): Views filtering options. SUBTTL: Press " " button to view Select Genre menu. Using this feature, you can search the programme guide database in accordance with the genre. Info available in the programme guide will be searched and results matching your criteria will be listed. English - 16 " button INFO "i": Displays, in detailed, information on the programme selected. Numeric buttons (Jump): Jumps to the preferred channel directly via numeric buttons. OK: Displays programme options. Text (Search): Displays "Guide Search" menu. (Now) : Shows the current programme.

(RECORD): The TV will start to record the selected programme. You can press again to stop the recording. P+P- : More event info IMPORTANT: Connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature. Note: Switching to a different broadcast or source is not available during a recording.

Software Upgrade Your TV is capable of finding and updating automatically via the Aerial/Cable signal. Software upgrade search via user interface Simply navigate on your main menu. Choose Settings and select Other Settings menu. In Other Settings menu navigate on to the Software for Upgrade item and press OK button to check for a new software upgrade. In Upgrade Options menu select Scan for upgrade and press OK button.

If a new upgrade is found, it starts to download the upgrade. A progress bar indicates the remaining download progress. When download completes with success a message is displayed for reboot to activate new software. Press OK to continue with the reboot operation. Programme Options In EPG menu, press the OK button to enter the Event Options menu. Select Channel In EPG menu, using this option, you can switch to the selected channel. Record / Delete

Record Timer After you have selected a programme in the EPG menu, press the OK button. Select the Record option and press the OK button. After this operation, a recording will be scheduled for the selected programme. To cancel an already set recording, highlight that programme and press the OK button and select the option Delete Rec.

Timer. The recording will be cancelled. Set Timer / Delete Timer After you have selected a programme in the EPG menu, press the OK button. Select the Set Timer on Event option and press the OK button. You can set a timer for future programmes. To cancel an already set timer, highlight that programme and press the OK button. Then select "Delete Timer" option. The timer will be cancelled. Note: It is not possible to record two channels at the same time. 3 AM search and upgrade mode While the TV is connected to an aerial signal.

If Automatic scanning in the Upgrade Options menu is enabled, the TV wakes up at 03:00 and searches broadcast channels for new software upgrades. If new software is found and downloaded successfully, the next time the TV powers up, it will have the new software version. Note: If the TV fails to come on after the upgrade unplug the TV for 2 minutes and plug in again. Troubleshooting & Tips Tv will not turn on Make sure the power cord is plugged in securely to wall outlet. The batteries in the remote control may be exhausted.

Press the Power button on the TV. Poor picture • Have you selected the correct TV system? • Low signal level can cause picture distortion. Please check antenna access. • Check if you have entered the correct channel frequency if you have done manual tuning. • The picture quality may degrade when two devices are connected to the TV at the same time.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/5431977)

[LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)

<http://yourpdfguides.com/dref/5431977>

In such a case, disconnect one of the devices. No picture • No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected. • Is the antenna connected properly? • Is the antenna cable damaged? • Are suitable plugs used to connect the antenna? • If you are in doubt, consult your dealer. English - 17 - No sound • Has the TV been set to mute? To cancel mute, press the “ ” button, or increase the volume level. • Sound is coming from only one speaker. Is the balance set to one extreme? See Sound Menu section. Remote control - does not operate • The batteries may be exhausted. Replace the batteries.

Input sources - can not be selected • If you cannot select an input source, it is possible that no device is connected. if not • Check the AV cables and connections if you have tried to connect a device. Recording unavailable To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable recording feature. If you cannot record, try switching off the TV and then re-inserting the USB device. USB is too slow If a “USB is too slow” message is displayed on the screen while starting a recording, try restarting the recording. If you still get the same error, it is possible that your USB disk does not meet the speed requirements. Try connecting another USB disk. English - 18 - PC Input Typical Display

Modes The following table is an illustration of some of the typical video display modes. Your TV may not support all resolutions. Your TV supports up to 1920x1080. Index 1 2 3 4 5 6 7 8 9 10 11 Resolution 1024x768 1280x768 1360x768 800x600 800x600 1024x768 1280x1024 1280x960 1400x1050 1600x1200 1920x1080 Frequency 60 Hz 60 Hz 60 Hz 56 Hz 60 Hz 66 Hz 60 Hz 60 Hz 60 Hz 60 Hz 60 Hz AV and HDMI Signal Compatibility Source EXT (SCART) Supported Signals PAL 50/60 NTSC 60 RGB 50 RGB 60 Side AV PAL 50/60 NTSC 60 480I, 480P PC/ YPbPr 576I, 576P 720P 1080I 1080P 480I 480P 576I, 576P HDMI1 HDMI2 720P 1080I 1080P 60Hz 50Hz 50Hz,60Hz 50Hz,60Hz 50Hz,60Hz 60Hz 60Hz 50Hz 50Hz,60Hz 50Hz,60Hz 24Hz, 25Hz 30Hz, 50Hz, 60Hz O Available O O O O O O O O O O O O O O (X: Not Available, O: Available) In some cases a signal on the TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

Supported File Formats for USB Mode Media File Extension mpg, mpeg vob mp4 mkv Video Format Audio Remarks (Maximum resolution/Bit rate etc.) MPEG1: 768x576 @30P MPEG2:1920x1080 @ 30P MPEG1, MPEG2 MPEG4, Xvid , H.264 H.264, MPEG4,VC-1 MPEG2, MPEG4, Xvid , H.264 H.

264/VP6/Sorenson MPEG4 , H.264 MPEG4 , VC-1 Baseline JPEG Progressive JPEG MPEG 1 Layer 1 / 2 (MP3) - 1920x1080 @ 30P Movie avi flv 3gp wmv,asf H.264/VP6:1920x1080 @ 30P Sorenson: 352x288 @30P 1920x1080 @ 30P 1920x1080 @ 30P 32Kbps ~ 320Kbps(Bit rate) 32K, 44.1k, 48k Hz,16K, 22.05K, 24K Hz,8K, 11.025K, 12K Hz(Sampling rate) max WxH = 17000x10000 4147200bytes max WxH = 4000x4000 3840000bytes max WxH = 5760x4096 3840000bytes - Music Photo Subtitle .mp3 .jpg .jpeg . .

bmp .sub .srt English - 19 - Dimensional Drawings Note: The unit of the measurements is mm. English - 20 - End of life disposal A. Information on Disposal for Users (private households) 1. In the European Union Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. in some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one. *) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. @@@@There is a separate collection system for these products. 2. @@@@Further collection facilities are listed on the homepage of www.swico.ch or www.

sens.ch. B. Information on Disposal for Business Users 1. In the European Union If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take-back of your used products. 2. In other Countries outside the EU If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal. The battery supplied with this product contains traces of Lead. For EU: The crossed-out wheeled bin implies that used batteries should not be put to the general household waste! There is a separate collection system for used batteries, to allow proper treatment and recycling in accordance with legislation. Please contact your local authority for details on the collection and recycling schemes. For Switzerland: The used battery is to be returned to the selling point. For other non-EU countries: Please contact your local authority for correct method of disposal of the used battery.

English - 21 - Installing the Stand IMPORTANT Please read the following information carefully before attaching the stand to your new Sharp Television. Installing the Stand • TV is unplugged from its power source. • Place the Sharp Television on a soft, stable and flat surface, facing down. • Place the Stand on the stand mounting pattern on the rear side of the TV. • Ensure the Stand is placed correctly and that you can see the screw holes. • Insert the four screws provided and tighten them gently until the stand is properly fitted. English - 22 - Uninstalling the Stand IMPORTANT Please read the following information carefully before detaching the stand of your Sharp Television. Uninstalling the Stand • Before detaching the stand, ensure that the TV is unplugged from its power source. • Place the Sharp Television on a soft, stable and flat surface, facing down. • Unscrew gently the four screws that attach the foot assembly and remove the screws when they are completely unscrewed. • Remove the stand gently from the panel. English - 23 - Screw Dimensions Wall Mounting Screw length = A+B Screw Cabinet Wall mount angle TO THE PRODUCT MODEL VESA MIN.



[You're reading an excerpt. Click here to read official SHARP LC32LD145V user guide](http://yourpdfguides.com/dref/5431977)
<http://yourpdfguides.com/dref/5431977>

/ MAX. SCREW LENGTH (A LENGTH) LC-32LD145E LC-32LD145K LC-32LD145V LC-39LD145E LC-39LD145K LC-39LD145V 200 x 100 (W x H) M4 X 6 / M4 X 10 200 x 200 (W x H) M6 X 10 / M6 X 14 English - 24 - LC-32LD145V LCD COLOUR TELEVISION LCD SZÍNES TELEVÍZIÓ BAREVNÝ LCD TELEVIZOR ΕΓΧΡΩΜΗ ΤΗΛΕΟΡΑΣΗ LCD OPERATION MANUAL HASZNÁLATI ÚTMUTATÓ NÁVOD K POUŽITÍ ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ 50252465 ΕΛΛΗΒΙΚ CZECH MAGYAR ENGLISH .



[You're reading an excerpt. Click here to read official SHARP](#)

[LC32LD145V user guide](#)

<http://yourpdfguides.com/dref/5431977>