



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP LC32WD1E. You'll find the answers to all your questions on the SHARP LC32WD1E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP LC32WD1E
User guide SHARP LC32WD1E
Operating instructions SHARP LC32WD1E
Instructions for use SHARP LC32WD1E
Instruction manual SHARP LC32WD1E



SHARP

LC-32WD1E
LC-32WT1E
LC-32WD1S
LC-37WD1E
LC-37WT1E
LC-37WD1S

LCD COLOUR TELEVISION
LCD-FARBFERNSEHGERÄT
TÉLÉVISION COULEUR À ÉCRAN
À CRISTAUX LIQUIDES (LCD)
TELEVISORE A COLORI LCD
LCD-KLEURENTELEVISIE
TELEVISIÓN EN COLOR LCD

AQUOS



HD ready **SRS TruSurround**
HDMI **DVB**
Digital Video Broadcasting

OPERATION MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUALE DI ISTRUZIONI
GEBRUIKSAANWIJZING
MANUAL DE MANEJO

ENGLISH
DEUTSCH
FRANÇAIS
ITALIANO
NEDERLANDS
ESPAÑOL



[You're reading an excerpt. Click here to read official SHARP LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)
<http://yourpdfguides.com/dref/2809500>

Manual abstract:

Never use the plug without the fuse cover fitted. In the unlikely event the mains plug and is an appropriate type. Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet, as a serious electric shock may occur. To fit an appropriate plug to the mains lead, follow the instructions below: **IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code: Blue: Neutral Brown: Live As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: · The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black. · The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red. Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three-pin plug. Before replacing the plug cover make sure that: · If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug. · The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires. **IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN.**

Contents Dear Sharp customer .

.....

.....

.....

.....

.....

.. 2 Important safety precautions ...

.....

.....

.....

.... 2 Trademarks.

.....

.....

.....

.....

..... 2 Supplied accessories

.....

.....

.....

.....

.... 3 Quick start guide .

.....

.....

.....

.....

.....

..... 3 Setting up the TV

.....

.....

.....

.....

.... 3 Installing batteries in the remote control.

.....

.....

..... 4 Using the remote control

.....

.....

.....

..... 5 About using the remote control ...

.....

.....

.....

. 5 TV front view

.....

.....

.....	
.....	
.. 5 Remote control function	
.....	
.....	
.....	
..... 6 Television rear and side view	
.....	
.....	
.....	
.... 7 Turning on the television	
.....	
.....	
.....	
..... 7 Standby mode and LED indicator	
.....	
.....	
.....	
.. 7 Other LED indicators	
.....	
.....	
.....	
..... 8 Automatic setup	
.....	
.....	
.....	
.....	
.. 8 Automatic installation (DTV)	
.....	
.....	
.....	
.. 8 Selecting a channel	
.....	
.....	
.....	
.. 8 Using external equipment	
.....	
.....	
.....	
..... 9 Setting the input source	
.....	
.....	
.....	
.....	
9 Connecting audio/video equipment	
.....	
.....	
.... 9 Connecting a VCR or DVD (display)	
.....	
.....	
.... 9 Connecting a VCR (recording)	
.....	
.....	
.....	

..... 9 Connecting a game console or camcorder ..
.....
.....
... 9 Connecting a DVD player
.....
.....
.....
. 9 Connecting a decoder.
.....
.....
.....
. 10 Connecting a computer.
.....
.....
.....
10 Menu operations (main)
.....
.....
.....
..... 11 Menu operation buttons
.....
.....
.....
..... 11 Using the on-screen display ...
.....
.....
.....
..... 11 Common operations
.....
.....
.....
.....
.....
. 12 Menu operation: A.
.....
.....
.....
..... 12 Menu operation: B.
.....
.....
.....
..... 12 Menu operation: C ...
.....
.....
.....
..... 12 Picture Menu .
.....
.....
.....
.....
.....
..... 13 AV Mode .
.....
.....

.....

.....

. 14 General Audio Adjustments

.....

.....

..... 15 SRS TruSurround

.....

.....

.....

..... 15 Auto Volume .

.....

.....

.....

.....

. 15 Reset. . . .

.....

.....

.....

..... 15 Power Control Menu.

.....

.....

.....

.....

..... 15 No Signal Off.

.....

.....

.....

.....

. 15 No Operation Off.

.....

.....

.....

.....

15 Power Management

.....

.....

.....

. 15 Setup Menu

.....

.....

.....

..... 16 Language

.....

.....

.....

.....

..... 16 Country

.....

.....

.....

.....
.....
.. 16 Installation ..

.....
.....
.....
..... 16 Programme Selection

.....
.....
.....
.. 16 Programme Name

.....
.....
.....
. 16 Tuner Frequency

.....
.....
.....
. 16 Skip

.....
.....
.....
.....
. 16 Child Locked

.....
.....
.....
..... 16 Automatic Installation

.....
.....
.....
16 Colour Standard

.....
.....
.....
17 Sound Standard

.....
.....
.....
. 17 Decoder

.....
.....
.....
..... 17 Overview Menu ..

.....
.....
.....
.....
.....
.....
.....
... 17 Child Lock ..

.....
.. 17 Fine Sync

.....
.....
.....
.....

. 17 Input Label

.....
.....
.....

.....
18 Position

.....
.....

.....
.....

. 18 WSS (Wide Screen Signalling)

.....
... 18 Antenna Supply Voltage .

.....
.....

.....
.. 18 Clock Menu ...

.....
.....

.....
.....

18 Option Menu

.....
.....

.....
.....

. 18 Input Select

.....
.....

.....
.....

..... 18 Audio Only .

.....
.....

.....
.....

... 18 DNR (Digital Noise Reduction) ..

.....
.....

.....
.....

. 18 Colour Standard. ...

.....
.....

.....
.....

. 19 HDMI Setup

.....
.....

.....
.....
.....
..... 19 Useful features

.....
.....
.....
.....
..... 20 Wide Mode ...
.....
.....
.....

.....
.....
..... 20 Wide Mode .
.....

.....
.....
.....
.....
..... 20 Freezing Images

.....
.....
.....
..... 20 Using Teletext .
.....

.....
.....
..... 20 Time display .
.....

.....
.....
.....
..... 21 DTV menu operations

.....
.....
.....
.....
..... 22 Using the on-screen display

.....
.....
.....
.....
..... 22 Common Operations .
.....

.....
.....
.....
.....
..... 22 Timer

.....
.....
.....
. 22 New Timer

.....
.....
.....
.....

23 Channels

.....
.....
.....

.....
.....
.....
... 23 Favourites .

.....
.....

.....
.....
.....
... 23 Edit.....

.....
.....
.....
.....

.....
.....
.....
..... 23 Edit Favourite List..

.....
.....
.....

.....
.....
.....
..... 23 Child Lock..

.....
.....
.....

.....
.....
.....
... 24 Channel Search .

.....
.....

.....
.....
.....
... 24 Automatic Search .

.....

.....
.....
.....
... 24 Manual Search .

.....

.....
.....
.....
. 24 Signal Info

.....
.....
.....
.....

24 Installation

.....
.....

.....
.....
... 24 Language ..
.....
.....
.....
.....
.....
... 24 Clock
.....



[You're reading an excerpt. Click here to read official SHARP
LC32WD1E user guide
http://yourpdfguides.com/dref/2809500](http://yourpdfguides.com/dref/2809500)

. 27 Displaying subtitles

.....

.....

.....

.....

. . 27 Using the MHEG5 application (UK only)

.....

. . 28 Software Upgrade (Auto) . . .

.....

.....

. . . .d cause an afterimage to remain. There is always power consumption if the main plug is connected. The LCD panel is very high technology product, giving you a fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of black, white, blue, green, or red. This is within product specifications and does not constitute a fault. Precautions when transporting the TV When moving the TV, it should always be carried by two people using both hands. Be careful not to apply pressure to the display.

Trademarks HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. TruSurround, SRS and symbol license from SRS Labs, Inc. are trademarks of SRS Labs, Inc. TruSurround technology is incorporated under The "HD ready" Logo is a trademark of EICTA. The DVB logo is the registered trademark of the Digital Video Broadcasting DVB Project.

2 Supplied accessories Remote control unit (x1) Batteries (x2) Cable clamp (x1) AA AC cord (x1 or x2) (For Europe, except U.K. and Eire) (For U.K. and Eire) Cable tie (x1) U.

K. type 3-pin AC cord is only included with model LC-32WD1E Page 3 · Operation manual (This publication) Quick start guide Setting up the TV 1 2 3 Place the TV close to the AC outlet, and keep the power plug within reach. (For Europe, except U.K. and Eire) (For U.K. and Eire) AC cord 1 To receive analogue or digital terrestrially broadcasted stations, connect the antenna cable (from the antenna/cable socket or the room/roof antenna) to the input antenna port on the back of the television. If there is good reception, an indoor antenna can also be used. If you are using an active antenna, the supply voltage (5V) must also be set. (See page 18.

) Connect the AC cord to the power port on the back of the television. Plug the AC cord into the AC outlet. **IT IS THE RESPONSIBILITY OF THE INSTALLER TO MAKE SURE THE TELEVISION IS INSTALLED SAFELY. IF YOU ARE USING ANY ACCESSORIES WITH THIS TELEVISION (SUCH AS A WALL MOUNT BRACKET OR A TELEVISION STAND), FOLLOW THE ACCESSORY MANUFACTURER'S SPECIFICATIONS AND INSTALLATION INSTRUCTIONS.** 2 3 WARNING!! 3 Quick start guide Setting the TV on the wall · This TV should be mounted on the wall only with a wall mount bracket approved and available from SHARP. (See page 30.) The use of other wall mount brackets may result in an unstable installation and may cause serious injuries. You can ask a qualified service personnel about using an optional bracket to mount the TV to the wall. Installing the TV on the wall requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves.

SHARP bears no responsibility for improper mounting or mounting that results in accident or injury. · Bundling the cables Installing batteries in the remote control Before using the remote control, install the two (supplied) AA batteries. When the batteries become worn out or "dead", replace the batteries. 1 2 Hold in the tab on the battery cover and pull the cover towards the direction of the arrow. Insert two AA batteries.

Place the batteries with the terminals on the batteries (+ and -) in the positions as indicated in the battery compartment. 3 Insert the smaller tab of the battery cover into the remote control opening (1) and then press down on the cover until it clicks into place (2). 1 2 CAUTION: Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below. Do not mix different types of batteries.

Different types of batteries have different characteristics. Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries. Remove batteries as soon as they have worn out. Chemicals that leak from batteries can cause a rash. If you find any chemical leakage, wipe the area clean with a cloth. The batteries supplied with this product may have a shorter life expectancy due to storage conditions.

If you will not be using the remote control for an extended period of time, remove the batteries from it. Dispose batteries according to local requirements. Please do not use the ordinary dust bin.

4 Quick start guide Using the remote control To use the remote control, point it towards the remote control sensor on the front of the TV. 5m 30 30 About using the remote control Do not expose the remote control to shock. Do not expose the remote control to high humidity conditions or liquids. Do not expose the remote control to direct sunlight. The heat may cause deformations of the remote control. If there are objects between the remote control and the sensor, it may prevent normal operation. If the remote control sensor on the TV is in direct sunlight or strong lighting, the remote control may not work as expected. If you experience this, change the lighting, angle to the television, or use the remote control closer to the TV. TV front view For information on the LED indicator meanings, see page 7. Remote control sensor OPC sensor OPC LED indicator SLEEP LED indicator Standby/On LED indicator Remote Control indicator 5 Quick start guide Remote control function 1 (Standby/On) Switches the TV between on and standby mode.

(See page 7.) AV MODE Selects a preset audio/video setting (AV Mode). (See page 13.) OPC Turns the Optical Picture Control (OPC) "On" and "Off". (See page 13.

) 09 TV/DTV: Directly selects the channel. Teletext: Selects the page. (Flashback) Returns to the previous channel or AV input. (WIDE MODE) Selects wide mode. (See page 20.

) (Sound mode) See "Using Multiplex" on page 6. EPG DTV: Displays the EPG (Electronic Programme Guide) screen. (See page 26.) ESG DTV: Displays the ESG (Electronic Service Guide) screen.



[You're reading an excerpt. Click here to read official SHARP LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)
<http://yourpdfguides.com/dref/2809500>

(See page 26.) (Teletext) TV: Selects the teletext mode. (See page 21.) DTV: Selects the teletext mode or MHEG5 (if available). If both are available, press for MHEG5. Press for 1-2 seconds for teletext.

(See page 21 and 28.) /// (Cursor) Selects an item on the screen. END Press to exit the on-screen display menu screen. (Reveal hidden teletext) Reveals/hides hidden teletext information. (See page 20.) (Freeze/Hold) TV/DTV/External: Freezes the onscreen image. Teletext: Stop updating teletext pages automatically or release the hold mode.(See page 20.) TruSurround Turns SRS TruSurround® "On" and "Off". (See page 15.

) RADIO DTV: Switches between RADIO and DTV Mode. (Mute) Turns the sound "On" and "Off". 21 22 30 24 DTV MENU DTV: Displays the DTV on-screen display menus. (See page 22.) MENU Displays the Main TV on-screen display menus.

(See page 11.) OK Selects an option in the on-screen display menu. Displays the programme list (except for external input). RETURN Returns to the previous menu. (Subpage) Displays current time.

Teletext: Displays or hides subpages. (See page 20.) (Subtitle for Teletext) TV/External: Turns the teletext subtitles "On" and "Off". DTV: Displays/hides the subtitle selection. Colour (Red/Green/Yellow/Blue) TeleText: Selects a group or block of pages displayed in the coloured brackets at the bottom of the screen by pressing the corresponding colour button on the remote control. DTV: When using the on-screen display, assigned tasks as indicated at the bottom of the screen. 2 25 3 26 4 27 28 5 6 7 8 29 9 10 18 11 12 DTV Switches between analogue TV mode and DTV mode. (+ / -) (Volume) Increases or decreases the volume. P () TV/DTV: Selects the channel. External: Switches to TV or DTV input mode.

Teletext: Move to the next or previous page. (Input source) Selects an input source. (See page 9.) SLEEP Sets the amount of time the TV will stay on before automatically turning off. (In units of 30 minutes to a maximum of 2 hours 30 minutes.) (Display information) TV: Displays channel information. (See page 21.) DTV: Displays the service banner. (See page 27.) Using Multiplex DTV mode-- Press languages.

to change 19 20 13 Analogue TV mode--Each time you press , the mode switches as illustrated in the following table. Signal Mono Mono Stereo Dual Mono Mono Stereo, Mono Channel A (I), Channel B (II), Channel AB (I+II) NICAM Mono NICAM Stereo, FM/AM* Mono NICAM Channel A (I), NICAM Channel B (II), NICAM Channel AB (I+II), FM/AM Mono* A2 TV broadcasts selection Selectable Item 14 15 23 NICAM TV broadcasts selection Mono Stereo Dual 16 17 * Depending on the country, the option is either AM or FM mono. 6 Quick start guide Television rear and side view P (/) (Programme [channel] buttons) (- / (Input button) (Standby/On button) +) (Volume buttons) EXT 3 Connections S-Video input (Y/C) Composite input (CVBS) Audio input - Left Audio input - Right Headphones (audio out) The S-Video (Y/C) and composite (CVBS) connection cannot be used at the same time. AC Input Antenna input (DVB-T 5V=80 mA) Common Interface slot EXT 4 (Component input) EXT 6 (HDMI input, Stereo input for DVI-HDMI connections) EXT 2 (SCART input/output) Audio output Service (D-Sub 9) EXT 1* (SCART input/output) EXT 5 (VGA / Stereo input) EXT 7 (HDMI input) *EXT 1 provides tuner output. Use EXT 1 to connect a decoder or audiovisual equipment used for recording purposes (ex.

VCR). Turning on the television To turn on the TV, press TV. NOTE: · If the TV is not going to be used for a long period of time, unplug the power cord from the AC outlet to remove AC power. on the remote control or on the Standby mode and LED indicator Press · on the remote control when the TV is on. This will put the TV into standby mode.

The image on the TV will disappear and the indicator on the TV will change from green to red. (See page 5.) Small amounts of electrical power are being used when the TV is in standby mode. To completely remove power from the TV, unplug the power cord from the AC outlet. There is an active standby mode and a passive standby mode. · 7 Quick start guide · The TV goes into active standby mode when the digital tuner is active. (This is necessary for features such as the timer feature.) The TV goes into passive standby mode when the digital tuner is not active. When the TV is in active standby mode, it consumes more power than when the TV is in passive standby mode. See "Specifications" on page 31 for specific power consumption information.

If you want to keep power consumption as low as possible, avoid using features that require the digital tuner to remain active while in standby mode. The auto search begins. The TV performs a frequency scan to detect the TV channels available on the network. During the frequency scan, a TV channel with ACI (Automatic Channel Installation) information may be detected. ACI information is teletext-based information from the channel source that describes the TV channels (including channel labels and channel numbers) available on the network. · · 4 5 If ACI information is detected, the ACI information will be displayed on the screen. Press / to select the correct region and then press MENU. The Auto Installation will end and you are ready to watch analogue TV.

The Standby/On LED has the following indications. Off Green Red Power is off.

There is no power to the TV. (The TV is not connected to the mains plug.) The TV is on. The TV is in standby mode. Automatic installation (DTV) Digital TV or Digital Video Broadcasting (DVB) is a transmission scheme.

DVB typically provides more stations, clearer picture quality and other services displayed on the screen. It also allows a range of new features and services including subtitles and multiple audio tracks. To watch DTV broadcasts, complete the following procedure to scan all available services in your area. NOTE: · · You cannot use any DTV features until Auto Installation has been completed. To complete this step, you must have a digital antenna cable connected properly to the TV.

(See page 3.) Other LED indicators See page 5 for the location of the LED indicators. The Sleep LED indicator has the following indications. Off Red The SLEEP timer mode is set to "Off". The SLEEP timer mode is set to "On". The OPC LED indicator has the following indications. Off Green The OPC setting is set to "Off". The OPC setting is set to "On". 1 2 On the remote control, press DTV. · The DTV Automatic Installation displays.

Automatic setup The first time the TV is powered on, Auto Install is activated automatically. The automatic setup feature allows you to set the on-screen display language, set the country or region, and do a search for channels. NOTE: · The automatic setup feature will automatically appear only once and only the first time the TV is plugged in.



[You're reading an excerpt. Click here to read official SHARP LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)
<http://yourpdfguides.com/dref/2809500>

However, you can change these settings at any time (see "Setup Menu" on page 16). Press END to exit automatic setup at any time. For the TV to find channels (step 3), you must have an analogue antenna cable connected properly to the TV. (See page 3.) // to Press / to select the desired country or region.

Press OK. The auto search begins, using the predefined frequency channel list for the country or region.

Auto Installation will end and you are ready to watch DTV. Selecting a channel 1 On the remote control, press DTV to choose the analogue TV mode or the DTV mode. · Depending on your selection, a corresponding analogue antenna cable or digital antenna cable must be properly connected to the TV. See page 3. · 2 You can scroll through the channels using the P () buttons.

Press OK to display the programme list. Or enter the channel using the 09 numeric buttons. 1 2 3 Press / to select Language, and then press to select the desired language. Press / to select Country, and then press select the desired country or region. 3 If you are using DTV, you can use the Electronic Programme Guide (EPG) or the Electronic Service Guide (ESG).

(See page 26.) To do a search for available analogue channels, press / to select Installation, and then press / or OK. 8 Using external equipment Setting the input source To receive audio or video from an external source, set the input source using on the remote control or the TV. Connecting a game console or camcorder Connect a game console, camcorder, or similar device to any of the appropriate connections on the TV. However, we suggest using EXT3 on the side panel for convenience. AUDIO cable* S-video cable* or Connecting audio/video equipment The way you connect your television depends on the equipment you want to connect, the ports available on the equipment (and the TV), and the quality of the signal you want to receive. Input and output connections are available on the rear and on the side of the TV. Refer to "Television rear and side view" on page 7 for more information. NOTE: · The following diagrams show common connection scenarios. For best results, use the highest quality connection possible.

The cables marked with * are commercially available items. L-AUDIO-R S-VIDEO AV OUTPUT VIDEO Composite video cable* · Connecting a VCR or DVD (display) Use EXT1 or EXT2 to connect a VCR, DVD player, and other audiovisual equipment that are used for display. SCART cable* Game console Camcorder NOTE: · · The S-Video (Y/C) and composite (CVBS) connection cannot be used at the same time. For optimal display, set the input setting to the type of input being received. See page 18. Connecting a DVD player Use EXT3 (side panel), EXT4, EXT6, or EXT7 to connect a DVD player or similar equipment. Example 1: EXT3 (side panel) VCR NOTE: · For optimal display, set the input setting to the type of input being received. See "Input Select" on page 18. If you are connecting recording equipment, you must use EXT1. AUDIO cable* S-video cable* or · Connecting a VCR (recording) Use the EXT1 to connect a VCR or other audiovisual equipment that are used for recording purposes.

SCART cable* L-AUDIO-R S-VIDEO AV OUTPUT VIDEO Composite video cable* DVD player NOTE: · The S-Video (Y/C) and composite (CVBS) connection cannot be used at the same time. VCR NOTE: · For optimal display, set the input setting to the type of input being received. See "Input Select" on page 18. 9 Using external equipment Example 2: EXT4 Component cable* (CR) Connecting a computer Use EXT5 to connect a computer. You can also use the S-Video connector in EXT3 (not shown).

PC RGB cable* COMPONENT PR Y PB (CB) Audio cable* ϕ 3.5 mm stereo minijack cable* DVD player Example 3: EXT6 or EXT7 HDMI cable* PC RGB/DVI conversion cable* ϕ 3.5 mm stereo minijack cable* NOTE: · When connecting to a PC, the correct signal type (of the supported options) is automatically detected. See "PC compatibility chart" on page 30. DVD player When using an HDMI-DVI conversion adapter/cable, input the Audio signal here NOTE: · When connecting an HDMI-DVI conversion adapter/cable to the HDMI terminal, the image may not come in clearly.

Connecting a decoder Connect a decoder to the EXT1 connection on the TV. Do not use EXT2. EXT 1 SCART cable* Decoder NOTE: · If the decoder needs to receive signals from the TV, be sure to set the "Decoder" setting on page 17. 10 Menu operations (main) This section describes how to use the main menus.

The settings in these menus control both the analogue and digital portions of the TV. For information on DTV-specific menus, see page 22. Using the on-screen display Menu operation buttons To enter and operate the main on-screen display menus, use the following buttons on the remote control. 1 2 3 4 Items in yellow · Indicates the item currently selected. Items in light blue · Indicates the current setting for an item. Items in dark blue · Indicates an item that can be selected.

Number value below a setting · For items with a range setting, indicates the exact setting of the item. The screens in the operation manual are for explanation purposes (some are enlarged, others are cropped) and may vary slightly from the actual screens. NOTE: · DTV MENU /// OK RETURN END Switches between analogue TV mode and digital TV mode. Press to display the main menu or close the main menu. Press to move through the on-screen display menu, select an item on the screen, or adjust an item. Press to select or execute a highlighted item. Press to return to the previous menu. Press to exit the on-screen display menu. 11 Menu operations (main) Common operations When navigating through the on-screen display, there are three types of menus (described in the following sections). Menu operation: B 1 2 Press MENU.

· The TV Menu screen displays. Menu operation: A 1 Press MENU. · The TV Menu screen displays. 2 Press / to select the desired menu, and then press OK. (Example: Picture Menu, Sound Menu, etc.) . Press / to select the desired menu, and then press OK. (Example: Picture Menu, Sound Menu, etc.). 3 3 4 Press / to select the desired setting, and then press / to adjust the setting.

(Example: AV Mode, OPC, etc.). Press END to exit. Press / to select the desired setting, and then press / to adjust the setting to the desired position (Example: Backlight Brightness, Contrast, etc.). Press END to exit. 4 Menu operation: C 1 2 3 4 5 Press MENU. · The TV Menu screen displays. Press / to select the desired menu, and then press OK. (Example: Picture Menu, Sound Menu, etc.)

). Press / to select the desired sub-menu item, and then press OK (Example: Advanced, etc.)



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/2809500)

[LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)

<http://yourpdfguides.com/dref/2809500>

). Press / to select the desired setting, and then press / to adjust the setting (Example: Colour Temperature, Blackstretch, etc.). Press END to exit. 12 Menu operations (main) Picture Menu Optical Picture Control (OPC) Menu Operation: A (page 12) The OPC setting automatically adjusts the brightness of the screen to the optimal setting for the background light in the room. The OPC sensor cannot be blocked for this feature to work properly. (See page 5.) On The screen brightness automatically adjusts to the optimal setting for the brightness of the room.

The OPC setting is on. The Backlight Brightness setting is displayed on the TV during the adjustment. The screen brightness is fixed to the value set in the Backlight Brightness setting. On (Display) Off NOTE: · You can also select these options by pressing OPC on the remote control. (See page 6.

) Picture adjustments AV Mode Menu Operation: A (page 12) The AV Mode setting provides pre-programmed options that adjust the picture and sound settings. The following options are available. Dynamic Standard Soft User Provides a high-contrast image. Most useful when viewing sports. For use in a normally bright room.

Provides a highly defined image. Provides a softer image. The user defined setting. To use this feature, select User. Then manually define the video and audio settings. When you select User, these settings will be used. Reduces the power consumption of the TV. Menu Operation: B (page 12) You can adjust the picture settings manually using the following options. Option Backlight Brightness Contrast Brightness Colour* Tint* Button For less backlight For less contrast For less brightness For less colour intensity Skin tones become purplish For less sharpness Removes red from the picture Removes green from the picture Removes blue from the picture Button For more backlight For more contrast For more brightness For more colour intensity Skin tones become greenish For more sharpness Adds red to the picture Adds green to the picture Adds blue to the picture Eco Sharpness* Red** NOTE: · · You can also select these options by pressing AV MODE on the remote control. (See page 6.

) Once chosen, you can still manually adjust the picture and sound settings using the available options. See "Picture adjustments" on page 13 and "General Audio Adjustments" on page 15. Green** Blue** NOTE: · · Items with * are not available when connected to a computer source. Items with ** are only available when connected to a computer source. 13 Menu operations (main) Advanced Menu Operation: C (page 12) The following options allow you to finely tune the picture settings. Monochrome The Monochrome setting displays the image in black-and-white. Film Mode The Film Mode setting increases picture quality by detecting film-based source (originally encoded at 24/25 frames/second, depending on the vertical frequency) and recreating the source for better quality. Movie Judder Cancellation (MJC) The MJC setting (Movie Judder Cancellation) increases the clarity of fast moving images. NOTE: · This setting is not applicable to high-definition or computer source inputs. Reset Menu Operation: A (page 12) Colour Temperature The Colour Temperature setting adjusts the image to provide the best white colour in the image.

High Mid-High Middle Mid-Low Low Adds blue tones to the image Intermediate Natural colourings (middle) Intermediate Adds red tones to the image The Reset setting resets all Picture and Sound menu settings to the factory default. Sound Menu Blackstretch The Blackstretch setting automatically adjusts the dark areas of the image for better depth. 3D-Y/C The 3D-Y/C setting reduces artifacts in the image such as dot crawl and colour noise. Off Standard Fast Slow NOTE: · · For the SECAM colouring system, only Off and Standard are available. This setting is only available for analogue TV and CVBS input (from the side panel or the SCART connections).

No adjustments Normal adjustment For fast moving images For slow moving images AV Mode Menu Operation: A (page 12) This setting links to the AV Mode setting in the Picture menu. (See page 13.) 14 Menu operations (main) General Audio Adjustments Menu Operation: B (page 12) Adjust the sound quality to your preference with the Bass, Treble, and Balance settings. Option Bass Treble Balance Button For less loud lower pitches For less loud higher pitches Less audio from the right speaker Button For louder lower pitches For louder higher pitches Less audio from the left speaker Power Control Menu No Signal Off Menu Operation: A (page 12) The No Signal Off setting automatically switches the TV into standby mode if there is no signal input or user interaction for 15 minutes. NOTE: · A warning is given, starting five minutes before the TV enters standby mode.

SRS TruSurround Menu Operation: A (page 12) : This setting provides SRS TruSurround technology. TruSurround delivers a compelling, virtual surround sound experience through the television's two stereo speakers. You will feel as if you are surrounded by additional "phantom" speakers placed all around the room, producing a distinctly immersive surround sound field without the clutter of extra speakers. NOTE: · · You can also choose this setting by pressing TruSurround on the remote control. If set to "On", this will automatically turn the Auto Volume setting "Off". TV/DTV/AV only No Operation Off Menu Operation: A (page 12) The No Operation Off setting automatically switches the TV into standby mode if there is no user interaction for three hours. NOTE: · A warning is given, starting five minutes before the TV enters standby mode. PC only Auto Volume Menu Operation: A (page 12) Power Management Menu Operation: A (page 12) Sometimes different sound sources do not have the same volume level. (For example, the change in volume between a TV show and advertisements.) The Auto Volume setting equalizes the volume levels.

NOTE: · If set to "On", this will automatically turn the SRS TruSurround setting "Off". The Power Management setting automatically switches the TV into standby mode if there is no signal input for eight minutes. NOTE: · · A warning is given, starting 60 seconds before the TV enters standby mode. This setting is only applicable to EXT5 connections. Reset Menu Operation: A (page 12) The Reset setting resets all Picture and Sound menu settings to the factory default. 15 Menu operations (main) Setup Menu Programme Name The Programme Name setting allows you to change channel names to a personalized name. Use / / to enter each letter of the new name, and then press OK. NOTE: · The channel name can be six characters or less. Tuner Frequency The Tuner Frequency setting allows you to specify the exact frequency for the channel.



[You're reading an excerpt. Click here to read official SHARP LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)
<http://yourpdfguides.com/dref/2809500>

Enter the desired frequency using / or 09.

NOTE: · Adjust while checking the background picture as a reference. 179.25 MHz: Press 1 49.25 MHz: Press 0 4 7 9 9 2 2 5 5 Example: · · Skip Language Menu Operation: A (page 12) The Language setting selects the on-screen display language. Refer to "Specifications" on page 31 for a list of available languages.

With the Skip setting set to "On", when scrolling through channels, this channel will not be displayed. Child Locked The Child Locked setting blocks this channel by means of a password PIN. NOTE: · TV only Country Menu Operation: A (page 12) For information on Child Lock, see page 17. Automatic Installation The Automatic Installation setting searches for all available analogue channels. The Country setting selects the country or region. It specifies settings specific to your country or region, such as the frequency list when doing auto channel scans. Installation TV only 1 2 Press / to select this setting, and then press OK. The auto search begins. The TV performs a frequency scan to detect the TV channels available on the network. During the frequency scan, a TV channel with ACI (Automatic Channel Installation) information may be detected. ACI information is teletext-based information from the channel source that describes the TV channels (including channel labels and channel numbers) available on the network. The Installation setting allows you to setup the analogue TV channels manually. 1 2 3 4 Press to select the TV input source. Press MENU. The TV Menu screen displays.

Press OK. Press // to select the Setup menu, and then press to select Installation, and then press OK. 3 4 If you have a PIN set in Child Lock, enter it now using 09. See page 17 for information. If ACI information is detected, the ACI information will be displayed on the screen. Press / to select the correct region and then press MENU. The Auto Installation will end and you are ready to watch TV. · Press END to exit at any time. 5 Press / to select the desired setting option and then press /// and OK to select the desired setting. NOTE: Programme Selection The Programme Selection setting selects the channel that you want to modify.

Enter the desired channel using /. 16 Menu operations (main) Colour Standard The Colour Standard setting selects the colour system to receive. See "Specifications" on page 31 for a list of the available colour systems. NOTE: · If AUTO is selected, the colour system is automatically set. If an image does not display clearly, select a different colour system.

Depending on the input, not all colour systems are available. Child Lock Menu Operation: C (page 12) TV only The Child Lock setting blocks children from accessing specified channels and some on-screen display menus. If you try to access blocked content when Child Lock is set to "On", the PIN input menu displays. Entering the correct PIN lifts the child lock temporarily until the TV enters standby mode. Enter the PIN using 09.

· If you have already set this feature to "On", you must enter your PIN to access this menu. · Sound Standard The Sound Standard setting selects the sound system to receive. See "Specifications" on page 31 for a list of the available sound standards. NOTE: · Depending on the input, not all sound standards are available. 1 2 3 4 5 Press MENU. The TV Menu screen displays. Press OK. Press // to select the Setup menu, and then press to select Child Lock, and then press OK. @@@@To block a channel, you must specify which channels to block. See page 16.

This setting only applies to the analogue TV channels and menus. @@@@To change the PIN, enter a new PIN in this menu. @@The TV Menu screen displays. Press Press // to select Setup Menu, and then press OK. @@See page 17 for information. @@V-Pos. H-Pos. Clock Phase Moves the image up or down. Moves the image left or right. Adjusts the screen if the image flickers with vertical stripes.

@@@NOTE: · To delete the channel, press RED. Press RED to confirm. To change the channel order: a. b. c.

Press GREEN to select the channel. Press /// to go to the desired new position. @@· Press / Press / Hours. to select 12/24 Hours Selection. @@With the input source selected, press MENU.

The TV Menu displays. Press Press // to select Setup Menu, and then press OK. @@Press 09 to enter the current time. @@· The name can be six characters or less. @@V-Pos. H-Pos. Reset Moves the image up or down. Moves the image left or right. @@However, this can be set manually if desired.

@@@@@Available options are ITU601, ITU709, and AUTO.

@@Image Sizes for Standard Signals Normal Displays the picture with a 4:3 aspect ratio. Bars appear on both sides of the image. For 14:9 letterbox pictures. A thin side bar appears on each side, and you may see bars on the top and bottom with some programmes. In this mode the picture is progressively stretched toward each side of the screen. For 16:9 squeeze pictures. For 14:9 letterbox pictures. Bars may appear on the top and bottom with some programmes. For 16:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.

Automatically selects the most appropriate wide mode for the input. You can select the picture size to match your preferences. The input picture is displayed using the full height of the screen, while maintaining the original aspect ratio of the picture. The input picture is displayed without any scaling, matching each picture pixel with a display pixel. Stretches the picture to fill the screen.

This may distort the picture slightly. Zoom 14:9 Dot-by-Dot Full Panorama NOTE: · · Connect the PC before making any adjustments. Selectable picture sizes may vary with the input signal type. For best picture quality, set your PC to 1360x768 or 1280x768 format and then select Dot-by-Dot in this setting.

Full Cinema 14:9 Cinema 16:9 Auto Format Manual Selection 1 Press .

· The Wide Mode menu displays. again to scroll through the available options. NOTE: · For HDMI input, the wide mode is set to Full and cannot be changed. 2 Press · Manual Selection 1 Press . · The Wide Mode menu displays. again to scroll through the available options. Each option is immediately reflected on the screen. There is no need to press OK. Freezing Images You can freeze a picture on the screen. 2 Press · Each option is immediately reflected on the screen.

There is no need to press OK. 1 2 Press Press to freeze an image on the screen. again to un-freeze the image. Auto Selection If you want, you can set the following settings to allow the TV to automatically select the wide mode setting using information received from the input source. · Set WSS to "On". Refer to "WSS (Wide Screen Signalling)" on page 18.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC32WD1E user guide](#)

<http://yourpdfguides.com/dref/2809500>

Using Teletext What is Teletext? Teletext broadcasts pages of information and entertainment to specially equipped television sets. Your TV receives teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and sports information, stock exchange prices and programme previews are among the many services available. 20 Useful features Turning on and off Teletext 1 Select a TV channel or external input source providing the teletext programme.

Button functions Buttons P() Description Move to the next or previous page. Select a group or block of pages displayed in the coloured brackets at the bottom of the screen by pressing the corresponding Colour (Red/ Green/Yellow/Blue) on the remote control. Directly select any page from 100 to 899 by using 0-9.

Reveal or hide hidden information such as an answer to a quiz. 2 3 Press Press · to display the teletext.

again to change the format of the teletext. Each time you press , the screen changes format as shown below. Colour (Red/ Green/Yellow/ Blue) TELETEXT TELETEXT 0-9 TELETEXT (Reveal Hidden Teletext) (Freeze/hold) · If you select a programme with no teletext signal, a warning displays. Stop updating teletext pages automatically or release the hold mode. Display the subtitle or exit the subtitle screen.

· Subtitles will not be displayed if the service does not contain the subtitle information. Reveal or hide subpages. · The button is used to navigate to the previous (available) subpage. · The button is used to navigate to the next (available) subpage. Time display You can display the time information on the screen included in the DTV and teletext broadcasts. (Subtitle for Teletext) 1 Select a TV channel that provides teletext information. (The teletext broadcast must include time information. The time information is automatically captured.) (Subpage) 2 Press · . NOTE: The time display cannot be stored once the power is turned off.

When you turn on the power, perform steps 1 to 2 again. 21 DTV menu operations To enter and operate the digital TV on-screen display menus, use the following buttons on the remote control. Using the on-screen display The DTV on-screen display menus operate in a similar manner to the main on-screen display menus (except the exact colouring differs slightly). (See page 11.) Common Operations 1 Press DTV to access DTV mode. 2 Press DTV MENU to open the DTV on-screen display menus. 3 Press OK. · / to select the desired menu, and then press Press / / and OK to move through the onscreen display menus and modify settings. Some menu operations differ depending on the item you are going to adjust. See the specific instructions in this section for more information.

Timer The Timer setting allows you to set the TV to automatically tune to a digital TV-event when its on-air time begins. Use this feature to automatically output audio and video through the SCART connection for recording purposes. Press to display the subtitle selection screen. Press to display teletext or the MHEGS presentation, if available. If both are available, press for MHEG5.

Press for 1-2 seconds for teletext. Press for direct channel entry. Switches between analogue TV mode and digital TV mode. Press to open the EPG (Electronic Programme Guide) screen. Press to open the ESG (Electronic Service Guide) screen.

Press to switch between TV and RADIO. Press to open the multi audio screen. Press to open or close the DTV Main Menu screen. Press to open the service banner or view detailed information from the EPG/ESG screen. Press to move through the on-screen display menu, select an item on the screen, or adjust an item. Press to select or execute a highlighted item. Press to access the programme list. Press to exit the on-screen display menus. Each of the coloured buttons have a unique function assigned in the menu screen. Press to return to the previous menu.

1 2 Press DTV MENU. Press · / to select Timer, and then press OK. The currently programmed TV-event timers are displayed. 09 DTV EPG ESG RADIO DTV MENU 3 Press the coloured button to complete the desired task. · YELLOW -- Delete or cancel the selected timer. Press / to select the desired timer and then press the Yellow button to delete it. Press GREEN to confirm. GREEN -- Add a new timer. See "New Timer". BLUE-- Edit a timer.

Press / to select the desired timer and then press the BLUE button to edit it. See "New Timer" step 3. / / OK END Colour RETURN · · 22 DTV menu operations New Timer Use the following to setup a new TV-event timer. 2 Press / to select the Channels menu, and then press OK. If you have a PIN set in Child Lock, enter it now using 09.

See page 25 for information. · The DTV Channels menu displays. 1 2 3 Complete steps 1 to 2 in "Timer" on page 22. Press GREEN. Press / to select the setting, and then enter the timer information using / or 09.

Press GREEN to accept the timer. Select the channel list for the programme. Either the complete programme list (indicated as TV List), or the favourite list name. Select the programme or channel. Enter the date for the timer. Select how often you want the timer to occur. Available options are Once, Daily, and Weekly. Enter the TV-event start time. Enter the TV-event end time. Favourites The Favourites setting allows you to create favourite channel lists to allow quicker access to specified channels.

List 1 2 3 Complete steps 1 to 2 in "Channels" on page 23. Press Press / to select Favourites, and then press OK. to modify the setting. When finished, / / Channel Day Mode press GREEN. Start-Up Select the default channel list. · TV List--The complete programme list. · Personalized names Enter a personalized favourite list name to allow easy selection of the list. Start Stop NOTE: · Favourite 1 - 4 NOTE: If you are using this setting for recording, be sure to set the timer on the recording equipment to the same settings. This function cannot be set for channels that are child locked. Up to six timers can be set.

If you are watching another channel, when the TV-event nears, the TV will give a warning on screen before the TV changes channels. If timers overlap, when the first TV-event is complete, the TV will switch to the second TVevent (at the current point in the second TVevent). Once you set a timer and press to enter standby mode, the TV will be in active standby mode and therefore have higher power consumption (in standby mode) until all TV-events are over and the digital tuner is not active. · · Up to eight favourite lists can be created. Four for DTV channels and four for radio channels.

For information on adding and removing channels from a list, see "Edit" on page 23. · · · Edit The Edit menu allows you to edit and view information about channels.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/2809500)

[LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)

<http://yourpdfguides.com/dref/2809500>

· 1 2 3 Complete steps 1 to 2 in "Channels" on page 23. Press Press · / / to select Edit, and then press OK. to select the channel.

· Press RED to sort the channel list alphabetically or numerically. Press BLUE to change the list from the all channels list (TV List) to channels from different networks. Press / to change channel page. Press RADIO to view radio channels. Channels 4 · · Modify the channel as described in the following sections. Edit Favourite List The feature allows you to modify the Favourite lists. · Press 1, 2, 3, or 4 to add the channel to the corresponding favourite list. To access the Channels menu: 1 Press DTV MENU. 23 DTV menu operations Child Lock The Child Lock setting allows specific channels to be blocked from viewing. · Press YELLOW.

An "L" will appear next to the channel name, indicating that the channel is locked. Press YELLOW again to unlock the channel. This setting indicates what channels to block from access. However, for the Child Lock setting to be active, you must first set a PIN. See "Child Lock" on page 25. To access the Installation menu: Installation NOTE: · · Channel Search Automatic Search The Automatic Search setting allows you to auto search for available channels and radio stations, using the predefined frequency channel list for the country or region. 1 2 Press DTV MENU. Press / to select Installation, and then press OK. 1 2 3 Complete steps 1 to 2 in "Channels" on page 23. Press / to select Search, and then press OK.

If you have a PIN set in Child Lock, enter it now using 09. See page 25 for information. · The DTV Installation menu displays. To do an automatic search, press GREEN. · · · · Completing an Automatic Search will re-set all modifications previously made. Only new channels will be displayed. Already known channels will be not. To change the country or region setting, you must reset the receiver. See page 25. Press YELLOW to enter a specific frequency to scan.

Language The Language menu allows you to select the language preference. If a programme contains multiple language information, you can set your first and second preferences for audio and subtitles. NOTE: 1 2 3 Repeat steps 1 - 2 in "Installation" on page 24. Press Press press / to select Language, and then press OK. / to select the desired setting, and then / to change the setting. Specifies the first language preference for the audio. Specifies the second language preference for the audio. Specifies the first language preference for the subtitles. Specifies the second language preference for the subtitles. Audio 1 Audio 2 Subtitles 1 Subtitles 2 Manual Search The Manual Search menu allows you to manually search for a channel by frequency.

(For example, if you want to search for a specific channel, but do not want to re-set all of the channels back to their default settings.) 1 2 3 4 Complete steps 1 to 2 in "Edit" on page 23. Press / to select Search, and then press OK. Press YELLOW. Press / to select the channel you want to search and then press GREEN. NOTE: · Additional settings may be available if MHEG service is available. The options for these settings depend on the input received from the channel system. Signal Info The Signal Info setting provides advanced information about the signal being received for a service. 24 DTV menu operations Clock The Clock menu allows you to specify the clock settings. 7 8 Press / to select Maturity Level.

Press / / / to select the desired rating. See page 32. Press GREEN. · · · · To activate the PIN, you must reset the receiver. See page 25.

To restrict a specific channel, see "Child Lock" on page 24. For information on resetting the PIN to the factory preset "1234", see page 29. To change the PIN, enter a new PIN in this menu. 1 2 3 Repeat steps 1 - 2 in "Installation" on page 24. Press / to select Clock, and then press OK.

NOTE: Press / to select Time Zone, and / to change the setting. If needed, press / to select other settings. The TV will automatically set the time using the information from the input source. Allows manual setting of the TV clock. Select the number of hours before or after Greenwich Mean Time (GMT). Set to observe or not observe daylight savings. · Yes -- The clock will observe daylight savings time. · No -- The clock will not observe daylight savings time. · Automatic -- The TV will automatically adjust to observing or not observing daylight savings time at the appropriate points in the year. Automatic Manual Time Zone Reset Receiver The Reset Receiver menu resets the DTV receiver.

Daylight Savings 1 2 Repeat steps 1 - 2 in "Installation" on page 24. Press / to select Reset receiver, and then press OK. Press GREEN to confirm. The digital receiver is reset. All channel lists are removed and any user settings (DTV only) are reset to the factory default. 3 The receiver will restart automatic installation at step 2. (See "Automatic installation (DTV)" on page 8.) · Press RED to cancel. NOTE: About (software version) The About menu provides television software version information. Child Lock The Child Lock setting blocks children from accessing unwanted channels or content and some on-screen display menus.

You can block access by specifying the specific channel to block or you can specify a maturity rating. If you try to access blocked content when Child Lock is set to "On", the PIN input menu displays. Entering the correct PIN lifts the child lock temporarily until the TV enters standby mode. Enter the PIN using 09. 1 2 Repeat steps 1 - 2 in "Installation" on page 24.

Press / to select About, and then press OK. Conditional Access If you are using a conditional access card, this setting provides information about the card. 1 Press / to select the name of the conditional access card, and then press OK. · See page 30 for installation instructions. NOTE: 1 2 3 4 5 6 Press DTV MENU.

Press / to select Installation, and then press OK. The DTV Installation menu displays. / to select Child Lock, and then press OK. / Press Press / to select Child Lock, and then press to turn the setting "On" or "Off". Press / to select PIN Code, and then enter a 4digit PIN using 09. Press / to select PIN Code Again, and then reenter the PIN. 25 Useful features (DTV) About the Electronic Programme Guide (EPG) With the Electronic Programme Guide (EPG), you can check the schedule of DTV and Radio events, tune to an event currently on-air, and set a timer for future events. General EPG screen To get more information about a TV-event: · Select the TV-event and press service banner screen.



[You're reading an excerpt. Click here to read official SHARP LC32WD1E user guide](http://yourpdfguides.com/dref/2809500)
<http://yourpdfguides.com/dref/2809500>

to open the To access the Timer setting: · Press /// to select a future TV-event, and press OK. See "New Timer" on page 23 and begin at step 2.

About the Electronic Service Guide (ESG) The Electronic Service Guide (ESG) is a simplified version of the EPG, giving you only essential information of current events for faster access. General ESG screen 1 Service list · Shows the list of services currently available. As you scroll down the list, the rows in this list update automatically. 2 3 Current service name (highlighted) TV-event list · Shows the names of current and future TV events. In most cases, you can check the schedule of TV-events several days ahead. 4 5 6 Currently tuned TV-event (highlighted) Future TV-events Current time indicator 1 2 3 4 Service list TV-event start times Current and next (future) TV-event information TV-event duration Using ESG 1 Press ESG. NOTE: To scroll through services: · · To scroll service by service, press /. Press RED and GREEN to go to the previous and next page. Press OK. / to select a current TV-event and press Using EPG 1 Press EPG.

NOTE: To switch between DTV and Radio mode: · · Press RADIO. Press OK. Press / to select a current TV-event and press To watch a TV-event that is currently playing: To watch a TV-event that is currently playing: · To view future TV-events: · · / to move the page to the left or right. Press RED and GREEN to go to the previous and next page for this time period. Press Yellow and Blue to go to the previous and next page for these services but a different time period.

Press EPG again to view all TV-events for the selected service. To get more information about a TV-event: · Press / to select the TV-event and press to open the service banner screen. Press /// to select a future TV-event, and press OK. See "New Timer" on page 23 and begin at step 2. To access the Timer setting: ·

· 26 Useful features (DTV) About the Service Banner The service banner provides information about the selected TV-event.

Service banner (option 1) Using the Digital Programme List You can select a channel using the digital programme list. 1 2 Press OK when no other on-screen display menu is on the TV. Press · / to select the TV-event and press OK. / to change to the previous or next Press page. Press GREEN to change the list (for example, to a favourites list). 1 2 3 4 5 6 7 8 9 Logical channel number Service name Current TV-event information Content is scrambled (requires CA-card) Multiple audio inputs available Subtitles are available MHEG5 service is available Teletext is available Maturity rating for this TV-event (see page 32.) · · · · U -- Universal P -- Parental guidance X -- X-rated Other numbers -- Indicates age appropriateness For information on the maturity rating system, see page 32. The maturity ratings can always be used to block unwanted content in any country. However, in the service banner: · · Only digital broadcasts from France will show the Universal and Parental icon. Only digital broadcasts from Spain will show the X-rated icon.

Displaying subtitles To use the subtitle feature in DTV, do the following. NOTE: · · 1 2 Press Press · / . to select the desired setting. NOTE: The default primary and secondary subtitle language is set in Language. (See page 24.) More languages may be available (in the digital stream) to select than are available in the Language setting. Subtitles will not be displayed if the service does not contain the subtitle information. · Using the Service Banner 1 Press · 2 For more detailed information, press again. 27 Useful features (DTV) Using the MHEG5 application (UK only) Some services bring you programmes with the MHEG (Multimedia and Hypermedia Expert Group) application encoded, letting you experience DTV interactively.

When provided, the MHEG5 application will start when you press · . If not available, you will access the Teletext feature. If neither are available, the TV will display a message saying that no information is available. Software Upgrade (Auto) The software can be upgraded when necessary via an Over Air Download. 1 When you press to enter standby mode, a message displays that a software upgrade is available.

· · To upgrade the software now, select Yes, and then press OK. Follow the screen prompts. To postpone the upgrade, select No, and then press OK. 2 After the upgrade is completed, the TV restarts automatically with the new software version installed. · · Check the new software version to confirm the successful upgrade.

(See page 25.) The software upgrade may take up to 30 minutes to complete, depending on the signal status. While updating, you cannot switch to TV or external input mode or enter standby mode using on the remote control unit. Do not disconnect the AC cord when the software upgrade is in progress, as this may cause the upgrade to fail. If problem arises, ask a qualified service personnel before the software upgrade period expires. NOTE: CAUTION: · 28

Appendix Troubleshooting Problem · No power. Possible Solution · Did you press on the remote control or TV? (See page 7.) If the indicator on the TV is red, press · . Is the TV connected to AC power? (See page 3.) · External influences such as lightning, static electricity, etc.

, may cause improper operation. Unplug the power cord and wait for one minute. Re-insert the plug into the main socket, wait one minute, and turn on the unit again. · Are the batteries inserted with polarity (+,-) aligned? (See page 4.) · Are the batteries worn out? (Replace with new batteries.) (See page 4.) · Are you using the remote control under strong or fluorescent lighting? · Is the image position correct? (See page 18.) · Are the screen mode adjustments (WSS) such as picture size made correctly? (See page 20.) · Adjust the picture tone. · Is the room too bright? The picture may look dark in a room that is too bright. · Check the colour system setting. (See page 14, 17, 19.) · Check the power control settings. (See page 15.) · Is sleep timer set? Press SLEEP on the remote control until it sets to "Off".

· · · · · Is connection to external components correct? (See page 9.) Is input signal type selected correctly after connection? (See page 18.) Is the correct input source selected? (See page 9) Is picture adjustments correct? (See page 13.) Is the antenna connected properly? (See page 3 and page 18.) Is "On" selected in "Audio Only"? (See page 18.

) · Unit cannot be operated. · Remote control does not operate. · Picture is cut off.



[You're reading an excerpt. Click here to read official SHARP](#)

[LC32WD1E user guide](#)

<http://yourpdfguides.com/dref/2809500>