



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP R-634/634F. You'll find the answers to all your questions on the SHARP R-634/634F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SHARP R-634/634F**  
**User guide SHARP R-634/634F**  
**Operating instructions SHARP R-634/634F**  
**Instructions for use SHARP R-634/634F**  
**Instruction manual SHARP R-634/634F**



[You're reading an excerpt. Click here to read official SHARP R-634/634F user guide](http://yourpdfguides.com/dref/1284614)  
<http://yourpdfguides.com/dref/1284614>

**Manual abstract:**

*Be inspired by the recipes we have included and prepare your own favourite dishes in your microwave oven. There are so many advantages to having a microwave oven which we are sure you will find exciting: q Food can be prepared directly in the serving dishes, leaving less to wash up. q Shorter cooking times and the use of little water and fat ensure that many vitamins, minerals and characteristic flavours are preserved. We advise you to read the cookery book guide and operating instructions carefully. You will then easily understand how to use your oven. Enjoy using your microwave oven and trying out the delicious recipes. R-634 English 22/01/2001 12:06 Page 1 CONTENTS OVEN AND ACCESSORIES . . . .*

. . . . .  
. . . . .  
. . . . .

. . . . .  
. . . . .  
. . . . .

*.2 CONTROL PANEL . . . . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*. . .3 IMPORTANT SAFETY INSTRUCTIONS . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*4-6 INSTALLATION . . . . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*. . . .6 BEFORE OPERATION .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*. . . .7 SETTING THE CLOCK . . . . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*. . . .7 MICROWAVE POWER LEVEL . . . . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

*. . . . .8 MICROWAVE COOKING . . .*

. . . . .  
. . . . .  
. . . . .  
. . . . .

.....  
.....  
...9 GRILL COOKING/DUAL GRILL COOKING .....

.....  
.....  
.....  
.....10 OTHER CONVENIENT FUNCTIONS ..

.....  
.....  
.....  
.....  
...11-12 EXPRESS COOK & DEFROST OPERATION .....

.....  
.....  
.....  
.....  
.....13 EXPRESS COOK & DEFROST CHART ...

.....  
.....  
.....  
...14-16 RECIPES FOR EXPRESS COOK MENUS ..

.....  
.....  
.....  
...17-18 CARE AND CLEANING ...

.....  
.....  
.....  
.....  
...19 SERVICE CALL CHECK .....

.....  
.....  
.....  
.....  
...19 SERVICE ADDRESSES .....

.....  
.....  
.....  
.....  
.....20-25 SPECIFICATIONS ..

.....  
.....  
.....  
.....  
.....

Check to make sure the following accessories are provided: (17) Turntable (18) Roller stay (19) Seal packing (20) Rack Place the roller stay in the seal packing on the floor of the cavity. Then place the turntable on the roller stay. To avoid turntable damage, ensure dishes or containers are lifted clear of the turntable rim when removing them from the oven. NOTE: When you order accessories, please mention two items: part name and model name to your dealer or SHARP authorised service agent. 20 2 R-634 English 22/01/2001 12:06 Page 3 CONTROL PANEL R-634 R-634F 1 2 3 4 STOP 1 2 3 4 STOP COOK & DEFROST COOK & DEFROST 5 5 6 6 7 7 R-634 R-634F 1 Digital Display 2 Symbols and Indicators The appropriate indicator will flash or light up, just above each symbol according to the instruction. When an indicator is flashing, press the suitable button (having the same symbol) or do the necessary operation. Stir Turn over Weight/power level Grill Microwave Cooking in progress 3 EXPRESS COOK & DEFROST button Press to select one of the 12 automatic programmes. 4 COOKING MODE button Press to select either microwave, grill or dual grill, or use to set the clock. 1. press once to select microwave function.

2. press twice to select the grill. 3. press three times to select dual grill mode, microwave with grill. 5 STOP button 6 +1min/START button 7 TIMER/WEIGHT/POWER knob 3 ENGLISH R-634 English 22/01/2001 12:06 Page 4 IMPORTANT SAFETY INSTRUCTIONS IMPORTANT SAFETY INSTRUCTIONS: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE To avoid the danger of fire The microwave oven should not be left unattended during operation.

Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire. This oven is not designed to be built in to a kitchen unit. The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency. The AC power supply must be 230V, 50Hz, with a minimum 16A distribution line fuse, or a minimum 16A distribution circuit breaker. It is recommended that a separate circuit serving only this appliance be provided.

Do not place the oven in areas where heat is generated. For example, close to a conventional oven. Do not install the oven in an area of high humidity or where moisture may collect. Do not store or use the oven outdoors. If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire. Use only microwave-safe containers and utensils. See Page X. Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.

Clean the waveguide cover, the oven cavity, the turntable and roller stay after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire. Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings. Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire. Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, use only special microwave popcorn makers. Do not store food or any other items inside the oven. Check the settings after you start the oven to ensure the oven is operating as desired. See the corresponding hints in this operation manual and the cookery book section. To avoid the possibility of injury WARNING: Do not operate the oven if it is damaged or malfunctioning.

Check the following before use: a)The door; make sure the door closes properly and ensure it is not misaligned or warped. b)The hinges and safety door latches; check to make sure they are not broken or loose. c) The door seals and sealing surfaces; ensure that they have not been damaged. d)Inside the oven cavity or on the door; make sure there are no dents. e) The power supply cord and plug; ensure that they are not damaged.

Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy. Do not operate the oven with the door open or alter the door safety latches in any way. Do not operate the oven if there is an object between the door seals and sealing surfaces. Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care and Cleaning", Page 18. Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/1284614)

[R-634/634F user guide](http://yourpdfguides.com/dref/1284614)

<http://yourpdfguides.com/dref/1284614>

To avoid the possibility of electric shock Under no circumstances should you remove the outer cabinet. Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.

Do not immerse the power supply cord or plug in water or any other liquid. Do not let the power supply cord hang over the edge of a table or work surface. Keep the power supply cord away from heated surfaces, including the rear of the oven. Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent. 4 R-634 English 22/01/2001 12:06 Page 5 IMPORTANT SAFETY INSTRUCTIONS If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent. To avoid the possibility of explosion and sudden boiling: WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode. Never use sealed containers. Remove seals and lids before use.

Sealed containers can explode due to a build up of pressure even after the oven has been turned off. Take care when microwaving liquids. Use a widemouthed container to allow bubbles to escape. Never heat liquids in narrow necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns. To prevent sudden eruption of boiling liquid and possible scalding: 1.

Stir liquid prior to heating/reheating. 2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating. 3. Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling.

Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven. Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

To avoid the possibility of burns Use pot holders or oven gloves when removing food from the oven to prevent burns. Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns. To avoid burns, always stand back from the oven door when opening to avoid burns from escaping steam and heat.

Slice stuffed baked foods after heating to release steam and avoid burns. Keep children away from the door to prevent them burning themselves. Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, ventilation openings, accessories and dishes during GRILL mode, DUAL GRILL mode and EXPRESS COOK operation as they will become hot. Before cleaning make sure they are not hot. To avoid misuse by children WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. Do not lean or swing on the oven door. Do not play with the oven or use it as a toy. Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.

Other warnings Never modify the oven in any way. Do not move the oven while it is in operation. This oven has a COOKING TIMER/WEIGHT/POWER MODE button to start knob until the correct minute the clock is displayed (35).

x1 x1 NOTES: 1. You can rotate the TIMER/WEIGHT/POWER knob clockwise or counter-clockwise. 2. Press the STOP button if you make a mistake during programming. 3.

If the electrical power supply to your microwave oven is interrupted, the display will intermittently show after the power is reinstated. If this occurs during cooking, the programme will be erased. The time of day will also be erased. 4. When you want to reset the time of day, follow the above example again. 7 R-634 English 22/01/2001 12:06 Page 8 MICROWAVE POWER LEVEL Your oven has 5 power levels. To choose the power level for cooking, follow the advice given in the recipe section. Generally the following recommendations apply: 100 P (800 W) used for fast cooking or reheating e.g. soup, casseroles, canned food, hot beverages, vegetables, fish, etc.

70 P (560 W) used for longer cooking of dense foods such as roast joints, meat loaf and plated meals, also for sensitive dishes such as cheese sauce and sponge cakes. At this reduced setting, the sauce will not boil over and food will cook evenly without over cooking at the sides. 50 P (400 W) for dense foods which require a long cooking time when cooked conventionally, e.g. beef dishes, it is advisable to use this power setting to ensure the meat will be tender. 30 P

(240 W Defrost setting) to defrost, select this power setting, to ensure that the dish defrosts evenly. This setting is also ideal for simmering rice, pasta, dumplings and cooking egg custard. 10 P (80 W) For gentle defrosting, e.g. cream gateaux or pastry. P = PERCENTAGE To set the microwave power level: Rotate the TIMER/WEIGHT/POWER knob clockwise to select cooking time. Press the COOKING MODE button once (microwave only).

To change the microwave power level rotate the knob until the desired power level is reached. Press the +1min/START button. NOTE: If the power level is not selected, 100 P is automatically set. 8 R-634 English 22/01/2001 12:06 Page 9 MICROWAVE COOKING Your oven can be programmed for up to 90 minutes. (90).

00) The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table. Cooking time 0-5 minutes 5-10 minutes 10-30 minutes 30-90 minutes Increasing unit 10 seconds 30 seconds 1 minute 5 minutes Example: Suppose you want to heat soup for 2 minutes and 30 seconds on 70 P microwave power. 1. Enter desired cooking time by rotating TIMER/WEIGHT/POWER knob clockwise.

2. Choose desired cooking mode by pressing COOKING MODE button once (microwave only). 3. Choose desired power by rotating the TIMER/WEIGHT/POWER knob clockwise. 4. Press +1min/START button once to begin cooking. x1 x1 Check the display. NOTES: 1. When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the +1min/START button is pressed.



[You're reading an excerpt. Click here to read official SHARP R-634/634F user guide](http://yourpdfguides.com/dref/1284614)  
<http://yourpdfguides.com/dref/1284614>

2. If you wish to know the power level during cooking, press the **COOKING MODE** button. As long as your finger is touching the **COOKING MODE** button, the power level will be displayed. 3. You can rotate the **TIMER/WEIGHT/POWER** knob clockwise or counter-clockwise. If you rotate the knob counter-clockwise, the cooking time will decrease from 90 minutes by degrees. 9 ENGLISH R-634 English 22/01/2001 12:06 Page 10 **GRILL COOKING/DUAL GRILL COOKING** This microwave oven has two **GRILL** cooking modes: 1. Grill only. 2. Dual Grill (Grill with microwave).

1. **GRILL ONLY COOKING** This mode can be used to Grill/Brown food. Example : To make toast for 4 minutes. 1. Enter desired cooking time by rotating the **TIMER/WEIGHT/POWER** knob. 2. Choose the desired cooking mode by pressing the **COOKING MODE** button twice. (Grill only). 3. Press the **+1min/START** button once to begin cooking. x2 Check the display. x1 **NOTES:** 1. The rack is recommended for grilling of flat pieces of food. 2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and not a sign that the oven is out of order. To avoid this problem, when first using the oven, operate the grill without food for 20 minutes. 2. **DUAL GRILL COOKING** This mode uses a combination of Grill power and Microwave power (10 P to 50 P). The Microwave power level is preset to 30 P. Example: To cook kebabs (as per recipe page XX in the Cookbook section) for 7 minutes on **DUAL GRILL 50 P**.

1. Enter the desired cooking time by rotating the **TIMER/WEIGHT/ POWER** knob. 2. Choose the desired cooking mode by pressing the **COOKING MODE** button three times to select Grill with Microwave. 3. Rotate the 4. Press the **TIMER/WEIGHT/POWER +1min/START** knob to the desired button once to microwave power level. begin cooking. x3 x1 Check the display. 10 R-634 English 22/01/2001 12:06 Page 11 **OTHER CONVENIENT FUNCTIONS 1. MULTIPLE SEQUENCE COOKING** A sequence of 3 stages (maximum) can be programmed using combinations of **MICROWAVE**, **GRILL** or **DUAL GRILL**. Example: To cook : 2 minutes and 30 seconds on 70 P power (Stage 1) 5 minutes Grill only (Stage 2) **STAGE 1** 1. Enter the desired cooking time by rotating the **TIMER/WEIGHT/ POWER** knob clockwise. 2. Choose the desired cooking mode by pressing the **COOKING MODE** button once (microwave only). 4. Press the **COOKING** 3. Enter the desired power **MODE** button before level by rotating the programming Stage 2. **TIMER/WEIGHT/POWER** knob clockwise. x1 x1 **STAGE 2** 5. Enter desired time by rotating the **TIMER/WEIGHT/POWER** knob clockwise. 6. Choose the desired cooking mode by pressing the **COOKING MODE** button twice (Grill only). 7. Press the **+1min/START** button once to begin cooking. x2 Check the display. x1 (The oven will begin to cook for 2 minutes and 30 seconds at 70 P, and then for 5 minutes on Grill only). Example: To cook Zucchini Noodle Gratin (page XX, Cookbook section). 1. 21 minutes at 100 P. 2. 6 minutes Dual Grill at 50 P. 11 **ENGLISH NOTE:** If you set any programme after setting **GRILL** mode, omit the steps 3 and 4. If you press the **COOKING MODE** button continually after setting **GRILL** mode, the **GRILL** mode will be changed to the **DUAL GRILL** mode automatically. R-634 English 22/01/2001 12:07 Page 12 **OTHER CONVENIENT XXXXXXXXXXXXXXXX FUNCTIONS 2. MINUTE PLUS FUNCTION** The **+1min/START** button allows you to operate the two following functions: a. **Direct start** You can directly start cooking on 100 P microwave power level for 1 minute by pressing the **+1min/START** button. **NOTE:** To avoid the misuse by children the **+1min/START** button can be used only within 3 minutes after preceding operation, i.e., closing the door, pressing the **STOP** button or cooking completion.

b. **Extend the cooking time.** You can extend the cooking time for multiples of 1 minute if the **+1min/START** button is pressed while the oven is in operation. 3. **TO CHECK THE POWER LEVEL** To check the microwave power level during cooking press the **COOKING MODE** button. x1 As long as your finger is touching the **COOKING MODE** button the power level will be displayed. The oven continues to count down although the display shows the power level. 12 R-634 English 22/01/2001 12:07 Page 13 **EXPRESS COOK & EXPRESS DEFROST OPERATION XXXXXXXXXXXXXXXX** **EXPRESS COOK & EXPRESS DEFROST** automatically works out the correct cooking mode and cooking time. You can choose from 8 **EXPRESS COOK** menus and 4 **EXPRESS DEFROST** menus. What you need to know when using this automatic function: 1. Press the **EXPRESS COOK & DEFROST** button once, the display will appear as shown. The menu can be chosen by pressing the **EXPRESS COOK & DEFROST** button until the desired menu number is displayed. See pages 14-15 "EXPRESS COOK & EXPRESS DEFROST chart". @@If you press the button 9 times, will appear in the display. @@2. @@· Enter the weight of the food only. Do not include the weight of the container. @@For best results, follow the cooking charts in the cookbook section. 3. To start cooking press **+1min/START** button.

When action is required (e.g. @@To continue cooking, press the **+1min/START** button. Example: To cook Grill Skewers 0,2 kg (EC-2) 1. @@2. Enter the weight by rotating the **TIMER/WEIGHT/ POWER** knob. 3. @@Check food is piping hot after cooking. If necessary, you can extend the cooking manually. @@@@· Place the dish on the rack in the oven.

· When the audible signals sound, turn over. @@(No standing time is necessary). · Add salt to taste. **NOTE:** The dish gets very hot during cooking. @@@@· Place on a rack and cook.

· When the audible signal sounds turn over. · After cooking, remove and put on a plate for serving. (No standing time necessary). · Mix the ingredients and spread on the chicken legs. · Pierce the skin of the chicken legs.

@@· When audible signals sound, turn the food over. · After cooking, remove and stand for approx. 5 minutes. · Mix the ingredients and spread on the chicken. · Pierce the skin of the chicken. · Put chicken on a flan dish breast side down. · Place directly on the turntable and cook. · When audible signals sound, turn the chicken over. · After cooking, leave for approx. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ Shield thin parts and warm spots with aluminium foil.

@@· Cover the turntable with cling film. · Place the block of minced meat onto the turntable. @@Remove the defrosted parts if possible. · After defrosting, stand for 5 - 10 minutes, until thoroughly defrosted. Ed-2 Defrost Minced Meat x10 0,2 - 0,8 kg (100 g) (initial temp -18° C) Cling film (See note below) 15 ENGLISH R-634 English 22/01/2001 12:07 Page 16 **EXPRESS COOK & EXPRESS DEFROST BUTTON MENU NO. Ed-3 Defrost Cake WEIGHT** (Increasing Unit)/ **UTENSILS** 0,1 - 1,4 kg (100 g) (initial temp -18° C) Flat dish **PROCEDURE** · Remove all packaging from the cake. · Place on a flat dish in the middle of the turntable. · After defrosting, cut the cake into similar sized pieces keeping space between each piece and let stand for 15 - 60 minutes until evenly defrosted.



[You're reading an excerpt. Click here to read official SHARP R-634/634F user guide](http://yourpdfguides.com/dref/1284614)  
<http://yourpdfguides.com/dref/1284614>



· Distribute on a flat dish in the centre of the turntable. · When the oven stops and the audible signal sounds, turn over, re-arrange and remove and defrosted slices.

· After defrosting separate all slices and distribute on a large plate. Cover the bread with aluminium foil and let stand for 5 - 10 minutes, until thoroughly defrosted. x11 Ed-4 Defrost Bread x12 0,1 - 1,0 kg (100 g) (initial temp -18° C) Flat dish (Only sliced bread is recommended for this programme.) NOTES:

Express Defrost 1 Steaks and Chops should be frozen in one layer. 2 Minced meat should be frozen in a thin shape.

3 After turning over, shield the defrosted portions with small, flat pieces of aluminium foil. 4 For Ed-1, arrange the food in the oven as shown: Steaks and Chops Food Dish Turntable 16 R-634 English 22/01/2001 12:07 Page 17 RECIPES FOR EXPRESS COOK MENUS CHICKEN PAN WITH VEGETABLES (EC-5) Spicy chicken fricassee Ingredients 0,5 kg 60 g 1 25 g 50 g 50 g 150 g 10 g 150 ml 1,0 kg long grain rice (parboiled) sachet saffron onion (sliced) red pepper (in strips) leek (in strips) fillet of chicken breast (cubed) pepper, paprika powder 20 g butter or margarine 300 ml meat stock 120 g 1 50 g 100 g 100 g 300 g Preparation 1. Mix the rice and saffron and place in the greased dish. 2. Mix the onions, red pepper, leek and chicken.

Season and place on the rice. 3. Put butter on the top. 4. Pour the stock over and cover with microwave foil and cook on EXPRESS COOK EC-5, "Chicken Pan with Vegetables". 5. After cooking, let stand for 5-10 minutes. MINCE AND ONION (EC-6) Ingredients 0,5 kg 150 g 50 g 1,0 kg 300 g 100 g 1 30 g minced meat (1/2 beef, 1/2 pork) onion (finely chopped) 1/2 egg 15 g white breadcrumbs salt and pepper 115 ml 230 ml meat stock 20 g 40 g tomato purée 65 g 125 g potatoes (finely chopped) 65 g 125 g carrots (finely chopped) 1/2 tbsp 1 tbsp parsley (chopped) Preparation 1. Mix together the minced meat, onion, egg and the breadcrumbs. Season with salt and pepper.

Place the meat dough into a casserole dish. 2. Mix the meat stock with the tomato purée. 3. Add the liquid, potatoes, carrots and parsley to the meat, mix it up well. 4. Cover and cook on EXPRESS COOK EC-6, "Mince and Onion". 5. When the oven stops and the audible signals sound, stir and re-cover. 6.

After cooking, stir and stand for approx. 5 minutes. Sprinkle with parsley and serve. GRATINATED FISH FILLET (EC-7) Fish gratin Italian style Ingredients 0,5 kg 200 g 1/2 tsp 1/2 tsp 30 g 1/2 1,0 kg fish fillet lemon juice anchovy butter Gouda (grated) salt and pepper 300 g fresh tomatoes 11/2 tsp chopped mixed herbs 180 g Mozzarella 3/4 tsp basil (chopped) 430 g 1 1/2 tsp 1 1/2 tsp 50 g 150 g 1 1/2 tsp 100 g 1/2 tsp 17 ENGLISH Preparation 1. Wash and dry the fish and sprinkle with lemon juice, salt and grease with anchovy butter.

2. Place in a gratin dish. 3. Sprinkle the Gouda over the fish. 4.

Wash the tomatoes and remove the stalk-spore. Cut into slices and place on top of the cheese. 5. Season with salt, pepper and the mixed herbs. 6. Drain the Mozzarella, cut into slices and place on the tomatoes. Sprinkle the basil over the cheese. 7. Place the gratin dish on the turntable and cook on EXPRESS COOK EC-7, "Gratinated fish fillet". 8.

After cooking let stand for approx. 5 minutes. R-634 English 22/01/2001 12:07 Page 18 RECIPES FOR EXPRESS COOK MENUS GRATINATED FISH FILLET (EC-7) Fish esterhazy Ingredients 0,5 kg 230 g 100 g 20 g 40 g 10 g 1,0 kg 450 g 200 g 40 g 100 g 10 g fish fillet leeks (cut into rings) onion (finely sliced) carrot (grated) butter or margarine salt, pepper and nutmeg 1 1/2 tsp 11/2 tsp lemon juice 50 g 100 g crème fraîche 50 g 100 g Gouda (grated) Preparation 1. Put vegetables, butter and the spices into a casserole dish and mix well. Cook for 2-6 minutes on 100 P depending on weight. 2. Wash the fish, dry and sprinkle with lemon juice and salt. 3. Mix the crème fraîche with the vegetables and season again. 4.

Put half of the vegetables in a gratin dish. Place the fish on top and cover with the remaining vegetables. 5. Spread the Gouda over the top, place on the turntable and cook on EXPRESS COOK EC-7, "Gratinated Fish Fillet". 8.

After cooking let stand for approx. 5 minutes. GRATIN (EC-8) Spinach gratin Ingredients 0,5 kg 150 g 15 g 150 g 35 g 50 g 1 40 g 1,0 kg 300 g 30 g 300 g 75 g 100 g 2 75 g leaf spinach (defrosted, drained) onion (finely chopped) salt, pepper, nutmeg boiled potatoes (sliced) cooked ham (diced) crème fraîche eggs grated cheese Preparation 1. Mix together the leaf spinach with the onion and season with salt, pepper and nutmeg. 2.

Grease the gratin dish. Place alternate layers of potato slices, diced ham and spinach in the dish. The top layer should be spinach. 3. Mix the eggs with crème fraîche, add salt and pepper and pour over the vegetables. 4. Cover the gratin with the grated cheese. 5. Place on the turntable and cook on EXPRESS COOK EC-8, "Gratin". 6.

After cooking, let stand for 5-10 minutes. GRATIN (EC-8) Potato-courgette-gratin Ingredients 0,5 kg 200 g 115 g 75 g 1 1/2 1,0 kg 400 g 230 g 150 g 2 1 75 g 40 g boiled potatoes (sliced) courgette (finely sliced) crème fraîche eggs clove of garlic (crushed) salt, pepper grated Gouda cheese sunflower kernel Preparation 1. Grease the gratin dish and place alternate layers of potato slices and courgette in the dish. 2. Mix the eggs with crème fraîche, season with salt, pepper and garlic and pour over the vegetables. 3. Cover the gratin dish with the grated Gouda cheese. 4. Finally sprinkle the gratin with sunflower kernel. 5.

Place on the turntable and cook on EXPRESS COOK EC-8, "Gratin". 6. After cooking, let stand for 5-10 minutes. 18 R-634 English 22/01/2001 12:07 Page 19 CARE AND CLEANING Caution Do not use commercial oven cleaners, abrasive harsh cleaners or scouring pads on any part of your microwave oven. Oven exterior The outside of your oven can be easily cleaned with mild soap and water.

Make sure that the soap is wiped off with a moist cloth, and dry the exterior with a soft towel. Control panel Open the door before cleaning to de-activate the control panel. Care should be taken in cleaning the control panel. Using a cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water.

Do not use any sort of chemical or abrasive cleaner. Oven Interior 1. For cleaning, wipe any spatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use mild soap and wipe several times with a damp cloth until all residues are removed. 2. Make sure that mild soap or water do not penetrate the small vents in the walls which may cause damage to the oven. 3. Do not use spray type cleaners on the oven interior. 4.

Heat up your oven regularly by using the grill, refer to note 2 on page 10.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-634/634F user guide](#)

<http://yourpdfguides.com/dref/1284614>

Remaining food or fat splashed can cause smoke or a bad smell. Turntable and Roller stay Remove the turntable and roller stay from the oven. Wash the turntable and roller stay in mild soapy water. Dry with a soft cloth. Both the turntable and the roller stay are dishwasher safe. Door To remove all trace of dirt, regularly clean both sides of the door, the door seals and surfaces with a soft, damp cloth. Rack This should be washed in a mild washing up liquid solution and dried. The rack is dishwasher safe. SERVICE CALL CHECK Please check the following before calling for service. 1.

Power Supply Check the power plug is properly connected to a suitable wall outlet. Check the line fuse/circuit breaker is functioning properly. 2. When the door is opened, does the oven lamp light? YES 3. Place a cup of water (approx.

150 ml) in the oven and close the door securely. Programme the oven for one minute on 100 P power and start the oven. Does the oven lamp come on? YES Does the turntable rotate? NOTE: The turntable turns in either direction. YES Does the ventilation work? YES (Place your hand over the ventilation openings and check for air flow.) After 1 minute does the signal sound? YES Does cooking in progress indicator go off? YES Is the cup with water warm after the above operation? YES 4.

Programme the grill for three minutes and start the oven. After 3 minutes does the grill heating element become red? YES NO NO NO NO NO NO NO NO NOTE: If you cook the food over the standard time with only the same cooking mode, the power of the oven will lower automatically to avoid overheating. (The microwave power level will be reduced or the grill heating element will begin to light on and off). Cooking Mode Microwave 800 W Grill Dual Grill (400 W micro) Dual Grill (80 W, 240 W micro) Standard time 40 minutes 45 minutes Grill - 10 minutes Grill - 45 minutes 19 ENGLISH If "NO" is the answer to any of the above questions, call your dealer or an authorised SHARP Service Agent and report the results of your check. R-634 English 22/01/2001 12:07 Page 20 . SERVICE NIEDERLASSUNGEN . ADDRESSES D'ENTRETIEN . ONDERHOUDSADRESSEN . DIRECCIONES DE SERVICIO . INDIRIZZI DI SERVIZIO .

ÖSTERREICH Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen. Manfred Mayer GmbH, Stipcakgasse 6, 1234 Wien, Phone: 01-6093120, Fax: 01-6993629 / MCL-Service GmbH, Deutschstr. 19, 1232 Wien, Phone: 01-6168800, Fax: 01-6168800-15 / Karl Rother, Simmeringer Hauptstr. 11, 1110 Wien, Phone: 01-7498432, Fax: 01-7498432-12 / Roland Göschl, Bayerhamerstr. 12c, 5020 Salzburg, Phone: 662-882307, Fax: 662-881926 / Franz Schuhmann, Gablonzerweg 18, 4030 Linz, Phone: 732382280, Fax: 732-382280-8 / Arnold Moser, An der Heufurt 28, 6900 Bregenz, Phone: 5574-75777, Fax: 557475777 / Anton Reitmeir, Leopoldstr. 57, 6020 Innsbruck, Phone: 512-562277, Fax: 512-562277 / Scheuermann, Rennsteinerstr. 8, 9500 Villach, Phone: 4242-21174, Fax: 4242-21174 / Pichler, Am Wagrain 342, 8055 Graz, Phone: 316-291292, Fax: 316-291292 / Audio Video Service, Sonnengasse 13, 9020 Klagenfurt, Phone: 463-43114, Fax: 463-43113 BELGIUM En cas d'une réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes. Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra. AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, Phone: 02/2674019, Fax: 2679670, ETS HENROTTE, Rue Du Campinaire 154, 6240 Farcennes, Phone: 071/396290, Fax: 391237 Nouvelle Central Radio (N.G.

R) Rue des Joncs 15 L-1818 HOWALD Phone: 00352404078, Fax. 2402085 NEDERLAND Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum. SHARP ELECTRONICS BENELUX BV,- Helpdesk -, Postbus 900, 3990 DW Houten, Telefoon: 09-007427728, Fax: 030-6359621 DEUTSCHLAND Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen. 03048 Groß Garglow, Cottbuser Str. 129, Bernd Mindach, Tel.: 0355-539987, Fax.: 0355-5265685 / 04159 Leipzig, Max-Liebermann-Straße 4 a, Rudi Franz, Tel: 0341-9112525, Fax: 0341-9112526 / 04600 Altenburg, Gabelentzstraße 15 A, Mechanik Altenburg E.

G., Tel: 03447-311102, Fax: 03447-315253 / 06217 Merseburg, Gotthardstraße 30, Looke & May GmbH, Tel: 03461-214121, Fax: 03461-216891 / 06295 Eisleben, Hallesche Straße 36, Hausger. Kundend. Eisleben, Tel: 03475-603079, Fax: 03475-747262 / 06618 Naumburg, Wenzelstraße 15, Hausgeräte & Service GmbH, Tel: 03445-202016, Fax: 03445-202016 / 06844 Dessau, Albrechtstraße 116-118, Dessau-Electric GmbH, Tel: 0340-261270, Fax: 0340-213332 / 07407 Rudolstadt, Emil Hartmann Straße 2, Elektro Ernst Granowski, Tel: 03672-352123, Fax: 03672-357097 / 07545 Gera, Amthorstraße 12, Ess Hardware Service GmbH, Tel: 0365-8820115, Fax: 0365-8820116 / 07973 Greiz, Reichenbacher Straße 44 d, Elektro Riederer Haushaltgeräte, Tel: 03661-3148, Fax: 03661-430142 / 08280 Aue, Bahnhofstraße 21, EHS Elektro-Hausgeräte SVC GmbH, Tel: 03771-552222, Fax: 03771-552255 / 08523 Plauen, Weststraße 63, Elektrotechnik Plauen GmbH, Tel: 03741-2120, Fax: 03741-212259 / 09221 Neukirchen, Hauptstraße 74, Walther Elektro, Tel: 0371-217096, Fax: 0371-217090 / 09246 Pleiße, Zeppelinstraße 8 a, Hans Krempel Haustechnik GmbH, Tel: 03722-73780, Fax: 03722-737822 / 09328 Lunzenau, Schulstraße 6, Peter Welsch GmbH, Tel: 037383-6434, Fax: 037383-6448 / 09376 Oelsnitz, Bahnhofstraße 43, Elektrotechnik Oelsnitz-GmbH, Tel: 037298-2677, Fax: 037298-2678 / 12157 Berlin, Cranachstraße 2, Michael Kittler, Tel: 030-8551335, Fax: 030-8554835 / 18055 Rostock, Timmermannstrat 5, Hetec, Tel: 0381-36231, Fax: 0381-36231 / 18435 Stralsund, Kedingshäger Straße 78, RDS Haushaltgeräte GmbH, Tel: 03831-391426, Fax: 03831-390121 / 20357 Hamburg, Schulterblatt 132, Dieter Möller, Tel: 040-435332, Fax: 040-4302120 / 20537 Hamburg, Eiffelstraße 398, Deubel+Höfermann Electronic GmbH, Tel: 040-257227, Fax: 040-2500192 / 22459, Hamburg, Seesrein 35, Dieter A. Volbrecht VDI Klima und Kälte Service, Tel: 040 - 5517331, Fax: 040 - 5519996 / 23562 Lübeck, Helmholtzstraße 12, Lutz H.

Boenisch, Tel: 0451-51929, Fax: 0451-56787 / 24116 Kiel, Eckernförder Straße 93, Jürgen Skop GmbH, Tel: 0431-13038, Fax: 0431-13811 / 24357 Fleckeby, Südring 14, Kaack ElektroHaushaltgeräte Service GmbH, Tel: 04354-700, Fax: 04354-1311 / 24975 Husby, Flensburger Straße 41, Günter Josten, Tel: 04634-422, Fax: 04634-723 / 25770 Hemmingstedt, Koesliner Straße 18, Dirk Stübner Dithmarscher Hausgeräte Service, Tel: 0481-64943, Fax: 0481-64764 / 26655 Westerstede, Südring 37, Gerhard Ahrenholtz GmbH, Tel: 04488-84770, Fax: 04488-847711 / 27404 Heeslingen, Kirchstraße 9-11, Helmut Willenbrock Elektro-Kälte-Radio, Tel: 04281-1031, Fax: 04281-6467 / 27478 Cuxhaven, Am Kanal 5, Oskar Wieandt & Sohn OHG, Tel: 04724-81300, Fax: 04724-813050 / 28207 Bremen, Neidenburger Straße 20, Hansa Haushaltgeräte Service GmbH, Tel: 0421-492526, Fax: 0421-440932 / 29439 Lüchow, Güldenboden 25, Elektro-Kittler, Tel: 05841-3322, Fax: 05841-3322 / 30926 Seelze, Lange-Feld-Straße 122, Strickling Werkskundendienst, Tel: 0511400399-9, Fax: 0511-40039920 / 34123 Kassel, Heinrich-Hertz-Straße 9, Kältebetrieb v.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-634/634F user guide](#)

<http://yourpdfguides.com/dref/1284614>



ONDERHOUDSADRESSEN . DIRECCIONES DE SERVICIO . INDIRIZZI DI SERVIZIO . 5809545, Fax: 0561-5809570 / 34128 Kassel, Ahnatalstraße 84, Elektro Mohrhenne, Tel.: 0561-61727, Fax.: 0561-65470 / 35037 Marburg, Wilhelmstraße 16, Hans-Georg Fuchs, Tel.: 06421-22424, Fax.: 06421-27549 / 35415 Pohlheim, Ludwigstraße 13-15, Jung KDZ, Tel: 06403-61131, Fax.: 06403-62151 / 36088 Hünfeld, Hauptstr. 22, Elektro Vogt, Tel: 06652-2215, Fax: 06652-5782 / 37671 Höxter, Krämerstraße 8, Elektro Nonn, Tel: 05271-7959, Fax: 05271-35053 / 38444 Wolfsburg, Brandgehaege 5 C, Gärtner Elektro-Haustechnik, Tel: 05308-4070, Fax: 05308-40740 / 39106 Magdeburg, Ankerstr. 9, Industrie-Elektronik Magdeburg GmbH, Tel: 0391-5430402, Fax: 0391-5433520 / 40476 Düsseldorf, Rather Straße 21, Horst Leven, Tel: 0211-486025, Fax: 0211-443399 / 41065 Mönchengladbach, Gutenbergstraße 28, Horst Hommers Kundendienst-Center, Tel: 02161603256u.

57, Fax: 02161-651951 / 42781 Haan, Talstraße 8 b, Horst Kerkühn Elektro-Haustechnik, Tel: 021294466+53550, Fax: 02129-34037 / 44357 Dortmund, Freigrafenweg 23-29, Gehado Elektronik Service GmbH, Tel: 0231-9370000, Fax: 0231-93700078+44 / 44869 Bochum, Ruhrstraße 181, ML Werks-Service GmbH, Tel: 02327-77899, Fax: 02327-74692 / 45219 Essen, Corneliusstraße 39, R. Drengenburg, Tel: 02054-84114, Fax: 02054-15238 / 46045 Oberhausen, Feldmannstraße 76, Dieter Kroppen, Tel: 0208-871711, Fax: 0208-876652 / 48165 Münster-Hiltrup, Rohrkampstraße 23, Günter Pfeifer Großküchentechnik, Tel: 02501-3033, Fax: 0250124277 / 49324 Melle, Plettenberger Straße 50, H. U. Borgards GmbH, Tel: 05422-949740, Fax: 05422-9497-92 / 51598 Friesenhagen, Mühlenhof 6, Hans Krempl Haustechnik GmbH, Tel: 02734-7377, Fax: 02734-40618 / 52146 Würselen, De Gasperistraße 6+10, Hubert Hamacher, Tel: 02405-9600+9609, Fax: 02405-2704 / 53757 Sankt Augustin, Kölnstraße 4, HDL Elektro-Kundendienst GmbH, Tel: 02241-920330, Fax: 02241-920334 / 55130 Mainz, Nur telefonische Annahmestelle, Norbert Schwamb GmbH, Tel: 06131-881070 / 55543 Bad Kreuznach, Industriestraße, Hans Krempl Haustechnik GmbH, Tel: 0671-794331, Fax: 0671-794369 / 56070 Koblenz, August-Horch-Straße 14, Hans Krempl Haustechnik GmbH, Tel: 0261-8909173, Fax: 0261-8909199 / 57080 Siegen, Gosenbacher Hütte 44, Hans Krempl Haustechnik GmbH, Tel: 0271-354114, Fax: 0271-351408 / 58239 Schwerte, Holzener Weg 79, HHKT Electronica 2000 Josef Schlütz GmbH, Tel: 02304-982100, Fax: 0230486360 / 61381 Friedrichsdorf, Bahnstraße 17 a, O. Hollmann, Tel: 06172-778276, Fax: 06172-75883 / 63739 Aschaffenburg, Maximilianstraße 8, Radio-Fernseh Reis, Tel: 06021-15177, Fax: 06021-15199 / 65239 Hochheim, Eltviller Straße 14, Norbert Schwamb GmbH, Tel: 06146-4085, Fax: 06146-4088 / 65627 ElbtalHangenmeilingen, Am Ohlenrod 10, Rudi Wagner, Tel: 06436-3444, Fax: 06436-3444 / 65931 Frankfurt, Nur telef. Annahmestelle, Norbert Schwamb GmbH, Tel: 069-371525 / 66117 Saarbrücken, Zinzinger Straße 13, Hans Krempl Haustechnik GmbH, Tel: 0681-5008522, Fax: 0681-5008533 / 67434 Neustadt, Saarlandstraße 55, Hans Krempl Haustechnik GmbH, Tel: 06321-83077, Fax: 06321-83077 / 68309 Mannheim, Heppenheimerstraße 23, Hans Krempl Haustechnik GmbH, Tel: 0621-7184621, Fax: 0621-7184628 / 68526 Ladenburg, Brauergasse 2, Salinger Elektro Service, Tel: 06203-3341, Fax: 06203-16919 / 70186 Stuttgart, Klippeneck Straße 1, Elektro Herterich Techn. Kundendienst, Tel: 0711-4687023, Fax: 0711-4687024 / 75236 Kämpfelbach, Goethestraße 19, Horst Frei, Tel: 07232-1518, Fax: 07232-5238 / 76185 Karlsruhe, Lotzbeckstraße 9, Electronic Service Franke, Tel: 0721-5700720-23, Fax: 0721-5700736 / 76872 Winden, Hauptstraße 103, Hans Krempl Haustechnik GmbH, Tel: 06349-8571, Fax: 06349-3390 / 78462 Konstanz, Nur telef. Annahmestelle, Elektro Herterich, Tel: 07531-27923 / 78737 Fluorn-Winzeln, Schafbaumstraße 9, Edmund Schneider, Tel: 07402-482, Fax: 074028014 / 79650 Schopfheim, Feldbergstraße 21, R. Grossmann, Tel: 07622-7673, Fax: 07622-61900 / 80339 München, Schwanthalerstraße 110, Kesel & Schnitt, Tel: 089-505802, Fax: 089-5021596 / 85095 DenkendorfZandt, Michlstraße 3, Elektro Pfeiffer, Tel: 08466-1319, Fax: 08466-1319 / 85413 Hörgertshausen, Schlosstraße 7, Elektro Radlmaier, Tel: 08764-9306-0, Fax: 08764-9306-30 / 86157 Augsburg, Stadtberger Straße 67, J. Haslinger Elektro-Geräte Kundendienst, Tel: 0821-523125, Fax: 0821-526664 / 87439 Kempten, Heiligkreuzer Straße 17, Radio Hartmann, Tel: 0831-594646, Fax: 0831-91319 / 89231 Neu-Ulm, Gartenstraße 4, Elektrotechnik Schneider, Tel: 0731-85897, Fax: 0731-74681 / 91522 Ansbach, Am Ring 17, Elektro Merk GmbH, Tel: 0981-89574, Fax: 0981-86715 / 93102 Pfatter, Regensburger Straße 60, Franz Bernhard, Tel: 0948190060, Fax: 09481-90061 / 94130 Obernzell, Hameter Straße 31, Elektro Service Schurig, Tel: 08591-2400, Fax: 08591-1285 / 96052 Bamberg, Aronstraße 2 a, Bernhard Jackl, Tel: 0951-9370245, Fax: 0951-9370247 / 97070 Würzburg, Untere Johannitergasse 16, Radio Wels City Service GmbH, Tel: 0931-3557119, Fax: 093114151 / 97318 Kitzingen, Herrmstraße 4-6, Hoffritz GmbH, Tel: 09321-4221/32021, Fax: 09321-32185 / 98724 Neuhaus, Eisfelder Straße 32, DLC Haustechnik GmbH, Tel: 03679-79060, Fax: 03679-790620 / 99096 Erfurt, Goethestraße 14, Ernst Grüsser, Tel: 0361-3465719, Fax: 0361-3465719 / 99734 Nordhausen, Töpferstraße 10, Südhärzer Dienstleistungs-Gesellschaft GmbH, Tel: 03631-983651, Fax: 03631-983654 / 99817 Eisenach, Bahnhofstraße 17, Blitz Elektro-Elektronik GmbH, Tel: 03691-292930, Fax: 03691-292915 FRANCE En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes : A.

A.V.I.: 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60.

Départements desservis : 02, 08, 59, 62, 80 / ASYSTEC : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis :

60, 77, 93, 95 / ATELIER ROUSSEL : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36. Départements desservis : 22,29,35,44,56 / C.E.A.T. : 9, Rue de Venise , 21000 Dijon. Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10,21,25,39,52,58,71,89 / C.M.



[You're reading an excerpt. Click here to read official SHARP R-634/634F user guide](http://yourpdfguides.com/dref/1284614)  
<http://yourpdfguides.com/dref/1284614>

ONDERHOUDSADRESSEN . DIRECCIONES DE SERVICIO . INDIRIZZI DI SERVIZIO . 43 70 20 00 - Fax: 01 43 70 36 46.

Départements desservis : 75,77,78,91,92,93,94,95 / C.T.E. : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07.  
Départements desservis : 51,54,55,57,88 / ELECMA : 6 Bld Gueidon , 13013 Marseille. Tél : 04 91 06 22 56 - Fax : 04 91 06 22 90. Départements desservis :  
13,26,30,34,43,48,83,84 / ELECTRO SERVICE : 21 rue de Mulhouse, BP 122, 68313 ILLZACH. Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements  
desservis : 67,68,70,90 / M.  
E.C. : 118 Bld Tonnellé, 37020 Tours. Tél : 02 47 77 90 90 - Fax : 02 47 77 90 91. Départements desservis. 18,36,37,41,45,44,49,79,85,86 / M.R.T. : 74, Rue  
Albert Einstein , 72021 Le Mans Cedex. Tél : 02 43 28 52 20 Fax: 02 43 24 93 81.

Départements desservis : 28,53,61,72 / ROSSIGNOL : ZL du Brezet Est, 6 rue P. Boulanger,63100 Clermont Ferrand. Tél : 73 91 93 09, Fax:73 92 28 79.  
Départements desservis : 3, 15, 19, 23, 43, 63 / SETELEC : 23, Rue du Chatelet,76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax:35 59 93. 48. Départements  
desservis : 14,27,50,76 / S.T.E. : 3, Chemin de l'Industrie,06110 Le Cannet Rocheville.  
Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04,06 / S.T.V.S.  
: 18, Rue Benoit Malon,42000 Saint Etienne. Tél : 77 32 74 57,Fax: 77 37 45 29. Départements desservis : 03,07,42,43,63 / S.T.V.  
S. : 10, Chemin Saint-Gobain ,69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01,38,69,71,73,74 / TECH SERVICE :  
Batiment G-impasse Boudeville ,31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09,11,31,32,33,40,47,64,65,66,81,82 / TIMO  
VIDEO : 29 rue Elisabeth,91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis :28, 45, 77, 89, 912, 94 / U.N.T.

D. : 1, Rue des Lourdines, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32. Départements desservis :14,27,50,76 ITALIA NEL CASO SI VERIFICASSERO  
PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP  
Microcentro, Via Falloppio 11, 20100 Milano, Phone: 02-26827306 / Rota G., Via Martinella 65, 24020 Torre Boldone (BG), Phone: 035-344492 /  
ServiceTVA, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax. 011253921 / Tre Esse, Via M. Coppino 96/e, 10147 Torino, Phone: 011-2296000,  
Fax: 011-253921 / Video Service s.n.c., Via Giordano 52/54, 16100 Genova , Phone: 010-6043580 / Tecnoservice s.  
n.c., Via San Vigilio 64/b-c-d, 39100 Bolzano, Phone: 0471-289062 / Campi, Via Noalese 87, 31100 Treviso, Phone: 0422436245, Fax: 0422-435996 / Video  
Service, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045573865 / Video Hi-fi, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax:  
051-366863 / Aerre Digit, Via Marbellini 10/12, 50127 Firenze, Phone: 055-410874, Fax: 055-411490 / Saec di Coppa, Via Rinchiostra Nord 34, 54100  
Massa, Phone: 0585-251724, Fax: 0585-791177 / Tecnoconsult, Via Mad. Alta 185, 06100Perugia, Phone: 075-5003089 / Digitecnica s.n.  
c., Via Zuccarini 1- Zona Baraccolla, 60131 Candia (AN) Phone :071-2866067 / S.A.R.E.  
s.r.l., Via Barbana 35/37, 00142 Roma, Phone 06-5406796 / Tecno Labs, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 /  
Marcantonio, Via G.M.Giovene 45, 70124 Bari, Phone: 080-5618029 / Audio Video, Via A. de Gasperi 44, 88018 Vibo Valentia , Phone: 0963-455712 /  
A.V.S.

, Via Sassari2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / AS. TEC., Via R. Villasanta 227, 09100 Cagliari, Phone: 070-524153, Fax:  
070-504109 ESPANA En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o  
infórmanse en una de las SHARP Service casas siguientes. MERINO NICOLAS JOSE A., - 945/25.18.92 - AV JUDIZMENDI 24, 01003 VITORIA-GASTEIZ,  
ALAVA / TELECOLOR - 96/585.24.60, CL DEL VENT 9, 03500 BENIDORM, ALICANTE / TELECOM ELECTRONICA 96/539.

50.21, CL HERNAN CORTES 8, 03600 ELDA, ALICANTE / EUROSAT, S.L. - 96/525.80.  
40, CL MONTERO RIOS 33 03013 ALICANTE, ALICANTE / ELECTRONICA GOMEZ - 96/ 546.75.81, CL BALTASAR TRISTANY 100, 03201 ELCHE,  
ALICANTE / ANGEL AVELLAN PUIG - 965/21.32.55, CL POETA QUINTANA 13, 03004 ALICANTE, ALICANTE / ELECTRONICA ELER - 965/25.  
63.32, CL PINOSO 8, 03012 ALICANTE, ALICANTE / INSAT, CB - 971/ 36.53.18, CL PINTOR CALBO 30, 07703 MAHON, BALEARES (MENORCA) /  
REPARACIONES ORTEGA - 971/ 39.01.55, CL VIA PUNICA 33, 07800 IBIZA, BALEARES (IBIZA) / AUDIO IMAGEN - 971/ 31.46.59, CL JOSE RIQUER  
LLOBET 8, 07800 IBIZA, BALEARES (IBIZA) / IRTESA ELECTRONICA 971/ 20.47.

02, CL JAUME FERRAN 72 BJOS, 07004 PALMA DE MALLORCA, BALEARES (MALLORCA) / INSTALACIONES MAES, S.L - 971/ 27.49.47, CL SON  
NADAL 63, 07008 PALMA DE MALLORCA, BALEARES (MALLORCA) / ELECTRON. PONS GOMILA SA - 971/ 37.22.76, CR NUEVA 162, 07730  
ALAYOR, BALEARES (MENORCA) / JOSE MARQUES ANGLADA,S.L. - 971/ 38.54.

54, CL LEPANTO 19, 07760 CIUDADELA, BALEARES (MENORCA) / ANOIA ELECTROVISIO - 93/ 805.11.90, AV BALMES 12, 08700 IGUALADA,  
BARCELONA / AUDIO VISION - 385.78.08, CL MARE DEU MONTSERRAT 22, 08922 STA.  
COLOMA, BARCELONA / SAC-2, S.C.P. - 331.77.

54, CL RIERA BLANCA 113, 08028 BARCELONA, BARCELONA / FERMO - 465.22.00, AV MORERA 5, 08915 BADALONA, BARCELONA /  
ELEC.SAFONT - 821.30.03, CL GRAL. MANSO SOLA 31, 08600 BERGA, BARCELONA / SERVINTERS, S.C.C.L.

- 389.44.60 - PZ CASAGEMES 20, 08911 BADALONA, BARCELONA / TEKNIK'S, S.C.P. - 630.11.20, CL JOAN BARDINA 32, 08830 SANT BOI DE LL,  
BARCELONA / CE. VA. SAT, S.

C. - 785.51.11, CR MATADEPERA 87, 08225 TERRASSA, BARCELONA / LAUREA S.A.  
T. - 889.02.48, CL GUILLERIES BIS 20, 08500 VIC, BARCELONA / CE. VA.

SAT, S.C. - 710.76.13, PS RUBIO I ORS 105, 08203 SABADELL, BARCELONA / VILLARET POLO RAMON - 798.02.48, CL MOLI DE VENT 21, 08303  
MATARO, 22 R-634 English 22/01/2001 12:07 Page 23 . SERVICE NIEDERLASSUNGEN . ADDRESSES D'ENTRETIEN . ONDERHOUDSADRESSEN .

DIRECCIONES DE SERVICIO . @@@@JAVIER, FORMENTERA / REPARACIONES PILSA S.C., 972/ 20.66.96, CL J. @@@@TORRES, 977/ 21.21.48,  
CL JOAN MIRO 4 ESC.D 1-2, 43005 TARRAGONA, TARRAGONA / BUIRA TECNIC'S, 977/ 66.

04.37, CL SAN JAVIER 55, 43700 EL VENDRELL, TARRAGONA / TECNO SERVEIS MORA, 977/ 40.08.83, CL PAU PICASSO 1, 43740 MORA D'EBRE,  
TARRAGONA / SERTECS, S.C.

, 977/ 22.18.51, CL CAPUTXINS (BAJOS) 22, 43001 TARRAGONA, TARRAGONA / ELECTRONICA JOSEP, 977/ 88.04.41, CTRA.  
IGUALADA 29 BJOS, 43420 STA. COLOMA QUERALT, TARRAGONA / MARTORELL ALTES , 977/ 75.32.41, CL ROSETA MAURI 10, 43205 REUS,  
TARRAGONA / TELESERVICIO S.C., 978/ 87.08.10, CL ROMUALDO SOLER 4, 44600 ALCAÑIZ, TERUEL / ELECTRONICA ALCAÑIZ S.L., 979/ 87.

07.94, CL CARMEN 21, 44600 ALCAÑIZ, TERUEL / SONOVISION, C.B., 978/ 60.11.74, CL ABADIA 5, 44001 TERUEL, TERUEL / ELECTRONICA

MONCHO, 96/287.23.29, CL PARE PASCUAL CAT. 5, 46700 GANDIA, VALENCIA / ENVISA ELECTRONIC, S.L.  
, 96/241.24.87, CL GENERAL ESPARTERO 9, 46600 ALZIRA, VALENCIA / ANTONIO MONLEON, S.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-634/634F user guide](#)

<http://yourpdfguides.com/dref/1284614>

L., 96/334.

- 55.87, AV DE LA PLATA 91, 46006 VALENCIA, VALENCIA / TECNO HOGAR, 96/286.53.35, CL DOS DE MAYO 41, 46700 GANDIA, VALENCIA / SERVICIOS ELECTRONICOS,, 96/340.20.
- 34, CL DOCTOR OLORIZ 3, 46009 VALENCIA, VALENCIA / ELECTRONICA LAS HERAS, 96/ 238.11.14, CL JOSE IRANZO 6, 46870 ONTINYENT, VALENCIA / NEGREDO MARTIN DANIEL, 94/411.22.82, CL PADRE PERNET 8, 48004 BILBAO, VIZCAYA / COLLANTES MARTIN ONOFRE, 94/ 483.21.22, CL ORTUÑO DE ALANGO 7, 48920 PORTUGALETE, VIZCAYA / ARGÍ GILTZ, 94/ 443.77.93, CL AUTONOMIA 15, 48012 BILBAO, VIZCAYA / SERVITELE, 94/444.89.
- 02, CL AUTONOMIA 24 Galerías, 48012 BILBAO, VIZCAYA / CINCA MONTERDE ANTONIO, 976/ 31.69.65, CL VIA UNIVERSITAS 52, 50010 ZARAGOZA, ZARAGOZA / ARAGON TELEVIDEO, S.C., 976/ 32.97.12, CL BATALLA CLAVIJO 18, 50010 ZARAGOZA, ZARAGOZA / TV VIDEO JIMENEZ, S.L., 967/ 34.04.
- 43, CL JUAN XXIII 38, 02640 ALMANSA, ALBACETE / JUMAN, 967/ 22.40.78, CL EJERCITO 1, 02002 ALBACETE, ALBACETE / TELEVIDEO, 950/ 40.18.63, CL VELAZQUEZ 7 LOCAL-A, 04770 ADRA, ALMERIA / SERVICIO TECNICO PONCE, 950/ 45.67.53, UB MONTE ALMAGRO 10, 04610 CUEVAS DE ALMANZORA, ALMERIA / SONIVITEL S.L., 950/ 22.97.
- 55, CL POETA PACO AQUINO 51, 04005 ALMERIA, ALMERIA / ELECTRONICA EDIMAR, S.A, 98/535.34.51, CL CANGAS DE ONIS 4, 33207 GIJON, ASTURIAS / CAÑEDO S.T., 98/522.29.68, CL OTERO, S/N C. CIAL, 33008 OVIEDO, ASTURIAS / ALVAREZ OLIVAR CASILDA, 98/522.37.
- 39, CL SAN JOSE 12, 33003 OVIEDO, ASTURIAS / SANTIAGO VALDERREY, 98/ 563.18.61, CL DR. VENANCIO MTEZ. 7, 33710 NAVIA, ASTURIAS / ASTUSETEL S.L., 98/539.10.11, CL CEA BERMUDEZ 9, 33208 GIJON, ASTURIAS / ASTURSERVICE, 98/556.83.
- 87, CL 23 R-634 English 22/01/2001 12:07 Page 24 . SERVICE NIEDERLASSUNGEN . ADRESSES D'ENTRETIEN . ONDERHOUDSADRESSEN . DIRECCIONES DE SERVICIO .
- INDIRIZZI DI SERVIZIO . SANCHEZ CALVO 6 bjos., 33401 AVILES, ASTURIAS / JUAN MORILLON DEL CORRO, 98/567.40.24, AV DE GIJON 19, 33930 LA FELGUERA/LANGREO, ASTURIAS / S.
- A.T. JUAN-MANUEL, 98/ 581.22.48, CL URIA 60, 33800 CANGAS DE NARCEA, ASTURIAS / DANIEL SERRANO LABRADO, 920/ 37.15.16, CL JOSE GOCHICOA 16, 05400 ARENAS DE S.PEDRO, AVILA / ELECTRONICA GREDOS, 920/ 22.48.39, CL EDUARDO MARQUINA 24, 05001 AVILA, AVILA / JIMENEZ ALMOHALLA , 920/ 25.
- 08.76, CL JACINTO BENAVENTE 1, 05001 AVILA, AVILA / ELECTRONICA BOTE, 924/ 22.17.40, PZ PORTUGAL 2, 06001 BADAJOZ, BADAJOZ / MARCIAL LAGOA GONZALEZ, 924/ 49.03.33, CL RAMON Y CAJAL 7, 06100 OLIVENZA, BADAJOZ / C.E. VILANOVENSE C.B., 924/ 84.59.92, CL CAMINO MAGACELA 4 LOCAL-5, 06700 VILLANUEVA SERENA, BADAJOZ / ELECTRONICA CENTENO S.L., 924/ 57.53.
- 08, AV DEL ZAFRA 1, 06310 PUEBLA SANCHO PEREZ, BADAJOZ / INDALECIO AMAYA SANCHEZ, 924/ 66.47.01, CL CARRERAS 11, 06200 ALMENDRALEJO, BADAJOZ / PATRICIO ELECTRONICA, 924/ 33.04.13, CL REYES HUERTAS 7, 06800 MERIDA, BADAJOZ / ELECTRONICA MAS, 947/ 31.
- 49.94, CL ALFONSO VI 6, 09200 MIRANDA DE EBRO, BURGOS / SERVITEC BURGOS S.L., 947/ 22.41.68, CL LAVADEROS 7-9, 09007 BURGOS, BURGOS / RUIZ GARCIA JOSE, 927/ 22.48.86, CL ECUADOR 5-B, 10005 CACERES, CACERES / ARSENIO SANCHEZ, C.B., 927/ 41.
- 11.21, CL TORNAVACAS 9, 10600 PLASENCIA, CACERES / ZABALA VAZQUEZ JOSE, 927/ 57.06.13, CL DEL AGUA 39, 10460 LOSAR DE LA VERA, CACERES / RADIO SANCHEZ C.B., 927/ 32.06.88, AV DE MIAJADAS S/N, 10200 TRUJILLO, CACERES / ELECTRONICA JEDA, , CL PAGADOR 31, 11500 PTO. STA. MARIA, CADIZ / SERVICIO TECNICO, 956/ 87.
- 07.05, CL DIVINA PASTORA E-1 L-4, 11402 JEREZ LA FRONTERA, CADIZ / JOSE BORJA Y JOSE ARANA, 956/ 66.60.53, CL SAN ANTONIO 31, 11201 ALGECIRAS, CADIZ / VHIFITEL, 956/ 46.25.
- 01, CL FCO.FDEZ.ORDOEZ 5, 11600 UBRIQUE, CADIZ / GALAN SAT S.L., 956/ 20.
- 14.17, CL CRUZ ROJA ESPAÑOLA 11, 11009 CADIZ, CADIZ / GALAN SAT S.L., 956/ 83.35.35, CL FACTORIA MATAGORDA 52, 11500 PUERTO REAL, CADIZ / ELECTRONICA SEYMA, 942/ 23.69.19, CL DEL MONTE 69 C bjos, 39006 SANTANDER, CANTABRIA / TELE-NUEVA, 926/ 50.59.96, CL CAMPO 56, 13700 TOMELLOSO, CIUDAD REAL / ELECTRONICA ARELLANO, 926/ 54.
- 78.95, CL LORENZO RIVAS 14, 13600 ALCAZAR DE SAN JUAN, CIUDAD REAL / ELECTRONICA LARA, 926/ 21.17.87, CL DE LA JARA 1, 13002 CIUDAD REAL, CIUDAD REAL / MANUEL VAZQUEZ , 926/ 42.09.93, CL ADUANA 3, 13500 PUERTOLLANO, CIUDAD REAL / ELECTRODIAZ S.L., 926/ 32.23.24, CL BUENSUCESO 10, 13300 VALDEPEÑAS, CIUDAD REAL / DUEÑAS CAIAS TEODORO, 957/ 26.
- 35.06, CL HERMANO JUAN FDEZ 15, 14014 CORDOBA, CORDOBA / ELECTRONICA SALES, 957/ 66.09.04, CL ANDALUCIA 11, 14920 AGUILAR FRONTERA, CORDOBA / LAVISON ELECTRONICA S.L. , 957/ 75.01.75, CM DE LA BARCA 3, 14010 CORDOBA, CORDOBA / ANTONIO GONZALEZ , 957/ 57.10.50, CL GRAL PRIMO RIVERA 61, 14200 PEÑARROYA, CORDOBA / ELECTRONICA GARCIA, 969/ 22.
- 24.83, CL RAMON Y CAJAL 17, 16004 CUENCA, CUENCA / GALLARDO ALONSO MIGUEL, 958/ 67.64.81, CL CARMEN 104, 18510 BENALUA DE GUADIX, GRANADA / VILCHEZ VILCHEZ RAFAEL, 958/ 60.06.50, CL AMADEO VIVES 9, 18600 MOTRIL, GRANADA / ELECTRONICA WENCESLAO, 958/ 81.16.16, CL FONTIVEROS 42, 18008 GRANADA, GRANADA / DIGIMAT ELECTRONICA, 958/ 70-04-52, CL CASICAS 7, 18800 BAZA, GRANADA / MEGATECNICA EXTREMERA, 958/ 26.06.01, C/.
- MOZART L-2 Ed.Granate, 18004 GRANADA, GRANADA / TECNICAS MARVI S.L., 949/ 23.27.63, PZ CAPITAN BOIXAREU 51, 19001 GUADALAJARA, GUADALAJARA / ABRIL SANCHEZ VALENTIN, 959/ 10.60.41, CL CADIZ 2, 21270 CALA, HUELVA / TELESONID HUELVA, S.C.A. , 959/ 24.38.60, CL FCO.VAZQUEZ LIMON 4, 21002 HUELVA, HUELVA / ELECTRONICA SUR, 959/ 47.11.
- 51, CL M. LERDO DE TEJADA 9, 21400 AYAMONTE, HUELVA / ELECTRO HIMEGA, S.A., 953/ 24.22.
- 56, CL ADARVES BAJOS 4-C, 23001 JAEN, JAEN / ELECTRONICA JUMAR, 953/ 26.17.08, CL GOYA (LAS FLORES) 1, 23006 JAEN, JAEN / ELECTRONICA GONZALEZ, 953/ 50.33.82, CORREDERA SAN BARTOLOME 11, 23740 ANDUJAR, JAEN / UNISERVIC ELECTRONICA, 953/ 75.14.19, CL GOYA 1 BJS, 23400 UBEDA, JAEN / NOMBRE1, TLFNO, CALLE, CIUDAD, PROVINCIA / ANUMA, 953/ 69.70.41, CL PAREDON 24, 23700 LINARES, JAEN / TALLERES INSTALUZ, 981/ 26.80.

26, CL JUAN FLOREZ 110, 15005 LA CORUÑA, LA CORUÑA / GARCIA QUINTELA ARTURO, 981/ 70.21.07, CL XOANE, 15100 CARBALLO, LA CORUÑA / MANUEL MATO SEÑARIS, 981/ 53.71.14, CL SILVOUTA-PEDRA DA, 15896 SANTIAGO COMPOSTELA, LA CORUÑA / ZENER ELECTRONICA, 981/ 22.07.00, CL RONDA DE MONTE ALTO 15, 15002 LA CORUÑA, LA CORUÑA / S.T. MENDEZ, 981/ 27.52.

52, CL GIL VICENTE 13, 15011 LA CORUÑA, LA CORUÑA / ELECTRONICA CASTILLA, 981/ 32.14.09, CR CASTILLA 377-bis bjos, 15404 FERROL, LA CORUÑA / BANDIN AUDIO, 981/ 86.60.23, CL RUA ARCOS MOLDES 2 B-3, 15920 RIANXO, LA CORUÑA / ELECTRONICA TORRES, S. C., 941/ 24.76.15, AV NAVARRA 14, 26001 LOGROÑO, LA RIOJA / TOP SERVICE, 941/ 13.50.

35, CL ACHUTEGUI DE BLAS 17, 26500 CALAHORRA, LA RIOJA / AGUADO GIL ROBERTO, 941/ 25.25.53, AV VIANA 10, 26001 LOGROÑO, LA RIOJA / TELSON, 987/ 21.25.18, CL BATALLA CLAVIJO 2, 24006 LEON, LEON / SALVADOR RODRIGUEZ, C.B., 987/ 40.36.02, CL ORTEGA Y GASSET 24, 24400 PONFERRADA, LEON / PROSAT, 987/ 20.34.

10, PZ DOCE MARTIRES 5, 24004 LEON, LEON / ELECTRONICA FOUCHES, 982/ 40.24.38, CL BENITO VICETTO 34, 27400 MONFORTE DE LEMOS, LUGO / TELEVEXO S.L., 982/ 58.18.57, CL NOSA SRA. do CARMEN 82, 27880 BURELA, LUGO / ELECTRONICA PENELO, 982/ 21.47.43, CL SERRA GA#IDOIRA 63, 27004 LUGO, LUGO / GOMESCAN, 91/305.

48.90, PZ DEL JUBILADO 8, 28042 BARAJAS-MADRID, MADRID / ELECTRONICA GARMAN, C.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-634/634F user guide](#)

<http://yourpdfguides.com/dref/1284614>



B., 91/368.01.

79, CL MANDARINA 15, 28027 MADRID, MADRID / ELECTRONICA ANSAR, 91/ 460.47.45, CL TOMASA RUIZ 4, 28019 MADRID, MADRID / TECNORTE, 91/851.63.47, CL SANTIAGO APOSTOL 12, 28400 COLLADO VILLALBA, MADRID / VARIOSAT, S. L., 91/662.04.68, CL ISLA DE CORCEGA 24, 28100 ALCOBENDAS, MADRID / ELBESERVI, S.A., 91/386.27.11, CL DR.R. CASTROVIEJO 19, 28029 MADRID, 24 R-634 English 22/01/2001 12:07 Page 25 .

SERVICE NIEDERLASSUNGEN . ADDRESSES D'ENTRETIEN . ONDERHOUDSADRESSEN . DIRECCIONES DE SERVICIO . INDIRIZZI DI SERVIZIO . MADRID / ALCALA SERVITEC C.B., 91/889.00.32, CL SANTA URSULA 5, 28801 ALCALA DE HENARES, MADRID / GARMAN C.

B., , CL CARLOS SOLE 38 local, 28038 MADRID, MADRID / AVILES SANCHEZ ANTONIO, 952/ 36.16.02, CL CIUDAD DE ANDUJAR 2, 29006 MALAGA, MALAGA / VIDEO TALLER, S.C.

, 952/ 54.23.95, EDIF. LA NORIA B BJOS-5, 29740 TORRE DEL MAR, MALAGA / SERVISUEL, EDIF. LA UNION, 952/ 46.

90.28, CM DE LAS CA#ADAS LC 2, 29640 FUENGIROLA, MALAGA / BISER, S.L., 952/ 25.55.53, CL LOZANO DE TORRES 8, 29013 MALAGA, MALAGA / ELECTRO RONDA, 952/ 87.59.99, CL SANTA CECILIA 11, 29400 RONDA, MALAGA / DIEGO LOPEZ JODAR, 95/ 280.12.23, PZ DEL RELOJ 13, 29680 ESTEPONA, MALAGA / CARO PORLAN RAIMUNDO, 968/ 46.

18.11, CL JOSE MOULIAA 45, 30800 LORCA, MURCIA / REG., C.B., 968/ 51.00.06, CL ANTONIO OLIVER 17, 30204 CARTAGENA, MURCIA / ELECTROSERVICIOS SEBA, C.B, 968/ 29.85.93, CL ISAAC ALBENIZ 4 BJOS, 30009 MURCIA, MURCIA / VISATEL, 968/24.

16.47, CL TORRE ALVAREZ S/N, 30007 MURCIA, MURCIA / ELECTRO SERVICIOS PLAZA., 968/ 28.45.67, CL GOMEZ CORTINA 10, 30005 MURCIA, MURCIA / RAFAEL GOMEZ YELO, 968/ 26.14.

67, PS CORBERA 17, 30002 MURCIA, MURCIA / FERNANDEZ GONZALEZ JOSE, 988/ 23.48.53, AV BUENOS AIRES 75 BJOS, 32004 ORENSE, ORENSE / ELECTRONICA JAVIER, 979/ 75.03.74, CL RAMIREZ 5, 34005 PALENCIA, PALENCIA / CENTRAL DE SERVICIOS, 986/ 37.

47.45, CL ASTURIAS (BAJO) 10, 36206 VIGO, PONTEVEDRA / MONTAJES SERVICIOS TECN., 986/ 84.16.36, CL LOUREIRO CRESPO 43, 36004 PONTEVEDRA, PONTEVEDRA / SIAL-ALVIMO S.L., 986/ 29.93.01, C/ C.TORRECEDEIRA 92 bjos, 36202 VIGO, PONTEVEDRA / ELECTRONICA CAMBADOS, 986/ 50.

83.27, CL CAMILO JOSE CELA 13, 36600 VILAGARCIA AROUSA, PONTEVEDRA / ALMAT ELECTRONICA, 923/ 22.45.08, CL GALILEO 21, 37004 SALAMANCA, SALAMANCA / GUIJO S.T., 921/ 42.94.18, CL RAMON Y CAJAL 1, 40002 SEGOVIA, SEGOVIA / AVITELSAT, S.A., 954/ 66. 21.52, CL ESPINOSA Y CARCEL 31, 41005 SEVILLA, SEVILLA / VANHCOLOR, S.L., 95/433.83.

03, CL SAN JACINTO 96, 41010 SEVILLA, SEVILLA / TELEPAL, 95/464.95.80, CL JULIO VERNE 49, 41006 SEVILLA, SEVILLA / AUVITEL, S.L., 95/427. 57.07, CL VIRGEN DE AFRICA 20, 41011 SEVILLA, SEVILLA / AUDIO COLOR, 95/457.94.47, CL GOLGOTA 3 LOCAL-IZDA., 41003 SEVILLA, SEVILLA / ELECTRO 93 S.L., 95/ 472.37.16, CL MELLIZA 1, 41700 DOS HERMANAS, SEVILLA / TECO, 975/ 22.61.

25, CL ANTOLIN DE SORIA 10, 42003 SORIA, SORIA / ELECTRONICA RIVAS, 925/ 80.55.46, CL BARRIO SAN JUAN 1, 45600 TALAVERA LA REINA, TOLEDO / ELECTRONICA FE-CAR, S.L., 925/ 21.21.45, AV SANTA BARBARA 30, 45006 TOLEDO, TOLEDO / ELECTRONICA JOPAL S.L., 925/ 25.04. 42, AV SANTA BARBARA S/N, 45006 TOLEDO, TOLEDO / ELECTRO ANAYA, 925/ 48.09.81, CL VERTEDEIRA ALTA 14, 45700 CONSUEGRA, TOLEDO / TELESERVICIOS, 983/ 30.92.61, CL ESGUEVA 6, 47003 VALLADOLID, VALLADOLID / ASIST.

TECNICA MARCOS, 983/ 29.78.66, CL PIO DEL RIO HORTEGA 2-4, 47014 VALLADOLID, VALLADOLID / ELECTRONICA VITELSON, 983/ 80.43.56, PZ DEL MERCADO 9, 47400 MEDINA DEL CAMPO, VALLADOLID / R.

T.V. BLANCO, 980/ 51.14.41, CL EDUARDO JULIAN PEREZ 9, 49018 ZAMORA, ZAMORA SWITZERLAND FALCOMAT AG, Allmendstrasse 134, 4058 BASEL. Tel. 061601-1919. Fax. 061601-5755 SWEDEN Vid förfrågningar angående din mikrovågsugn var vänlig kontakta din återförsäljare eller någon av Sharps representanter Centralservice Umeå, Formvägen 8, 90621 Umeå , Phone: 090-125001, Fax: 090131135 / MN Elektronikservice AB, Flygplatsinfarten 10A, 161 11 Bromma, Phone: 08-6275900, Fax:086275160 / Jönköpings Antenn & TV Service, Fridhemsvägen 20, 553 02 Jönköping, Phone: 036-161690, Fax: 036-160211 / Ratronik Radio & TV Service, Nordlandergatan 15, 931 32 Skellefteå, Phone: 0910-17305, Fax: 0910-16844 / Tomi Elektronik AB, Bäckvägen 90, 126 47 Hägersten , Phone: 08-186170 , Fax: 08-186175 / Tretronik, Östermovägen 33, 854 62 Sundsvall, Phone: 060-155925, Fax: 060-173690 / TV-Trim Service AB, S:T Pauligatan 37, 416 60 Göteborg, Phone: 031-847200, Fax: 031-847500 NORWAY Finn Clausen AS, Postbox 274 , No-0511 Oslo , Phone: 47-22635000 , Fax: 47-22646655 Norsk Elektronik senter, Postbox 13 , No-2007 Kjeller , Phone: +47-63804500 , Fax: +47-63804501 ICELAND Braedurnir Ormsson Ltd, PO box 8790 , IS-128 Reykjavik , Phone: +354-5332800 , Fax: +354-5332810 Hjolmtaekni Ehf, Skeifjar , IS-108 Reykjavik , Phone: +354-5332150 , Fax: +354-5332151 DENMARK Sö Höyem AS, Büllowsvej 3 , DK-1870 Fredriksberg C , Phone: 45-31224434 , Fax: 45-31224127 Almstock Radio & Tv service, Sallingsvej 61 , DK-2720 Vanløse , Phone: 45-38740021 , Fax:45-38740031 SUOMI Oy Perkkio, PL 40 Rälssintie 6 , SF-00721 Helsinki , Phone: +35-8947805000 , Fax: +35-8947805480 Theho Video, Kuoataankatu 7 , SF-00520 Helsinki , Phone: +35-891451500 , Fax: +35-891461767 25 R-634 English 22/01/2001 12:07 Page 26 SPECIFICATIONS AC Line Voltage Distribution line fuse/circuit breaker AC Power required: Microwave Grill Dual Grill Output power: Microwave Grill heating elements Microwave Frequency Outside Dimensions Cavity

Dimensions Oven Capacity Turntable Weight Oven lamp : 230 V, 50 Hz, single phase : Minimum 16 A : 1.25 kW : 1.

05 kW : 2.25 kW : 800 W (IEC 60705) : 1000 W (500 W x 2) : 2450 MHz : 449 mm(W) x 282 mm(H) x 388 mm(D) : 290 mm(W) x 194 mm(H) x 313 mm(D) : 18 litres : ø 272 mm : approx. 14 kg : 25 W/240-250 V This equipment complies with the requirements of directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC. As part of a policy of continuous improvement, we reserve the right to alter design and specifications without notice. 26 R-634 English 22/01/2001 12:07 Page 27 D F N L I E De pulp die gebruik is El 100 % de la Der Zellstoff zur voor de vervaardiging Il 100 % della pasta Ce papier est pasta utilizada en Herstellung dieses utilizzata per entièrement fabriqué van dit papier is voor la fabricación de Papiers kommt zu 100 % afkomstig uit produse questa carta à partir de pâte à este papel procede 100 % aus nachhaltig papier provenant bossen die doorlopend proviene da foreste de bosques bewirtschafteten sostenibili de forêts durables opnieuw aangepland sostenibles Wäldern worden Gedrukt in Grossbritannien Imprimé au Royaume-Uni Gedrukt in Groot-Brittannie Stampato in Gran Bretagna Impreso en el Reino Unido SHARP ELECTRONICS (EUROPE) GMBH. Sonninstrasse 3, 20097 Hamburg Germany TINS-A247URRO .



[You're reading an excerpt. Click here to read official SHARP R-634/634F user guide](#)

