



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP R-671/671F. You'll find the answers to all your questions on the SHARP R-671/671F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP R-671/671F
User guide SHARP R-671/671F
Operating instructions SHARP R-671/671F
Instructions for use SHARP R-671/671F
Instruction manual SHARP R-671/671F



[You're reading an excerpt. Click here to read official SHARP R-671/671F user guide](http://yourpdfguides.com/dref/1284596)
<http://yourpdfguides.com/dref/1284596>

.....
.....
.....
.....

...10 GRILL COOKING.....

.....
.....
.....

.....
.....
.....

.....11 DUAL COOKING.....

.....
.....
.....
.....

.....
.....

..12 AUTOMATIC OPERATION...

.....
.....
.....
.....
.....

13-14 PIZZA CHART.....

.....
.....
.....

.....
.....
.....

....15 AUTO COOK CHART.....

.....
.....
.....
.....

16-18 AUTO DEFROST CHART.....

.....
.....

.....
.....
.....

....18-19 OTHER CONVENIENT FUNCTIONS.....

.....
.....
.....
.....

20-21 CARE AND CLEANING.....

.....
.....
.....
.....
.....

. .22 SERVICE CALL CHECK . . .

.....
.....
.....
.....

.23 SERVICE ADDRESSES

.....
.....
.....
.....
.....

.24-29 SPECIFICATIONS

.....
.....
.....
.....

. . @@@@2. WATT AUTO COOK AUTO DEF /Kg 3. 4.
STOP +1min R-671 9. 1. 2. 3. 4.
5. 6. 7. 8. 9. 10. 11. 12. @@12. 13.

ACCESSORIES: Check to make sure the following accessories are provided: 13. Turntable 14. Rack Place the turntable over the turntable motor shaft on the floor of the cavity. Before first using the turntable and the rack, clean with mild soapy water. Do not cut or scratch the turntable. 8. 14. WARNING: The accessories (e.g. @@@@5.

6. AUTO Digital display and indicators 1. DIGITAL DISPLAY 2. @@@@LESS/MORE 4. AUTO COOK AUTO DEF 7.

Kg WATT WEIGHT POWER LEVEL TIME COOK 3. AUTO indicator It will light during automatic operation. 8. WATT /Kg 9. 10.

Operating buttons 4. LESS/MORE buttons 5. PIZZA button 6. AUTO COOK button 7. AUTO DEFROST button 8. COOKING MODE selector MICROWAVE cooking see pages 9-10 GRILL cooking see page 11 DUAL cooking see page 12 9. WATT button 10.TIME/WEIGHT dial 11.CLOCK SETTING button 12.STOP button 13.

+1min /START button 14.DOOR OPEN button STOP +1min 13. R-671 11. 12. 14. 3 ENGLISH R-671-English Final 14/12/2001 9:08 Page 4 IMPORTANT SAFETY INSTRUCTIONS IMPORTANT: PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE. To avoid the danger of fire The microwave oven should not be left unattended during operation. Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire.

This oven is not designed to fit into a kitchen unit. The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency. The AC power supply must be 230V, 50Hz, with a minimum 16A distribution line fuse, or a minimum 16A distribution circuit breaker. It is recommended that a separate circuit serving only this appliance be provided. Do not place the oven in areas where heat is generated. For example, close to a conventional oven.

Do not install the oven in an area of high humidity or where moisture may collect.

Do not store or use the oven outdoors. If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire. Use only microwave-safe containers and utensils.

Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers. Clean the waveguide cover, the oven cavity and the turntable after use. These must be dry and free from grease. Builtup grease may overheat and begin to smoke or catch fire. Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings. Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire. Do not use the microwave oven to heat oil for deep frying.

The temperature cannot be controlled and the oil may catch fire. To make popcorn, use only special microwave popcorn makers. Do not store food or any other items inside the oven. Check the settings after you start the oven to ensure the oven is operating as desired. See the corresponding hints in the cookery book section. To avoid the possibility of injury Do not operate the oven if it is damaged or malfunctioning. Check the following before use. a) The door; make sure the door closes properly and ensure it is not misaligned or warped. b) The hinges and safety door latches; check to make sure they are not broken or loose. c) The door seals and sealing surfaces; ensure that they have not been damaged.

d) Inside the oven cavity or on the door; make sure there are no dents. e) The power supply cord and plug; ensure that they are not damaged. Do not try to adjust or repair the oven yourself. The oven must be adjusted or repaired only by an authorised SHARP service agent. Do not operate the oven with the door open or alter the door safety latches in any way.

Do not operate the oven if there is an object between the door seals and sealing surfaces. Do not allow grease or dirt to build up on the door seals and sealing surfaces. Follow instructions for "Care and Cleaning". Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens. To avoid the possibility of electric shock Under no circumstances should you remove the outer cabinet.

Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent. Do not immerse the power supply cord or plug in water or any other liquid. Do not let the power supply cord hang over the edge of a table or work surface. Keep the power supply cord away from heated surfaces. 4 R-671-English Final 14/12/2001 9:08 Page 5 IMPORTANT SAFETY INSTRUCTIONS Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent. If the power supply cord of this appliance is damaged, do not operate the

oven, it must be replaced by the manufacturer or their service agent or a similarly qualified person in order to avoid a hazard. A defective plug, power supply cord or socket may overheat and catch fire during operation or cause an electrical shock. To avoid the possibility of explosion and sudden boiling Never use sealed containers.

Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off. Take care when microwaving liquids. Use a wide-mouthed container to allow bubbles to escape. Never heat liquids in narrow-necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-671/671F user guide](#)

<http://yourpdfguides.com/dref/1284596>

To prevent sudden eruption of boiling liquid and possible scalding: 1. Stir liquid prior to heating/reheating. 2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating. 3.

Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling. Eggs in their shell and hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven. Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

To avoid the possibility of burns Never touch the grill while it is hot. Use pot holders or oven gloves when removing food from the oven to prevent burns. Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns. To avoid burns, allow food to cool to a safe temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly. The temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature. Always stand back from the oven door when opening it to avoid burns from escaping steam and heat. Slice stuffed baked foods after heating to release steam and avoid burns. The door may become hot during cooking, place or mount the oven so that the bottom of the oven is 85 cm or more above the floor. Keep children away from the door to prevent them burning themselves. Do not touch the oven door, outer cabinet, bottom grill, ventilation openings, accessories and dishes during the grill, dual and automatic operation modes as they will become hot. Before cleaning make sure they are not hot. Warning: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.

Children should be taught all important safety instructions: use of potholders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot. Other warnings Never modify the oven in any way. Do not move the oven while it is in operation. This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

ENGLISH R-671-English Final 14/12/2001 9:08 Page 6 IMPORTANT SAFETY INSTRUCTIONS To promote trouble-free use of your oven and avoid damage. Never operate the oven when it is empty except where recommended in the operation manual. (See 'Heating Without Food', page 11, note 2). Doing so may damage the oven. When using a browning dish or self-heating material, always follow the instructions below. Example: To start the energy save mode, (the current time is 23:35): Make sure the correct time appears on the display. Press the CLOCK SETTING button. Adjust the display to 0 by rotating the TIME/WEIGHT dial.

/Kg Press +1 min / START button. The power will be off and the display will show nothing. +1min x1 Display: x1 Kg WATT Kg WATT Kg WATT Kg WATT 8 R-671-English Final 14/12/2001 9:08 Page 9 MICROWAVE POWER LEVELS Your oven has 5 power levels. To choose the power level for cooking, follow the advice given in the recipe section. Generally the following recommendations apply.

800 WATT (800P)100%. Used for fast cooking or reheating, eg: for plated meals, hot beverages, vegetables, fish, etc. 560 WATT (560P) 70%. For longer cooking of dense foods such as roast joints. For sensitive dishes, eg: cheese sauce, reduce the power setting. At a reduced setting, the dishes will not boil over and meat will cook evenly without over cooking at the sides. 400 WATT (400P) 50%. For dense foods which require a long cooking timeE selector to the desired position. Generally, dual cooking time shortens the total cooking time. Pre-programmed Dual Cooking modes: 1.

DUAL 1 240 watt (30%) Microwave power and Top Grill mode. 2. DUAL 2 240 watt (30%) Microwave power and Bottom Grill mode. NOTE: If you want to adjust the microwave power, press the WATT button you can select up to 800 watt (100%) power. Example: Suppose you want to cook for 11 minutes on DUAL 1, combining 400 watt (50%) Microwave Power with the Top Grill: Set the COOKING MODE selector to position. Select power level (400 watt) by pressing the WATT button five times. Enter desired cooking time by rotating the TIME/WEIGHT dial. /Kg Press the +1 min / START button once to begin cooking. WATT +1min x5 x1 Display: Kg WATT Kg WATT Kg WATT NOTE: 1. After cooking the display will show "Hot".

2. You may detect smoke or a burning smell when using the grill for the first time. This is normal and not a sign that the oven is out of order. To avoid this problem when first using the oven, operate the grill using the top and bottom grills without food for 20 minutes. The turntable must be kept in the oven. 12 R-671-English Final 14/12/2001 9:08 Page 13 AUTOMATIC OPERATION PIZZA button AUTOMATIC OPERATION automatically works out the correct cooking mode and cooking time. You can choose 3 PIZZA menus, 7 AUTO COOK menus and 2 AUTO DEFROST menus. What you need to know when using this automatic function: WARNING: AUTO COOK AUTO COOK button For PIZZA, and AUTO COOK: The oven cavity, door, turntable, rack, dishes and especially the bottom grill will become very hot. Use AUTO DEFROST button thick oven gloves when removing food or the turntable from the oven to prevent burns. 1.

Menu can be input by pressing the PIZZA, AUTO COOK or AUTO DEFROST button until the desired menu number is displayed. /Kg AUTO DEF TIME/WEIGHT dial 2. The weight of the food can be input by rotating the TIME/WEIGHT dial until the desired weight is displayed. Enter the weight of the food only. Do not include the weight of the container. For food weighing more or less than weights/ quantities given in the cooking chart, cook using manual operation. 3. The programmed cooking times are average times. If you want to alter cooking times pre-programmed in the automatic operations, use the LESS or MORE buttons. For best results follow the cooking chart instructions, pages 15-19.

LESS/MORE buttons 4. To start cooking press +1min /START button. +1min The final temperature will vary according to the initial temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking time and change the power level. 13 ENGLISH +1 min /START button When action is required (e.g. to turn food over) the oven stops and the audible signals sound, remaining cooking time and any indicator will flash on the display.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-671/671F user guide](#)

<http://yourpdfguides.com/dref/1284596>

To continue cooking, press the +1min /START button. R-671-English Final 14/12/2001 9:09 Page 14 AUTOMATIC OPERATION Example: Suppose you want to cook Roast Pork weighing 1.

0 kg using the AUTO COOK button. Choose the AUTO COOK menu AC-6 by pressing the AUTO COOK button 6 times. The weight indicator will flash on the display and the AUTO indicator light will come on. Enter the weight by rotating TIME/WEIGHT dial. Press +1min / START button to start cooking.

/Kg +1min AUTO COOK x6 x1 Display: Kg WATT Kg WATT Kg WATT NOTE: After cooking (except Auto Defrost) the display will show "Hot". 14

R-671-English Final 14/12/2001 9:09 Page 15 PIZZA CHART Menu number AP-1 Frozen Pizza Quantity: 150 - 450g, total weight Utensils: Directly on the turntable Increasing unit: 50g Initial food Temp: -18oC, frozen Recommended menus: Frozen pizzas Procedure: · Remove the ready prepared frozen pizza from the packaging and place on the turntable. · After cooking, place on a plate for serving. Menu number AP-2 Chilled Pizza Quantity: 150 - 450g, total weight Utensils: Directly on the turntable Increasing unit: 50 g Initial food Temp: 5°C, chilled Recommended menus: Chilled Pizza Procedure: · Remove ready prepared chilled pizza from the packaging and place on the turntable. · After cooking, place on a plate for serving.

Menu number AP-3 Fresh Pizza Quantity: 700 - 900g, total weight Utensils: Directly on the turntable Increasing unit: 100 g Initial food Temp: 20°C, room temperature Recommended menus: Homemade Pizza Procedure: · Prepare the pizza according to the recipe below · Place directly on the turntable. · After cooking, place on a plate for serving. 15 ENGLISH PIZZA RECIPE Ingredients: 300 g approx. Ready prepared dough (Ready mix or roll out dough.) 200 g approx. Tinned tomatoes Basil, oregano, thyme, salt, pepper 150 g Topping as desired (eg. corn, ham, salami, pineapple.) 50 g Grated cheese Procedure: 1. Prepare the dough according to the manufacturer's instructions. Roll out to the size of the turntable.

2. Lightly grease the turntable and place the pizza base on it. 3. Drain the tomatoes and cut them into pieces. Season the tomatoes with the spices and spread on the dough. Put all other ingredients on the pizza and finally cover with the cheese. 4. Cook the pizza with the automatic programme for fresh pizza (AP-3). R-671-English Final 14/12/2001 9:09 Page 16 AUTO COOK CHART Menu number AC-1 French Fried Potatoes Quantity: 200 - 300g Utensils: Directly on the turntable Increasing unit: 50g Initial food Temp: -18oC, frozen Recommended menus: French fried potatoes (thin, thick) for preparation in conventional ovens. Menu number AC-2 Frozen Baguettes Quantity: 150 - 400g Utensils: Directly on the turntable Increasing unit: 50g Initial food Temp: -18oC, frozen Recommended menus: Baguettes with Pizza topping.

Menu number AC-3 Fish fingers, poultry meat pieces Quantity: 200 - 400g Utensils: Directly on the turntable Increasing unit: 100g Initial food Temp: -18oC, frozen Recommended menus: Poultry meat pieces (chicken nuggets), fish fingers. Menu number AC-4 Grilled Chicken Quantity: 900-1400 g Utensils: Pyrex flan dish and saucer Increasing unit: 100g Initial food Temp: 5°C, chilled Ingredients: for 1.0kg grilled chicken: 1/2 tsp salt and pepper 1tsp paprika, sweet 2tbsp oil Recommended menus: Grilled chicken. Procedure: · Remove the deep-frozen, French fried potatoes (recommended for conventional ovens) from the package and place them on the turntable. · When audible signals sound, turn the potatoes over.

· After cooking, remove from the turntable and put on a plate for serving. Procedure: · Remove deep frozen baguettes with pizza topping from the packaging and place them on the turntable. · After cooking, place on a plate for serving. Procedure: · Remove deep frozen fish fingers/chicken nuggets from the packaging. · Brush a little oil on the topside of the fish finger/chicken nuggets and place them on the turntable.

· After cooking, place on a plate for serving. Procedure: · Mix the ingredients and spread on chicken. · Pierce the skin of the chicken. · Place a saucer up side down in a flan dish and place the chicken on the saucer. · When audible signals sound, turn the chicken over. · After cooking, let the chicken stand for approx.

3 minutes. 16 R-671-English Final 14/12/2001 9:09 Page 17 AUTO COOK CHART Menu number AC-5 Gratinated Fish Fillet Quantity: 600 - 1200g Increasing unit: 100g Initial food Temp: 5°C, chilled Recommended menus: Fish Gratin. Procedure: · Prepare fish fillet according to the following recipes. · Place dish on the turntable.

· After cooking, let the food stand for approx. 3 minutes. Recipe 1 Fish Gratin Italian Style Ingredients: for 600g Rose Fish Fillet: 250g Mozzarella approx. 4 tomatoes (250g) 2 tbsp. anchovy butter salt and pepper 1tbsp chopped basil lemon juice of 1/2 lemon 2tbsp chopped mixed herbs 75g grated Gouda (45% fat) Procedure: · Wash the fish and dry. Sprinkle with lemon juice and salt and grease with the anchovy butter. · Place in a round gratin dish (25 cm). · Sprinkle the Gouda over the fish. · Wash the tomatoes and remove the stalkes. Cut into slices and place on top of the cheese.

· Season with salt, pepper and the mixed herbs. · Drain the Mozzarella, cut into slices and place on the tomatoes. Spread over the basil. · Place the gratin dish on the turntable and cook on automatic programme AC-5 Gratinated Fish Fillet. Hint: After cooking remove the fish from the gratin dish and stir in some sauce thickening powder.

Cook again for 1-2 minutes on 100% power. Recipe 2 Gratinated Rose Fish Fillets 'Esterhazy' Ingredients: for 600g Rose Fish Fillet: 2 Leeks, (250g) 50g onion 100g carrot 1 tbsp. butter salt, pepper and nutmeg 2tbsp. @@Cut into thin strips. · Peel the onions and carrots and cut into thin strips.

@@Cook for 5-6 minutes on 800 watt (100%) power. Stir once in between cooking. @@@@ · Put half of the vegetables in a round gratin dish, (25cm). Place the fish on top and cover with the remaining vegetables. · Spread the Gouda over and place on the turntable. @@lemon juice 1 tbsp. @@Sprinkle with lemon juice and salt. @@ · Add the milk and stir well. Cook again without cover for 3-4 minutes on 800 watt (100%) power. After cooking stir and season with dill, salt and pepper.

@@@ · Pour the sauce over and sprinkle over the cheese. @@@@Mix all ingredients and spread them onto the pork. Place the pork in a flan dish on the turntable. When audible signal sounds, turn the food over. @@@@ (You can refer to the attached SHARP cookery book section). · Put the skewers on the rack. · When audible signal sounds, turn the food over.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-671/671F user guide](#)

<http://yourpdfguides.com/dref/1284596>

@@ · When audible signal sounds, turn over. · When audible signal sounds, turn over again. @@@@ @@@@ @@@@ If portions are frozen together, try to separate before defrosting.

@@ · When the audible signal sounds turn the food over again. @@@@ · When the audible signal sounds, turn the meat joint over. @@@@ @@@3 The poultry should be cooked immediately after defrosting. @@@@ @LESS / MORE button. @@@@) Changing the Pizza/Auto Cook/Auto Defrost time setting.

@@The AUTO indicator light will come on. @@@@) Adjusting the heating time whilst oven is operating. @@@@ MINUTE PLUS function. @@@@ Set the COOKING MODE selector to position To change power level press the WATT button 3 times Press +1min /START button once to begin cooking. WATT +1min x3 x1 Display: Kg WATT Kg WATT NOTE: 1.

You can use this function for manual cooking only. 2. When the COOKING MODE selector is on microwave () and you press the +1min /START button, the microwave power is always 800 watt. When the COOKING MODE selector is on dual () and you press the +1min /START button, the microwave power is always 240 watt. 3. To avoid misuse by children the +1min /START button can be used only within 2 minutes after the preceding operation, ie closing the door or pressing the STOP button. b) Extend the cooking time You can extend the cooking time in multiples of one minute if the button is pressed while the oven is in operation. 3. TO CHECK THE POWER LEVEL To check the microwave power level during cooking press the WATT button. WATT The oven continues to count down, although the display shows the power level.

21 ENGLISH As long as your finger is pressing the WATT button, the power level will be displayed R-671-English Final 14/12/2001 9:09 Page 22 CARE AND CLEANING CAUTION: DO NOT USE COMMERCIAL OVEN CLEANERS, ABRASIVE, HARSH CLEANERS OR SCOURING PADS ON ANY PART OF YOUR MICROWAVE OVEN. WARNING! After GRILL, DUAL and AUTOMATIC operation (except Auto Defrost) modes, the oven cavity, door, oven cabinet and accessories will become very hot. Before cleaning, make sure they have cooled down. Oven exterior The outside of your oven can be cleaned easily with mild soap and water. Make sure the soap is wiped off with a moist cloth, and dry the exterior with a soft towel. Oven controls Open the door before cleaning to de-activate the oven controls. Care should be taken when cleaning the oven control. Using a moist cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

Oven Interior 1. For cleaning, wipe any splatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use a mild soap and wipe several times with a damp cloth until all residues have been removed. Do not remove the waveguide cover. 2.

Make sure that mild soap or water does not penetrate the small vents in the walls which may cause damage to the oven. 3. Do not use spray type cleaners on the oven interior. 4. You may detect smoke and odour during GRILL, DUAL and AUTOMATIC operation (except Auto Defrost modes).

Remaining food or fat splashed on the oven interior can cause smoke or odour. To remove them, heat up your oven regularly by using both heating elements (see note 2, page 11). NOTE: Do not try to move the bottom grill. Turntable Remove the turntable from the oven. Wash the turntable in mild soapy water. Dry with a soft cloth. The turntable is dishwasher safe. Rack The rack should be washed in a mild washing up liquid solution and dried. The rack is dishwasher safe. Door To remove all trace of dirt, regularly clean both sides of the door and the door seals with a soft, damp cloth.

22 R-671-English Final 21/12/2001 9:06 Page 23 XXXXXXXXXXXXXXXXXXXX SERVICE CALL CHECK PLEASE CHECK THE FOLLOWING BEFORE CALLING FOR SERVICE: 1. Power Supply: Check the power plug is properly connected to a suitable wall outlet. Check the line fuse/circuit breaker is functioning properly. 2. When the door is opened, does the oven lamp turn on? YES NO 3. Place a cup of water (approx. 150 ml) in the oven and close the door securely. Set the cooking mode to microwave cooking mode. Programme the oven for one minute on 800 watt (100%) power and start the oven. Does the oven lamp come on? YES NO Does the turntable rotate? YES NO NOTE: The turntable turns in either direction.

Does the ventilation work? YES NO (Place your hand over the ventilation openings and check for air flow.) After 1 minute does the signal sound? YES NO Does the cooking in progress indicator go off? YES NO Is the cup of water warm after the above operation? YES NO 4. @@@After 3 minutes do both GRILL heating elements become red? @@@See inside back cover for details of address. @@@To release it, open and then close the oven door. See page 8.

NOTES: 1. @@@@45 min. Top grill - 15 min. Bottom grill - 15 min. Micro - 20 min.

Dual 1 Dual 2 Top grill - 15 min. Standard time 20 min. Bottom grill - 15 min. 2. @@@@ @@@@ @@@@ @@@@ @57, 6020 Innsbruck, Phone: 512-562277, Fax: 512-562277 / Scheuermann, Rennsteinerstr. 8, 9500 Villach, Phone: 4242-21174, Fax: 4242-21174 / Pichler, Am Wagrain 342, 8055 Graz, Phone: 316-291292, Fax: 316291292 / Audio Video Service, Sonnengasse 13, 9020 Klagenfurt, Phone: 463-43114, Fax: 463-43113 BELGIUM En cas d'une

réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes. Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra. SHARP ELECTRONICS, Phone: 0900-10158, Web: <http://www.sharp.be> AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, Phone: 02/2674019, Fax: 2679670, ETS HENROTTE, Rue Du Campinaire 154, 6240 Farciennes, Phone: 071/396290, Fax: 391237 Nouvelle Central Radio (N.

G.R) Rue des Joncs 15 L-1818 HOWALD Phone: 00352404078, Fax. 2402085 NEDERLAND Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum. SHARP ELECTRONICS BENELUX BV, - Helpdesk -, Postbus 900, 3990 DW Houten, Telefoon: 0900-7427723, Web: <http://www.sharp.nl> DEUTSCHLAND Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen. 03048 Groß Garglow, Cottbuser Str.129, Bernd Mindach, Tel: 0355-539987, Fax: 0355-5265685 / 04159 Leipzig, Max-Liebermannstraße 4a, Rudi Franz, Tel: 0341-9112525, Fax: 0341-9112526 / 04600 Altenburg, Gabelentzstraße 15A, Mechanik Altenburg E.G., Tel: 03447-311102, Fax: 03447-315253 / 06217 Merseburg, Gotthardstraße 30, "Looke & May, GmbH", Tel: 03461-214121, Fax: 03461216891 / 06295 Eisleben, Hallesche Straße 36, Hausger.

Kundend. Eisleben, Tel: 03475-603079, Fax: 03475-747262 / 06618 Naumburg, Wenzelstraße 15, "Hausgeräte & Service, GmbH", Tel: 03445-202016, Fax: 03445-202016 / 06844 Dessau, Albrechtstraße 116-118, "Dessau-Electric, GmbH", Tel: 0340-261270, Fax: 0340-213332 / 07407 Rudolstadt, Emil Hartmann Straße 2, Elektro Ernst Granowski, Tel: 03672-352123, Fax: 03672-357097 / 07545 Gera, Amthorstraße 12, "Ess Hardware Service, GmbH", Tel: 0365-8820115, Fax: 0365-8820116 / 07973 Greiz, Reichenbacher Straße 44d, Elektro Riederer Haushaltgeräte, Tel: 03661-3148, Fax: 03661-430142 / 08280 Aue, Bahnhofstraße 21, "EHS Elektro-Hausgeräte SVC, GmbH", Tel: 03771-552222, Fax: 03771-552255 / 08523 Plauen, Weststraße 63, "Elektrotechnik Plauen, GmbH", Tel: 03741-2120, Fax: 03741-212259 / 09221 Neukirchen, Hauptstraße 74, Walther Elektro, Tel: 0371-217096, Fax: 0371-217090 / 09246 Pleiße, Zepplinstraße 8a, "Hans Kreml Haustechnik, GmbH", Tel: 03722-73780, Fax: 03722-737822 / 09328 Lunzenau, Schulstraße 6, "Peter Welsch, GmbH", Tel: 037383-6434, Fax: 037383-6448 / 09376 Oelsnitz, Bahnhofstraße 43, "Elektrotechnik Oelsnitz, GmbH", Tel: 037298-2677, Fax: 037298-2678 / 12157 Berlin, Cranachstraße 2, Michael Kittler, Tel: 030-85602602, Fax: 030-85602603 / 16866 Kyritz, Hamburgerstr.



[You're reading an excerpt. Click here to read official SHARP R-671/671F user guide](#)

31, "Schumacher Haustechnik, GmbH", Tel: 033971-54137, Fax: 033971-54137 / 18055 Rostock, Timmermannstrat 5 ,Hetec, Tel: 0381-36231, Fax: 0381-36231 / 18435 Stralsund, Kedingshüger Straße 78, "RDS Haushaltsgeräte, GmbH", Tel: 03831-391426, Fax: 03831-390121 / 20357 Hamburg, Schulterblatt 132, Dieter Möller, Tel: 040435332, Fax: 040-4302120 / 20537 Hamburg, Eiffestraße 398, "Deubel+Höfermann Elektronik, GmbH", Tel: 040-41365200, Fax: 04041365299 / 22459 Hamburg, Seesrein 35, Dieter A. Volbrecht VDI Klima und Kälte Service, Tel: 040 - 5517331, Fax: 040 - 5519996 / 23562 Lübeck, Helmholtzstraße 12, Lutz H. Boenisch, Tel: 0451-51929, Fax: 0451-56787 / 24116 Kiel, Eckernförder Straße 93, "Jürgen Skop, GmbH", Tel: 0431-13038, Fax: 0431-13811 / 24357 Fleckeby, Südring 14, "Kaack Elektro-Haushaltgeräte Service, GmbH", Tel: 04354700, Fax: 04354-1311 / 24975 Husby, Flensburger Straße 41, Günter Josten, Tel: 04634-422, Fax: 04634-723 / 25770 Hemmingstedt, Koesliner Straße 18, Dirk Stübner Dithmarscher Hausgeräte Service, Tel: 0481-64943, Fax: 0481-64764 / 26655 Westerstede, Südring 37, "Gerhard Ahrenholtz, GmbH", Tel: 04488-84770, Fax: 04488-847711 / 27404 Heeslingen, Kirchstraße 9-11, Helmut Willenbrock ElektroKälte-Radio, Tel: 04281-1031, Fax: 04281-6467 / 27478 Cuxhaven, Am Kanal 5, Oskar Wieand & Sohn OHG, Tel: 04724-81300, Fax: 04724-813050 / 28207 Bremen, Neidenburger Straße 20, "Hansa Haushaltsgeräte Service, GmbH", Tel: 0421-492526, Fax: 0421-440932 / 29439 Lüchow, Güldenboden 25, Elektro-Kittler, Tel: 05841-709779, Fax: 05841-709780 / 30926 Seelze, Lange-Feld-Straße 122, Strickling Werkskundendienst, Tel: 0511-400399-9, Fax: 0511-40039920 / 34123 Kassel, Heinrich-Hertz-Straße 9, Kältdienst v. Rappard, Tel: 0561-5809545, Fax: 0561-5809570 / 34128 Kassel, Ahnatalstraße 84, Elektro Mohrrhenne, Tel: 0561-61727, Fax: 0561-65470 / 35037 Marburg, Wilhelmstraße 16, Hans-Georg Fuchs, Tel: 06421-22424, Fax: 06421-27549 / 35415 Pohlheim, Ludwigstraße 13-15, Jung KDZ, Tel: 06403-61131, Fax: 06403-62151 / 36088 Hünfeld, Hauptstr. 22, Elektro Vogt, Tel: 06652-2215, Fax: 06652-5782 / 37671 Höxter, Krämerstraße 8, Elektro Nomm, Tel: 05271-7959, Fax: 05271-35053 / 38444 Wolfsburg, Brandgehaeje 5 C, Gärtner Elektro-Haustechnik, Tel: 05308-4070, Fax: 05308-40740 / 39106 Magdeburg, Ankerstr. 9, "Industrie-Elektronik Magdeburg, GmbH", Tel: 0391-5430402, Fax: 03915433520 / 40476 Düsseldorf, Rather Straße 21, Horst Leven, Tel: 0211-486025, Fax: 0211-443399 / 41065 Mönchengladbach, Gutenbergstraße 28, Horst Hommers Kundendienst-Center, Tel: 02161-603256u.57, Fax: 02161-651951 / 42781 Haan, Talstraße 8b, Horst Kerkühn Elektro-Haustechnik, Tel: 02129-4466+53550, Fax: 02129-34037 / 44869 Bochum, Ruhrstraße 181, "ML Werks-Service, GmbH", Tel: 02327-77899, Fax: 02327-74692 / 45219 Essen, Corneliusstraße 39, R. Drengenburg, Tel: 02054-84114, Fax: 02054-15238 / 46045 Oberhausen, Feldmannstraße 76, Dieter Kroppen, Tel: 0208-871711, Fax: 0208-876652 / 48165 Münster-Hiltrup, Rohrkampstraße 23, Günter Pfeifer Großküchentechnik, Tel: 02501-3033, Fax: 02501-24277 / 49324 Melle, Plettenberger Straße 50, "H. U. Borgards, GmbH", Tel: 05422-949740, Fax: 05422-9497-92 / 51598 Friesenhagen, Mühlenhof 6, "Hans Krempl Haustechnik, GmbH", Tel: 02734-7377, Fax: 02734-40618 / 52146 Würselen, De Gasperistraße 6+10, Hubert Hamacher, Tel: 02405-9600+9609, Fax: 02405-2704 / 53757 Sankt Augustin, Bussardstraße 120, "HDL Elektro-Kundendienst, GmbH", Tel: 02241-920330, Fax: 02241-920334 / 55130 Mainz, Nur telefonische Annahmestelle, "Norbert Schwamb, GmbH", Tel: 06131-881070 / 55543 Bad Kreuznach, Industriestraße, "Hans Krempl Haustechnik, 24 R-671-English Final 14/12/2001 9:09 Page 25 SERVICE ADDRESSES GmbH", Tel: 0671-794335, Fax: 0671-794369 / 56070 Koblenz, August-Horch-Straße 14, "Hans Krempl Haustechnik, GmbH", Tel: 02618909173, Fax: 0261-8909199 / 57080 Siegen, Gosenbacher Hütte 44, "Hans Krempl Haustechnik, GmbH", Tel: 0271-354114, Fax: 0271351408 58239 Schwerte, Holzener Weg 79, "HHKT Electronica 2000 Josef Schliütz, GmbH", Tel: 02304-982100, Fax: 02304-86360 / 59457 Werl, Westdahler Weg 2, MAYER Electro, Tel: 02922-3541, Fax: 02922-85382 / 61381 Friedrichsdorf, Bahnstraße 17 a, O. Hollmann, Tel: 06172778276, Fax: 06172-75883 / 63739 Aschaffenburg, Maximilianstraße 8, Radio-Fernseh Reis, Tel: 06021-15177, Fax: 06021-15199 / 65239 Hochheim, Eltviller Straße 14, "Norbert Schwamb, GmbH", Tel: 06146-4085, Fax: 06146-4088 / 65627 Elbtal-Hangenmeilingen, Am Ohlenrod 10, Rudi Wagner, Tel: 06436-3444, Fax: 06436-941387 / 65931 Frankfurt, Nur telef. Annahmestelle, "Norbert Schwamb, GmbH", Tel: 069-371525 / 66117 Saarbrücken, Zinzinger Straße 13, "Hans Krempl Haustechnik, GmbH", Tel: 0681-5008522, Fax: 06815008533 / 67434 Neustadt, Saarlandstraße 55, "Hans Krempl Haustechnik, GmbH", Tel: 06321-83077, Fax: 06321-83077 / 68309 Mannheim, Heppenheimerstraße 23, "Hans Krempl Haustechnik, GmbH", Tel: 0621-7184621, Fax: 0621-7184628 / 68526 Ladenburg, Am Sägewerk 2, Elektro Service Salinger, Tel: 06203-3341, Fax: 06203-16919 / 70186 Stuttgart, Klippeneck Straße 1, Elektro Herterich Techn. Kundendienst, Tel: 0711-4687023, Fax: 0711-4687024 / 75236 Kämpfelbach, Goethestraße 19, Horst Frei, Tel: 07232-1518, Fax: 072325238 / 76185 Karlsruhe, Lotzbeckstraße 9, Electronic Service Franke, Tel: 0721-5700720-23, Fax: 0721-5700736 / 76872 Winden, Hauptstraße 103, "Hans Krempl Haustechnik, GmbH", Tel: 06349-8571, Fax: 06349-3390 / 78462 Konstanz, Nur telef. Annahmestelle, Elektro Herterich, Tel: 07531-27923 / 78737 Fluorn-Winzeln, Schafbaumstraße 9, Edmund Schneider, Tel: 07402-482, Fax: 07402-8014 / 79650 Schopfheim, Feldbergstraße 21, R. Grossmann, Tel: 07622-674510, Fax: 07622-61900 / 80339 München, Schwanthalerstraße 110, Kesel & Schnitt, Tel: 089-505802, Fax: 089-5021596 / 85095 Denkendorf/Zandt, Michlstraße 3, Elektro Pfeiffer, Tel: 08466-1319, Fax: 08466-1319 / 86157 Augsburg, Stadtberger Straße 67, J. Haslinger Elektro-Geräte Kundendienst, Tel: 0821-523125, Fax: 0821-526664 / 87439 Kempten, Heiligkreuzer Straße 17, Radio Hartmann, Tel: 0831-594646, Fax: 0831-91319 / 89231 Neu-Ulm, Gartenstraße 4, Elektrotechnik Schneider, Tel: 0731-85897, Fax: 0731-74681 / 91522 Ansbach, Am Ring 17, "Elektro Merk, GmbH", Tel: 0981-89574, Fax: 0981-86715 / 92820 Feucht/Nürnberg, Friedrich-Ebert-Straße 21, "Herbert Geissler, GmbH", Tel: 09128-7076-0, Fax: 09128-707636 / 93102 Pfatter, Regensburger Straße 60, Franz Bernhard, Tel: 09481-90060, Fax: 09481-90061 / 94130 Obernzell, Hameter Straße 31, Elektro Service Schurig, Tel: 08591-2400, Fax: 08591-1285 / 96052 Bamberg, Aronstraße 2a, Bernhard Jackl, Tel: 0951-9370245, Fax: 0951-9370247 / 97070 Würzburg, Untere Johannitergasse 16, "Radio Wels City Service, GmbH", Tel: 0931-3557119, Fax: 0931-14151 / 97318 Kitzingen, Herrnstraße 4-6, "Hoffritz, GmbH", Tel: 09321-4221-32021, Fax: 09321-32185 / 98724 Neuhaus, Eisfelder Straße 32, "DLC Haustechnik, GmbH", Tel: 03679-79060, Fax: 03679-790620 / 99096 Erfurt, Goethestraße 14, Ernst Grüsser, Tel: 0361-3465719, Fax: 0361-3465719 / 99734 Nordhausen, Töpferstraße 10, "Südharzer Dienstleistungs-Gesellschaft, GmbH", Tel: 03631-983651, Fax: 03631983654 / 99817 Eisenach, Bahnhofstraße 17, "Blitz Elektro-Elektronik, GmbH", Tel: 03691-292930, Fax: 03691-292915 FRANCE En cas de réclamation pour les fours micro-ondes SHARP, nous vous prions de vous adresser à votre spécialiste ou à l'une des stations techniques agréées SHARP suivantes : A.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/1284596)

[R-671/671F user guide](http://yourpdfguides.com/dref/1284596)

<http://yourpdfguides.com/dref/1284596>

A.V.

I.: 1, Rue du Mont de Terre, 59818 Lesquin Cédex. Tél : 03 20 62 18 98 - Fax : 03 20 86 20 60. Départements desservis : 02, 08, 59, 62, 80 / ASYSSTEC : P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville. Tél : 01 39 88 80 00 - Fax : 01 34 38 91 20. Départements desservis : 60, 77, 93, 95 / ATELIER ROUSSEL : 12, Bld Flandre Dunkerque, 56100 Lorient. Tél : 02 97 83 07 41 - Fax: 02 97 87 02 36.

Départements desservis : 22,29,35,44,56 / C.E.A.T. : 9, Rue de Venise, 21000 Dijon.

Tél : 03 80 66 15 57 - Fax: 03 80 67 12 36. Départements desservis : 10,21,25,39,52,58,71,89 / C.M.T.S.

: 38, Rue des Ormeaux, 75020 Paris. Tél : 01 43 70 20 00 - Fax: 01 43 70 36 46. Départements desservis : 75,77,78,91,92,93,94,95 / C.T.E. : Zone Tilly - 116 rte de Thionville, 57140 Woippy. Tél : 03 87 30 14 14 - Fax: 03 87 30 85 07. Départements desservis : 51,54,55,57,88 / ELECMA : 6 Bld Gueidon, 13013 Marseille. Tél : 04 91 06 22 56 - Fax : 04 91 06 22 90. Départements desservis : 13,26,30,34,43,48,83,84 / ELECTRO SERVICE : 21 rue de Mulhouse, BP 122, 68313 ILLZACH.

Tél : 03 89 62 50 00 - Fax : 03 89 50 80 14. Départements desservis : 67,68,70,90 / M.E.C. : 118 Bld Tonnellé, 37020 Tours. Tél : 02 47 77 90 90 Fax : 02 47 77 90 91. Départements desservis. 18,36,37,41,45,44,49,79,85,86 / M.R.T.

: 74, Rue Albert Einstein, 72021 Le Mans Cedex. Tél : 02 43 28 52 20 - Fax: 02 43 24 93 81. Départements desservis : 28,53,61,72 / ROSSIGNOL : ZL du Brezet Est, 6 rue P. Boulanger,63100 Clermont Ferrand. Tél : 73 91 93 09, Fax:73 92 28 79.

Départements desservis : 3, 15, 19, 23, 43, 63 / SETELEC : 23, Rue du Chatelet,76420 Bihorel les Rouen. Tél : 35 60 64 39 - Fax:35 59 93. 48. Départements desservis : 14,27,50,76 / S.T.

E. : 3, Chemin de l'Industrie,06110 Le Cannet Rocheville. Tél : 93 46 05 00 - Fax: 93 46 51 18. Départements desservis : 04,06 / S.T.V.S. : 18, Rue Benoit Malon,42000 Saint Etienne. Tél : 77 32 74 57,Fax: 77 37 45 29. Départements desservis : 03,07,42,43,63 / S.

T.V.S. : 10, Chemin Saint-Gobain,69190 Saint Fons. Tél : 78 70 03 32 - Fax: 78 70 86 61. Départements desservis : 01,38,69,71,73,74 / TECH SERVICE : Batiment G-impasse Boudeville,31100 Toulouse. Tél : 61 44 98 45 - Fax: 62 14 16 13. Départements desservis : 09,11,31,32,33,40,47,64,65,66,81,82 / TIMO VIDEO : 29 rue Elisabeth,91330 Yerres. Tél : 69 48 04 80 - Fax: 69 83 36 10. Départements desservis :28, 45, 77, 89, 912, 94 / U.

N.T.D. : 1, Rue des Lourdines, 76000 Rouen. Tél : 35 72 28 04 - Fax: 35 73 18 32.

Départements desservis :14,27,50,76 ITALIA NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP C.A.T. Di Bellone, Via Dell'areoporto, 76, 64100, Teramo, Tel: 0861415745, Fax: 0861212117 / C.R.

Elettronica, Via Amiternum 38, 67100, L'aquila, Tel: 0862-321442, Fax: 0862-314323 / Elettrovideo Snc, Via Tiburtina V. 64, 65124,Pescara, Tel: 08552020, Fax: 08552020 / Riccardi Cosimo, Via S.Stefano 51, 75100, Matera, Tel: 0835-333671, Fax: 0835-333671 / Ld Service Di Lavano E De Biasi, Via Viviani 2, 85100, Potenza, Tel: 0971-472578, Fax: 0971-472578 / Cozzupoli & Crupi Snc, Via R. Campi Primo Tronco 103, 89126, Reggio Calabria, Tel: 0965-24022, Fax: 0965-310778 / Ater Snc, Via Naz.Pentimele 159/A-B, 89100, Reggio Calabria, Tel: 0965-47051, Fax: 0965-47855 / Audiovideo Snc, Via A. De Gasperi 44, 88018, Vibo Valentia, Tel: 0963-45571, Fax: 0963-45572 / Battaglia Saverio, Via C. Colombo 85, 88063, Catanzaro, Tel: 0961-33824, Fax: 0961-737337 / Ciano Giuseppe, Via Circonvallaz.Sud, 89029, Taurianova Rc, Tel: 0966-643483, Fax: 0966-614946 / Lab. Tv Dei F.Lli Aiello Snc, Via Torino 121/123, 88074, Crotona Cz, Tel: 096220889, Fax: 0962-24254 / Mea Giuseppe, Via L.

Einaudi Trav.I 16, 88048, Lamezia T. (Cz), Tel: 0968-437520, Fax: 0968-437520 / Medaglia Giolindo, Via Torrazzo 60/62, 88063, Catanzaro Lido, Tel: 0961-31626, Fax: 0961-31626 / S.A.T.E Di Dodaro, Via Degli Stadi 28/F, 87100, Cosenza, Tel: 0984-482337, Fax: 0984-482337 Se.Ri.El.Co, V.Delle Medaglie D'oro163, 87100, Cosenza, Tel: 0984-33152, Fax: 0984-33152 / Satep Srl, Via Naz.

Delle Puglie176/A, 80026, Casoria (Na), Tel: 081-7590161, Fax: 081-7590706 / Audio Service Snc, Via Cattaneo 4/6, 81100, Caserta, Tel: 0823-329099, Fax: 0823-353686 / Drf Elettr. Di Rubbo, Via M.Pacifico 118, 82100, Benevento, Tel: 0824-62416, Fax: 0824-62416 / Elettronica D'Argenio, Via Nazion.

Torrette,195, 83013, Mercogliano (Av), Tel: 0825-681590, Fax: 0825-681590 / Elettronica Service, Viale Europa, 25 ENGLISH R-671-English Final 14/12/2001 9:09 Page 26 SERVICE ADDRESSES 15, 80053, Castell. Stabia, Tel: 081-8728280, Fax: 081-8728280 / Errediesse Service, Via P.

Mascagni 74/76, 80128, Napoli, Tel: 0815794825, Fax: 081-5791899 / M.C. Elettronica Snc, Via Dei Mille 138, 84100, Salerno (Sa), Tel: 089-330591, Fax: 089-336836 / Menna Elettronica Srl, Via Nazionale Delle Puglie 294, 80026, Casoria (Na), Tel: 081-5840726, Fax: 081-7594277 / Satec Di Correria Snc, Via Liberta' 307, 81024, Maddaloni (Ce), Tel: 0823-341088, Fax: 0823-343011 / Video Eletr. 2 Di Nasti, Via Ant.Pio 74/76, 80126, Napoli, Tel: 081-7676300, Fax: 081-7284347 / Audio Video Center Snc, Via F.

Vandelli 23/29, 41100, Modena, Tel: 059-235219, Fax: 059210265 / Ass.Electron Di Fogli, Via F.Lli Aventi 19, 44100, Ferrara, Tel: 0532-903250, Fax: 0532-903250 / Ma.Pi. Snc, Via T.Azzolini 3, 40132, Bologna, Tel: 051-6414115, Fax: 051-406848 / Masini Service, Via Mediterraneo 24, 47041, Bellaria (Fo), Tel: 0541-347714, Fax: 0541-324413 / Nuova Tecnocoop, Via Armellini 28/30/32,47037, Bellariva Rimini, Tel: 0541-370812, Fax: 0541-370812 / Parmaservice Sas, Via Benedetta 47/A, 43100, Parma, Tel: 0521-271666, Fax: 0521-271666 / Rimpelli Nelusco Snc, Via Marchelli 7/C, 42100, Reggio Emilia, Tel: 0522-323740, Fax: 0522-376967 / Rip.Eletr.Ravenna, Via Reale, 27/C 48010, Camerlona (Ra), Tel: 0544521500, Fax: 0544-521100 / Rte Di I. Catellani & C., Via Premuda 38/V, 42100, Reggio Emilia (Re), Tel: 0522-381277, Fax: 0522-381788 / Stema Snc, V.

Le Bologna, 92/A 47100, Forlì, Tel: 0543-704475, Fax: 0543-702742 / Technolab Snc, Via Romea 36, 48100, Ravenna, Tel: 0544-64008, Fax: 0544-476497 / Tecnoservice.Com, Via Longhi 16/A/B, 40128, Bologna, Tel: 051-360986, Fax: 051-366863 A.V.R. Sas Di Di Renzo, Via Colonna 20/8, 33170, Pordenone, Tel: 0434-27669, Fax: 0434-523661 / Astec S.N.C. Di Zoccarato, Via Pecenco 4, 34127, Trieste, Tel: 040-574745, Fax: 040-577923 / Cm Elettronica Snc, Via G.Galilei 2, 33010, Tavagnacco (Ud), Tel: 0432572172, Fax: 0432-573788 / Contr.El.

, Via Rossetti 51/C, 34141, Trieste, Tel: 040-368387, Fax: 040-638117 / Tecnofly Snc, Via Cappuccini 11/2, 34170, Gorizia, Tel: 0481-32732, Fax: 0481-546740 / A.P. Rip. Arduini Piero, Via Licinio Refice 192, 03100, Frosinone, Tel: 0775-291267, Fax: 0775-291267 / Centro E.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-671/671F user guide](#)

<http://yourpdfguides.com/dref/1284596>

L.

Va. Snc, Via Attilio Mori 19/21, 00176, Roma, Tel: 06-2148641, Fax: 06-2753048 / El.S.A.R.

, Via S.Sotero 36, 00165, Roma, Tel: 06-6380516, Fax: 06-6380973 / Elettronica 81, Via Ezio 56/58, 04100, Latina, Tel: 0773694608, Fax: 0773-663511 / Italreg Di Abano, Parco Belvedere Conca 74, 04024, Gaeta, Tel: 0771-470851, Fax: 0771-470851 / Palmieri F., Via S.Polledrara 219, 03100, Frosinone, Tel: 0775-291485, Fax: 0775-291485 / S.A.R.E. S.R.L.

, Via Barbana 35/37, 00142, Roma, Tel: 06-5406796, Fax: 06-5412736 / Video Serv. Sas Di Calabrese, Str Teverina Km 2, 400 L. Pantanese, 01100, Viterbo (Vt), Tel: 0761-251557, Fax: 0761-251558 / Caudullo Salvatore, Via Cavour 11/R, 17100, Savona, Tel: 019-8386251, Fax: 019-829654 / Centro Assistenza Tecn., Via Metella 3, 18039, Ventimiglia (Im), Tel: 0184-239011, Fax: 0184-239015 / G.A.T.E. Snc, Passo P.Carrega 24/A, 16141, Genova, Tel: 010-8361543, Fax: 010-8364571 Gse S.R.

L., Via Rimassa 183 R, 16122, Genova (Ge), Tel: 010-5536076, Fax: 010-5536113 / Rapisarda G., Via Argine Destro 299, 18100, Imperia, Tel: 0183-710771, Fax: 0183-710771 / Rien Snc, Via Valle 17/19, 19124, La Spezia, Tel: 0187-21925, Fax: 0187-21925 / Tognetti Snc, Via Lunigiana 589, 19100, La Spezia, Tel: 0187-507656, Fax: 0187-507656 / A.E. Snc, V.

Acerbi 28, 20161, Milano, Tel: 0266220906, Fax: 02-6466930 / A.T. Electronics, Via G. Da Cermenate 76, 20141, Milano, Tel: 02-89501602, Fax: 02-89502937 / C.A.

T. Bm, Via Per Desio 22, 20030, Bovisio Masciago Mi, Tel: 0362-558421, Fax: 0362-558887 / Cat Electronic Snc, Via Togliatti 8, 20077, Melegnano(Mi), Tel: 02-9834498, Fax: 02-9837559 / Crel S.N.C., Via Carducci, 23100, Sondrio, Tel: 0342-216538, Fax: 0342-216538 / Electronic's Center, Via G.Giulini 9, 22100, Como, Tel: 031-279820, Fax: 031-261791 / Elettronica Capi, Via Gorizia, 14/B, 23100, Sondrio, Tel: 0342-210459, Fax: 0342-210459 / Eurotecnica Di Ronchi, Via Milano 74/B, 25126, Brescia, Tel: 030-317673, Fax: 030317673 / Microcentro, Via Falloppio 11, 20110, Milano, Tel: 02-26827306, Fax: 02-2826711 / Morini Daniele, Via Maiocchi, 10, 27058, Voghera (Pv), Tel: 0383-368740, Fax: 0383-368740 / Prada Cesare M.Antonio, Via Riviera 142, 27100, Pavia, Tel: 0382-525920, Fax: 0382-525920 / S.A.R.E.

L. Snc Di Giglia Mario, Carso 30, 27029, Vigevano (Pv), Tel: 0381-344088, Fax: 0381-344088 / S.T.A.R.T. Video Hi-Fi, Via Orti Romani 16/A, 26100, Cremona, Tel: 0372-38731, Fax: 0372-38731 / Salvadori Claudio, Via Del Bosco 44, 21052, Busto Arsizio (Va), Tel: 0331-329973, Fax: 0331-628727 / Service Tva Snc, Via Vergnano 59, 25127, Brescia, Tel: 030-349885, Fax: 030349885 / Tecnovideo Snc, P.Za De Gasperi 28, 46100, Mantova, Tel: 0376-321554, Fax: 0376-321554 / Teletecnica 2000, Via Torino 21, 21013, Gallarate (Va), Tel: 0331-775519, Fax: 0331-775519 / Test Tv Snc, Via S. Altamura 10, 20148, Milano, Tel: 02-4035408, Fax: 02-48704889 / Video Service Snc, Via Locatelli 2, 24068, Seriate (Bg), Tel: 035-296883, Fax: 035-300076 / C.A.

T. Snc, Via A. Cecchi 25, 61100, Pesaro, Tel: 0721-25608, Fax: 0721-25608 / Digitecnica Di Moroni R. Snc, Via Zuccarini, 1- Z.Baraccola, 60131, Candia (An), Tel: 071-2866067, Fax: 071-8046398 / Marconi Lanfranco, Via M.

Bianco 10-Porto D'ascoli, 63039, S.Bened. D/Tronto, Tel: 0735-659230, Fax: 0735-751155 / Pluritecnica, Via C. Ulpiani 5, 63100, Ascoli Piceno, Tel: 0736-342635, Fax: 0736-346405 / S.A.

T. Radio Tv, Via D. Rossi 32-34, 62100, Macerata, Tel: 0733-231304, Fax: 0733-231304 / Vitali Claudio, Via Marconi 89, 60035, Jesi (An), Tel: 0731-59290, Fax: 0731-59290 / Pesce Luigi, Via Tiberio 74, 86100, Campobasso, Tel: 0874-63717 / Alpi Lab, Via S. Grandis 11, 12100, Cuneo, Tel: 0171690384, Fax: 0171-690384 / Arte E Tecnica Snc, Via Falletti 22, 13900, Biella, Tel: 015-8496250, Fax: 015-8496250 / Elektro Di Fiore F., Via Tripoli 91, 13100, Vercelli, Tel: 0161-250071, Fax: 0161-255843 / F.G. Elettronica, Via Sagra S.Michele 46, 10141, Torino, Tel: 011796423, Fax: 011-796423 Guida Di Guida Alessio, Via Roggiolo 5, 28069, Treccate (No), Tel: 0321-71608, Fax: 0321-777003 / Mantoan Dario, Via Matteotti 69, 28062, Cameri (No), Tel: 0321-519078, Fax: 0321-519078 / Siragusa E Roagna Sdf, C.So Matteotti 41, 14100, Asti, Tel: 0141-531131, Fax: 0141-531131 / Videotext, P.Za D.

Alp.Cuneense 24, 12043, Canale (Cn), Tel: 0173-95878, Fax: 0173-979638 / A.V.S. Snc, Via N.Pompilio 61, 72100, Brindisi, Tel: 0831-560165, Fax: 0831-560165 / Arnesano Faustino, Via M.Moscardino 10, 73100, Lecce, Tel: 0832318277, Fax: 0832-318277 / C.Ass.Tec. Di Columella, Via Mazzini 30, 71016, San Severo (Fg), Tel: 0882-226295, Fax: 0882-226295 / Elettr.

Serv. Di Marcuccio, C.So Annibale 15/17, 74100, Taranto, Tel: 099-7721933, Fax: 099-7721933 / Eltec Service Di Pepe G., Viale Ofanto 149-151, 71100, Foggia, Tel: 0881-685013, Fax: 0881-687041 / Ingrosso Fernando, Via Biasco 15, 73100, Lecce, Tel: 0832396466, Fax: 0832-392014 / Marinelli Benedetto, Via Dei Salici 14, 70051, Barletta (Ba), Tel: 0883-514054, Fax: 0883-527128 / Massariello Agostino, Via Numa Pompilio 65, 72100, Brindisi, Tel: 0831-521821 / Stear Snc Di Pici, Via E.Perrone 16, 71100, Foggia, Tel: 0881-778483, Fax: 0881-778483 / Video Serv.

Marcantonio, Via G.M. Giovane 47, 70124, Bari, Tel: 080-5618029, Fax: 080-5618029 / Zetaclima Di Zumpano, Via Molfetta 69, 70054, Giovinazzo (Ba), Tel: 080-3947952, Fax: 080-3947952 / Sat Di Partipilo, Via Borsellino E Falcone 17 Bis, 70100, Bari, Tel: 080-5022999, Fax: 080-5022992 / Base Elettronica, Via G. Curreli, S.N.

, 09170, Oristano, Tel: 0783-310049, Fax: 0783-212081 / Chip Elettronica S.R.L., Via Salvator Rosa 26, 09100, Cagliari, Tel: 070-521338, Fax: 070-506074 / Co.Ri.Fr.El. 2 Snc, Via Del Castagno Settore D, 07026, Olbia - Zona Cerasarda Co.Ri.Fr.

El. Snc, Via Monastir 112, 09122, Cagliari, Tel: 0789-562104, Fax: 0789-9562105 / Floris Sergio, Via Mazzini 56, 09010, Gonnese (Ca), Tel: 0781-45436, Fax: 0781-469198 / G.S. Elettronica, Via Della Resistenza 5, 08100, Nuoro, Tel: 0784-203084, Fax: 0784203060 / Hi-Fi Center, Via Lucania 15, 07026, Olbia (Ss), Tel: 0789-22164, Fax: 0789-200366 / Matta Paolo, Via Risorgimento 166/A, 09134, Cagliari-Pirri, Tel: 070-520856, Fax: 070-524148 / Videoelettronica Snc, Via Torino 18, 07100, Sassari, Tel: 079-276616, Fax: 079273239 / A.T.El. Di G.Amico, L.Go Scarlatti 30, 93100, Caltanissetta, Tel: 0934-591955, Fax: 0934-552999 / A.V.

S., Via Sassari, 2/C, 95100, Catania, Tel: 095-446696, Fax: 095-434337 / Alamia Service, C.So Pisani, 310/312, 90129, Palermo, Tel: 091-6570502, Fax: 0916575761 / Euroservice 2000 (Ex Aloisi), Via Marettimo 36, 91025, Marsala (Tp), Tel: 0923-713459, Fax: 0923-718592 / Arte Tv E C. Snc, Via G.Centorbi 17, 91026, Mazara Del Vallo, Tel: 0923-908160, Fax: 0923-670035 / Centro Ass.

Tec. Di Bacchi I., P.Za A. Giglia 40, 26 R-671-English Final 14/12/2001 9:09 Page 27 SERVICE ADDRESSES 92026, Favara (Ag), Tel: 0922-420311, Fax: 0922-421545 / Cuppari Electr.

, Via S.Agostino Is 265, 98100, Messina, Tel: 090-672064, Fax: 090-672065 / Di Fonzo F.E Figli Snc, Via Ruggero Loria 4/6, 90100, Palermo, Tel: 091-363578, Fax: 091-362853 / Elettronica Di Di Tullio, Via Carlentini 40/A, 96100, Siracusa, Tel: 0931-758602, Fax: 0931-758602 / Tecnica Sud S.

[You're reading an excerpt. Click here to read official SHARP R-671/671F user guide](#)



<http://yourpdfguides.com/dref/1284596>



[You're reading an excerpt. Click here to read official SHARP
R-671/671F user guide
http://yourpdfguides.com/dref/1284596](http://yourpdfguides.com/dref/1284596)

L., 977/ 50.21.20, Cl Calderon La Barca 3, 43520 Roquetas, Tarragona / Curto Gamundi S.R.C., 977/ 44.13.14, Cl Rierol Caputxins 6, 43500 Tortosa, Tarragona / Selecco S.L.

977/ 70.00.12, Cl Calderon De La Barca 11, 43870 Amposta, Tarragona / Electronica S. Torres, 977/ 21.21.48, Cl Joan Miro 4 Esc.D 1-2, 43005 Tarragona / Buira Tecnic's, 977/ 66.04.37, Cl San Javier 55, 43700 El Vendrell, Tarragona / Tecno Serveis Mora, 977/ 40.08.

83, Cl Pau Picasso 1, 43740 Mora D'ebre, Tarragona / Sertecs, S.C., 977/ 22.18.51, Cl Caputxins (Bajos) 22, 43001 Tarragona / Electronica Josep, 977/ 88.04.41, Ctra. Igualada 29 Bjos, 43420 Sta. Coloma Queralt, Tarragona / Martorell Altes, 977/ 75.32.

41, Cl Roseta Mauri 10, 43205 Reus, Tarragona / Teleservicio S.C., 978/ 87.08.10, Cl Romualdo Soler 4, 44600 Alcañiz, Teruel / Electronica Alcañiz S.L., 979/ 87.07.94, Cl Carmen 21, 44600 Alcañiz, Teruel / Sonovision, C.B.

, 978/ 60.11.74, Cl Abadia 5, 44001 Teruel / Electronica Moncho, 96/287.23.29, Cl Pare Pascual Cat. 5, 46700 Gandia, Valencia / Envisa Electronic, S.L., 96/241.24.87, Cl General Espartero 9, 46600 Alzira, Valencia / Antonio Monleon, S. L., 96/334.55.87, Av De La Plata 91, 46006 Valencia / Tecno Hogar, 96/286.53.

35, Cl Dos De Mayo 41, 46700 Gandia, Valencia / Servicios Electronicos, 96/340.20.34, Cl Doctor Oloriz 3, 46009 Valencia / Electronica Las Heras, 96/ 238.11.14, Cl Jose Iranzo 6, 46870 Ontinyent, Valencia / Negredo Martin Daniel, 94/411.

22.82, Cl Padre Pernet 8, 48004 Bilbao, Vizcaya / Collantes Martin Onofre, 94/ 483.21.22, Cl Ortuño De Alango 7, 48920 Portugalete, Vizcaya / Argi Giltz, 94/ 443.77.93, Cl Autonomia 15, 48012 Bilbao, Vizcaya / Servitele, 94/444.89.02, Cl Autonomia 24 Galerias, 48012 Bilbao, Vizcaya / Cinca Monterde Antonio, 976/ 31.69.65, Cl Via Universitas 52, 50010 Zaragoza / Aragon Televideo, S.

C., 976/ 32.97.12, Cl Batalla Clavijo 18, 50010 Zaragoza / Tv Video Jimenez, S.L., 967/ 34.04.43, Cl Juan Xxiii 38, 02640 Almansa, Albacete / Juman, 967/ 22.40.78, Cl Ejercito 1, 02002 Albacete / Televideo, 950/ 40.

18.63, Cl Velazquez 7 Local-A, 04770 Adra, Almeria / Servicio Tecnico Ponce, 950/ 45.67.53, Ub Monte Almagro 10, 04610 Cuevas De Almanzora, Almeria / Sonivitel S.L., 950/ 22.97.55, Cl Poeta Paco Aquino 51, 04005 Almeria / Electronica Edimar, S.A, 98/535.34.

51, Cl Cangas De Onis 4, 33207 Gijon, Asturias / Cañedo S.T., 98/522.29.68, Cl Otero, S/N C. Cial, 33008 Oviedo, Asturias / Alvarez Oliviar Casilda, 98/522.37.39, Cl San Jose 12, 33003 Oviedo, Asturias / Santiago Valderrey, 98/ 563.18.61, Cl Dr.

Venancio Mtez. 7, 33710 Navia, Asturias / Astusetel S.L., 98/539.10.11, Cl Cea Bermudez 9, 33208 Gijon, Asturias / Asturservice, 98/556.83.87, Cl Sanchez Calvo 6 Bjos., 33401 Aviles, Asturias / Juan Morillon Del Corro, 98/567.40.

24, Av De Gijon 19, 33930 La Felguera/Langreo, Asturias / S.A.T. Juan-Manuel, 98/ 581.22.

48, Cl Uria 60, 33800 Cangas De Narcea, Asturias / Daniel Serrano Labrado, 920/ 37.15.16, Cl Jose Gochicoa 16, 05400 Arenas De S.Pedro, Avila / Electronica Gredos, 920/ 22.48.

39, Cl Eduardo Marquina 24, 05001 Avila / Jimenez Almohalla, 920/ 25.08.76, Cl Jacinto Benavente 1, 05001 Avila / Electronica Bote, 924/ 22.17.40, Pz Portugal 2, 06001 Badajoz / Marcial Lagoa Gonzalez, 924/ 49.03.33, Cl Ramon Y Cajal 7, 06100 Olivenza, Badajoz / C.E. Vilanovense C.B.

, 924/ 84.59.92, Cl Camino Magacela 4 Local-5, 06700 Villanueva Serena, Badajoz / Electronica Centeno S.L., 924/ 57.53.08, Av Del Zafra 1, 06310 Puebla Sancho Perez, Badajoz / Indalecio Amaya Sanchez, 924/ 66.47.01, Cl Carreras 11, 06200 Almendralejo, Badajoz / Patricio Electronica, 924/ 33.04.

13, Cl Reyes Huertas 7, 06800 Merida, Badajoz / Electronica Mas, 947/ 31.49.94, Cl Alfonso Vi 6, 09200 Miranda De Ebro, Burgos / Servitec Burgos S.L., 947/ 22.

41.68, Cl Lavaderos 7-9, 09007 Burgos, Burgos / Ruiz Garcia Jose, 927/ 22.48.86, Cl Ecuador 5-B, 10005 Caceres / Arsenio Sanchez, C.B.

927/ 41.11.21, Cl Tornavacas 9, 10600 Plasencia, Caceres / Zabala Vazquez Jose, 927/ 57.06.13, Cl Del Agua 39, 10460 Losar De La Vera, Caceres / Radio Sanchez C.B., 927/ 32.06.88, Av De Miajadas S/N, 10200 Trujillo, Caceres / Electronica Jeda, Cl Pagador 31, 11500 Pto. Sta.

Maria, Cadiz / Servicio Tecnico, 956/ 87.07.05, Cl Divina Pastora E-1 L-4, 11402 Jerez La Frontera, Cadiz / Jose Borja Y Jose Arana, 956/ 66.60.53, Cl San Antonio 31, 11201 Algeciras, Cadiz / Vhifitel, 956/ 46.25.01, Cl Fco.Fdez.OrdolEz 5, 11600 Ubrique, Cadiz / Galan Sat S.L., 956/ 83.

, 956/ 20.14.17, Cl Cruz Roja Española 11, 11009 Cadiz / Galan Sat S.L., 956/ 83.

35.35, Cl Factoria Matagorda 52, 11500 Puerto Real, Cadiz / Electronica Seyma, 942/ 23.69.19, Cl Del Monte 69 C Bjos, 39006 Santander, Cantabria / Tele-Nueva, 926/ 50.59.

96, Cl Campo 56, 13700 Tomelloso, Ciudad Real / Electronica Arellano, 926/ 54.78.95, Cl Lorenzo Rivas 14, 13600 Alcazar De San Juan, Ciudad Real / Electronica Lara, 926/ 21.17.87, Cl De La Jara 1, 13002 Ciudad Real / Manuel Vazquez, 926/ 42.09.93, Cl Aduana 3, 13500 Puertollano, Ciudad Real / Electro Diaz S.L., 926/ 32.23.

24, Cl Buensuceso 10, 13300 Valdepeñas, Ciudad Real / Duéñas Calás Teodoro, 957/ 26.35.06, Cl Hermano Juan Fdez 15, 14014 Cordoba / Electronica Sales, 957/ 66.09.04, Cl Andalucía 11, 14920 Aguilar Frontera, Cordoba / Lavison Electronica S.L., 957/ 75.01.75, Cm De La Barca 3, 14010 Cordoba / Antonio Gonzalez, 957/ 57.10.

50, Cl Gral Primo Rivera 61, 14200 Peñarroya, Cordoba / Electronica Garcia, 969/ 22.24.83, Cl Ramon Y Cajal 17, 16004 Cuenca / Gallardo Alonso Miguel, 958/ 67.64.81, Cl Carmen 104, 18510 Benalua De Guadix, Granada / Vilchez Vilchez Rafael, 958/ 60.

06.50, Cl Amadeo Vives 9, 18600 Motril, Granada / Electronica Wenceslao, 958/ 81.16.16, Cl Fontiveros 42, 18008 Granada, Granada / Digimat Electronica, 958/ 70-04-52, Cl Casicas 7, 18800 Baza, Granada / Megatecnica Extremeña, 958/ 26.06.

01, C./Mozart L-2 Ed.Granate, 18004 Granada, Granada / Tecnicas Marvi S.L., 949/ 23.27.63, Pz Capitan Boixareu 51, 19001 Guadalajara / Abril Sanchez Valentin, 959/ 10.60.41, Cl Cadiz 2, 21270 Cala, Huelva / Telesonid Huelva, S.C.

A., 959/ 24.38.60, Cl Fco.Vazquez Limon 4, 21002 Huelva / Electronica Sur, 959/ 47.11.51, Cl M. Lerdo De Tejada 9, 21400 Ayamonte, Huelva / Electro Himega, S.A., 953/ 24.

22.56, Cl Adarves Bajos 4-C, 23001 Jaen / Electronica Jumar, 953/ 26.17.08, Cl Goya (Las Flores) 1, 23006 Jaen / Electronica Gonzalez, 953/ 50.33.

82, Corredera San Bartolome 11, 23740 Andujar, Jaen / Uniservic Electronica, 953/ 75.14.19, Cl Goya 1 Bjos, 23400 Ubeda, Jaen/ Anuma, 953/ 69.70.41, Cl Paredon 24, 23700 Linares, Jaen / Talleres Instaluz, 981/ 26.

80.26, Cl Juan Florez 110, 15005 La Coruña / Garcia Quintela Arturo, 981/70.21.07, Cl Xoane, 15100 Carballo, La Coruña / Manuel Mato Señaris, 981/53.71.14, Cl Silvouta-Pedra Da, 15896 Santiago Compostela, La Coruña / Zener Electronica, 981/22.07.00, Cl Ronda De Monte Alto 15, 15002 La Coruña / S.T. Mendez, 981/27.

52.52, Cl Gil Vicente 13, 15011 La Coruña / Electronica Castilla, 981/32.14.09, Cr Castilla 377-Bis Bjos, 15404 Ferrol, La Coruña / Bandin Audio, 981/86.60.23, Cl Rua Arcos Moldes 2 B-3, 15920 Rianxo, La Coruña / Electronica Torres, S.



[You're reading an excerpt. Click here to read official SHARP](#)

[R-671/671F user guide](#)

<http://yourpdfguides.com/dref/1284596>