



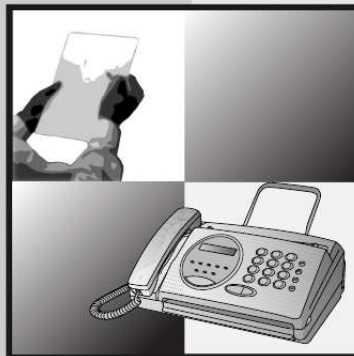
Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP UX-53/73. You'll find the answers to all your questions on the SHARP UX-53/73 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP UX-53/73
User guide SHARP UX-53/73
Operating instructions SHARP UX-53/73
Instructions for use SHARP UX-53/73
Instruction manual SHARP UX-53/73

SHARP

MODEL
UX-53/UX-73



FACSIMILE
OPERATION MANUAL

1. Installation
 2. Sending Faxes
 3. Receiving Documents
 4. Making Copies
 5. Making Telephone Calls
 6. Answering Machine Connection
 7. Special Functions
 8. Printing Lists
 9. Maintenance
 10. Troubleshooting
- Quick Reference Guide

TELEFAKS
INSTRUKCJA OBSŁUGI

1. Instalacja
 2. Wysyłanie dokumentów
 3. Odbiór dokumentów
 4. Kopiowanie
 5. Wykonywanie rozmów telefonicznych
 6. Podłączenie automatu zgłoszeniowego
 7. Funkcje specjalne
 8. Wydruk list
 9. Konserwacja
 10. Problemy
- Skrócony opis obsługi



[You're reading an excerpt. Click here to read official SHARP UX-53/73 user guide](http://yourpdfguides.com/dref/1290424)
<http://yourpdfguides.com/dref/1290424>

Manual abstract:

Installation 2. Sending Faxes 3. Receiving Documents 4. Making Copies 5. Making Telephone Calls 6. Answering Machine Connection 7. Special Functions 8. Printing Lists 9. Maintenance 10. @@ Instalacja 2.

Wysyłanie dokumentów 3. Odbiór dokumentów 4. Kopiowanie 5. Wykonywanie rozmów telefonicznych 6. Podłączanie automatu zgłoszeniowego 7. Funkcje specjalne 8. Wydruk list 9. Konserwacja 10. @@ μ 1999/5/μ. @@@@Ez a berendezés megfelel az 1999/5/EK Irányelvnek.

Ta oprema je v skladu z zahtevami Direktive 1999/5/EC. Seade vastab direktiivi 1999/5/EÜ nуетele. Si ierice atbilst tehnikam prasibam pec 1999/5/EC direktivas. Sis prietaiss atitinka direktivos 1999/5/EC reikalavimus. Bu ürün 1999/5 EC Direktiflerine uygundur. This equipment complies with the requirements of Directive 1999/5/EC. To urządzenie pracuje w publicznej sieci telefonicznej zgodnie ze standartami TBR21 i TS103021. μ μ μ μ μ TBR21 TS103021. Tento fax je kompatibilní s analogovými veřejnými komutovanými telefonními sítěmi, které splňují standard TBR21 a TS103021. Toto je telefaxové zariadenie, ktoré je určené na používanie v verejnej telefónnej sieti, pre ktorú platí norma TBR21 a TS103021.

Ez a fax termék a TBR21 és TS103021 szabványnak megfelelő analóg nyilvános kapcsolt telefonhálózatokban muködthetheto. Tísti telefaks deluje v analognih javnih telefonskih omrežjih, usklajenih s standardom TBR21 in TS103021. Faksiseade töötab analoogtelefoni kommutaatorvrkudes, mis vastavad TBR21 ja TS103021 standardile. S telefaksa ierce var strdt publiski komutjamos analogajos telefonu tklos, kas atbilst standartam TBR21 un TS103021. Tai faksimilinis aparatas, veikiantis analoginiuose siuolaikiskuose telefon tinkluose, atitinkanciuose TBR21 ir TS103021 standart. Bu faks makinesi analog telefon sisteminde çalimak üzere TBR 21 ve TS103021 standartlarina uygundur. This is a facsimile product operating in analogue public switched telephone networks which follow the TBR21 and TS103021 Standard. μ μ URL. Prohlášení o shod je k dispozici k prohlédnutí na následující adrese URL. Vyhlášení o zhode nájdete na nasledujúcej adrese URL.

A Megfelelősségi nyilatkozat megtekinthetik az alábbi URL címen. Deklaracija o skladnosti se lahko najde na tistem URL naslovu. Ühilduvusdeklaratsiooni on vimalik lugeda järgmisel URL-aadressil. Atbilstbas deklaraciju var aplkot saj tmeek adres. a Suderinamumo deklaracij galite perzirti siuo URL adresu.

Bu uyumluluk raporunu aaidaki internet adresinde görebilirsiniz. The Declaration of Conformity can be viewed at the following URL address.

<http://www.sharp.de/doc/UX-53>.

pdf <http://www.sharp.de/doc/UX-73.pdf> Panel Keys in Each Language Przyciski pulpitu w kady m jzyku Icons are used to identify keys on the operation panel.

The following panels show key names corresponding to the icons in English and Polish. Do okrelania przycisków pulpitu sterowniczego uywane s ikony.

Ponize ilustracje pulpitu przedstawiaj nazwy przycisków podane w jzyku angielskim i polskim odpowiadajce ikonom. Icons Ikony A B C D E English Angielski SPEED REDIAL HOLD/ SEARCH A B C D E FUNCTION/ RESOLUTION KEYLOCK VOLUME START SPEAKER COPY/HELP STOP Polish Polski SZYBKIE WYBIERANIE PON. WYBIER. A B C D E ZAWIESZ.

/ WYSZUK. FUNKCJE/ BLOKADA ROZDZIELCZO KLAWISZY GLÓNO GLONIK START KOPIA/POMOC STOP A. Information on Disposal for Users (private households) 1. In the European Union Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one. *) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling. 2.

In other Countries outside the EU If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch. B. Information on Disposal for Business Users. 1.

In the European Union If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take back of your used products. 2. In other Countries outside the EU If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal. Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products. A.

Informacje dla uytkowników (prywatne gospodarstwa domowe) dotyczce usuwania odpadów 1. W krajach Unii Europejskiej Uwaga: Jeli chc Pastwo usun to urządzenie, prosimy nie uywa zwyklych pojemników na mieci! Zuyty sprzt elektryczny i elektroniczny naley usuwa oddzielnie, zgodnie z wymogami prawa dotyczycymi odpowiedniego przetwarzania, odzysku i recyklingu zuytego sprztu elektrycznego i elektronicznego. Po wdroeniu przepisów unijnych w Pastwach Czlonkowskich prywatne gospodarstwa domowe na terenie krajów UE mog bezplatnie* zwraca zuyty sprzt elektryczny i elektroniczny do wyznaczonych punktów zbiórki odpadów. W niektórych krajach* mona bezplatnie* zwróci stary produkt do lokalnych punktów sprzeday detalicznej pod warunkiem, e zakupi Pastwo podobny nowy produkt.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

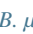

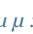


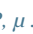

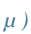















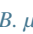

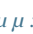


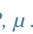

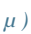











<http://yourpdfguides.com/dref/1290424>



*) W celu uzyskania dalszych informacji na ten temat należy skontaktować się z lokalnymi władzami. Jeśli zużyty sprzęt elektryczny i elektroniczny jest wyposażony w baterie lub akumulatory, należy je usunąć oddzielnie, zgodnie z wymogami lokalnych przepisów. Jeśli ten produkt zostanie usunięty we właściwy sposób, pomoże Państwu zapewnić, że odpady zostaną poddane przetworzeniu, odzyskowi i recyklingowi, a tym samym zapobiec potencjalnym negatywnym skutkom dla środowiska naturalnego i zdrowia ludzkiego, które w przeciwnym razie mogłyby mieć miejsce na skutek niewłaściwej obróbki odpadów. 2. Kraje pozaunijne: Jeśli chce Państwo pozbyć się produktu, należy skontaktować się z władzami lokalnymi i uzyskać informacje na temat prawidłowej metody usunięcia produktu. B.

Informacje dla użytkowników biznesowych dotyczące usuwania odpadów. 1. W krajach Unii Europejskiej: W przypadku gdy produkt używany jest do celów handlowych i zamierza go Państwo usunąć: Należy skontaktować się z dealerem firmy SHARP, który poinformuje o możliwości zwrotu wyrobu. By móc to zrobić Państwo musieli ponieść koszty zwrotu i recyklingu produktu. Produkty niewielkich rozmiarów (i w małych ilościach) można zwrócić do lokalnych punktów zbiórki odpadów.

2. Kraje pozaunijne: Jeśli chce Państwo usunąć ten produkt, należy skontaktować się z władzami lokalnymi i uzyskać informacje na temat prawidłowej metody jego usunięcia. Uwaga: Produkt oznaczony jest tym symbolem. Oznacza to, że zużytego sprzętu elektrycznego i elektronicznego nie należy łączyć z odpadami z gospodarstw domowych. Dla tego typu produktów istnieje odrębny system odpadów.

A.  1. :                       2.                       .

B.   1.   SHARP,                2.                       .

  A. Informace o likvidaci pro uživatele (domácnosti) 1. V zemích Evropské unie Upozornění: Toto zařízení nelikvidujte v běžných odpadkových koších! Použité elektrické a elektronické vybavení je třeba likvidovat samostatně a v souladu s legislativou, která vyžaduje žádnou likvidaci, obnovu a recyklaci použitého elektrického a elektronického vybavení. Na základě dohody členských států mohou domácnosti v zemích Evropské unie vrátit použité elektrické a elektronické vybavení v určených sbírnách zdarma*.

V některých zemích* od vás může místní prodejce odebrat zdarma použitý výrobek, pokud zakoupíte nový podobný. *) Další podrobnosti vám sdělí orgány místní správy. Pokud použité elektrické nebo elektronické vybavení obsahuje baterie nebo akumulatory, zlikvidujte je pedem samostatně v souladu s místními vyhláskami. žádnou likvidaci tohoto výrobku pomáháte zajistit, že bude odpad vhodným způsobem zlikvidován, obnoven a recyklován a zabráníte tak možnému poškození životního prostředí a zdraví obyvatel, ke kterému by mohlo dojít v případě nesprávné likvidace. 2.

V ostatních zemích mimo Evropskou unii: Chcete-li tento výrobek zlikvidovat, obraťte se na místní správní orgány, které vás seznámí s vhodnou metodou likvidace. B. Informace o likvidaci pro podnikatelské subjekty. 1. V zemích Evropské unie: Chcete-li zlikvidovat výrobek, který je používán pro podnikatelské účely: obraťte se na prodejce SHARP, který vás informuje o odebrání výrobku. Odebrání a recyklace mohou být zpoplatněny. Malé výrobky (a malá množství) mohou odebírat místní sbírnou odpadu. 2. V ostatních zemích mimo Evropskou unii: Chcete-li tento výrobek zlikvidovat, obraťte se na místní správní orgány, které vás seznámí s vhodnou metodou likvidace. Upozornění: Váš výrobek je označen tímto symbolem.

Znamená to, že je zakázáno likvidovat použitý elektrický nebo elektronický výrobek sítě; lllamokon belül a magán háztartások használt elektromos és elektronikai berendezéseiket díjmentesen juttathatják vissza a kijelölt gyjtélesítményekbe*. Egyes országokban* a helyi kiskereskedés is díjmentesen visszaveheti Öntől a régi terméket, ha hasonló új terméket vásárol. *) A további részletekről, kérjük, érdeklődjön az önkormányzatnál. Ha használt elektromos vagy elektronikus berendezésében elemek vagy akkumulátorok vannak, kérjük, elzetesen ezeket selejtezze ki a helyi elírásonak megfelelően. A termék szabályszer kiselejtezésével Ön segít biztosítani azt, hogy a hulladék keresztülmenjen a szükséges kezelésen, visszanyerési és újrahasznosítási eljáráson, ezáltal közremőködik a lehetséges káros környezeti és humán egészségi hatások megelőzésében, amelyek ellenkez esetben a helytelen hulladékkezelés következtében előállhatnának. 2. Az EU-n kívüli egyéb országokban Ha a terméket ki szeretné selejtezni, kérjük, forduljon az önkormányzathoz, és érdeklődjön a helyes hulladék-elhelyezési módszerrel.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

<http://yourpdfguides.com/dref/1290424>

B. Hulladék-elhelyezési tájékoztató vállalati felhasználók részére. 1.

Az Európai Unióban Ha a terméket üzleti célokra használta, és ki kívánja selejtezni: Kérjük, forduljon a SHARP kereskedéshez, ahol tájékoztatják Önt a termék visszavételéről. Lehetséges, hogy a visszavételből és újrahasznosításból ered költségeket felszámítják. Elfordulhat, hogy a helyi hulladékbegyűjtés létesítmény átvesszi a kisebb termékeket (és kis mennyiségeket). 2. Az EU-n kívüli egyéb országokban Ha a terméket ki szeretné selejtezni, kérjük, forduljon az önkormányzathoz, és érdeklődjön a helyes hulladék-elhelyezési módszerrel.

Figyelem: A terméket ezzel a jelöléssel látták el. Ez azt jelenti, hogy a használt elektromos és elektronikus termékeket nem szabad az általános háztartási hulladékkal keverni. Ezekhez a termékekhez külön hulladékgyűjtő rendszer üzemel. A. Információ a hulladékgyűjtésről (zasebna gospodinjstva) 1. V Evropski uniji **Pozor:** Te opreme ne zavržite v običajen kos za smeti! Rabljeno električno in elektronsko opremo je treba obravnavati loceno in v skladu z zakonodajo, ki zahteva ustrezno ravnanje, predelavo in reciklazo rabljene električne in elektronske opreme. Skladno z izvajanjem te zakonodaje lahko zasebna gospodinjstva v državah članicah EU rabljeno električno in elektronsko opremo brezplačno vrnejo na temu namenjena zbirna mesta*. V nekaterih državah* lokalni dobavitelj pri nakupu podobnega novega izdelka brezplačno prevzame tudi vasega starega. *) Za več informacij se obrnite na ustrezne organe lokalne oblasti. Če so v rabljeni električni oziroma elektronski opremi baterije ali akumulatorji, le-te predhodno zavržite v skladu z lokalnimi predpisi. Z ustreznim odlogom tega izdelka boste poskrbeli, da bodo odpadki delezni ustreznega ravnanja, predelave in reciklaze ter tako pomagali preprečiti morebitne negativne učinke na okolje in zdravje ljudi, do katerih bi sicer zaradi neustreznega ravnanja z odpadki lahko prislo. 2. V državah zunaj EU Če želite ta izdelek zavreci, se obrnite na ustrezne organe lokalne skupnosti in povprašajte po ustreznem načinu odstranitve. Svica: Rabljeno električno oziroma elektronsko opremo lahko brezplačno vrnete prodajalcu tudi če niste kupili novega izdelka. Ostala zbirna mesta so navedena na spletni strani www.swico.ch ali www.sens.ch.

B. Informacije o odlaganju za poslovne uporabnike 1. V Evropski uniji Če je izdelek namenjen poslovni uporabi in ga želite zavreci: Obrnite se na prodajalca izdelkov SHARP, ki vam bo razložil postopek vračila izdelka. Morda boste morali za stroške vračila in reciklaze plakati. Manjše izdelke (in manjše količine le-teh) bodo morda prevzela temu namenjena lokalna zbirna mesta. Španija: Za vračilo rabljenih izdelkov se poslužite uveljavljenega sistema zbiranja odpadkov.

2. V državah zunaj EU Če želite ta izdelek zavreci, se obrnite na ustrezne organe lokalne skupnosti in povprašajte po ustreznem načinu odstranitve. **Pozor:** Vas izdelek je označen s tem simbolom. Ta opozarja, da rabljene električne in elektronske opreme ne smemo zavreci skupaj z drugimi gospodinjskimi odpadki. Tem izdelkom je namenjen poseben sistem odlaganja.

A. Kasutajainfo seadmete äraviskamise kohta (eramajapidamistele) 1. Euroopa Liidus Tähelepanu: kui soovite seadmet vabaneda, palun ärge visake seda tavalisse prügikasti! Kasutatud elektri- ja elektronseadmeid tuleb käidelda eraldi ja vastavalt õigusaktidele, mis nõuavad elektri- ja elektronseadmete õiget käitlust, taaskasutust ja ringlussevõttu. Pärast õigusaktide rakendamist liikmesriikides võivad ELi eramajapidamised tagastada oma kasutatud elektri- ja elektronseadmed tasuta selleks määratud kogumispunktidesse*. Mõnedes riikides* võib kohalik jaemüüja vana toote tasuta tagasi võtta ka siis, kui ostate sarnase uue toote.

*) Palun võtke täpsustamiseks ühendust oma kohaliku asutusega. Kui teie kasutatud elektri- või elektronseadmel on patareid või akud, palun vabanega neist eelnevalt vastavalt kohalikele nõuetele. Selle toote korrektse kõrvaldamisega aitate tagada jäätmete nõuetekohase käitluse, taaskasutuse ja ringlussevõtu ning seega vältida võimalikke kahjulikke mõjusid keskkonnale ja inimeste tervisele, mida jäätmete vale käitlus vastasel juhul kaasa võiks tuua. 2. Muudes riikides väljaspool ELi Kui soovite sellest tootest vabaneda, võtke palun ühendust kohalike asutustega ja selgitage välja õige kõrvaldamisviis. B. Info seadmete äraviskamise kohta äriklientidele. 1. Euroopa Liidus Kui toodet kasutatakse äriks eesmärgidel ja te soovite sellest vabaneda: palun võtke ühendust SHARPi toodete vahendajaga, kes teavitab teid toote tagastamisvõimalustest. Võimalik, et teil tuleb tasuda toote tagastamise ja ringlussevõtu kaaskulud.

Väikesemõdulisi tooteid (ja väikeses koguses) võidakse vastu võtta ka teie kohalikus kogumispunktis. 2. Muudes riikides väljaspool ELi Kui soovite sellest tootest vabaneda, palun võtke ühendust kohalike asutustega ja selgitage välja õige kõrvaldamisviis. Tähelepanu: Teie toode on tähistatud selle sümboliga. See tähendab, et kasutatud elektri- ja elektronseadmeid ei tohiks ära visata koos tavaliste olmejäätmetega. Nende toodete jaoks on eraldi kogumissüsteem. A. Informatsioon kasutajatele (privatsajajatele) 1. Euroopa Liidus Tähelepanu! Kui soovite seadmet vabaneda, palun ärge visake seda tavalisse prügikasti! Kasutatud elektri- ja elektronseadmeid tuleb käidelda eraldi ja vastavalt õigusaktidele, mis nõuavad elektri- ja elektronseadmete õiget käitlust, taaskasutust ja ringlussevõttu. Pärast õigusaktide rakendamist liikmesriikides võivad ELi eramajapidamised tagastada oma kasutatud elektri- ja elektronseadmed tasuta selleks määratud kogumispunktidesse*. Mõnedes riikides* võib kohalik jaemüüja vana toote tasuta tagasi võtta ka siis, kui ostate sarnase uue toote.

Dzys valsts* ar vietjais izplattjys var pieemt atpaka nolietots ierces bez maksas, ja js iegdties tai ldzgu jaunū ierci. *) Ldzu, sazinieties ar savu vietjo kompetento instiitciju detalizikas informacijas saemsana. Ja jsu lietotai elektriskai vai elektroniskai iercei ir baterijas vai akumulatori, ldzu, izmetiet tos atsevisi jau ieprieks, saska ar spk esosajiem vietjiem noteikumiem.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

<http://yourpdfguides.com/dref/1290424>

Pareizi utilizojot šo ierces, jūs palīdzsiet nodrošināt pareizu atkritumu apstrādi, prastri atkritumu izmantošanu, un tādējādi novērsiet iespējamo negatīvo ietekmi uz vidi un cilvēku veselību, ko izraisa nepareiza atkritumu apsaimniekošana. 2.

Cits valsts rpus ES Ja vlaties izmest šo izstrādājumu, ldsu, sazinieties ar vietjo kompetento institūciju, lai noskaidrotu pareizo izmesanas metodi. B. Informacija par izmesanu (korporatīviem lietotjiem). 1. Eiropas Savienb Ja produktu izmanto korporatīviem mriem, un js vlaties to izmest: Ldsu, sazinieties ar vietjo SHARP izplattju, kurs js informs par izstrdjuma atpaka pieemsanas krtbu.

Jums var nkties apmakst izdevumus, kas radusies, par izstrdjumu pieemsanu un prstrdi. Iespjams, ka nelielus izstrdjumus (un neliel apjom) var nodot vietj savksanas punkt. 2. Cits valsts rpus ES Ja vlaties šo izstrdjumu izmest, ldsu, sazinieties ar vietjo kompetento institūciju, lai noskaidrotu pareizo izmesanas metodi. Uzmanbu! Uz jsu ierces redzams sds simbols. Tas nozn, ka lietotas elektriskas un elektroniskas ierces nedrkst jaukt kop ar prjiem atkritumiem. Sm iercm pastv atsevisa savksanas sistma. A. Informacija vartotojams apie gamini ismetim (privatiems nam kiams) 1. Europos Sjungoje Dmesio: Sios rangos negalima mesti prastinius stuksli konteinerius! Naudota elektrin ir elektronin ranga turi bti apdorojama atskirai, laikantis teiss akt, kurie reikalauja tinkamai apdoroti, panaudoti ir perdirbti elektrin ir elektronin rang.

Po atitinkam teiss akt gyvandinimo valstybse narse privats ES sali kiai gali nemokamai grzinti naudot elektrin arba elektronin rang paskirtosioms surinkimo monms*. Kai kuriose salyse* vietiniai mazmenininkai taip pat gali nemokamai priimti is js sen gamin, jei perkate panas nauj. *) Jei reikia daugiau informacijos, kreipkitis vietos institucijas. Jei js naudotoje elektrinje ar elektroninje rangoje yra baterij ar akumulatori, pries tai utilizuokite juos atskirai, laikydamiesi salyje galiojanci reikalavim. Tinkamai ismesdami gamin padsite uztikrinti, kad atliekos bt reikiamai apdorojamos, panaudojamos ir perdirbamos saugant aplink ir zmoni sveikat nuo neigiamo poveikio, kuris kilt netinkamai elgiantis su atliekomis. 2. Ne ES salyse Jei norite ismesti s gamin, kreipkitis vietos institucijas ir prasykite nurodyti tinkam ismetimo bd. B. Informacija apie gamini ismetim verslo vartotojams. 1.

Europos Sjungoje Jei norite ismesti gamin, naudot verslo tikslais: Kreipkitis savo SHARP atstov, kuris informuos jus apie gaminio grzinim. Jums gali tekti padengti islaidas, susijusias su produkto grzinimu ir perdirbimu. Nedidelius gaminius (nedidelius j kiekius) gali priimti vietin surinkimo mon. 2. Ne ES salyse Jei norite ismesti s gamin, kreipkitis vietos institucijas ir prasykite nurodyti tinkam ismetimo bd.

Dmesio: Js gaminys pazymtas siuo simboliu. Tai reiskia, kad naudot elektrini ir elektronini gamini negalima ismesti prastini buitini atliek konteinerius. Tokiems gaminiams taikoma atskira surinkimo sistema. Introduction Welcome, and thank you for choosing a Sharp facsimile! The features and specifications of your new Sharp fax are shown below. Automatic dialling Fax paper Rapid Key Dialling: 5 numbers Speed Dialling: 35 numbers Initial starter roll (included with machine): 10 m Replacement roll (not included): FO-20PR 30 m (12.

7 mm core) UX-53: Tear off by hand UX-73: Automatic cutter 448 KB (approx. 17 average pages) 9,600 bps with automatic fallback to lower speeds. Approx. 15 seconds Horizontal: 8 pels/mm Vertical: Standard: 3.85 lines/mm Fine /Halftone: 7.7 lines/mm Super fine: 15.4 lines/mm 10 pages max. (A4, 80 g/m2 paper) Thermal recording 64 levels MR, MH, H2 Paper cutting method Memory size* Modem speed Transmission time* Resolution Automatic document feeder Recording system Halftone (grayscale) Compression scheme *Based on Sharp Standard No.1 Chart at standard resolution is Sharp special mode, excluding time for protocol signals (i.e.

, ITU-T phase C time only). 1 Display 16-digit LCD display Applicable telephone line Analog public switched telephone network Compatibility Input document size ITU-T (CCITT) G3 mode Automatic feeding: Width: 148 to 210 mm Length: 140 to 297 mm Manual feeding: Width: 148 to 210 mm Length: 140 to 600 mm 210 mm max. 210 mm max. Automatic/Dark selectable TEL/FAX, TEL, FAX, A.M. (Note: A.M. mode is for connecting an answering machine) Yes Yes (cannot be used if power fails) 220-230 V AC, 50 Hz 5 - 35°C 30 - 85% RH Standby: 4.0 W Maximum: 115 W Width: 304 mm Depth: 236mm Height: 122 mm Approx. 2.

6 kg Effective scanning width Effective printing width Contrast control Reception modes Copy function Telephone function Power requirements Operating temperature Humidity Power consumption Dimensions Weight As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units. 2 Please note: The fax machine is not compatible with digital telephone systems.

The fax machine is not designed for use on a line which has call waiting, call forwarding, or certain other special services offered by your telephone company.

If you attempt to use the fax machine in conjunction with any of these services, you may experience errors during transmission and reception of facsimile messages. Important safety information Do not disassemble this machine or attempt any procedures not described in this manual. Refer all servicing to qualified service personnel. Do not install or use the machine near water, or when you are wet. For example, do not use the machine near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

Take care not to spill any liquids on the machine. Unplug the machine from the telephone socket and then the power outlet and consult a qualified service representative if any of the following situations occur: - Liquid has been spilled into the machine or the machine has been exposed to rain or water. - The machine produces odors, smoke, or unusual noises. - The power cord is frayed or damaged. - The machine has been dropped or the housing damaged. Do not allow anything to rest on the power cord, and do not install the machine where people may walk on the power cord. This machine must only be connected to a 220 - 230 V, 50 Hz, earthed outlet. Connecting it to any other kind of outlet will damage the machine and invalidate the warranty. Never insert objects of any kind into slots or openings on the machine. This could create a risk of fire or electric shock.

If an object falls into the machine that you cannot remove, unplug the machine and consult a qualified service representative. Do not place this machine on an unstable cart, stand or table. The machine could be seriously damaged if it falls. Never install telephone wiring during a lightning storm.



[You're reading an excerpt. Click here to read official SHARP](http://yourpdfguides.com/dref/1290424)

[UX-53/73 user guide](http://yourpdfguides.com/dref/1290424)

<http://yourpdfguides.com/dref/1290424>

Never install telephone sockets in wet locations unless the socket is specifically designed for wet locations. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Use caution when installing or modifying telephone lines. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. Do not use a telephone to report a gas leak in the vicinity of the leak.

The power outlet must be installed near the equipment and must be easily accessible. 3 Table of Contents A Look at the Operation Panel 1. Installation 6 8

Unpacking Checklist . . .

.....
.....

.....
.....
.....

8 Connections

.....
.....
.....
.....

. . . . 9 Loading the Thermal Paper

.....
.....
.....

. . . . 13 Entering Your Name and Fax Number

.....
.....

. 16 Setting the Date and Time . .

.....
.....
.....
.....

18 Setting the Reception Mode

.....
.....
.....

. 20 Setting the Display Language.

.....
.....
.....

. 22 Volume Adjustment

.....
.....
.....

. 23 2. Sending Faxes Transmittable Documents.

.....
.....
.....

. . Loading the Document . . .

.....
.....

.....
.....

. . Adjusting the Resolution and Contrast . . .

.....
.....

Sending a Fax by Normal Dialling

.....

 <i>Sending a Fax by Automatic Dialling</i>

25 25 26 28 30 31	3. <i>Receiving Faxes Using TEL/FAX Mode</i>

 <i>Using A.M. Mode</i>

 <i>Using FAX Mode</i>

 <i>Using TEL Mode</i>

 <i>Optional Reception Settings</i>

 <i>Substitute Reception to Memory</i>

..... 40 40 41 41 43 45 46	4. <i>Making Copies</i> 47 4 <i>Table of Contents</i> 5. <i>Making Telephone Calls</i> 6. <i>Answering Machine Connection</i> 48 50 <i>Connecting an Answering Machine</i> ..

 <i>50 Using the Answering Machine Connection</i>

 <i>51 Optional A.M. Mode Settings</i>

..... 53 7.	<i>Special Functions</i> 56 <i>Caller ID (Requires Subscription to Service)</i>

 <i>56 Blocking Reception of Unwanted Faxes</i>

 <i>61 Polling (Requesting a Fax Transmission)</i>

 <i>62 Key Lock Function</i>

. 64 8. Printing Lists 9. Maintenance 10. Troubleshooting 68 71 73 Problems and Solutions . .

. . 73 Messages and Signals . . .

. . 78 Clearing Paper Jams . . .

. . . 81 Quick Reference Guide Index 84 85 5 A Look at the Operation Panel 1 2 3 4 5 A B C D E 6 1 2 3 7 8 9 10 11 12 13 14 Rapid Dial keys Press one of these keys to dial a fax number automatically. Display Displays messages to help you operate the machine. Number keys Use these keys to dial numbers, and enter numbers and letters when storing auto-dial numbers. SPEED key Press this key to dial a fax or voice number using an abbreviated 2-digit Speed Dial number. REDIAL key Press this key to automatically redial the last number dialed. RESOLUTION key When a document is in the feeder, press this key to adjust the resolution for faxing or copying. 4 5 6 7 START key Press this key to begin transmission when using Speed Dialling, Direct Keypad Dialling, or Normal Dialling.

FUNCTION/KEY LOCK key Press and immediately release this key to select various special functions and settings. Hold down this key to activate or deactivate the Key Lock function. VOLUME key Press this key to adjust the volume of the speaker when pressed, or the volume of the ringer at all other times. has been 8 9 10 COPY/HELP key When a document is in the feeder, press this key to make a copy. At any other time, press this key to print out the Help List, a quick reference guide to the operation of your fax machine. STOP key Press this key to cancel an operation before it is completed. SPEAKER key Press this key to listen to the line and fax tones through the speaker when faxing a document. Note: This is not a speakerphone. You must pick up the handset to talk with the other party. HOLD/SEARCH key Press this key to search for an auto-dial number, or, during a phone conversation, press this key to put the other party on hold.

Panel release Grasp this finger hold and pull toward you to open the operation panel. 11 12 13 14 7 1. Installation Unpacking Checklist Before setting up, make sure you have all of the following items. If any are missing, contact your dealer or retailer. Handset Original document support Handset cord Operation manual Fax paper (Sample roll) Paper roll shims Telephone line cord Points to keep in mind when setting up Do not place the machine in direct sunlight. Do not place the machine near heaters or air conditioners. Keep dust away from the machine. Keep the area around the machine clear. About condensation If the machine is moved from a cold to a warm place, it is possible that condensation may form on the scanning glass, preventing proper scanning of documents for transmission. To remove the condensation, turn on the power and wait approximately two hours before using the machine. 8 Connections Connecting the handset Connect the handset as shown and place it on the handset rest. The ends of the handset cord are identical, so they will go into either socket. Make sure the handset cord goes into the socket marked with a handset symbol on the side of the machine! Use the handset to make ordinary phone calls, or to transmit and receive faxes manually. Removing the packing paper 1 Grasp the finger hold and open the operation panel. 2 Flip up the front paper guide . Note: Do not peel off or bend this strip of film. UX-53 UX-73 9 1. Installation Connections 3 Remove the packing paper. UX-53 UX-73 4 Flip down the front paper guide and then close the operation panel. UX-53 UX-73 Connecting the power cord Plug the power cord into a 220-230 V, 50 Hz, earthed AC outlet.

Caution: Do not plug the power cord into any other kind of outlet. This will damage the machine and is not covered under the warranty. The machine does not have a power on/off switch, so the power is turned on and off by simply plugging in or unplugging the power cord. Moving your fax and reconnecting If it is necessary to move your fax to a new location, first disconnect the telephone line cord before disconnecting the power cord. When reconnecting, it is necessary to connect the power cord before connecting the telephone line cord. 10 Connecting the telephone line cord Insert one end of the line cord into the socket on the back of the machine marked TEL. LINE. Insert the other end into a wall telephone socket. TE SEL.



[You're reading an excerpt. Click here to read official SHARP UX-53/73 user guide](http://yourpdfguides.com/dref/1290424)
<http://yourpdfguides.com/dref/1290424>

TEL LIN .

E Note: If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for the power and telephone lines. Surge protectors can be purchased from your dealer or at most telephone specialty stores. Dial mode setting The dial mode setting is used to select the dial mode (tone or pulse). Tone dialling is initially selected. Only tone dialling can be used in your country or region.

If the setting has been accidentally changed and you need to change it back to tone dialling, follow the steps below. 1 2 3 Display: Press once and 4 once.

OPTION SETTING Press 4 times. DIAL MODE Press 1 to select tone dialling. · Only tone dialling should be selected.

The pulse dial settings are not for use in your country or region. 4 Press to exit. 11 1. Installation Connections Connections Attaching the original document support Attach the original document support as shown below. Extension phone (optional) If desired, you can connect an extension phone to the TEL. SET socket on the fax. Phone calls can be made using the extension phone even when the Key Lock function is activated. To connect an answering machine to your fax, see page 50. 1 Remove the seal covering the TEL. SET socket.

2 Connect the extension phone line to the TEL. SET socket. TE SEL. TEL LIN . E 12 Loading the Thermal Paper Your fax machine prints incoming faxes on a special kind of paper called thermal paper. The fax machine's print head creates text and images by applying heat to the thermal paper. 1 Grasp the finger hold as shown and pull up to open the operation panel. 2 Flip up the front paper guide. UX-53 UX-73 Press the knob to make sure the front side of the metal guide is down. 3 If you are loading paper that is 210 mm in width, place the paper roll shims on each side of the paper compartment.

(Note that Sharp recommended paper, including the initial roll, is 216 mm in width.) · The ribbed side of the shims should face in (toward each other). 13 1.

Installation Loading the Thermal Paper Loading the Thermal Paper 4 Unwrap the roll of thermal paper and place it in the compartment. YES NO! ·

Important: The roll must be placed so that the leading edge of the paper unrolls as shown.

(The paper is only coated on one side for printing. If the roll is placed backwards, the paper will come out blank after printing.) 5 Insert the leading edge of the paper into the slot as shown. Continue to push the paper through the slot until it comes out the opening in the front of the machine. 6 Make sure the paper comes out straight, and then flip down the paper guide.

UX-53 UX-73 14 7 Close the operation panel, making sure it clicks into place. · UX-53: A short length of the paper will feed out. Grasp the paper by the edge and pull upward to tear it off. · UX-73: A short length of the paper will be cut off. Click Replacing the thermal paper When the paper runs out, OUT OF

PAPER will appear in the display. Reception and copying will no longer be possible. To replace the paper, first take out the old roll, then load the new roll as described above. To assure a long life for your fax and obtain the best reproduction quality, we recommend that you use the following Sharp thermal paper, which is available from your dealer or retailer: FO-20PR THERMAL PAPER (30 m roll) The use of any other paper may result in poor copy quality and excessive build-up of residue on the head. Handling thermal paper Do not unpack the paper until you are ready to use it. It may become discoloured if: It is stored at high humidity or high temperature.

It is exposed to direct sunlight. It comes in contact with glue, thinner, or a freshly copied blueprint. A rubber eraser or adhesive tape is used on it, or it is scratched. 15 1. Installation Loading the Thermal Paper Entering Your Name and Fax Number Entering Your Name and Fax Number Before you begin sending faxes, enter your name and fax (telephone) number. You also need to set the date and time. Once you enter this information, it will automatically appear at the top of each fax page you send. 3 A B C D E 1 2 3 4 Display: Press once and 3 once. ENTRY MODE Press twice. OWN NUMBER SET Press

once.

ENTER FAX # Enter your fax number by pressing the number keys (max. 20 digits). · To insert a space between digits, press · To clear a mistake, press 16 . .

To enter a "+", press .

5 6 Press to enter the fax number in memory. Enter your name by pressing number keys for each letter as shown in the chart below. Up to 24 characters can be entered. Example: SHARP = 77777 444 22 7777 SPACE = A= B= C= D= E= F= G= H= I= J= K= L= M= N= O= P= Q= R= S= 77 T= U= V= W= X= Y= Z= To enter two letters in succession that require the same key, press entering the first letter. (the cursor backward.

) moves the cursor forward, and after moves To clear a mistake, press To change case, press or)(. To enter one of the following symbols, press repeatedly: . /! " # \$ % & ' () + + , - . : ; < = > ? @ [¥] ^ _ ' { | } (Note: Characters particular to the selected display language will appear at the end of the symbol list.)

7 8 Press DATE & TIME SET Press to return to the date and time display. 17 1. Installation Entering Your Name and Fax Number Setting the Date and Time Setting the Date and Time The date and time appear in the display and are printed at the top of every page you fax. Set the date and time as shown below. 3 A B C D E 1 2 3 Display: Press once and 3 once. ENTRY MODE Press 3 times.

DATE & TIME SET The currently set date appears (example): Press once. DATE 15-08-2006 18 4 Enter a two-digit number for the day ("01" to "31"). Example: the 5th 0 5 DATE 05-08-2006 · To correct a mistake, press then enter the correct number. to move the cursor back to the mistake and 5 Enter a two-digit number for the month ("01" for January, "02" for February, "12" for December, etc.). Example: January 0 1 DATE 05-01-2006 The currently set time appears (example): 6 Enter the year (four digits). Example: 2006 2 0 0 6 TIME 12:19 7 Enter a two-digit number for the hour ("00" to "23") and a two-digit number for the minute ("00" to "59"). Example: 9:25 0 9 2 5 05-JAN 09:25 8 9 Press to start the clock. KEY LOCK CODE Press to return to the date and time display. 19 1.

Installation Setting the Date and Time Setting the Reception Mode Setting the Reception Mode The machine has four modes for receiving incoming faxes: FAX mode: Select this mode when you only want to receive faxes on your line.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

<http://yourpdfguides.com/dref/1290424>

The fax machine will automatically answer all calls and receive incoming faxes. TEL mode: This mode is the most convenient for receiving phone calls. Faxes can also be received; however, all calls must first be answered by picking up the fax's handset or an extension phone connected to the same line.

TEL/FAX mode: This mode is convenient for receiving both faxes and voice calls.

When a call comes in, the fax will detect whether it is a voice call (including manually dialed faxes), or an automatically dialed fax. If it is a voice call, the fax will make a special ringing sound to alert you to answer. If it is an automatically dialed fax, reception will begin automatically. A.M.

() mode: Use this mode only if you have connected an answering machine to the fax (see Chapter 6). Select this mode when you go out to receive voice messages in your answering machine and faxes on your fax machine. Setting the reception mode A B C D E 1 2 0 Press once and 1 once. 2 Press the number key of the desired reception mode: 1 : TEL mode 3 : TEL/FAX mode 2 : FAX mode 4 : A.M. mode · The display will revert to the date and time display. The selected reception mode will appear to the right of the time. Note: "T/F" will appear when TEL/FAX mode is selected, and " " appear when A.M. mode is selected: 10-MAY 10:35 T/F 10-MAY 10:35 " will For more information on receiving faxes in FAX, TEL and TEL/FAX modes, see Chapter 3.

For more information on using A.M. mode, see Chapter 6. 21 1. Installation Setting the Reception Mode Setting the Display Language Setting the Display Language If desired, you can change the language used in the display, reports and lists. English or Polish can be selected. Press the keys on the operation panel as follows: Display: 1 2 3 4 5 Press once and 4 once. OPTION SETTING Press 4 times. LANGUAGE SELECT Press . Press or until the desired language appears in the display.

Press . · The machine will beep and the display will change to the selected language. 6 Press to return to the date and time display. 22 Volume Adjustment You can adjust the volume of the speaker and ringer using . A B C D E Speaker 1 2 Press .

Press one or more times to select the desired level. Display: SPEAKER: MIDDLE · Press again to turn off the speaker. SPEAKER: HIGH SPEAKER: LOW 23 1. Installation Volume Adjustment Volume Adjustment Ringer 1 Press volume. (Make sure to select the desired has not been pressed Display: RINGER: LOW and the handset is not lifted.

) RINGER: MIDDLE · The ringer will ring once at the selected level, then the date and time will reappear in the display. RINGER: HIGH RINGER: OFF OK ? 2 If you selected RINGER: OFF OK ?, press . 24 2. Sending Faxes Transmittable Documents Size and weight The size and weight of documents that you can load in the document feeder depend on whether you load one page at a time or several pages at once. Loading one page at a time: Minimum size 148 mm 140 mm Loading up to 10 pages at once: Minimum size 148 mm 140 mm 297 mm 600 mm Maximum size 210 mm Maximum size 210 mm Minimum weight Maximum weight Minimum weight Maximum weight 52 g/m² 157 g/m² 52 g/m² 80 g/m² Note: Letters or graphics on the edges of a document will not be scanned. 5 mm Letters in the shaded area will not be scanned. 5 mm 25 2. Sending Faxes Loading the Document Other restrictions The scanner cannot recognise yellow, greenish yellow, or light blue ink. Ink, glue, and correcting fluid on documents must be dry before they pass through the document feeder. All clips, staples, and pins must be removed from documents before loading in the feeder.

If these are not removed, they may damage the machine. Documents which are patched, taped, torn, smaller than the minimum size, carbon backed, easily smudged, or have a slippery coated surface should be photocopied, and the copy loaded in the feeder. Loading the Document Up to 10 pages can be placed in the feeder at one time. The pages will automatically feed into the machine starting from the bottom page. If you need to send or copy more than 10 pages, place the additional pages gently and carefully in the feeder just before the last page is scanned. Do not try to force them in, as this may cause double-feeding or jamming. If your document consists of several large or thick pages which must be loaded one at a time, insert each page into the feeder as the previous page is being scanned. Insert gently to prevent double-feeding. 1 Adjust the document guides to the width of your document. 2 Insert the document face down in the document feeder.

The top edge of the document should enter the feeder first. · READY TO SEND will appear in the display. 26 Loading the Document 3 Removing a document from the feeder If you need to remove a document from the feeder, open the operation panel. Important! Do not try to remove a document without first releasing it as explained below. This may damage the feeder mechanism.

1 Grasp the finger hold and pull up to open the operation panel. 2 Remove the document. · If you can not remove the document, see Clearing a jammed document on page 81. 3 Close the operation panel. · Press down on both front corners of the panel to make sure it clicks into place.

27 2. Sending Faxes Adjust the resolution and/or contrast settings as explained in Resolution and Contrast as explained on page 28, and then dial the receiving machine as explained on page 30. Adjusting the Resolution and Contrast Adjusting the Resolution and Contrast If desired, you can adjust the resolution and contrast before sending a document. The default resolution setting is STANDARD and the default contrast setting is AUTO. You must adjust the settings each time you don't want to use the default settings. Note: The resolution and contrast settings are only effective for sending a document. They are not effective for receiving a document. Resolution settings STANDARD Use STANDARD for ordinary documents. This setting gives you the fastest and most economical transmission. Use FINE for documents containing small letters or fine drawings.

Use SUPER FINE for documents containing very small letters or very fine drawings. Use HALF TONE for photographs and illustrations. The original will be reproduced in 64 shades of gray. FINE SUPER FINE HALF TONE Contrast settings AUTO DARK Use AUTO for normal documents. Use DARK for faint documents. 28 Adjusting the Resolution and Contrast 1 Load the document(s). the resolution and contrast can be adjusted. 2 Press one or more times until the Display: desired resolution and contrast settings appear in the display.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

<http://yourpdfguides.com/dref/1290424>

STANDARD FINE :AUTO :AUTO · The first time you move through the list of resolution settings, the contrast setting AUTO will appear next to each resolution setting. The second time you move through the list, the contrast setting DARK will appear.

SUPER FINE :AUTO HALF TONE STANDARD :AUTO :DARK HALF TONE :DARK Note: In order to transmit in SUPER FINE resolution, the receiving fax machine must also have that resolution. If it doesn't, your machine will automatically step down to the next best available setting. 29 2. Sending Faxes · The document must be loaded before Sending a Fax by Normal Dialling Sending a Fax by Normal Dialling With Normal Dialling, you pick up the handset (or press pressing the number keys.) and dial by If a person answers, you can talk with them through the handset before sending the fax. (If you pressed , you must pick up the handset to talk.) Normal Dialling allows you to listen to the line and make sure the other fax machine is responding. 1 Load the document(s). · If desired, press to set the resolution and/or contrast. READY TO SEND 2 Pick up the handset or press Listen for the dial tone. · or 3 ABC DEF Dial the number of the receiving machine by pressing the number keys. 1 GHI JKL 2 MNO 3 6 WXYZ 4 PQRS TUV 5 8 0 7 9 4 Wait for the connection. Depending on the setting of the receiving machine, you will either hear a fax tone or the other person will answer. · If the other party answers, ask them to press their Start key (if you pressed , pick up the handset to speak with them). This causes the receiving machine to issue a fax tone. 30 Sending a Fax by Automatic Dialling 5 When you hear the fax tone, press used it. · Replace the handset if you Sending a Fax by Automatic Dialling You can dial a fax or telephone number by simply pressing a Rapid Key, or by pressing and entering a two-digit number. To use Automatic Dialling, you must first store the full fax or telephone number in your fax machine When you store a fax or telephone number, you select a two-digit Speed Dial number for it.

40 Speed Dial numbers are available. Speed Dial numbers 01 through 05 are for Rapid Key (one-touch) Dialling. Speed Dial numbers 06 through 40 are for dialling with the SPEED key. 0 6 Rapid Keys A B C D E 31 2. Sending Faxes · When transmission is completed, the fax will beep once. Sending a Fax by Automatic Dialling Storing fax and phone numbers for automatic dialling 1 2 3 4 Press once and 3 once. Display: ENTRY MODE Press once. FAX/TEL # MODE Press 1 to select SET. Enter a two-digit Speed Dial number by pressing the number keys (01 to 05 for Rapid Key Dialling, 06 to 40 for Speed Dialling). 0 1 (Example) 5 Enter the fax or voice number by pressing the number keys. Up to 32 digits can be entered. (Note: A space cannot be entered.) · To clear a mistake, press . · If a pause is required between any of the digits to access a special service or an outside line, press . The pause appears as a hyphen (two seconds per pause). Several pauses can be entered in a row. 6 Press . 32 Sending a Fax by Automatic Dialling 7 Enter a name by pressing number keys for each letter as shown in the chart below. Up to 10 characters can be entered. (If you do not wish to enter a name, go directly to Step 8.) Example: SHARP = 77777 444 22 7777 SPACE = A= B= C= D= E= F= G= H= I= J= K= L= M= N= O= P= Q= R= S= T= U= V= W= X= Y= Z= 77 To enter two letters in succession that require the same key, press entering the first letter. after To change case, press or)(. To enter one of the following symbols, press repeatedly: . / ! " # \$ % & ' () + , - . : ; < = > ? @ [¥] ^ _ ' { | } (Note: Characters particular to the selected display language will appear at the end of the symbol list.) 8 9 Press . Return to Step 4 to store another number, or press date and time display. to return to the Making changes To make changes in a number previously stored, repeat the programming procedure. Select the Rapid Key or Speed Dial number for which you want to make changes in Step 4, and then change the number and/or name when they appear in the display in Steps 5 and 7. Note: The fax machine uses a lithium battery to keep automatic dialling numbers and other programmed information in memory when the power is turned off. Battery power is consumed primarily when the power is off.

With the power kept continuously off, the life of the battery is about 5 years. If the battery dies, have your dealer or retailer replace it. Do not try to replace it yourself. 33 2. Sending Faxes Sending a Fax by Automatic Dialling Clearing auto-dial numbers If you need to clear a number, follow these steps: Display: 1 2 3 4 5 6 Press once and 3 once. ENTRY MODE Press once. Press 2 to select CLEAR. Enter the Speed Dial number that you want to clear by pressing the number keys. Press . Return to Step 4 to clear another number, or press date and time display. to return to the Chain Dialling for area and access codes You can also store an area code or access code in a Rapid Key or Speed Dial number. To use this number to dial, see Chain Dialling in Chapter 5, Making Telephone Calls. Note: An area code or access code stored in a Rapid Key or Speed Dial number can only be used if the handset is lifted or the dialling. is pressed before 34 Sending a Fax by Automatic Dialling Sending a fax by Rapid Key Dialling If the number you want to dial has been stored for Automatic Dialling as a Speed Dial number from 01 to 05, you can dial it by pressing the corresponding Rapid Key. 1 If you are sending a fax, load the document(s). · If desired, press to set the resolution and/or contrast. READY TO SEND 2 Press the Rapid Key for the desired Speed Dial number as follows: Speed Dial 01: Rapid Key A Speed Dial 02: Rapid Key B Speed Dial 03: Rapid Key C Speed Dial 04: Rapid Key D Speed Dial 05: Rapid Key E Example: To dial Speed Dial number 01, press Rapid Key A. · The name of the receiving party will appear in the display. If no name was stored, the fax number will appear. (If the name or number is incorrect, press .) · The document will be automatically transmitted once the connection is established. · Rapid Keys A to E can be used to make phone calls even when the Key Lock function is activated. For this reason, it is recommended that you store emergency phone numbers in these keys. 35 2. Sending Faxes Sending a Fax by Automatic Dialling Sending a fax by Speed Dialling Speed Dialling can be used to dial any number that has been stored for Automatic Dialling. 1 Load the document(s).



[You're reading an excerpt. Click here to read official SHARP UX-53/73 user guide](http://yourpdfguides.com/dref/1290424)
<http://yourpdfguides.com/dref/1290424>

· If desired, press to set the resolution and/or contrast. **READY TO SEND 2** Press and then enter the Speed Dial number by pressing the numeric keys. · To enter numbers 1 through 9, first enter 0 and then the number. 0 8 (Example) .

3 Check the display. If the name or number shown is correct, press (If not, press and then repeat Step 2.) 36 Sending a Fax by Automatic Dialling Sending a fax by Direct Keypad Dialling You can also enter a full number with the number keys and then press to begin dialling. You can use this method to dial a full number when you don't need to speak to the other party before faxing. 1 Load the document(s). · If desired, press to set the resolution and/or contrast. **READY TO SEND 2** Enter the number of the receiving machine by pressing the number keys. · If a pause is required between any of the digits to access a special service or an outside line, press . The pause will appear as a hyphen (two seconds per pause). Several pauses can be entered in a row.

3 Check the display. If the number of the receiving machine shown is correct, press . · If the number is not correct, press to backspace and clear one digit at a time, and then re-enter the correct digit(s). 37 2. Sending Faxes Searching for an auto-dial number If you don't remember the Rapid Key or Speed Dial number in which you have programmed a particular fax number, you can search for the number by following the steps below.

Once you have found the number, you can dial and transmit the loaded document by simply pressing . 1 Load the document(s). · If desired, press to set the resolution and/or contrast. **READY TO SEND 2 3** Press and then 1. Enter the first letter of the stored name by pressing the appropriate number key (the key below the marked letter) one or more times until the letter appears in the display.

If the name begins with a special character or number, press 1. · If you don't remember the first letter, go to Step 4 (you will scroll through the list from the beginning). · If a name wasn't stored for the number, press 0. This will cause numbers, not names, to appear when you scroll. 4 5 Press or to scroll through the names (numbers if you pressed 0). Stop when the desired name appears in the display. Press . The document will be automatically transmitted once the connection is established. 38 Sending a Fax by Automatic Dialling Using the REDIAL key You can press press to redial the last number dialed. To send a document, when you hear the fax tone after the connection is made.

Note . that the speaker is automatically activated when you press Automatic redialling If you use automatic dialling (including Direct Keypad Dialling) to send a fax and the line is busy, the fax machine will automatically redial the number. The fax machine will make 2 redial attempts at an interval of 5 minutes.

To stop automatic redialling, press . 39 2. Sending Faxes 3. Receiving Faxes Using TEL/FAX Mode To select TEL/FAX mode, press , 1 , and 3 . 10-MAY 10:35 T/F When the reception mode is set to TEL/FAX, your fax machine automatically answers all calls on two rings. After answering, your fax monitors the line for about five seconds to see if a fax tone is being sent. If your fax machine detects a fax tone (this means that the call is an automatically dialled fax), it will automatically begin reception of the incoming document.

If your fax machine doesn't detect a fax tone (this means that the call is a voice call or manually dialled fax), it will make a ringing sound (called pseudo ringing) for 30 seconds to alert you to answer. If you don't answer within this time, your fax will send a fax tone to the other machine to allow the calling party to send a fax manually if they desire. Note: Only the fax will alert you to voice calls or manually dialled faxes by pseudo ringing. An extension phone connected to the same line will not ring after the connection has been established. 40 Using A.

M. Mode Using A.M. Mode To select A.M.

mode, press , 1 , and 4 . 10-MAY 10:35 Using FAX Mode To select FAX mode, press , 1 , and 2 . 10-MAY 10:35 FAX When the reception mode is set to FAX, the fax machine will automatically answer all calls on two rings and receive incoming faxes. 2 rings Fax reception If you pick up the handset before the machine answers, you can talk to the other party and/or receive a fax as explained in Using TEL Mode on page 43. 41 3. Receiving Faxes In A.M. mode, your fax will automatically receive voice and fax messages if you have connected an answering machine to the fax machine. See Chapter 6 for more details. Using FAX Mode Changing the number of rings If desired, you can change the number of rings on which the fax machine answers incoming calls in FAX and TEL/FAX mode.

Any number from 2 to 5 can be selected. 1 2 3 Display: Press once and 4 once. **OPTION SETTING** Press once. **NUMBER OF RINGS** Enter the desired number of rings (any number from 2 to 5). Example: 3 rings 3 4 Press to return to the date and time display. 42 Using TEL Mode Using TEL Mode When the reception mode is set to TEL, you must answer all calls by picking up the fax machine's handset or an extension phone connected to the same line. To select TEL mode, press , 1 , and 1. 10-MAY 10:35 TEL Answering with the fax's handset 1 When the fax machine rings, pick up the handset. 2 If you hear a fax tone, wait until the display shows **RECEIVING** and then replace the handset. Beep **RECEIVING** Note: If you have set the Fax Signal Receive setting (page 45) to **NO**, press to begin reception.

3 If the other party first speaks with you and then wants to send a fax, press after speaking. (Press before the sender presses their Start key.) **RECEIVING** · When **RECEIVING** appears in the display, hang up. 43 3. Receiving Faxes Using TEL Mode Answering on an extension phone 1 Answer the extension phone when it rings.

2 If you hear a soft fax tone, wait until your fax responds (the extension phone will go dead), then hang up. Beep Phone goes dead 3 If the fax doesn't respond, or if the other party first talks to you and then twice on the extension 5 once and phone (only on a tone dial phone). This signals the fax to begin reception.

Hang up. wants to send a fax, press . The above step is necessary if you have set the Fax Signal Receive setting (page 45) to **NO**.

· Your fax will not accept the signal to begin reception (5**) if a document is loaded in its feeder. 44 Optional Reception Settings Optional Reception Settings Fax Signal Receive Your fax will automatically begin reception if you hear a soft fax tone after answering a call on your fax or an extension phone.



[You're reading an excerpt. Click here to read official SHARP](#)

[UX-53/73 user guide](#)

<http://yourpdfguides.com/dref/1290424>