



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP UX-P710/A760. You'll find the answers to all your questions on the SHARP UX-P710/A760 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SHARP UX-P710/A760**  
**User guide SHARP UX-P710/A760**  
**Operating instructions SHARP UX-P710/A760**  
**Instructions for use SHARP UX-P710/A760**  
**Instruction manual SHARP UX-P710/A760**

**SHARP.**

MODEL  
**UX-P710**  
**UX-A760**  
**FACSIMILE**  
OPERATION MANUAL



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)  
<http://yourpdfguides.com/dref/1290404>

### Manual abstract:

@@@ Modem speed Transmission time\* Compatibility Compression scheme 14,400 bps with auto fallback to lower speeds. Less than 70 dBA (measured according to EN ISO 7779) standby: 1. 5 W (only when CID and fax remote reception are set to NO) Maximum: 90 W 5 - 35°C 30 - 85% RH Width: 296 mm Depth: 180 mm Height: 86 mm Approx. As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. the performance specification figures indicated are nominal values of production units.

There may be some deviations from these values in individual units. Important: This machine is not designed for use on a line which has call waiting, call forwarding, or certain other special services offered by your telephone company (errors may occur during transmission and reception of faxes). This machine is not compatible with digital telephone systems. Do not disassemble this machine or attempt any procedures not described in this manual. refer all servicing to qualified service personnel.

Do not install or use the machine near water, or when you are wet. For example, do not use the machine near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool. Do not spill any liquids on the machine. Unplug the machine from the power outlet and telephone socket and consult a qualified service representative if any of the following situations occur: - Liquid has been spilled into the machine or the machine has been exposed to rain or water. Do not allow anything to rest on the power cord, and do not install the machine where people may walk on the power cord.

This machine must only be connected to a 220-230 V AC, 50 Hz, earthed outlet. connecting it to any other kind of outlet will damage the machine. Never insert objects of any kind into slots or openings on the machine. This could create a risk of fire or electric shock. If an object falls into the machine that you cannot remove, unplug the machine and consult a qualified service representative.

Do not place this machine on an unstable cart, stand or table. The machine could be seriously damaged if it falls. Never install telephone wiring during a lightning storm. Never install telephone sockets in wet locations unless the socket is specifically designed for wet locations. Never touch bare telephone wires or terminals unless the telephone line has been disconnected at the network interface. Use caution when installing or modifying telephone lines. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. Do not use a telephone to report a gas leak in the vicinity of the leak. The power outlet must be installed near the equipment and must be easily accessible.

The machine does not have a power on/off switch, so the power is turned on and off by simply plugging in or unplugging the power cord. Note: The above illustration shows the operation panel of the UX-A760. 1 Display: This displays messages to help you operate the machine. 2 Function key: Press this key followed by the arrow keys to select special functions and settings. 7 Rapid Keys: Numbers stored in the phonebook can be assigned to these keys for one-touch dialing (p. 3 Arrow keys: Use to scroll through and select settings, and to search for numbers in the phonebook (p. 12 COPY/HELP key: When a document is in the feeder, press to make a copy of the document (p. 39). At any other time, press to print out the Help List, a quick reference guide to the operation the machine. 6 R key: If you are on a Flash-type PBX, use this key to dial out (page 19).

15 REPEAT key: Press while listening to a message to repeat it (UX-A760 only). 17 SPEAKER key: Press before dialing to listen to the line and fax tones through the speaker when faxing (Normal Dialling, p. It cannot be used for speaking. 18 HOLD key (UX-A760) HOLD/DELETE key (UX-P710): Press during a call to put the call on hold. On the UX-P710, this key is also used to delete various data from the machine.

When speaking through the handset, you can press to allow a third person to (To turn off the speaker, press the key again. Note that the speaker cannot be used for speaking; it is only for listening. To avoid feedback (a loud howling sound), be sure to turn off the speaker (press once again) before you replace the handset. When the display prompts you to enter a name or other text, press the number keys for each letter as shown below. Note: To enter a number in a name, press F and then press the desired number.

To switch back to letter entry mode, press F again. ("ABC" appears at the right of the display when letter entry mode is selected, and "123" appears when number entry mode is selected. To enter two letters in succession that require the same key, press Entering the first letter to move the cursor to the right. To backspace and clear a mistake, press To enter a lower case letter, continue pressing the key for the letter until the Lower case letter appears. Note: When is pressed repeatedly, national characters may also appear after the above symbols. This depends on the language that is selected (see page 16). National characters are not available for all languages. Plug the power cord into a 220-230 V, Points to keep in mind when setting up The power outlet must be installed Near the equipment and must be easily accessible. Do not place the machine near Keep dust away from the machine. Keep the area around the machine Surge protectors for the power and telephone lines.

Surge protectors can be purchased at most telephone specialty stores. About condensation If the machine is moved from a cold to a warm place, condensation may form on the scanning glass, preventing proper document scanning. To remove the condensation, turn on the power and wait approximately two hours before using the machine. Perform steps 1 to 2 and 8 to 10 of Replacing the imaging film below to check the film and make sure it is taut. If [FILM END] appears If [FILM END] appears in the display for longer than 10 seconds, open the machine (see Steps 1 and 2 of Replacing the imaging film below) and check the film. If the film has completely wound onto the front spool, replace the film. Replacement film When replacing the imaging film, use the following imaging film: SHARP UX-71CR (one roll) or SHARP UX-72CR (two rolls) Follow the steps below to replace the imaging film. Note: Before replacing the imaging film, remove any paper from the paper tray and push in the tray extension. 4 Remove the two gears from the 3 Remove the used roll from the Make sure the gears fit into the slots in the ends of the rolls. 7 Insert the new roll of film into the print compartment: a.

Fit the right ends of the spools onto the pins. Continue to turn the gear until the label is no longer visible. Place the left ends so that the shafts of the gears fit into the holders. Marks on both sides of the cover to make sure it clicks into place.



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)

<http://yourpdfguides.com/dref/1290404>

Approximately 10 sheets of A4-size paper (80 g/m<sup>2</sup>) can be loaded in the paper tray (at room temperature).

If paper remains in the tray, take it Out and combine it into a single stack with the new paper. 1 If the paper tray is closed, open it. Paper may result in poor print quality. Do not use paper that has already 3 Fan the paper, and then tap the Note: If paper is left in the tray a long time, it will become curled. Curled paper will not feed properly and may cause a paper jam.

When not using the machine: When not using the machine, keep the paper tray closed. Entering your fax number Enter your fax number in the machine. Your entered fax number will be 2 Enter a two-digit number for the day To backspace and clear a mistake, (To clear your number, press twice and go to Step 5. 3 Enter your fax number with the To backspace and clear a mistake, 5 Enter a two-digit number for the hour The machine has the following modes for receiving incoming faxes: FAX mode: Select this mode when you only want to receive faxes on your line. Faxes can also be received; however, all calls must first be answered by picking up the machine's handset or an extension phone connected to the same line. TEL/FAX (T/F) mode: This mode is convenient for receiving both faxes and voice calls. The machine answers all calls on a preset number of rings. If the machine detects that a call is a voice call (including a manually dialed fax), it will make a special ringing sound to alert you to answer. ( ) mode (UX-A760 only): Select this mode when you go out and want the machine's answering system to answer all calls. Voice messages will be recorded, and fax messages will be received automatically.

(To clear your name, press twice and go to Step 5. Number keys for each letter as shown in the chart on page 7. To backspace and clear a mistake, To set the reception mode, make sure a document is not loaded in the feeder, and then press until the Again to turn off the The ringer will ring once at the 2 If you selected "OFF OK? The machine normally sounds a beep each time you press a key on the operation panel. This confirms that the key has been correctly pressed. If desired, you can turn off the beep sound. In other countries, you can try changing the setting if you encounter difficulty with the default setting. If the machine is connected to a PBX and the PBX uses the "Flash" method to connect to an outside line, you must select the appropriate Flash Select setting depending on whether your PBX line is a normal telephone line or a high-speed line. (SHORT TIME) if your PBX line is a normal telephone line. Press (LONG TIME) if your PBX line is a high-speed line. This setting is used to change the language used in the display, reports and lists.

Smaller than the minimum size, carbon backed, easily smudged, or have a slick, coated surface should be photocopied, and the copy loaded in the feeder. The sheets will feed automatically starting from the bottom sheet. The maximum scanning width is 205 mm, and the top and bottom 5 mm of a document cannot be scanned. Maximum number of sheets, place the additional sheets gently in the feeder just before the last sheet is scanned. Do not force the sheets in, as this may cause double-feeding or jamming.

The scanner cannot recognise yellow, Greenish yellow, or light blue ink. For large or thick sheets that must be Loaded one at a time, insert each sheet into the feeder as the previous sheet is being scanned. Document must be dry before scanning. The top edge going in first, and insert it all the way into the feeder. You can adjust the resolution and contrast before sending a document.

Adjust the settings each time you Don't want to use the default settings. Note: The resolution and contrast settings are only effective for sending; not for receiving. Does not feed out, open the cover and remove the document (see Clearing a jammed document on page 57). SUPER FINE Use SUPER FINE for documents containing very small letters or very fine drawings. Jammed document without opening the cover may damage the feeder mechanism. With Normal Dialling, you pick up the handset (or press ) and dial by If a person answers, you can talk with Them through the handset before sending the fax. (If you pressed , you must pick up the handset to talk. The line and make sure the other fax machine is responding. The first time you move through the List of resolution settings, the contrast setting AUTO will appear next to each resolution setting. The second time you move through the list, the contrast setting DARK will appear.

Note: In order to transmit in SUPER FINE resolution, the receiving machine must also have that resolution. If not, your machine will automatically step down to FINE. Are dialing out, press The connection to the outside line, and then dial the number. On the setting of the receiving machine, you will either hear a fax tone or the other person will answer. If the other person answers, ask Them to press their Start key (if you pressed , pick up the handset You can store fax and phone numbers in the machine's phonebook for automatic dialling. up to 100 numbers can be stored. Follow the steps below to store a fax or phone number. Other party by pressing number keys for each letter as shown in the chart on page 7. To backspace and clear a mistake, Several pauses can betion of pseudo ringing in Tel/Fax mode. Means that the call is an automatically dialed fax), it will automatically receive the fax.

Desired duration: 15 seconds 30 seconds 60 seconds 120 seconds If your machine doesn't detect a fax Tone (this means that the call is a voice call or manually dialed fax), it will make a special ringing sound (called "pseudo ringing") for 15 seconds to alert you to pick up the machine's handset. If you don't answer within this time, the machine will send a fax tone to the other machine to allow the calling party to send a fax manually. Note: Only the machine will make the special ringing sound. Another phone connected to the same line will not ring after the machine initially answers the call. In FAX mode, the machine automatically answers all calls on two rings and receives incoming faxes.

In TEL mode, you must answer all calls (even faxes) by picking up the machine's handset or an extension phone connected to the same line. Important: If a document is loaded in the machine's feeder, remove it before performing either procedure below. If you pick up a phone connected to The same line before the machine answers, you can talk to the other party and receive a fax as explained in Using TEL Mode on page 27. To change the number of rings on which the machine answers calls in TEL/FAX mode and FAX mode, follow the steps below. Any number from 2 to 5 can be selected.

1 When the machine rings, pick up 2 If you hear a fax tone, wait until the Display shows [RECEIVING] and then replace the handset. 2 Enter the desired number of rings (This is necessary if you have set the Fax Signal Receive setting to NO (page 29).



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)  
<http://yourpdfguides.com/dref/1290404>

3 If the other party first speaks with You and then wants to send a fax, press (Press before the sender presses their Start key. Answering a call on a phone connected to the same line Note: To ensure correct operation of this feature, the Fax Remote Reception setting must be set to YES (see page 28). Putting a call on hold To put the other party on hold during a phone call, press ( on the 2 If you hear a soft fax tone, wait until The machine responds (the phone will go dead), then hang up. When this is done, they cannot hear you. You can put the handset back in the cradle without breaking the connection. When you are ready to speak with the other party again, pick up the handset. If you did not put the handset back in the cradle, press again to resume The other party first talks to you and then wants to send a fax, press once and twice on the phone (only on a tone dial phone). (You can also start fax reception by setting down the phone without hanging up, walking over to the machine, and pressing If you want ensure that the machine is always able to start fax reception when you press , , on an extension phone, set this function to YES (this keeps the machine from entering sleep mode).

Step 3 is necessary if you have set (YES) to turn on fax remote reception (disable sleep mode). If desired, you can use a number other than 5 to activate fax reception from an extension telephone. You can select any number from 0 to 9. The machine is initially set to automatically reduce the size of received faxes to fit the size of the printing paper. This ensures that the edges of a fax are not cut off. If desired, you can turn this function off and have received documents printed at full size. If a document is too long to fit on the Printing paper, the remainder will be printed on a second page. In this case, the cut-off point may occur in the middle of a line. The machine will automatically begin reception if you hear a soft fax tone after answering a call on the machine or an extension phone connected to the same line. If you prefer to turn off automatic reception, follow the steps below.

Possible if the received document is too large, contains too many fine graphics or images, or is sent at high resolution. In this case, the remainder of the document will be printed on a second page. The machine is set to initially receive faxes to memory and then automatically print them out. This allows reception to take place even if there is no paper in the paper tray, or when a problem occurs that prevents printing such as no imaging film or a paper jam.

Received faxes are held in memory until paper is loaded in the tray or the printing problem is resolved.

After you load paper or otherwise resolve the problem, press faxes. If you have an answering system (in a phone or other device) connected to the same line as the machine and you want to receive both faxes and voice messages while you are out, follow these steps. When there is no paper in the tray and A fax has been received to memory, [ADD PAPER & ]/[PRESS START KEY] will appear. Received faxes are automatically Cleared from memory after they are printed out. System's greeting is no longer than 20 seconds, and insert several seconds of silence at the beginning of the greeting.

(This will allow the machine to clearly detect fax tones when a fax is being sent. Reception will not be possible (see "Memory capacity" on page 2 for the number of pages that can be held in memory). 3 When you go out, make sure the Memory may become full before reception is completed ([MEMORY IS FULL] will appear). In this case, change the Fax Receive setting to "PAPER" (see page 31), and ask the sender to send the fax again. Automatically answer calls; only the answering system should answer. If you prefer that faxes not be received to memory, follow the steps below to change the Fax Receive setting to "PAPER". Erasing received faxes from memory When received faxes are held in memory due to a printing problem, you can erase the faxes from memory without printing them out. However, there is no concern that fax reception will be prevented by the memory being full. When "PAPER" is selected, make Sure there is paper in the paper tray. Checking how much memory is currently in use To check the percentage of memory currently in use, press F , .

(MEMORY) to receive faxes to memory before printing them out. Press to have received faxes printed without receiving them to memory. The built-in answering system allows you to receive both voice messages and faxes while you are out. If you need to change it, repeat the recording procedure. When no faxes are in memory, a Maximum of 15 minutes of voice messages of any type, or a maximum of 30 messages total, can be recorded. To use the answering system, you must first record an outgoing message (OGM). This is the greeting that the machine plays after answering a call to inform callers that they can leave a message or send a fax. @@@@After the outgoing message plays, callers can leave a message. And speak into the handset to record a message. 60 seconds long.

While recording, the display will show the time left to record. @@@@Note: Playback will stop if you receive a call or lift the handset. @@The conversation will play back when is pressed. @@@@If desired, you can change this setting to 15, 30, or 60 seconds. @@@@ 1 The caller calls your machine from a tone dial telephone.

@@@ this code has been set to "009" at the factory. If you wish to change the code, follow the steps below. important! @@@ 3 Your machine will make a special ringing sound. Pick up the handset to answer the call. @@@ If you do not want to use the Toll Saver function, you can turn it off by following the steps below.

In this case, the machine will answer after the number of rings set with the Number of Rings setting (see page 27). To listen your messages from an outside phone, you must enter a 3-digit remote code. the remote code has been set to "001" at the factory. If you wish to use a different number, follow the steps below. When you call the machine to listen to your messages, it will answer after two rings if it has received at least one message, or after four rings if it has not received any messages. This allows you to save money on telephone charges, particularly if you are calling long distance. If the machine does not answer after two rings, you can simply hang up before it answers, saving yourself the cost of that call. You will hear a short beep, and the . if the machine is in FAX mode , press Immediately after the machine answers (before you hear the fax tone). Note: If the machine's memory is full, the machine will answer after 20 rings and the outgoing message will not play. In this case, start from Step 2.

2 Enter your remote code number and You will hear a series of beeps equal To the number of messages recorded, or one long beep if four or more messages have been received. The machine will then play back the messages.



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)

<http://yourpdfguides.com/dref/1290404>

When all messages have been played back, you will hear a long beep. Perform other operations: You can Enter any of the remote commands described in the following section. You will hear a short beep. You can either hang up, or perform any of the remote operations described in the following section. Twice if you want the machine to resume normal operation immediately (in some cases, the machine may not accept new calls for one or two minutes after you hang up unless you press twice). You can do any of the following: If you enter an incorrect command, or Pause too long while entering a command, you will hear 4 beeps. After stopping playback, you can enter any of the remote commands described in the following section. If you wait more than 10 seconds Before entering a command, or enter your remote code number incorrectly twice in a row, you will be disconnected.

Are currently listening to, press . 4 When you have finished listening to Your messages, you can do any of the following: After listening to your messages, you can enter any of the following commands. Note: The following commands cannot be entered while messages are being played. If you do not want to wait until playback ends to enter a command, first stop playback by pressing , and then enter the command. 2 When you hear a short beep, speak Into the telephone to record the memo.

3 When you are finished, press , , Caution: If you select TEL mode, you will not be able to enter any other remote commands. 2 When you hear a short beep, speak Into the telephone to record the new message. After 60 seconds, you will hear a beep, and the new message will play back. To stop recording before 60 seconds elapses, press , . The machine can be used as a convenience copier.

Follow the steps below to make a copy. 2 When you are ready to begin Important: To use this function, you must subscribe to a Caller ID service from your phone company. The machine may not be compatible with some Caller ID services. If you subscribe to a Caller ID service, you can have the machine show the name and number of the caller when you receive a call. Follow the steps below to activate this function. One of the following messages will appear while the machine rings if caller information is not available. nO SERVICE No caller information was received. Make sure that your service has been activated. OUT OF AREA The call was made from an area which does not have Caller ID service, or the service is not compatible with your service. In this case, only the phone number will appear when you receive a call.

The machine keeps a log of the most recent 20 calls and faxes you have received (the Caller ID list). You can view the list and automatically dial a number from the list. The list is only available if you have After you have received 20 calls, 3 To dial a number, scroll until the . Twice, and then Deleting a single call: To delete a single call from the list, display the call and UX-P710: Press UX-A760: Press Deleting all calls: To delete all calls from the list, return to the date and time display (press ), and then follow these steps: If you have Caller ID service and have turned on the Caller ID function, you can have the machine automatically block all calls for which Caller ID information is not provided at the caller's request (calls for which "PRIVATE CALL" appears). Blocking calls from specified numbers (Anti Junk numbers) If you have Caller ID service and have turned on the Caller ID function, you can have the machine automatically block calls from numbers that you specify. To use this function, enter the fax/phone numbers that you want to block. When this function is turned on, the Machine will break the connection as soon as it receives Caller ID information when a "PRIVATE CALL" is received. Note: Enter numbers only; hyphens and spaces cannot be entered. If you have Caller ID service and have turned on the Caller ID function, you can have the machine automatically block all calls for which "OUT OF AREA" appears. When this function is turned on, the Machine will break the connection as soon as it receives Caller ID information when an "OUT OF AREA" call is received. To print a list of your currently stored Anti Junk numbers, follow the steps below.

When the Key Lock function is activated, all operations are prohibited except for the following: Phone calls can be made and received using an extension phone. To use the Key Lock function, you must first store a 4-digit Key Lock code as explained below, and then activate the function as explained on the following page. Phone calls can be made by picking up the handset and dialling using one of the Rapid Keys (page 25). Dialling using the phonebook and by pressing the number keys is prohibited. It is recommended that you store emergency phone numbers in the Rapid Keys.

A fax can be sent using a Rapid Key if The handset is picked up before the Rapid Key is pressed. When you hear the fax tone from the receiving machine, press If you wish to change the code, you must first delete the old code (see page 45) and then store the new code. Transmission (if a person answers, ask them to press their Start key). Can be pressed to adjust the resolution before dialling, and can be pressed to cancel an operation. 3 Enter the 4-digit number that you Wish to use for the Key Lock code.

Faxes can be received automatically Faxes can be received manually by pressing Important: Be sure to keep a record Of the Key Lock code, as it must be entered to deactivate the Key Lock function and allow normal operation of the machine. In the event that you forget the code and have kept no record, contact SHARP customer service. When the call is Answered on the handset (page 27), or by pressing , , on an extension phone when the call is answered on an extension phone (page 30). Note: Before activating the Key Lock function, be sure to set up any Rapid Key numbers (page 21) that you wish to use after the Key Lock function is activated. To activate the Key Lock function, hold down F until [KEY LOCK] appears in the display. Signal an incoming call if the ringer has been turned off (page 15). Follow the steps below when you wish to release the Key Lock and operate the machine normally. 1 Hold down F until [CANCEL KEY Only the operations described on page 44 can be performed. The following messages may also appear: In the event that you need to clear the Key Lock code, follow the steps below. When there is no paper in the tray and a fax has been received to memory.

Release the Key Lock as explained below, add paper, and press to print the fax. If you need to change the code, first Clear it and then store a new code. A line error occurs during fax reception or transmission (see page 50). Turned on (page 40), Caller ID information will appear when a call is received. 3 Pull the left side of the white roller Up out of its holder. With a clean cloth or swab. The roller forward so that it points straight up. Clean, try moistening the cloth with isopropyl alcohol or denatured alcohol.



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)  
<http://yourpdfguides.com/dref/1290404>



Take care that no alcohol gets on the rollers. 5 Replace the left end of the white Of its holder during cleaning, reinsert the right end into its holder before replacing the left end.

Clean the print head frequently to ensure optimum printing performance. Note: Remove any paper from the paper tray and push in the tray extension before cleaning the print head. 4 Wipe the print head and rollers with a dry cloth. (If the head is difficult to clean, try moistening the cloth with water. Do not use benzene, thinner, or 3 Remove the imaging film from the Machine has just received a large number of documents.

If this is the case, allow the print head to cool prior to cleaning. Fit the right ends of the spools onto the pins. Place the left ends so that the shafts of the gears fit into the holders. Wipe the external parts and surface of the machine with a dry cloth. These solvents may damage or discolor the machine.

Marks on both sides of the cover to make sure it clicks into place. About the lithium battery: The machine uses a lithium battery to retain settings and information programmed in the machine when the power is turned off. Battery power is consumed primarily when the power is off. With the power kept continuously off, the life of the battery is about 5 years. (XX is a number used by service technicians to diagnose problems) Solution A line error occurs when your machine cannot communicate correctly with another fax machine. The error is usually due to a problem on the phone line. LINE socket to the wall socket should be no longer than two meters. Make sure there are no modem devices sharing the same telephone line. Check with the other party to make sure their fax machine is functioning properly. Have your telephone line checked for line noise.

Try connecting the machine to a different phone line. Make sure that the telephone line is properly connected to both the TEL. Make sure that the telephone line is good. Make sure the power cord is properly plugged into a power outlet. The power is on, but no transmission takes place. If the receiving machine is in manual mode with no attendant, reception will not be possible. Dial the receiving machine manually and make sure that it is responding (you should hear a fax tone). A distorted image is received at the other end. Make sure that the document for transmission is placed face down in the feeder. Noise on the telephone line may cause distortion.

Make a copy of the document on your machine. If the copy is also distorted, your machine may need service. Fan the paper before inserting it in the paper tray, and not feed correctly, or multitap the edges against a flat surface to even the stack. feeds occur. (When adding paper, if paper still remains in the tray, take it out and combine it with the new paper.

) - Make sure the paper is inserted straight in the tray. Do not insert more than 10 sheets of paper in the tray. Make sure that the telephone line is properly connected to both the TEL. The printing paper comes out blank when you try to receive a document. Make a copy or print a report to confirm the printing ability of your machine.

It is important to select a paper that is appropriate for the thermal transfer printer in your fax. We recommend using laser quality paper that has a very smooth finish. Copier paper will work, but it sometimes tends to yield a lighter print quality. Ask the other party to send higher contrast documents. If the contrast is still too low, your fax machine may need service. Make a copy or print a report to check your machine's printing ability. Noise on the telephone line may cause distortion. Have the other party try sending the document again. Clean the print head as explained on page 47. Make a copy or print a report on your machine.

If the copy or report is also distorted, your machine may need service. Received images are distorted. The quality of copies is poor and/or dark vertical lines appear. A received document or copy prints out in strips. Make sure the operation panel is completely closed (press down on both sides of the panel). Add paper to the paper tray and press fax (see page 30). Make sure the power cord is properly plugged into a power outlet. The machine does not respond when you press any of its keys. If a beep sound is not made when you press the keys, unplug the power cord and then plug it in again several seconds later. Check the size and weight of the document (see Transmittable Documents on page 17).

If a message is longer than the display, the parts of the message will alternate. If you have turned on the Caller ID function, see page 40 for display messages related to Caller ID. ADD PAPER & / PRESS START KEY (alternating messages) This appears when a fax has been received to memory (page 30) because there is no paper in the tray. If this message alternates with another message indicating a problem, fix the problem and try the fax operation again. If no other message appears, press to clear the message and then try the fax operation again.

if the error persists, see Line Error on page 50. Open the operation panel and make sure that the print compartment cover is completely closed (press down on the marks on each side of the cover). Document jams will occur if you load more than 10 pages at once or load documents that are too thick (see page 17).

This appears when the Key Lock function is activated and a fax has been received to memory because there is no paper in the paper tray. Release the Key Lock (see page 45), add paper, and then press the fax.

This may occur during fax reception if too much data is received before the pages can be printed out. If faxes have been received to memory because printing is not possible (an additional message will indicate the problem), resolve the problem so that printing can continue (see page 30). The indicated number of messages are recorded in the answering system. This appears if you attempt to search for an auto-dial number when none have been stored. The key has been pressed and the fax machine is waiting for you to dial. the print head has overheated. Operation can be continued after it cools. The print head has failed and requires service. The machine is preparing to or printing out a document from memory. A document has been loaded and the fax machine is waiting for you to begin faxing or copying.

If the film has completely wound onto the front spool, replace the film. Otherwise, make sure the film is loaded correctly and remove any slack. This appears if you attempt to send a fax by automatic dialling and the line is busy or the receiving fax machine does not answer. 5 seconds (1 second on, 1 second off) 35 seconds (0. If the original document doesn't feed properly during transmission or copying, or [DOCUMENT JAMMED] appears in the display, first try pressing F then . If the document doesn't feed out, remove it as explained below. Important: Do not try to remove a jammed document without releasing it as explained below. The roller forward so that it points straight up.



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)  
<http://yourpdfguides.com/dref/1290404>

3 Pull the left side of the white roller Up out of its holder. 5 Replace the left end of the white Of its holder while you were removing the document, re-insert the right end into its holder before replacing the left end.

Note: Remove any paper from the paper tray and push in the tray extension before removing jammed printing paper. Marks on both sides of the cover to make sure it clicks into place. Place your document (up to 10 pages) face down in the document feeder. Wait for the reception tone (if a person answers, ask them to press their Start key). Voice calls are signalled by a special ringing sound.

Mode: (UX-A760 only) Select this mode when you go out to receive both voice messages and faxes. Enter a name by pressing number keys. Require the same key, press after entering the first letter. Reception mode, 14, 30 Answering system, using with machine (UX-P710 only), 30 Audible signals, 56 Auto-dial numbers Deleting, 22 Editing, 22 Storing, 20 Using, 23 Key Tone setting, 16 Key lock function, 44 Language Select setting, 16 Letters, entering, 7 Line error, 50 Loading paper, 12 Loading the document, 17 Paper jams, clearing, 57 Paper, loading, 12 Phone calls, 25 Phonebook Deleting numbers, 22 Editing numbers, 22 Storing numbers, 20 Using to dial, 23, 25 Power cord, 8 Pseudo ring duration, 26 Scanning glass, cleaning, 46 Sender's fax number, entering, 13 Sender's name, entering, 14 Speaker volume, 15 Storing fax and phone numbers, 20 The card below is provided as a quick guide to remote operation. Cut it out and carry it with you when you go out.

@@@0 Play new messages only . Numrul pe care dorii s-l atribuii unei taste rapide. @@@@Aceast functie permite apelanilor selectai, care utilizeaz un telefon cu ton, s sar peste mesajul de întâmpinare al robotul telefonic i s determine aparatul s emit un sunet special, care s v atenioneze c suntei apelat. DEPASIRE Apelul a fost efectuat dintr zon în care nu exist ZONA un serviciu de recunoatere a identitii apelanului sau serviciul nu este compatibil cu al dvs. Dac avei serviciul de recunoatere a identitii apelanului i ai activat funcia, putei programa aparatul s blocheze automat toate apelurile pentru care nu sunt prevzute informaii despre apellant, la cerina acestuia (apelurile la care apare "APEL PRIVAT"). Not: Înainte de a activa funcia de blocare a tastelor, setai numerele pentru taste rapide (pagina 21) pe care dorii s le utilizai dup activarea funciei de blocare a tastelor. Asigura-i-v c nu exist dispozitive modem care sunt cuplate la aceeai linie telefonic. Asigura-i-v c faxul spre care transmitei are hârtie. Dac aparatul spre care transmitei este pe modul manual i nu are cine s preia faxul, recepionarea va fi imposibil. Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin! Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge\*. In some countries\* your local retailer may also take back your old product free of charge if you purchase a similar new one. \*) Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling. In other Countries outside the EU If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www. If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling.

Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take back of your used products. In other Countries outside the EU If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal. attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste.

There is a separate collection system for these products. .



[You're reading an excerpt. Click here to read official SHARP UX-P710/A760 user guide](http://yourpdfguides.com/dref/1290404)

<http://yourpdfguides.com/dref/1290404>