



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP XE-A217W. You'll find the answers to all your questions on the SHARP XE-A217W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SHARP XE-A217W User guide SHARP XE-A217W Operating instructions SHARP XE-A217W Instructions for use SHARP XE-A217W Instruction manual SHARP XE-A217W


**IMPORTANT**

- Do not water wash accessories and subject the products to the water as the case may be.
- Do not use the register on a station not subject to direct sunlight or extreme temperature changes, high humidity or washing vapor.
- Exposure to such conditions could cause damage to the cabinet and the electronic components.
- Do not operate the register with wet hands.
- The water could leak into the interior of the register and cause component failure.
- After cleaning the register, case dry well off. There are serious risks on electrical operation.
- The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- The register plug into any standard wall outlet (official power) voltage.
- Other electrical devices on the same electrical circuit could cause the register to malfunction.
- For electrical appliances that provide high level of electromagnetic interference, refer to the manual relating to the register. When installing the register, please observe the following:
  - Electrically compatible for common earth to power outlets, keeping the correct of Paralleling.
- USE OF EXPLOSION-PROOF BATTERY IS REPLACED BY AN INCORRECT TYPE:**
  - DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
  - Do not use a battery or other electrical system (except battery) as being in the register.
  - Never use old batteries of different types.
  - Never use old batteries and recharge.
  - Never reuse dead batteries in the battery compartment.
  - Dispose of batteries in accordance with the local regulations for long periods.
  - Should a battery leak, clean up the battery compartment immediately, being care to:
    - avoiding the contact between the battery and your skin.
  - For battery disposal, please refer to the appropriate local authority.
  - For complete disposal/instruction, please refer to the manual.

**SHARP**  
ELECTRONIC CASH REGISTER

**XE-A207W/XE-A207B  
XE-A217W/XE-A217B**

Basic User Manual



Product Code: TUNGG2017W022

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A207W/XE-A207B, XE-A217W/XE-A217B.

Please read this manual carefully before operating your machine in order to gain full understanding of functions and features.

Please keep this manual for future reference. It will help you if you encounter any operational problems.


For a free download of the FULL DETAILED INSTRUCTION MANUAL, please go to the following website URL:

- The United Kingdom and Republic of Ireland: [www.sharp.co.uk](http://www.sharp.co.uk)
- France: [www.sharp.fr](http://www.sharp.fr)
- Germany: [www.sharp.de](http://www.sharp.de)


**For Easy Set-up,  
See "Getting Started"**

**Part Names and Functions**


Front view (XE-A217W/XE-A217B)




Front view (XE-A207W/XE-A207B)



Rear view (XE-A217W/XE-A217B)




Customer display (Pop-up type)



**Selecting an Operating Mode**

Press any [MODE] key. The following mode appears:




Use the arrow keys to select the mode.

Press [ENTER] to confirm the mode selection.

**Keyboard Layout**


For XE-A207W/XE-A207B



The following are used as accessories for best programming:

- The key to toggle the automatic correction mode and the normal mode alternation mode.
- The key to set up the register with the correct date and time.
- The key to set up the register with the correct number.
- The key to set up the register with the correct number.

For XE-A217W/XE-A217B



The following are used as accessories for best programming:

- The key to toggle the automatic correction mode and the normal mode alternation mode.
- The key to set up the register with the correct date and time.
- The key to set up the register with the correct number.
- The key to set up the register with the correct number.

[You're reading an excerpt. Click here to read official SHARP XE-A217W user guide](http://yourpdfguides.com/dref/3978589)  
<http://yourpdfguides.com/dref/3978589>

**Manual abstract:**

@@@ - Never operate the register with wet hands. @@ - When cleaning the register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner. @@ - The register plugs into any standard wall outlet (official (nominal) voltage). Other electrical devices on the same electrical circuit could cause the register to malfunction. For protection against data loss, please install two alkaline batteries LR6 ("AA" size) after initializing the register. When handling the batteries, please observe the following: Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the register. **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.** Be sure that the positive (+) and negative (-) poles of each battery are facing in the proper direction for installation.

Never mix batteries of different types. Never mix old batteries and new ones. Never leave dead batteries in the battery compartment. Remove the batteries if you do not plan to use the cash register for long periods. Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.

For battery disposal, follow the corresponding law in your country. For complete electrical disconnection, disconnect the main plug. Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very ELECTRONIC CASH REGISTER XE-A207W/XE-A207B XE-A217W/XE-A217B Basic User Manual MODEL Printed in Korea T(TINSE2607BHZZ) Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XEA207W/XE-A207B, XE-A217W/XE-A217B. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference.

It will help you if you encounter any operational problems. For a free download of the FULL DETAILED INSTRUCTION MANUAL, please go to the following related URL: - The United Kingdom and Republic of Ireland: [www.sharp-pos.co.uk](http://www.sharp-pos.co.uk) - Netherlands and Belgium and Luxemburg: [www.sharp.nl](http://www.sharp.nl) - Sweden: [www.sharp.se](http://www.sharp.se) For Easy Set-up, See "Getting Started" Part Names and Functions Front view (XE-A207W/XE-A207B) Printer cover Keyboard Selecting an Operating Mode Press the displayed. key.

The following mode screen is Keyboard Layout For XE-A207W/XE-A207B Drawer Drawer lock Operator Display SD card slot Use one of the following ways: Move the cursor to the desired option by using the or key, and press the A key. @@ You can select the following function. @@ OFF mode: This mode locks all operations of the register. When you select this mode, the window will disappear. Pressing any key turns the register ON. @@ X1/Z1 mode: This mode is used to take various daily total reports (X1/Z1 reports). X2/Z2 mode: This mode is used to take various weekly or monthly reports (X2/Z2 reports). PGM mode: This mode is used to program various items. SD CARD mode: This mode allows you to save and load the data of your register to and from the SD card. The following are used as control keys for text programming: W : This key toggles the double-size character mode and the normal-size character mode.

You can enter an upper-case letter by using this key. ; : Moves the cursor. D : Deletes a character or figure in the cursor position. The following are used as control keys for text programming: W : This key toggles the double-size character mode and the normal-size character mode. ; : You can enter an upper-case letter by using this key.

; : Moves the cursor. D : Deletes a character or figure in the cursor position. For XE-A217W/XE-A217B Front view (XE-A217W/XE-A217B) Printer cover Keyboard Drawer Drawer lock Operator Display SD card slot Rear view (XE-A207W/XE-A207B) (XE-A217W/XE-A217B) Customer display D RS232C When you want to enter the REG mode, simply press the key. Customer display (Pop-up type) Getting Started Initializing the Cash Register For your cash register to operate properly, you must initialize it before programming for the first time. Follow this procedure.

1. Remove the register from its packing carton. 2. Insert the plug into the AC outlet. IMPORTANT: This operation must be performed without batteries loaded. Never install the batteries into the cash register before initializing it. Before you start operating the cash register, you must first initialize it, then install two new alkaline batteries LR6 ("AA" size) on the register. @@ Select the mode to set the pass code using the F or I keys. 2. Enter the code in 4 digits using the numeric keys.

3. Press the A key to set the mode pass code. @@@@ 1. Remove the printer cover. 3. @@ Enter the code in 4 digits using the numeric keys. 2. Press the A key to set the manager pass code. @@@@ 2. Press the numeric key for the number of your language.

After selecting the language, the register is initialized. @@@@ Enter the text using the character keys to print on the receipt. 2. Press the A key to set the receipt logo. 4.

Feed the end of the paper along with the paper positioning guides as per the diagram. 5. While holding down the paper, slowly close the print roller arm. 2. Open the battery cover next to the paper roll cradle.

3. Install two new LR6 ("AA" size) batteries. Text entry method For XE-A207W/XE-A207B There are two ways for programming text; using character keys on the keyboard or entering character codes with numeric keys on the keyboard. You can enter characters according to the small figures printed in the lower position of the numeric keys. For the layout, please refer to "keyboard Layout" for XE-A207W/XE-A207B. For example to enter "A", press the 8 key. To enter "B", press the 8 key twice. For XE-A217W/XE-A217B There are two ways for programming text; using character keys (on the programming key sheet) or entering character codes with numeric keys on the keyboard. To enter numerals, letters and symbols, simply press the corresponding character on the programming key sheet. For the Layout, please refer to "FULL DETAILED INSTRUCTION MANUAL".

Setting the Date and Time 1. Display the "DATE/TIME setting". 2. Enter the date in 6 digits. For example, enter "050611" for June 5, 2011. 3. Press the key to select the time setting. 4. Enter the time in 4 digits. For example, enter "1430" for 2:30pm.

5. Press the A key to set the date and time. Paper positioning guides D 4. Close the battery cover. 5.

Replace the printer cover. Setting the Tax Rate 1. Select the tax number (1 to 4) to set the tax rate. 2. Enter the tax rate in 7 digits (leading zeros may be omitted).

For example, press the "7" key to set 7%. 3. To set the second and later tax rates, press the I key. 4. Press the A key to set the tax rate.



**[You're reading an excerpt. Click here to read official SHARP XE-A217W user guide](http://yourpdfguides.com/dref/3978589)**

**<http://yourpdfguides.com/dref/3978589>**

For details, refer to "FULL DETAILED INSTRUCTION MANUAL". If the print roller arm is not securely locked, printing is not done right. If this problem occurs, open the arm, and close the arm as instructed above. 6. Cut off the excess paper and replace the printer cover.

**Installing a Paper Roll** Always install the paper roll even when you set the register for not printing receipt in REG mode. 1. Remove the printer cover. 2. Lift up the print roller arm. Print roller arm 7. Press the key to make sure the paper end comes out of the printer cover and clean paper appears. If the paper end does not come out, open the printer cover, and pass the paper end between the paper cutter and the paper guide of the printer cover, and replace the printer cover. Calculation of VAT rate VAT is included in the entered price, and the tax amount is calculated when tendered according to the VAT rate programmed.

By default, VAT1 is assigned to all items.

The HELP function instructs you how to assign VAT to department. After pressing the "7" key, press the HELP key to access the HELP. D · For details of the receipt logo, refer to "FULL DETAILED INSTRUCTION MANUAL". · The HELP function instructs you how to set the logo message. @@For details, refer to "FULL DETAILED INSTRUCTION MANUAL".

1. Enter the clerk code and press the L key. By default, the clerk 1 is signed on. 2. Enter the unit price and press the appropriate department key.

For details, refer to the item below. 3. Repeat step 2 for all department items. 4. When the item entry is completed, press the z key. The total amount due is displayed. 5. @@6. Press the A key. The change due is displayed, and the drawer is opened.

7. @@@@If you use the programmed unit price, press the department key only. @@@@When using a programmed unit price Unit price (max. @@@@When using a programmed unit price Dept. @@@@Press the ~ key immediately after pressing the z key. @@If you use the prograETAILED INSTRUCTION MANUAL". @@· The drawer does not open when you take X/Z reports. @@@@For details, refer to "FULL DETAILED INSTRUCTION MANUAL". @@1. Press the 2.

@@3. @@4. Select the appropriate report title. 5. Press the A key.

[To take a Z1 or Z2 report:] key. 1. Press the 2. @@3. @@4.

Select the appropriate report title. 5. @@1. Press the key. 2. @@3. Select "DEPT. @@@@Open the battery cover and remove the old batteries.

**Installing the Fixing Angle Bracket** To prevent the register from moving when the drawer opens, the fixing angle bracket is supplied with the register. By attaching the bracket to the table where the register is installed, you can hook the register on this bracket and secure the register to its position.

**Drawer Handling Locking the Drawer** Develop the habit of locking the drawer when not using the register for any extended period of time. To lock: Insert the key into the drawer lock and turn it 90 degrees counter-clockwise. To unlock: Insert the key into the drawer lock and turn it 90 degrees clockwise. How to install the fixing angle bracket 4. Install two ease read below before calling for service. The display does not illuminate. · Is power supplied to the electric outlet? · Is the power cord plug out or loosely connected to the electric outlet? · Is the terminal in screen-save mode? The display is illuminated, but the whole machine refuses entries. · Is a clerk code assigned to the register? · Is the register in the REG mode? No receipt is issued. · · · Is the receipt paper roll properly installed? Is there a paper jam? Is the receipt function in the "OFF" status? @@· Are the print head/sensor/roller clean? @@@@ 12 lines/second Printing capacity: 30 digits Other functions: · Receipt (ON-OFF) function · Compression print for an electronic journal Logo: Graphic logo printing: size: 130(H) x 360(W)pixel Area of black must be less than 35% of all area. Logo message printing: Logo message for the receipt (max. 30 characters x 6 lines) Paper Roll: Width: 57.5±0.5 mm Max. diam.:80 mm Quality: High quality (0.

06 to 0.08 mm thickness) Cash drawer: 5 slots for bills and 8 for coin denominations Accessories: Basic User Manual: 1 copy Standard key sheet: 1 (placed under keyboard cover) for XE-A217W/XEA217B only Programming key sheet: 1(placed under keyboard cover) for XE-A217W/XEA217B only Paper roll: 1 roll Drawer lock key: 2 Fixing angle bracket: 1 Battery caution label: 1 As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows. The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The apparatus must be protected by a 3A fuse in the mains plug or distribution board.

**CAUTION: DO NOT CONNECT THE LIVE (BROWN) WIRE OR THE NEUTRAL (BLUE) WIRE TO THE EARTH TERMINAL OF YOUR 3-PIN MAINS PLUG.** Noise level LpA: 60,7 dB(A-weighted) Measured according to EN ISO 7779:2001 [Maximum value if the cash drawer springs open LpA: 80,4 dB(A-weighted)] Authorized representative responsible for the European Union Community Market. Autoriserter Repräsentant in der Europäischen Union. Représentant autorisé pour le marché de la communauté européenne. Representante autorizado responsable para el Mercado Común de la Unión Europea. Auktoriserad representant ansvarig för EU marknaden. Geautoriseerde vertegenwoordiger in de Europese Unie. .



[You're reading an excerpt. Click here to read official SHARP XE-A217W user guide](http://yourpdfguides.com/dref/3978589)

<http://yourpdfguides.com/dref/3978589>