



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS EUROSET 2020. You'll find the answers to all your questions on the SIEMENS EUROSET 2020 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS EUROSET 2020 User guide SIEMENS EUROSET 2020 Operating instructions SIEMENS EUROSET 2020 Instructions for use SIEMENS EUROSET 2020 Instruction manual SIEMENS EUROSET 2020

Gigaset

<p>EN Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p>DE Sehr geehrte Kunden, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p>FR Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p>IT Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p>NL Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitleggen of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p>ES Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p>PT Scares clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Qualquer declaração por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.</p> <p>Issued by Gigaset Communications GmbH Schillerstrasse 66, D-40599 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG</p>	<p>DA Kære Kunde, Gigaset Communications GmbH er retlig arvtager af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p>FI Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivomme teille paljon iloa Gigaset-laitteestanne.</p> <p>SV Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p>NO Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-gjeførelsen i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningen er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p>EL Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης, ερμηνεύονται ως δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλό άνοιξιμό με τη μονάδα της Gigaset.</p> <p>HR Poštovani korisniče, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će vam zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p>SL Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p> <p>© Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com</p>
--	--



[You're reading an excerpt. Click here to read official SIEMENS EUROSET 2020 user guide](http://yourpdfguides.com/dref/2232433)
<http://yourpdfguides.com/dref/2232433>

Manual abstract:

Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset. Keys Set key Shift key L Mute key 2 Enquiry call key Display in save mode Redial key Call list key Special function Shift key pressed Microphone off Enquiry call key pressed Call waiting on Call forwarding immediately Call forwarding on no reply Call forwarding on busy Message received Anonymous call on Battery exhausted Call (with calling line identification restriction) Ready Cursor Pause Memory empty Call number In tone dialling mode: $\hat{\Delta}$ $\hat{\Delta}$ key pressed key pressed Attach the handset cord and connect the phone cord to the wall socket. A caller's number will only appear on the display and calls will only be saved in the call list if batteries have been inserted. If no batteries have been inserted, or if the battery charge is critically low, the \ symbol appears on the display when the handset is lifted. Before inserting or removing the batteries, disconnect the telephone cord onne ele from the wall socket or from the phone itself. Slide off the battery compartment cover from the edge of the base of the housing (see diagram S. 5 V Type AA alkaline) into the battery compartment in accordance with the polarity symbols (+/-). Enter the correct time in hours <hh> and minutes <mm> (24-hour clock mode).

Press the set key, then replace the handset.

Your telephone is now ready to use. For your safety and protection, the phone should not be used in bathrooms or shower rooms (wet rooms). The phone is not splash-proof. The phone should only be disposed of in an environmentally friendly manner. @@@@ Press the repertory key under which the repertory call number is to be stored.

Any call number already saved will appear on the display. If the memory for this repertory key is empty, the display shows a 4 symbol Enter the call number to be stored (max. 32 digits). Or not ook unc on: Save with notebook function Press the redial key. the last call number dialled is displayed.

Or lis Save from the call list (if this service is available) Press the call list key until the required call number appears on the display. You can store dial pauses of 3 seconds by pressing / (a pause should not occur as the first element in a call number). After the 20th digit, any subsequent digits are shifted from right to left on the display. Any digits following the 20th digit are shifted from right to left on the display. Dial pauses of 3 seconds can be inserted by pressing / (a pause should not occur as the first element in a call number). Llin t Dialling with the repertory keys If necessary, press a (for a 2nd level repertory key). The last number dialled is automatically saved (max. Hearing and being heard Ile Setting while the telephone is in standby: Press the set key, then replace the handset. Ile Setting while the phone is ringing: Press one of the keys 0 . There are 3 settings for the frequency (speed) of tone ringing (factory setting: 3).

Press the set key, then replace the handset. 10 different melodies can be set for tone ringing (factory setting: melody 0). Press the set key, then replace the handset. You can deactivate the handset microphone so that the called party can no longer hear you. " < Press the set key, then replace the handset. Lock, length of call display The telephone can be locked to prevent unauthorised use. The telephone can be locked to prevent dialling. Press the set key, then replace the handset. When the phone is locked, the display shows 4444 Is the telephone locked, you can temporarily deactivate the telephone lock (for one call) with the procedur >"". Your telephone can display the approximate length of a call.

If call display is on, then the time display starts 8 seconds after the last digit is dialled. Or 0 = call display off, Press the set key, then replace the handset. If you are using your telephone on a private PABX, you may need to store one or more exchange codes. @@@@ Press the set key, then replace the handset.

Press the set key, then replace the handset.

@ @ g. @@@@ To do this, press the recall key 2. The next step depends on your PABX. @@@@ Press the set key, then replace the handset.

@@@@@ g.

@@@@@ Up to 20 digits of a call number can be shown on the display. Longer call numbers are cut off from the start of the number (e. A new entry is not created if a subscriber calls more than once. @@@@@@ Lis llin num Viewing a call list and dialling a call number If the call list contains entries that have not yet been viewed, then the call number of the last caller flashes on the display. Follow the procedure below to activate the call list, scroll through the entries, view additional information for a call and call back directly: The call number of the most recent call appears on the display. The associated place number "1" appears on the left next to the call number. $\hat{\Delta}$ Scroll through call list oug Press the call list key repeatedly. The call number of the previous call is displayed in each case. The date and time of the call displayed appear, along with the corresponding number of calls. $\hat{\Delta}$ Return to call list (call number display) Press the shift key again.

$\hat{\Delta}$ Dial a call number num Enter the place number of the required call number. Delete all entries at the same time Press the set key, then , then press the set key again. All entries are deleted and the call list is closed. $\hat{\Delta}$ Delete an individual entry ual If necessary, use k to scroll through the list to find the place number of the required entry. Press the set key, then enter the place number of the entry, then press the set key again. The operator may use your phone to inform you if one or more newly received messages for you have been stored. This information from the operator is indicated on the Euroset 2020 display by means of a J symbol. You can now dial the relevant call number in order to check the stored caller messages. The J symbol disappears when there are no new messages for you. Various services/functions on public telephone systems (which may require a special order/application) can be selected using defined key combinations available from your operator.

The necessary key combinations can be saved on repertory keys as normal call numbers and can be "dialled" and deactivated in the usual way. Note: If you activate the symbol display and store functions on the 2nd level of the th repertory keys, then you can use the "function keys" to link the activation and deactivation of various services with the appearance and disappearance of certain symbols on the display. @@" < Press the set key, then replace the handset.

@@@@@ g. A call number for a call forwarding destination or a time for a reminder call), then the shift key a must be stored at this point.

This key causes the cursor to flash for the variable part to be entered when the service is subsequently activated.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/2232433)

[EUROSET 2020 user guide](http://yourpdfguides.com/dref/2232433)

<http://yourpdfguides.com/dref/2232433>

Press the set key, then replace the handset. The following is an example of how to use repertory keys as "function keys". If the symbol display is activated and "call forwarding" is selected, for example, then the relevant symbol in the display appears when the service is activated and disappears when it is deactivated.

The key sequence for activating the "call forwarding immediately" function on your operator's system may consist of three parts: Activate function Call forwarding destination Call number of the call forwarding destination The following options are available to you: 1. Dial the complete key sequence each time using the keys. 2. Store the key sequence on repertory keys (a) as an entire function together with the call number of a fixed call num fo.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[EUROSET 2020 user guide](#)

<http://yourpdfguides.com/dref/2232433>