



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS EUROSET 5020. You'll find the answers to all your questions on the SIEMENS EUROSET 5020 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS EUROSET 5020  
User guide SIEMENS EUROSET 5020  
Operating instructions SIEMENS EUROSET 5020  
Instructions for use SIEMENS EUROSET 5020  
Instruction manual SIEMENS EUROSET 5020

## Gigaset

<p><b>EN</b> Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p><b>DE</b> Sehr geehrte Kunden, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p><b>FR</b> Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p><b>IT</b> Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p><b>NL</b> Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p><b>ES</b> Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p><b>PT</b> Scații clienți, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.</p>	<p><b>DA</b> Kære Kunde, Gigaset Communications GmbH er retlig arvtager af Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p><b>FI</b> Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivomme teille paljon iloa Gigaset-laitteestanne.</p> <p><b>SV</b> Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p><b>NO</b> Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som i sin tur videreførte Gigaset-gjeførligheten i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p><b>EL</b> Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), η οποία έχει αναλάβει την εταιρική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC που υπάρχουν στα εγχειρίδια χρήσης, θεωρούνται δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλό άνοιγμα με τη μονάδα σας Gigaset.</p> <p><b>HR</b> Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p><b>SL</b> Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC). Al naslednje dejavnosti znamsko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p>
--	--

Issued by  
Gigaset Communications GmbH  
Schäferstrasse 66, D-40599 Bocholt  
Gigaset Communications GmbH is a trademark  
licensee of Siemens AG

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications  
reserved.  
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS EUROSET 5020 user guide](http://yourpdfguides.com/dref/1252382)  
<http://yourpdfguides.com/dref/1252382>

### Manual abstract:

Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset. Telephone locked When trying to connect: telephone locked 09 Phone number With tone dialling: n \* key pressed # key pressed With additional services from public network providers: New call in calls list (Flashing) A new message has arrived ã Call waiting TM Call forwarding immediately ~ Call forwarding on no reply -- Call forwarding when busy s Anonymous call on 5 4 3 2 When installing, connecting and operating the telephone, always observe the following precautions: Only use the plugs and leads supplied. Only connect the connecting lead to the socket/jack provided for that purpose. only connect approved accessories. Arrange the connecting lead where it will not cause accidents. position the telephone on a non-slip surface. For your safety and protection, the telephone must not be used in bath or shower rooms (wet locations). The telephone is not splash proof. Never expose the telephone to sources of heat, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours. Never open up the telephone yourself. Do not touch the plug contact with pointed or metallic objects. Do not carry the telephone by the leads. If you give your Euroset 5020 to someone else, make sure you also give them the user guide.

1 Repertory keys 2 Redial key 3 Recall key 4 Mute key 5 Shift key 6 Quiet key 7 Loudspeaker key (handsfree) 8 Loud key 9 Set key 10 Up key 11 Down key 12 OK key (dial number displayed) In setting mode Shift key pressed Ready for use Microphone off Baby Call (direct call) number set Entry mark when setting (e. g. Volume) Recall key pressed Pause No memory content GB All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/ EC. @@@@ @@@@ Otherwise, telephone communication could be impaired.

Do not install the telephone in dusty areas as this can shorten the service life of the telephone. To clean, wipe with a moist or antistatic cloth only, never with a dry cloth (risk of electrostatic charging and discharge) or harsh cleaning agent. Furniture lacquer and polish can be damaged by contact with parts of the unit (e. @@@@ @@@@ Then your telephone is ready to use. After 2 seconds the number is dialled. Lift the handset if you want to talk via the handset. Any digits after the 20th digit are moved from right to left in the display. The Last number redial key ; can be used to insert pauses when dialling, starting from the 2nd digit. Select phone number from the calls list (if available): see 6. O Bc Dial number (you can delete wrongly entered digits with A and then enter the correct With this telephone you can also make calls (handsfree mode) or settings without lifting the handset.

The best distance from the microphone for speaking is about 50 cm. Activating during a call via the handset L + a With the Loudspeaker key pressed replace the handset. Activating before dialling the number L Before dialling: hold down the Loudspeaker key until you can hear the dialling tone. Different telephone settings must be completed with the Set key ? so that they are available permanently. In order to cancel without saving, e. g. After an incorrect entry, replace the handset instead of pressing ? Saving with notebook function You can also save phone numbers during a conversation with the notebook function.

Deactivating handsfree talking Lift the handset during the call. You can save up to 20 phone numbers (or even functions, see page 7) on both levels of the repertory keys. ) : Press the repertory key under which you want to save the repertory number.

A number that has already been saved is shown in the display. If the memory for this repertory key is empty, z appears in the display o Enter the number to be saved (up to 32 digits). or . Saving from the calls list (if service is available) A. @@ or .

Saving from the redial list: ; Press the last number redial key. a. @@@@ @@@@ The last 5 numbers dialled (up to 32 digits) are saved automatically. @@ the last number dialled is displayed. @@@@ press OK or L key.

After 2 seconds the number is dialled. Lift the handset if you want to talk via the handset. Dialling from the last number redial list Dialling using the repertory keys c Lift handset. (If necessary, press = for a 2nd level repertory key). press OK or L key. After 2 seconds the number is dialled. Lift the handset if you want to talk via the handset. The volume of the ringer can be set to one of 4 levels and can also be deactivated completely (default setting: level 4). To adjust when the telephone is idle: ? To adjust while the telephone is ringing: Press H. While in handsfree mode, you can set the volume to one of 7 levels and save it (default setting: 1).

The frequency (speed) of the ringer can be set to one of three levels (default setting: level 3). Baby call (direct call) number setting If a phone number is set for the Baby Call function, it is dialled automatically when the telephone is locked (s. "Activating/deactivating the telephone lock") after you lift the handset (or press the Loudspeaker key) and press any key (except ? , L ,H and I). @@ initiate function. Enter direct call number (max. @@@@ To set with the telephone is idle: ? To set while the telephone is ringing: 0. @@@@ Then the other party can no longer hear you. J During a call: Press the Mute key Activate: Press the key again. GB When the telephone is locked, you will see { in the display. @@A dialling pause is set automatically with the external line prefix.

You can save up to three external line prefixes. @@@@ press the Set key. @@@@ @@@@ During an external call, you can make a recall or divert the call. To do this, press the Recall key >. The subsequent procedure depends on your PABX.

@@@@ To do this, please refer to the operating instructions for your PABX. @@ g. @@@@ up to 99 repeated calls are displayed in the additional information. @@@@ Using functions for additional services of public telephone systems If you want to use services that are to be triggered with the Recall key, make sure beforehand that the correct flash time is set for the key. Recall key (in public telephone systems) In public telephone systems, this key is required to use certain additional services.

The appropriate flashtime for the specific country must be set before using the Recall key can be used: Belgium, Netherlands, Switzerland: 120 ms (access code 1) France, Luxemburg, Portugal, Germany, Greece: 270 ms (access code 2) other European countries: 90 ms (access code 0). If there are entries in the calls list that have you have not yet seen, flashes in the display. You can retrieve the calls list, scroll through its entries, view additional information about a call and call back directly: A Press the Down key.



[You're reading an excerpt. Click here to read official SIEMENS EUROSET 5020 user guide](http://yourpdfguides.com/dref/1252382)  
<http://yourpdfguides.com/dref/1252382>

The phone number of the most recent call appears in the display. Its position number "01" is displayed to the left of the number. @@(You can leave the calls list at any time by pressing >. ) To scroll through the calls list: A. @@@@ dial the phone number: B Press OK or L key. After 2 seconds the number is dialled. Lift the handset if you want to talk via the handset.

@@@@@@@@ up to 20 digits can be shown on the display. Longe symbol provided for it is displayed, or hidden when the service is deactivated. The key sequence for activating the function "call forwarding immediately" from your network provider consists of e. g. Three parts: Select function Forwarded call destination End of function forwarded call destination Activating call forwarding with a function key You now have the following options: You can dial the entire key sequence each time on the keypad. You can save the key sequence on Repertory keys as an entire function together with the phone number of a set forwarded call destination or only the select function and the function end. With this, you still have the option to set a forwarded call destination that may change on a case-by-case basis. GB (b) Changeable call forwarding Enter the phone number of the forwarded call destination, press the last number redial key to mark the end of the phone number entered. You may hear an announcement that the service is activated. replace the handset.

Incoming calls will be forwarded from now on to the forwarded call destination. Your telephone will not ring. @@@@ is the dialling mode set correctly (see page 5)? PABX only: No connection or incorrect connection when dialling from memory (e. g. Redial, speed dial): Program external line prefix.

The other party cannot hear you: Have you pressed the Mute key? Recall key does not work: Set appropriate flash time. The caller's phone number and the calls list are not displayed: Is the adapter connected (see page 2)? Can Calling Line Identification be used (see page 6)? Saving "Deactivate call forwarding" on a function key The call forwarding, as described in the previous example, can be deactivated again with your network provider e. You can save this key sequence on a dedicated repertory key as well. Blank insert strips for the repertory keys can be found on the Internet at <http://www.@@@@@>This device is intended for analogue phone lines in your network.

@@A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: <http://www>. To clean, wipe with a moist or antistatic cloth only, never with a dry cloth (risk of electrostatic charging and discharge) or harsh cleaning agent. Lorsque vous attribuez une fonction aux touches d'accès rapide de second niveau, sachez que l'affichage et le masquage des icônes TM, ~, --, ë et s'appliquent à des touches de second niveau bien déterminées indépendamment des numéros d'appel ou des appels de fonction enregistrés sur ces touches ! Declare, that the hereinafter mentioned product is assessed according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with Essential Requirements of the R&TTE-Directive 1999/5/EC The presumption of conformity with the essential requirements regarding Council Directive 1999/5/EC is ensured according to Art. Any unauthorized modification of th.



[You're reading an excerpt. Click here to read official SIEMENS EUROSET 5020 user guide](http://yourpdfguides.com/dref/1252382)  
<http://yourpdfguides.com/dref/1252382>