



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET 4000 COMFORT. You'll find the answers to all your questions on the SIEMENS GIGASET 4000 COMFORT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET 4000 COMFORT User guide SIEMENS GIGASET 4000 COMFORT Operating instructions SIEMENS GIGASET 4000 COMFORT Instructions for use SIEMENS GIGASET 4000 COMFORT Instruction manual SIEMENS GIGASET 4000 COMFORT

Gigaset

EN Dear Customer,
Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.
We hope you enjoy your Gigaset.

DE Sehr geehrte Kundin, sehr geehrter Kunde,
die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC über Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.
Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.

FR Chère Cliente, Cher Client,
la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.
Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.

IT Gentile cliente,
la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.

NL Geachte klant,
Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitleggen of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.
Wij wensen u veel plezier met uw Gigaset.

ES Estimado cliente,
la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.
Le deseamos que disfrute con su Gigaset.

PT Scații clienți,
Gigaset Communications GmbH é a succesoră legală a Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, prin propria sa activitate, a continuat afacerea Gigaset a Siemens AG. Orice declarații făcute de către Siemens AG sau de SHC în manualele de utilizare trebuie înțelese ca declarații ale Gigaset Communications GmbH.
Desajăm que aveți în orice moment cu o soluție Gigaset.

Issued by
Gigaset Communications GmbH
Schillerstrasse 66, D-40599 Bocholt
Gigaset Communications GmbH is a trademark
licensee of Siemens AG

DA Kære Kunde,
Gigaset Communications GmbH er retlig efterfølger af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset.

FI Arvoisa asiakkaamme,
Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.
Toivotamme teille paljon iloa Gigaset-laitteestanne.

SV Kära kund,
Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.
Vi önskar dig mycket nöje med din Gigaset.

NO Kjære kunde,
Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset forklaringer i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningen er derfor å forstå som meddelelser fra Gigaset Communications GmbH.
Vi håper du får stor glede av din Gigaset enhet.

EL Αγαπητέ πελάτη,
η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στα εγχειρίδια χρήσης, θεωρούνται δηλώσεις της Gigaset Communications GmbH.
Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.

HR Poštovani klijenice,
Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumažiti kao izjave tvrtke Gigaset Communications GmbH.
Nadamo se da će vam zadovoljstvom koristiti svoj Gigaset uređaj.

SL Spoštovani kupci!
Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priložnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.
Želimo vam veliko užitek ob uporabi naprave Gigaset.

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)
<http://yourpdfguides.com/dref/3954177>

Manual abstract:

@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset. Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset.

Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset. SCaros clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset. DA Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoii puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaisissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset. Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet. , , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Zelimo vam veliko užitkov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved.

Subject to availability. Rights of modifications reserved. www.gigaset.com CS Vázení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále pejala segment produkt Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je teba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.

Vážený zákazník, Spoločnos Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápa ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní. Stimante client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul su, a continuat activitatea companiei Gigaset a Siemens AG.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)
<http://yourpdfguides.com/dref/3954177>

Orice afirmatii efectuate de Siemens AG sau SHC i incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperm ca produsele Gigaset s fie la în linia dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Siemens AG. , Siemens AG SHC. , Gigaset Communications GmbH.

Gigaset. Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.

PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, które mona znale w instrukcjach obsługi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktów Gigaset. Sayın Müterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunun ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmı bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), , Gigaset Siemens AG.

, Siemens AG SHC, Gigaset Communications GmbH. , Gigaset. TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved.

Subject to availability. Rights of modifications reserved. www.gigaset.com s Be inspired Operating Instructions and safety precaution ! ENGLISH Brief overview The display is protected by a plastic film. Remove the plastic film. Status LED Lights up during a call; flashes for: incoming calls new messages alarm calls, appointments, anniversaries Signal strength Talk key Accept call Dial number Handsfree key Switch from handset to handsfree talking Control key Open directory Key 1 Hold down to select answering machine/mailbox Ringer on/off Hold down Annabelle 19.

07.01 13:13 Ñ e flashes: Caution Display keys The display keys give you access to the functions shown in the display. End call and On/Off key End call Cancel function Back one menu level (press briefly) Return to idle status (hold down) On/off in idle status (hold down) = flat e 1/3 U full V 2/3 Charging status { INT 1 4 GHI 7 PQRS 2ABC 5JKL 8TUV 0 3 DEF 6 MNO 9 WXYZ Keypad protection on/off Hold down Microphone Caller list/ message list Sel Services key Open network access list Control key and display keys Display keys Control key INT The right display key lets you perform functions, some of which can also be controlled with the control key. The Control is shown as follows in the operating instructions: F / G (left/right) E / D (up/down) Press down on the side with the arrow filled in. 2 Important menus © Text Message* Select Services Add.

Features Calendar/Clock Sound Settings Call Charges H/Set Settings Base Settings Voice Mail Handset Volume OK D New Entry Anne Barbara Chris : Display Number Delete Entry Copy Entry Delete List Send List Available Memory © Ringer Settings Advisory Tones Display symbols The following symbols appear above the display keys depending on the situation: Display keys Meaning phone is idle. During a call, it activates a menu for the particular situation.

Ends and saves an entry. from right to left. " Menu key: Activates the main menu when the Z Selects and confirms the menu function.

W Delete key (Backspace): Deletes characters { Automatic redial key: Opens a list of the last five numbers dialled. I Displayed if SMS*, answering machine, mail service box or caller list is active Í One menu level back, cancel

. 27 Walk and Talk mode. . .

.
.
.

28 Appendix

.
.
.

. . 29 Operating on base stations in the Gigaset family . . 29 Range

.
.
.

. 30 Guarantee .

.
.
.

. . 31 Customer Care

.
.

. 32 5 Preparing the handset Delivery package Gigaset 4000 Comfort handset, two batteries, charging unit, belt clip, operating instructions.

Inserting the batteries (automatic registration) + + G G G Make sure you insert the batteries the right way round see diagram on the left. Replace the cover and push gently upwards until it clicks into place. To open press the grooved area on the cover and slide back. Before activating your handset, place it in the

Gigaset 4010/4015 Comfort base station with the display facing upwards. The handset is automatically registered; this is shown on the display (e.

g. INT1) If registration is successful you will hear a confirmation tone (rising sequence). k Ö Charging the batteries Leave the handset for approx. five hours in 5 h the base station/charging unit to charge the batteries, as they are not charged when they leave the factory. The charging status icon flashes on the

handset to indicate that the batteries are being charged: = Batt.
flat (battery symbol flashes) e Batteries 1/3 charged 6 V Batteries 2/3 charged U Batteries full See the appendix for a list of recommended batteries. G G G
Once the initial charging process is completed you can replace your handset in the base station/ charging unit after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life. The batteries heat up during charging. This is normal and not dangerous.



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET 4000 COMFORT user guide
http://yourpdfguides.com/dref/3954177](http://yourpdfguides.com/dref/3954177)

Opening the battery compartment unnecessarily may cause the wrong charging status to be displayed. Attaching the belt clip Push the belt clip onto the back of the handset until the lugs at the side click into place. Switching the handset on and off a To switch the handset on and off, hold down the end call key until you hear a confirmation beep (rising tone sequence). The handset is switched on as soon as you insert the batteries and place the handset in the base station/charging unit.

7 Setting the date and time You need to set the date and time so that the time that messages and calls are received is shown correctly. © Open the menu. [Select and confirm. [Select and confirm. D Calendar/Clock D Date/Time The current setting is shown. Enter the date Enter the day/month/year. In this case 20.05.2001. e.

g.YPĀĀP] Go down one line. Enter the time Enter hours and minutes. In this case 19:05 e. g.

] Ā P Ā Go down one line. Select the display mode use the left side of the control key to select the 12-hour mode (am or pm) or the 24-hour mode (default).

Save the settings. D D Save 8 Activating/deactivating the keypad lock You can disable the handset keypad. If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.

° To activate/deactivate, hold down key . Accepting a call: Press the talk key c Changing the display language © D H/Set Settings D Language D[Open the menu. [Confirm the function. [The current language is marked with a . Select the language you want and confirm. You will find a table on the last page of this booklet. Dialling an emergency number You can dial the emergency numbers saved in the base station even if the telephone lock is activated. Please refer to the operating instructions for your base station. 9 Registering the handset To make calls with your handset, you must "introduce" it to its base station (registering) G if your handset has already been registered at a different base station (steps 1, 2 and 3) or G if you want to register the handset as a new handset at a Gigaset base station of an older Gigaset range (steps 1 and 3). Step 1: On the base station or on the base station telephone: On the base station or base telephone Hold down the key on the underside of the base station.

3010/3015 Hold down the paging-key on the base station until you hear signal tones. 3020/25 Select settings, system settings and register 3030/35 handset in the menu at the base station 4030/35 telephone and confirm with OK. Press the LED it will flash during regis3070/75 tration. 4070/75 Non-SieTo register at "GAP base stations"follow , mens base the relevant operating instructions stations (steps 2 and 3). Step 2: On the handset: © D H/Set Settings D Register H/Set D[Gigaset 4010/4015 Press the display key. [Select and confirm. [Select and confirm. Select the base station. @@Regstr.Procedure Base 1 is displayed.

Your handset is now ready for operation! @@If you make a mistake use the X key to correct individual digits. Press the talk key. @@You can cancel the dialling operation by pressing the end call key a. @@Your own handset is identified by "<". Select the handset you want and press the talk key.

or e. @@All handsets are called. @@@@Other people can listen in and join in the call. @@@@To set the volume: Press the handsfree key u once more.

Raise or lower the volume.

Save the volume level. @@@@The handsfree key flashes and open listening is activated. @@Press Off or any key if the person you called is not available. Display and select the telephone zD number. Open the menu. @@@@Open the menu. entered. @@page 20). For notes on how to enter letters and characters s. page 17.

@@@@@@@@You can also enter an anniversary in the directory, see also page 20. Open the menu. @@g. ^^ Open the directory. Enter the first letter of the name. For example for "E" press the ^ key twice or scroll with the D key. Press the talk key. c After selecting the name you can also open the menu, select Display Number , extend/change the number and dial with the talk key c. * Not available in all countries 15 Dialling with the network access list (Call-by-Call) C D© Display Number Open the network access list. Select call-by-call number and open the menu.

[Select the menu item and confirm. o or DD [Enter the telephone number of the person you want to call. c Select the telephone number in directory and confirm. Press the talk key. The telephone number is dialled.

Speed dialling from the network access list You can store 8 speed dialling numbers in the network access list. Enter a speed dialling number (29) before the name. Example: Press speed dial key 2 and then enter the network provider's name. Dialling with speed dialling e. g.

Y Hold down the key: The stored network provider's name is displayed. Enter the telephone number e. g. o or DD [c Select an entry from the directory and confirm. Press. 16 Character map Press the relevant key repeatedly or hold down: 1x 2x 3x * Other characters on this key:] Y ^ j ĉ £ ¤ ¥ ¬ « Þ ª blank a d g j m p t w a A l b e h k n q u x â c f i l o r v y / ? \ 4x 5x 6x 7x 8x 9x 10 x £ 2 3 4 5 6 s 8 z (! & \$ ä ë ï ö 7 ü 9) 0 § ¥ á é í ñ ß ú ý < + ¤ à è ì ó ù ý = - â ê î ò û æ > : ã ç ô õ *, @ ø % ; ã j*. # " , ; _ The first letter of the name is automatically written in uppercase and the rest in lowercase. To change one letter from uppercase to lowercase or vice versa press « . Control the cursor with F G E D. Delete characters with X .

Letters are always inserted to the left of the cursor. Inserting a blank before a name takes that name to the top of the directory (for example " Karla"). Sort sequence: 1. Blank 2. Digits (0-9) 3. Letters (alphabetical) 4. Other characters 17 Displaying, changing or deleting an entry D/C D View Change Open the directory/network access list. Select the entry you want. View all the information for the entry. Open the input field and make the necessary changes.

Change the number if necessary. Go to the name field and change the name. For notes on entering letters and characters s. page 17. For the directory enter an anniversary if necessary s.

page 20. Do o © Save Entry Open the menu. [Confirm the changes. or D/C D Open the directory/network access list. Select the relevant entry. Open the menu. [You will hear a confirmation tone. © DDelete Entry The entry has been deleted.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954177)

[GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)

<http://yourpdfguides.com/dref/3954177>

Copying an entry to another handset You can copy an entry to another Comfort handset. Open the directory/network D/C access list. Select the required entry. D Open the menu. © D Delete Entry D [Select the menu item and confirm. Select the internal user (receiving handset) and confirm. 18 Copying a further entry: Press.

Select the required number. D Copy Initiate the copy process. Copying the directory/network access list You can copy the entire directory/network access list to another Comfort handset. See "Copying an entry to another handset" . Transmission is interrupted: G G YES if the memory of the receiving handset is full (the last entry is displayed on the sending handset). if you receive a call. Copying of an entry is terminated. Deleting the directory/network access list D/C D Open the directory/network access list. Select the required entry. Open the menu.

[Select the menu item and © D Delete List YES confirm. Confirm delete all entries. 19 Entering anniversaries (birthdays and so on) You can store the date and time of anniversaries so you can be reminded of them. D DView Change D Change o Do D FG Open the directory. Select and display the entry. Open the input field. Move the cursor into the birthday/anniversary field. Confirm. Enter or change the date (day/ month). Scroll forward one line and enter the time.

Scroll forward one line. Choose the indicator for the alarm. Store entries. [Use the display key Delete to delete the anniversary alarm. 20 Settings Setting the alarm clock You can use your handset as an alarm clock. Activating the alarm clock If activated, the alarm clock (¼ icon) on your handset will ring every day at the time entered. With the handset idle: © D Calendar/Clock D Alarm Clock F GSelect Open the menu. [Select the menu item and confirm. [Select the menu item and D confirm. The current setting is displayed.

On . Scroll forward one line. The example here is 06.00. Scroll forward one line. Choose the ringer melody for the alarm call. Save the settings. P £P P Enter the hours/minutes. D FG Save An alarm call will not be made if room monitoring (babyphone) is activated or during automatic redialling. Deactivating the alarm clock The alarm clock is set but you do not want it to ring.

© D Calendar/Clock D Alarm Clock FG Open the menu. [Select the menu item and confirm. [Select the menu item and confirm. Select Off . Save Save the settings.

21 Turning off the alarm call An alarm call is signalled like an incoming call. Press any key to turn it off. Setting an appointment Your handset is able to remind you of one appointment. If you have set an appointment, this is indicated by the ¼ icon in the display. With the handset idle.

© D Calendar/Clock Set Appoints. Open the menu. [Select the menu item and confirm. confirm. [Select the menu item and FG Select On to activate the appointment alarm. Scroll forward one line. D Y P P & Enter the day/month. The example here is 20th May. Scroll forward one line. D P ↖ ^ P Enter the hours/minutes.

The example here is: 9.30. D Scroll forward one line. Choosing the ringer melody for FG the appointment alarm. Save the settings. Save An appointment alarm will only ring when the handset is idle. An appointment alarm is not made when room monitoring is activated or during automatic redial. Turning off the appointment alarm An appointment alarm is signalled in the same way as an incoming call; press any key to turn it off. 22 Missed appointments and anniversaries An appointment and anniversaries that have been signalled on the handset but not been accepted are saved in a list. A new missed appointment/anniversary is indicated by Appt.

. Press the right display key to display the list Events list. Then select Missed Appt. ¼ [. If you want to view your appointment again, proceed as follows: © D Calendar/Clock D Missed Dates D [Open the menu.

[Select the menu item and confirm. [Select the menu item and confirm. Select a missed appointment ¼ or anniversary , Information on this entry is displayed. Use the display key Delete to delete the appointment/ anniversary. Handset and loudspeaker volume You can set the handset volume to one of three levels, and the loudspeaker for handsfree talking to one of five levels even during a call.

Open the menu. © D Sound Settings Handset Volume [Select the submenu. [You will hear the current handset volume. FG D F G Save Set the required handsfree talking volume. Scroll forward one line. Select the required level for the handset volume and confirm. 23 Setting the ringer volume/melody You can choose from five ringer volumes, "crescendo" ring (increasing volume), ringer off and any of ten ringer melodies: © D Sound Settings D Ringer Settings FG Open the menu. [Select the menu item and confirm. [You will hear the current ringer volume and its level will be displayed. Select the ringer volume.

Scroll forward one line. Select the required ringer melody (110) and confirm. D F G Save Time control for ringer volume You can set a different ringer volume for a particular time of day. © D Sound Settings D Ringer Settings Time C. FG Open the menu. [Select the menu item and confirm. [You will hear the current ringer volume and its level will be displayed. Press. Activate/deactivate time control. Enter the period for the different ringer from 11:00 to 15:00.

Scroll forward one line and select the ringer volume Save the settings. Press. Do e. g.]JP P]cP P DF G Save Entry Save or a 24 Activating/deactivating warning and signal tones G G Key beeps: Every keystroke is confirmed.

Confirmation beeps: Confirmation beep (a rising tone sequence) when you make entries/settings and when you replace the handset in the base station. G Battery low beep: The battery must be recharged. Open the menu. © D Sound Settings D Advisory Tones D FG [Select the menu item and confirm. confirm. [Select the menu item and Select the required function. On , Off or select In Call (battery low beep in the call). Save the settings. Save Auto talk feature on/off

When this function is activated you can remove the handset from the charging unit without pressing the c key to accept a call (factory setting). © D H/Set Settings xAuto Answer Open the menu. [Select the menu item and confirm. [Activate/deactivate with [(= function on). 25 Resetting to the factory defaults The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected. © D H/Set Settings D Reset Handset YES Open the menu.

[Select the menu item and confirm. [Select the menu item and confirm.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954177)

[GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)

<http://yourpdfguides.com/dref/3954177>

Confirm. Function Handset volume Ringer volume ("ring tone" ,) Ringer melody Auto talk Battery low beep Handsfree volume Room monitor level Time control Display language Factory setting 1 5 1 On On 3 high off local Room monitoring (babyphone) You can use your handset as a baby monitor. The handset should be placed at least 1 to 2 meters away from your baby. If a certain noise level is reached (for example if your baby is crying) the handset will automatically dial the number you stored (internal or external). When the room monitor is active, incoming calls are merely displayed. 26 Setting the room monitor © D Add. Features D Room Monitor. FG Open the menu.

[Select the menu item and confirm. confirm. [Select the menu item and Select On or Off . Scroll forward one line. Open the entry field for the telephone number.

Delete an existing external number with X. Delete an existing internal number with YES (you will be asked to confirm). Open the list of internal users and select the internal number. Save the number. Open the directory.

Select an external user. Open the menu. [Confirm the setting. D Change Fo [or D D] © D Save Entry FG Go down one line. Set sensitivity to "high" or "low" . Save the setting. Save Room monitoring can be deactivated with the display key Off . You can deactivate the room monitor from an external number (from your mobile phone for example). Answer a call made from the room monitor. Deactivate with ↵.

The room monitor is now deactivated. The room monitor will no longer call. 27 Walk and Talk mode This function enables handsets (Gigaset 4000 Comfort only) to communicate free of charge outside the range of the base station. In Walk and Talk mode, handsets are not available for incoming calls.

Requirements: The handsets must have the same base settings (e.g. best base station) or they must not be registered at any base station. (Walk and Talk mode reduces the handset's talk time considerably). Activating Walk and Talk mode on the handset © D Add. Features D Walk and Talk Open the menu.

[Select the function. [Activate Walk and Talk mode. Walk and Talk mode can be deactivated with the display key Off . Using Walk and Talk mode Two handsets are in Walk and Talk mode: Calling handset: Call Press. Called handset: The call is indicated by a message on the display.

Silent Press. Press. The two handsets are connected to one another. Press. The call is ended.

c a 28 Appendix Operating on base stations in the Gigaset family Gigaset 1000/2000/3000 The following functions on your 4000 Comfort handset are not supported by base stations in this Gigaset family: G G G G Setting the time (the time is not transferred after the handset has been switched off) Changing the display language Room monitoring (cannot be switched off externally) SMS transfer (SMS-compatible base stations only)* Gigaset 4010/4015 Classic The following functions on your 4000 Comfort handset are not supported by the above-mentioned base stations: G G G Changing the display language SMS transfer* Setting authorisation stages * Not available in all countries 29 Looking after your phone Wipe the base station and handset with a damp cloth or an antistatic wipe. Never use a dry cloth as this can cause static discharge. Recommended batteries: Nickel cadmium (NiCd) Sanyo N-3U (700 mAh) Mobile Power 700 (700 mAh) Panasonic 600 DT (600 mAh) Emmerich 700 (700mAh) Nickel metal hydride (NiMH) Saft RH 6 NiMH 1300 (1300 mAh) Panasonic HHR-110 AA (1100 mAh) Panasonic Pro+ 1500 (1500 mAh) Sanyo HR-3U (1600 mAh) GP GP 130 AAHC (1300 mAh) Varta Phone Power (1300 mAh) Emmerich 1300 (1300 mAh) Always replace both batteries at the same time and only use batteries of the same type/manufacture. Operating times/charging time of the handset: Capacity (mAh) 700 1200 1600 Standby time (hours) up to 180 up to 300 up to 400 Talk time (hours) Charging time (hours) more than 10 about 5.5 more than 17 about 11 more than 23 about 14 The charge capacity of the battery reduces after a number of years. This is quite normal. Range The handset will operate away from the base station up to about 300 m outdoors and up to 50 m indoors. 30 Guarantee Scope G This equipment guarantee applies to end users ("customers"). This guarantee does not in any way affect the customer's statutory rights. G The guarantee applies to the supplied devices and all their components but not to their installation or configuration or to the services provided by the dealer.

@@@The guarantee does not cover normal wear and tear. Alternatively, we reserve the right to replace the defective device with a successor model or reimburse the original purchase price on return of the defective device. Our decision is final. Any legal claims are excluded. G Claims under the guarantee cannot be made if the defect or damage was caused by improper care or use. Improper care or use includes the following: Opening the device (this is classed as third-party intervention) Manipulating components on the printed circuit board Manipulating the software Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g. microwave, sauna, etc.).

Repairs or other work done by persons not authorised by us. Devices fitted with accessories not authorised by Siemens. G Any further claims due to damage are excluded, such as damage arising outside the device, provided this was not due to gross negligence and/ or intent on our part. G Claims under the guarantee must be made as soon as the defect is noticed. G A till receipt showing the date of purchase must be presented as proof.

Each claim under the guarantee is accepted with the express reservation that subsequent investigations confirm the validity of the claim. G Any devices or components that are replaced become our property. G The costs of materials and labour will be borne by us, but not the costs of transport, postage or freight. G We are entitled, at our discretion, to make technical changes (such as firmware updates) beyond repair or replacement in order to upgrade the device to the latest state of the art. There is no additional charge to the customer for this work.

Our decision is final. Any legal claims are excluded. G The guarantee is valid in the country of purchase. It applies only if the device is operated in the relevant geographical area in accordance with the information on the packaging and in the operating instructions. G Any further claims are excluded. Siemens is not liable in any circumstances for downtime, loss of profits, loss of data or loss of any other information. The customer alone is responsible for safeguarding such data and information. G Changes to this guarantee require prior approval by Siemens in writing.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)
<http://yourpdfguides.com/dref/3954177>

31 *Guarantee period* G The guarantee applies in countries in the EU from 1 January 2002 for a period of 24 months. G In all other countries the guarantee period shall be the relevant minimum statutory guarantee period, but no longer than 24 months.

G The guarantee period starts on the day of purchase by the customer. G A successful claim under the guarantee does not extend the guarantee period. G Work under the guarantee is handled by our Customer Care Centers. G The guarantor is Siemens Aktiengesellschaft Deutschland, Schlavenhorst 88, D-46395 Bocholt. ½ To redeem the guarantee please contact your local Customer Care Center (see back cover) Customer Care You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at: www.my-siemens.com/customercare If the device needs to be repaired, please contact one of our Customer Care Centers. Service telephone number see back cover. The CE symbol indicates that the telephone complies with the essential requirements of the R&TTE directive. The 4000 Comfort handset is approved for use in Switzerland and throughout the EU.

32 Issued by Information and Communication mobile Haidenauplatz 1 D-81667 München © Siemens AG 2002 All rights reserved. Subject to availability. Right of modification reserved. Printed in Germany. (03/2002) Siemens Aktiengesellschaft <http://www.my-siemens.com> Best.-Nr.: A31008-G4000-B002-3-PM19 A3 1 0 0 8 - G4 0 0 0 - B 0 0 2 - 3 - P M 1 9 .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 4000 COMFORT user guide](http://yourpdfguides.com/dref/3954177)
<http://yourpdfguides.com/dref/3954177>