




# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET 5005. You'll find the answers to all your questions on the SIEMENS GIGASET 5005 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET 5005**  
**User guide SIEMENS GIGASET 5005**  
**Operating instructions SIEMENS GIGASET 5005**  
**Instructions for use SIEMENS GIGASET 5005**  
**Instruction manual SIEMENS GIGASET 5005**

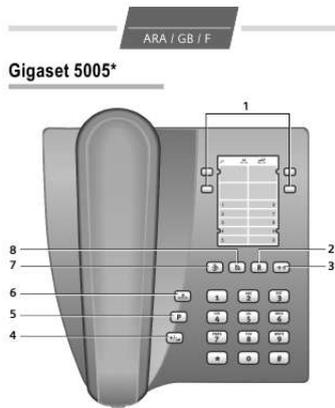

- 1 مفتاح المجموعة
- 2 مفتاح الاستدعاء
- 3 مفتاح معاودة الاتصال
- 4 مفتاح التحكم في مستوى صوت سماعة الهاتف
- 5 مفتاح إيقاف مؤقت
- 6 مفتاح الاتصال السريع
- 7 مفتاح الضبط
- 8 مفتاح كتم الصوت
- 1 Repertory keys
- 2 Recall key
- 3 Redial key
- 4 Handset volume control key
- 5 Pause key
- 6 Speed dial key
- 7 Set key
- 8 Mute key

### التوصيلات Connections Raccordement

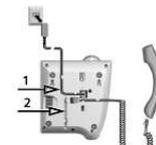

- 1 (Please insert here the arabic text)
- 2 (Please insert here the arabic text)
- 1 Table top operation
- 2 Wall mounting
- 1 Pour utilisation sur bureau
- 2 Pour montage mural

\* Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG  
تم تصنيعها من قبل شركة Gigaset Communications GmbH  
تحت ترخيص العلامة التجارية من شركة Siemens AG



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 5005 user guide](http://yourpdfguides.com/dref/3954498)  
<http://yourpdfguides.com/dref/3954498>

**Manual abstract:**

Clip handset bracket into handset shell mounting. @@ Only connect the connecting lead to the intended socket. Only connect approved accessories. Lay the connecting lead where it will not cause accidents. Position the telephone on a non-slip surface. @@The telephone is not splash proof. Never expose the telephone to sources of heat, direct sunlight or other electrical devices. Protect your telephone from moisture, dust, corrosive liquids and vapours. Never open up the telephone yourself. Do not touch the plug contact with pointed or metallic objects.

Do not carry the telephone by the leads. If you give your telephone to someone else, make sure you also give them the operating manual. Setting up the telephone for use Recommended installation of telephone Do not expose the tele phone to direct sunlight or other sources of heat. Operate at temperatures of between +5°C and +40°C. 2 GB Maintain a distance of at least one metre between the telephone and radio equipment, e.

g. radio telephones, radio paging equipment or TV sets. Otherwise, telephone communication could be impaired. Do not install the telephone in dusty rooms as this can limit the service life of the telephone. Furniture lacquer and polish can be adversely affected by contact with parts of the unit (e.

g. feet). o ?a c: Enter number for repertory or speed dial. Press Set key, (or after the call:) replace handset. Lift handset, press repertory key. Dialling a repertory number You can also dial any additional digits. Dialling a speed dial number cD 0...9 Lift handset, press speed dial key.

Press speed dial number (number key). Dialling and saving numbers Dialling a number Notes on saving and deleting repertory and speed dial numbers \* and # are saved co Lift handset, dial number. Last number redial The last number dialled is automatically saved. c; Lift handset, press last number redial key.

Repertory and speed dial You can save 4 numbers (max. 21 digits) as repertory numbers on the 4 repertory keys : and 10 numbers as speed dial numbers on the number keys (max. @@@@). To do this, press the recall key >. The subsequent procedure depends on your PABX. @@@@pulse/tone switch to "Tone 2"). @@@@Press the hash key.

Press one of the number keys. (0: Ringer off until handset is next lifted). @@@@After the connection is established: Operation on public telephone systems Public telephone systems - in some cases by special order/ request offer you a range of useful additional services (e.g. call divert, call back on busy, three-party conference etc.

). These services can be selected using specified key combinations, which your network provider will notify you of. You can save the entire key combination, including the number of a fixed call divert \* After the connection is broken, the setting reverts to DP. Press the star key. 4 GB destination, to your repertory or speed dial keys just like a normal number.

Insert strips Blank insert strips for the repertory keys can be found on the Internet at [www.gigaset.com/cordedphones](http://www.gigaset.com/cordedphones). Recall key In public telephone systems, the recall key is required to use certain additional services; e.g. for "Call back on busy". By default, your telephone is set to tone dialling with a flash time of 100 ms (Tone 1). You may need to adjust the flash time using the slide switch on the underside of the telephone. Contacts If you should encounter any problems when operating the telephone connected to a communication system with analogue network access, please contact the network operator responsible or your dealer. Appendix Care To clean, wipe with a moist or antistatic cloth only, never with a dry cloth (risk of electrostatic charging and discharge) or strong cleaning agent.

Authorisation This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE. @@@@Is the dialling mode set correctly? The other party cannot hear you: Mute activated? @@Contact your network operator. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET 5005 user guide](http://yourpdfguides.com/dref/3954498)  
<http://yourpdfguides.com/dref/3954498>