



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A16. You'll find the answers to all your questions on the SIEMENS GIGASET A16 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A16
User guide SIEMENS GIGASET A16
Operating instructions SIEMENS GIGASET A16
Instructions for use SIEMENS GIGASET A16
Instruction manual SIEMENS GIGASET A16

1

Gigaset A16/A26 handset

- 1 Charge status of the battery pack
- 2 Internal number of the handset
- 3 Display keys
- 4 Message key
- 5 Directory key
- 6 Control key
- 7 Talk key
- 8 End call and On/Off key
- 9 Ringtone on/off (press and hold in idle status)
- 10 Key lock on/off (press and hold)
- 11 Recall key
 - Confer (flash)
 - Dialling pause (press and hold)
- 12 Microphone
- 13 Alarm clock key
- 14 Handsfree key (Gigaset A26 only)

Gigaset A16



Gigaset A26



Display keys:

Pressing the keys launches whichever function that appears above them in the display.

Display icon	Function when pressed
INT	Call all registered handsets.
MENU	Open main/submenu (see Menu tree, page 7).
←	Go back one menu level.
↑	Scroll up/down or adjust volume with [VOLUME].
↔	Move cursor to left/right with [LEFT/RIGHT].
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

Safety precautions

Read this User Guide and the safety precautions carefully before use. Explain their contents to your children, and the potential hazards associated with using the telephone.

Only use the mains unit supplied.

Fit only the approved rechargeable battery pack! Never use a conventional (non-rechargeable) battery pack as this could damage your health and cause injury. Use the battery pack as directed in this user guide (page 2).

The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).

Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the phone in a bathroom or shower room. The handset is not splashproof.

Do not use the telephone in environments subject to explosion hazard (e.g. auto paint shops).
If you give your Gigaset to someone else, make sure you also give them the user guide.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Emergency numbers cannot be dialled if the key lock (page 11) is activated!

Not all of the functions described in this User Guide are available in all countries.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A16 user guide](http://yourpdfguides.com/dref/3954200)
<http://yourpdfguides.com/dref/3954200>

Manual abstract:

12. INT 11:56 MENU V Display keys: Pressing the keys launches whichever function that appears above them in the display. Display icon Function when pressed Call all registered handsets. Open main/submenu (see Menu tree, page 7). Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time. Confirm menu function or save entry. 3 4 5 6 7 8 INT MENU " U T ~ OK 9 10 11 12 13
Safety precautions W Read this User Guide and the safety precautions carefully before use.

Explain their contents to your children, and the potential hazards associated with using the telephone. Only use the mains unit supplied. Do not use the telephone in environments subject to explosion hazard (e.g. auto paint shops).

If you give your Gigaset to someone else, make sure you also give them the user guide. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

\$ Fit only the approved rechargeable battery pack! @@Use the battery pack as directed in this user guide (page 2). The operation of medical appliances may be affected. @@doctor's practice). @@Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. @@Not all of the functions described in this User Guide are available in all countries. 2 Setting up the telephone for use Setting up the handset for use Note: The display is protected by a plastic film. Please remove the protective film! Opening the battery cover Place your fingernail between the cover and the housing and pull the cover upwards. Registering the handset A Gigaset A16/A26 handset can be registered on up to four base stations.

You must initiate handset registration on the handset and on the base station. After it has registered, the handset returns to idle status. If several handsets are registered on the base station, the internal number is shown in the top left of the display after registration, e.g. 2. If the internal numbers 1 to 4 have already been assigned (four handsets have already been registered), handset number four is de-registered and overwritten. On the base station To find out how to register the handset on the base station, see the user guide for the base station. On the handset MENU Settings OK Handset OK Register HS Enter the base station PIN Fitting the battery pack Place the battery leads in the cable guides so that the battery cover cannot catch on the leads and damage them when it is closed. Use only the rechargeable battery pack recommended by Gigaset Communications GmbH * (page 6), i.e.

never use a conventional (nonrechargeable) battery pack as this may cause significant damage to health and property. For example, the outer casing of the battery pack could be destroyed or the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Only use the battery charger supplied. Only place the handset in the charging cradle that is intended for it.

* Gigaset Communications GmbH is a trademark licensee of Siemens AG. (default setting: 0000) OK. Registering flashes in the display. Registration can take up to 5 minutes. Note: You can register the Gigaset A16/A26 handset on the Gigaset A160/A260/A165/A265 base station automatically too.

Precondition: The handset is not registered on a base station. @@You will hear a confirmation tone. @@@@5 hours. The battery pack is now fully charged. @@Therefore you should not interrupt the charging process. Charging is electronically controlled to prevent overcharging. The battery pack heats up during charging. This is normal and not dangerous. After a time its charge capacity will decrease for technical reasons. @@@@¢ OK ~ ~ Enter number and press OK.

@@~ (Enter the phone number) The number is dialled. @@@@You can answer the call by: Pressing the Talk key c. Pressing the handsfree key d (Gigaset A26). @@Edit or add to a saved number. Then dial or use other functions with MENU. Edit selected entry. Delete selected entry. Send a single entry to another handset (page 4). Delete all directory entries. Send the complete list to another handset (page 4).

@@@@You can save up to 40 phone numbers (max. 32 digits) with corresponding names (max. 14 characters). @@@@Select entry. Press the Talk key again.

The number is dialled. u Or: Press the alarm clock key g. @@Select entry. Press the display key. u MENU Enter the wake up time in hours and minutes, then press OK.

¢ Alarm Clock ¢ OK ¢ Wake-up time ¢ OK Resetting the handset You can select the following settings: Use Number Copy to Dir. Delete Entry Delete List (as in the directory, page 3) Copy an entry to the directory (as in the directory, page 3) (as in the directory, page 3) Cancel the reset with a. You can reset any individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration on the base station will be retained. MENU Settings OK Handset OK Reset Handset OK ¢ ¢ ¢ ¢ ¢ Opening lists with the message key When a new entry is made in the list, a signal sounds and the display blinks. The display also shows a message. When you press the f key, all the lists are displayed. If only one list contains new messages, this will be opened automatically. Appendix Entering special characters Standard characters 1x 2x 1, / 123--> abc 3x £ ? (# 4x \$!) @ 5x ¥ 0 < \ 6x ¤ + = & # P Q I Space . * Abc--> 123 5 Service (Customer Care) You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at: www.

gigaset.com/customercare This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the Questions and Answers section of this user guide in the appendix. If the device needs to be repaired, please contact one of our Customer Care Centers: Abu Dhabi. . . .

.
. . .97 12 62 23 800 Argentina . . .
.

. 0800-888-9878 Australia

.
. .1300 665 366 Austria . 05 17 07 50 04 (0,065 Euro/Min).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A16 user guide](http://yourpdfguides.com/dref/3954200)
<http://yourpdfguides.com/dref/3954200>

) Bahrain .

.....

... .97 31 73 11 173 Belgium

.....

.....

0 78 15 66 79 Bosnia Herzegovina 033 276 649 Brazil ..

.....

.....

.....

..... Grande Capitais e Regiões Metropolitanas: ..

.....

.....

... (11) 4003 3020 .

.....

.....R\$ 0,14 (US\$ 0,069) Demais localidades: ...

.. 0800 888 3020 ...

.....

.....

R\$ 0,20 (US\$ 0,098) Bulgaria.

.....

.. 02 873 94 88 Canada ...

.....

... y time at www.gigaset.com/customer-care. The table below contains a list of common problems and possible solutions. Problem Nothing appears in the display. Environmental condi- +5 °C to +45 °C; tions in operation 20% to 75% humidity Care Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth. This can cause static.

@@a for approx. 5 seconds or place the handset into the charging cradle. Charge/replace the Battery pack is battery pack (page 2). flat. No reaction to The key lock is Press the hash key R keystroke.

activated. for approx. 2 seconds (page 1). @@the base sta- of the base station. @@registered.

display. The base station is Check the mains plug not switched on. @@Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100% recycled paper. 7 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. With the phone in idle status, press MENU (open menu), scroll to the required function and then press OK to confirm your choice.

1 1-1 1-2 To return to idle status: press and hold key a. There are two ways in which you can access a function: Scroll with keys t and v, Key in the appropriate digit combination, e.g. MENU 1 1 to set the date and time. Alarm Clock Activation Wake-up time Activating/deactivating the alarm clock Input format: HHMM 2 2-1 2-2 Audio Settings Ringer Volume Ringer Melody 5 levels + "Crescendo" available 2-2-1 2-2-2 2-2-3 External Calls Internal Calls Alarm Clock 10 ringtones available for external calls 10 ringtones available for internal calls 10 ringtones available for alarm clock 2-3 2-4 Advis. Tones Battery Low activating/deactivating 2-4-1 2-4-2 2-4-3 Off On During Call Tone when battery pack is almost flat: never always only during a call 3 3-1 3-2 Settings Date/Time Handset Enter date (DDMMYY format), then time (HHMM format) 3-2-1 3-2-2 3-2-3 3-2-4 Language Auto Answer Register HS Reset Handset Set the display language Activate/deactivate auto-answer Manually register the handset Reset the handset 8.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A16 user guide](#)

<http://yourpdfguides.com/dref/3954200>