



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A220A. You'll find the answers to all your questions on the SIEMENS GIGASET A220A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A220A
User guide SIEMENS GIGASET A220A
Operating instructions SIEMENS GIGASET A220A
Instructions for use SIEMENS GIGASET A220A
Instruction manual SIEMENS GIGASET A220A


Gigaset A120/A120A/A220/A220A

The handset at a glance

- Charge status of the batteries:
 - ☐ (flat to full)
 - ☐ flashes: batteries almost flat
 - ☐ flashes: charging
- Answering machine icon (A120A/A220A only)
- Display keys
- End call key and On/Off key
- Talk key/Handsfree key (handsfree mode A220/A220A only)
- Control key (☐)
- Directory key (press down on the control key)
- Key 1
- Open the answering machine (A120A/A220A only)/network mailbox
- Star key
- Ringers on/off (press and hold); with an open connection: switch from pulse dialling to tone dialling (press briefly)
- Key 0/recall key
- Consultation call (flash): press and hold
- Hash key
- Keypad lock on/off (press and hold); toggles between upper/lower case and digits; inserts a dialling pause (press and hold)
- Microphone



Please note
New messages in the calls list/answering machine list/network mailbox list (→ page 6) are indicated in the display by the message **New messages**.

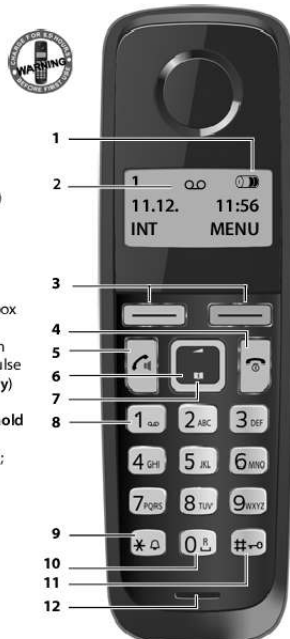

1

Display keys:
Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
INT	Call other registered handsets → page 9.
MENU	Open main/submenu (see menu overview → page 15).
←	Go back one menu level.
↑	Scroll up/down or adjust volume with ☐.
→	Move cursor to left/right with ☐.
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

The base station at a glance



Registration/paging key:
Search for handsets (press briefly, "Paging" → page 9)
Register handsets (press and hold → page 9).

ECO DECT

During a call, the level of the handset's radio signal adjusts automatically according to the distance between the handset and base station: the shorter the distance, the lower the signal strength (radiation).

The handset's radio signal is switched off when it is in standby mode. The base station, however, maintains contact with the handset with fewer radio signals. In addition, the base station radio signals are switched off when the **No Radiation** setting is enabled.

MENU → ☐ Settings → OK → ☐ Base → OK → ☐ ECO DECT → OK → No Radiation → OK (✓ = radiation switched off, icon E+ in the left-hand corner of the display)

Please note

- All registered handsets must support this feature.
- For quick connection of incoming calls the handset repeatedly switches to reception mode for short periods. This increases energy consumption and therefore reduces the standby and talk times.

Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK: 0845 3670 812 (local call cost charge)

Service Centre IE: 1850 777 277 (6.6561 Ct./Call)

Please have your proof of purchase ready when calling.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A220A user guide](http://yourpdfguides.com/dref/4568818)
<http://yourpdfguides.com/dref/4568818>

Manual abstract:

Move cursor to left/right with u. @@ Confirm menu function or save entry. 3 4 5 6 7 8 ECO DECT During a call, the level of the handset's radio signal adjusts automatically according to the distance between the handset and base station: the shorter the distance, the lower the signal strength (radiation). The handset's radio signal is switched off when it is in standby mode. The base station, however, maintains contact with the handset with fewer radio signals. In addition, the base station radio signals are switched off when the No Radiation setting is enabled. @@@@ Use only the power adapter supplied, as indicated on the devices. Use only rechargeable batteries that correspond to the specification (see „Technical Data“). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.

Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. □ If you use a medical device (e.

g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see „Technical Data“). Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier. The base and charger are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms. Do not use your phone/phone system in environments with a potential explosion hazard (e.g., paint shops). Version 4, 16.

09.2005 If you give your Gigaset to a third party, make sure you also give them the user guide. Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. □ The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls. □ Emergency numbers cannot be dialled if the keypad lock is activated! First steps Check the pack contents One Gigaset A120/A120A/A220/A220A base station, one mains adapter, one Gigaset handset, one phone cord, two batteries, one battery cover, one user guide. If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset. Setting up the base station and charging cradle (if included) □ Set up the base station at a central location on a flat, non-slip surface in your house □ □ □ □ □ or apartment. You can also mount the base station and charging cradle on the wall. Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The base station and charging cradle are designed for use in enclosed dry rooms in a temperature range of +5 °C to +45 °C. Care: Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the risk of marks on the surfaces cannot be completely ruled out. Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fjm / 27.02.2012 3 Connecting the base station ✕ First connect the mains adapter 1. ✕ Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: □ The mains adapter must always be connected, as the phone will not operate without mains connection. □ Use only the mains adapter and phone cord supplied. Pin connections on telephone cables can vary. □ The answering machine (A120A/A220A only) is ready for use approx. 30 seconds after the base has been connected. Setting up the handset for use The display is protected by a plastic film.

Please remove the protective film! 1 1 2 1 Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries recommended by Gigaset Communications GmbH (¢ page 11), i.e. never use conventional (non-rechargeable) batteries as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. ✕ Insert the batteries with Connecting the charging cradle (if included) 2 1 ✕ Connect the flat plug to the power supply 1. ✕ Plug the mains adapter into the plug socket 2. If you need to disconnect the plug from the charging cradle, press the release button 3 and disconnect the plug 4. the polarity in the correct direction. The polarity is indicated in the battery compartment.

✕ First insert the battery cover at the top a. ✕ Then press the cover b until it clicks into ✕ To reopen the battery cover, grip into the cavity on the casing, then pull the battery cover in an upward direction. place. a 4 b 3 Version 4, 16.09.

2005 Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fjm / 27.02.2012 4 Initial charging and discharging of the batteries The correct charge status can only be displayed if the batteries are first fully charged and discharged. Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

MENU ✕ u Settings ✕ OK ✕ Date/Time ✕ OK ✕ Date ✕ ~ (enter the day, month and year in 6-digit format) ✕ OK ✕ Time ✕ ~ (enter hours and minutes in 4-digit format) ✕ OK (display message: Saved) □ ✕ a (press and hold to return to idle status) When entering the time and date, you can move the position of an entry to the left or right by pressing the control key u up or down. Please note If your phone receives the date and time during calling line display (e.g., via your network provider, a router or PABXs), you can specify whether this data should be copied to your phone: ✕ Press the key sequence: MENU ✕ P#Q5#MI The following is displayed; □ 973 SET: [0] the current setting flashes: ✕ Press one of the following keys to specify, when this data should be copied to your phone: □ Q Never □ or 1 Once, in case the date/time is not set on your phone □ or 2 Always Your selection is displayed (e.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568818)

[GIGASET A220A user guide](http://yourpdfguides.com/dref/4568818)

<http://yourpdfguides.com/dref/4568818>

g. 2): 973 SET: [2] Press the display key OK. Charge the handset in the base for 6.5 hours. 6.5 h Please note The handset must only be placed in the designated Gigaset base or charging cradle.

After charging, remove the handset from the base and only replace it when the batteries are fully discharged. Please note The handset is pre-registered with the base. If you have purchased a model with multiple handsets, all handsets will already be registered with the base. You do not need to register the handset again. The internal handset number appears in the top left of the display, e.g. 1 (see page 1). However, if a handset is not registered with the base (Register HS or Put into base is displayed), please register the handset manually (see page 9). If you have purchased multiple devices, you can upgrade your Gigaset to a cordless PABX by registering all A120/A220 handsets at the same base (see page 9). After the first battery charge and discharge, you may place your handset in the charger after every call.

Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons. Version 4, 16.

09.2005 Issued by Gigaset Communications GmbH Frankenstr. 2a 46395 Bocholt Germany © Gigaset Communications GmbH 2012 All rights reserved. Subject to availability. Rights of modification reserved.

www.gigaset.com This user guide is made from 100 % recycled paper. Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.2012 5 Activating/deactivating the handset Press and hold the a key to activate or deactivate the handset. If you place a deactivated handset in the base station or charging cradle, it will automatically activate after approx. 30 seconds. If you remove the handset from the base station/charging cradle, the display turns off briefly.

Handsfree operation (Gigaset A220/A220A only) In handsfree mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. During a call and when listening to the answering machine (Gigaset A220A only) you activate or deactivate handsfree mode by pressing the handsfree key d. For instructions on adjusting the handsfree mode volume see menu overview see page 15. Making calls Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) b. The phone number is dialled. (Or you can first press and hold talk key b [dial tone] and then enter the number.) During the call you can adjust the earpiece volume using t and set the volume with u. End the call/cancel dialling: Press the end caappears in the display. Please note If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (depending on your network provider).

Using other functions s u (select entry) MENU Sending the directory to another handset Prerequisites: The sending and receiving handsets must both be registered to the same base station. The other handset and the base station can send and receive directory entries. s u (select entry) MENU u Send Entry/Send List OK ~ (enter the internal number of the receiving handset) OK Prerequisites: CLIP (see page 5) Depending on the type of list set, the calls list contains (see page 15) answered calls, missed calls and calls recorded from the answering machine (A120A/A220A only). Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. Open the calls list MENU Messages OK u CallsList The calls list is displayed as follows: Number of new entries + number of old, read entries CallsList 01+02 Press OK to open the list.

The last incoming call is displayed. If necessary, use u to select another entry. Using other functions u (select entry) MENU The following functions can be selected with u: Delete Entry/Copy to Dir./Date/Time/Status/Delete List Calling back a caller from the calls list MENU Messages CallsList 01+02 A220A) When CallScreening via the handset is activated and the call can already be heard at the handset, you can only accept the call via MENU Accept OK. Pressing the talk key/hands free key c only activates or deactivates the handsfree mode.

Recording stops and you can speak to the caller. 2 t or 1 Pause playback. Press 2 again to resume. During playback of message header: Go to the start of the previous message. Skipping back from the first message jumps to the last message. During playback of message body: Go to the start of the current message. Go to the start of the next message. Skipping forward from the last message jumps to the first message. During playback of message header: Skip header. During playback of message body: Go to the body of the next message.

Skipping forward from the last message jumps to the first message. Operating when on the move (remote operation) You can check your answering machine from any other telephone (hotel, pay phone etc.). Prerequisites: You have set a system PIN other than 0000 see page 15. The phone you are using for remote operation has tone dialling (DTMF) i. e., you hear different tones when you press the keys. s or I L Additional functions during message playback Press the display key MENU. Playback stops. @@@@@Stop playback.

Press again to resume. Go to the next message. @@It tells you how much memory time is left. The messages are now played back. @@More information is available from your provider.

@@@@@@The handset you are currently using is indicated by <. @@@@All handsets will ring at the same time ("paging"), even if the ringers are switched off. Ending paging: Briefly press the registration/paging key on the base (see page 1) or press the talk key b or the end call key a on the handset. 2 handsets are registered Press the display key INT, the other handset is called. More than 2 handsets are registered Calling a specific handset INT ~ (1..4, enter internal number of the handset) or INT u (Select the internal party) OK or b the handset is called Calling all handsets ("group call") INT u P or INT u Call all OK or b all handsets are called When a participant answers you can speak to them. @@@@@3 seconds. Version 4, 16.09.2005 Registration takes approx. 1 minute. Handsets are assigned the lowest available internal number (1-4). @@Press the INT display key and call one or all handsets.

The external participant hears the hold music. @@@@You are reconnected with the external participant. @@@@Press and hold the b key.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A220A user guide](http://yourpdfguides.com/dref/4568818)
<http://yourpdfguides.com/dref/4568818>

You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone. @@@@You will need to activate repeater mode (ç page 15). @@@@The date and time are retained. The answering machine (A120A/A220A only) is ready for use approx.

@@@@Carry out the following steps: Remove the mains cable from the base. @Hold the key down for at least 5 seconds. Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.

2012 11 Operating the base station on the PABX/router Operating on the router When operating the Gigaset on an analogue port of a router you can reduce problems with echoes by activating the Echo mode (ç page 15). If you have no problems with echoes, this function should be deactivated. Appendix Entering letters/characters Standard characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. 1 2 1 4 5 L M N O Q P # Operating on the PABX The following settings are only necessary when your PABX requires them; see the user guide for your PABX.

When entering the digits, enter them slowly one after the other. Changing the dialling mode MENU \square P#Q5#1N \square The number for the set dialling mode flashes: 0 = touch tone dialling (DTMF); 1 = dial pulsing (DP) \square enter number \square OK. Setting recall MENU \square P#Q5#1Q \square The number for the current recall flashes: 0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms \square enter number \square OK. Changing pause after line seizure You can set the length of the pause inserted between pressing the talk key b and sending the phone number. MENU \square P#Q5#1L \square The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. \square enter number \square OK. Changing the pause after the recall key MENU \square P#Q5#12 \square The number for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms \square enter number \square OK. 1x 1 a d g j m p t w 2x £ b e h k n q u x 1).

* / 3x \$ c f i l o r v y , (# 4x ¥ 2 3 4 5 6 s 8 z ?) @ 5x 6x 7x 8x 9x 10x 11x 12x 13x 14x 15x ä à â ã ç è é ê ë ì í î ï ö 7 ü 9 ! < \ ñ ß ú ý 0 = & ó ò ô õ ù û ý æ ø + - : > % § å ç ; " ' ; _ 1) Space Specifications Batteries Technology: Nickel-metal-hydride (NiMH); Size: AAA (Micro, HR03); Voltage: 1.2 V; Capacity: 450 - 1000 mAh General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation Base station power consumption In standby mode – Handset in base station \square – Handset outside base station During a call is supported is supported up to 300 m outdoors, up to 50 m indoors 230 V ~/50 Hz +5 °C to +45 °C, 20% to 75% relative humidity A120/A220 ca. 1.0 W ca. 0.8 W ca. 1.0 W A120A/A220A ca. 1.2 W ca. 1.0 W ca. 1.2 W Version 4, 16.09.

2005 Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.2012 12 Questions and answers If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service \square for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Nothing appears in the display. No wireless connection to the base station, Base flashes in the display. You cannot hear a ringer/ dialling tone from the fixed line network. Cause The handset is not switched Press the end call key a for approx. on. 5 seconds or place the handset in the base station. The batteries are flat. Charge or replace the batteries.

Move the handset closer to the base station. Register the handset ç page 9. \square Check the mains connector on the base station ç page 3. Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer: 3-4 assignment of telephone leads/ EURO CTR37. Reset the system PIN to the default 0000 ç page 10. All handsets are de-registered. All settings are reset. All lists are deleted. Solution Service (Customer Care) You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase. This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email. @@@@The handset is not registered. The base station is not turned on.

@@system PIN prompt. @@2 Allow the liquid to drain from the handset. @@4 Do not switch on the handset again until it is completely dry. @@Country-specific requirements have been taken into consideration. @@@@In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.

\square This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides. \square This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. \square The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. \square Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. \square This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.

\square Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. \square The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. \square Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. \square The above provisions does not imply a change in the burden of proof to the detriment of the customer.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A220A user guide](#)

<http://yourpdfguides.com/dref/4568818>

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee Certificate Ireland Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals.

In particular claims under the Guarantee cannot be made if: The device is opened (this is classed as third party intervention) Repairs or other work done by persons not authorised by Gigaset Communications. Components on the printed circuit board are manipulated The software is manipulated Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.

) Devices fitted with accessories not authorised by Gigaset Communications This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee.

Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER. Version 4, 16.09.2005 Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.2012 14 Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee.

Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. The above provisions does not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide. Environment Our environmental mission statement We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle.

The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design. Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

@ @ @ @ @ @ This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. Version 4, 16.

09.2005 Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.2012 15 Menu overview Your phone has an extensive range of features. These are offered in the form of menus. @ @ @ @ @ @ To return to idle status: press and hold the a key. @ @ @ @ @ @ Earpiece/Speaker 5 levels + "crescendo" available. @ @ @ @ @ @ If new messages are present, the answering machine answers a call after just 10 seconds. Netw.

Mailbox * page 9 Net Mailbox *** page 9 Set Key 1 * Net Mailbox Assign key 1 with network mailbox. (In idle status, press and hold key 1 to dial.) page 9 Answer Mach. Assign key 1 with answering machine. (In idle status, press and hold key 1 to dial.) page 7 * Base station with answering machine only. ** Base station with answering machine only and if number of network mailbox is entered. *** Base station without answering machine only. Settings Date/Time Handset Ring Delay * page 4 Language Auto Answer Register HS De-register HS Reset Handset Call list type System PIN Base Reset Additional page 10 page 5 page 9 page 9 page 10 Missed Calls/All Calls page 6 Change System-PIN (default: 0000) page 10 Repeater page 10 Echo mode see „Operating on the router“ page 11 No Radiation on/off Base Version 4, 16.09.

2005 Net Mailbox ** page 9 Answer Mach. ** page 7 Answer Mach. * page 7 CallScreening * Switch screening of a message on the handset (hands free mode) (Gigaset A220A) that is being recorded on/off. Prerequisite: at least 1 handset with hands free capability is registered. Deactivate screening for the actual recording only: press end call key a.

Announcements * Rec announce/Play announce/Del announce page 7 Message Length * Maximum/1 Minute/2 Minutes/3 Minutes ECO DECT page 1 Listening in Preselection page 10 Presel. Number/With Preselect/ Without Presel page 5 Lombok / Großbritannien - Irland / A31008-M2401-L101-1-7619 / Lombok.fm / 27.02.2012 16 Frequently asked questions Q: There is no dial tone.

A: Press call button for 2 seconds (long press) to obtain dial tone.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568818)

[GIGASET A220A user guide](http://yourpdfguides.com/dref/4568818)

<http://yourpdfguides.com/dref/4568818>

□ A short press opens the redial list. □ Q: The line is crackling / not clear. A: Have you used the new line cable provided? Please do not use an old cable. □ Q: The display is not clear / seems to be broken. A: The display is protected by a plastic film, please make sure you have removed the protective film. □ Q: The handset is not registered. A: If your handset is not registered, please follow the Registration handset procedure (€ page 9). □ Q: The caller ID is not working. A: Have you subscribed to this service (CLIP) from your provider? □ To download the latest manuals, visit our web-site: <http://www.gigaset.com>

gigaset.com You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal: <http://www.gigaset.com> If you have problems setting up or operation this product please call GIGASET UK HELPLINE 0845 3670812 GIGASET IRL HELPLINE 1850 777277 Product may not be fully compatible with the national telephone network. □ @@@@ □ In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. Please check: Have you used the phone cord supplied Have you fully inserted the power cable into the base station Have you inserted the batteries correctly Have you charged the batteries for 6.5 hours Have you set up the Date/Time □ □ □ □ Version 4, 16.09.2005 .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A220A user guide](http://yourpdfguides.com/dref/4568818)
<http://yourpdfguides.com/dref/4568818>