



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A240. You'll find the answers to all your questions on the SIEMENS GIGASET A240 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A240 User guide SIEMENS GIGASET A240 Operating instructions SIEMENS GIGASET A240 Instructions for use SIEMENS GIGASET A240 Instruction manual SIEMENS GIGASET A240

Gigaset

<p>EN Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p>DE Sehr geehrte Kunden, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p>FR Chère Cliente, Cher Client, la Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p>IT Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p>NL Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p>ES Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p>PT Scares clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Qualquer declaração por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.</p>	<p>DA Kære Kunde, Gigaset Communications GmbH er retlig efterfølger af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p>FI Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivomme teille paljon iloa Gigaset-laitteestanne.</p> <p>SV Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p>NO Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-gjeførelsen i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningen er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p>EL Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC που υπάρχουν στα εγχειρίδια, θεωρούνται δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλό άνοιγμα με τη μονάδα σας Gigaset.</p> <p>HR Poštovani klijentice, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koja je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p>SL Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p>
--	--



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A240 user guide](http://yourpdfguides.com/dref/3954007)
<http://yourpdfguides.com/dref/3954007>

Manual abstract:

@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset. Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset.

Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset. SCaros clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset. DA Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoii puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaisissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset. Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumaciti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Zelimo vam veliko užitkov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved.

Subject to availability. Rights of modifications reserved. www.gigaset.com CS Vázení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále pejala segment produkt Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je teba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.

Vážený zákazník, Spoločnos Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápa ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní. Stimite client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul su, a continuat activitatea companiei Gigaset a Siemens AG.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A240 user guide](http://yourpdfguides.com/dref/3954007)
<http://yourpdfguides.com/dref/3954007>

Orice afirmatii efectuate de Siemens AG sau SHC i incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperm ca produsele Gigaset s fie la în linia dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Siemens AG. , Siemens AG SHC. , Gigaset Communications GmbH.

Gigaset. Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.

PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, które mona znale w instrukcjach obsługi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktów Gigaset. Sayın Müterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunun ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmı bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). , , Gigaset Siemens AG.

, Siemens AG SHC , Gigaset Communications GmbH. , Gigaset . TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com 1 Gigaset A140/Gigaset A240 english Handset A14 Handset A24 5 4 1 1 Charge status of the battery pack 2 2 Internal number of the handset 3 Display keys 4 Talk key/ 3 Handsfree Key (Gigaset A240 only) 5 Directory key 4 6 End call and 5 On/Off key 7 Ringer on/off 6 (long press) 8 keypad lock (long press) 9 Recall key 7 - Confer (Flash) 8 - Dial pause 9 (long press) 10 10 Microphone 11 11 Speed dial list key Base 1 22-35 P Ü INT MENU V Register/Paging key (page 4/page 5) Display keys: Pressing the keys launches whichever function that appears above them in the display. Display icon Meaning when pressed Open the last number redial list (page 4). Open the calls or network mailbox list (page 4). Open the list of registered handsets (page 5). Open main menu/submenu. Scroll up/down, or adjust volume. Move cursor to the left/right. Backspace deletes one character at a time. Confirm menu function or store an entry. P Ü INT MENU t u and s ß OK and v Safety precautions W Read this manual and the safety precautions carefully before use. @@@@ Use the battery pack as directed in these instructions (page 7). The operation of medical appliances may be affected. @@@@doctor's practice). The handset may cause an intrusive 'hum' in hearing aids. @@@@Not all of the functions described in this manual are availab used in the same way. To open the directory: Press h. To open the speed dial list: Press C. Directory: Can store up to 20 numbers and associated names. Speed dial list: Can store up to 8 numbers (12 digits max.), e.g. @@@@Press the h or C key to open the required list then press MENU. @@@@Directory: Enter name and confirm.

@@@Enter the first letter of the name. If there is more than one entry, select the name. @@@@P (open the list) MENU. @@@@Other handsets must be registered manually. Clear the list: P çMENUçL çOK. ç Store number in directory Dialling a number You can select a number from the last number redial list: P Select an entry c. ç Automatic registering: Gigaset handset A14/A24 Any Gigaset A14/A24 handset that is not registered to a base can be registered automatically. To register a handset for the first time, place it in the base with the display facing forward. Registering takes about 1 minute; a number of icons flash in the display. The handset is automatically assigned the next available internal number (14).

This number appears in the top left of the display after successful registering, e.g. "2". If all of the internal numbers 1 to 4 are used up (i.e. four handsets have been registered), handset number 4 is de-registered and overwritten. Calls list/Mailbox list Press the display key Ü to open the caller list and mailbox list (see Menu Tree, page 9). Calls list: The number of the last 30 missed calls are stored. When the phone is in idle status, new missed calls are indicated by a flashing Ü . Example of how the calls list appears: CALLS 02/08 Number of old, read entries Number of new entries Opening the calls list and selecting an entry You can view entries you have already read.

Manual registering: Gigaset handset A14/A24 Ü s CALLS s Open calls list. OK Confirm. The last incoming call is displayed. Select entry. 1. On the handset: MENU REGISTER HS enter your system PIN (default is 0000) OK. The display shows REGISTER HS during the registration procedure. 2. On the base: Within 60 sec. of entering the system PIN, press the register/paging key on the front of the base (page 1) and hold for approx.

3 sec. The registration process starts. ç ç ç 5 Manual registering: Other handsets Other handsets are registered as follows: 1. On the handset: Start to register your handset as described in its operating instructions. 2. On the base: Press the register/paging key on the front of the base (page 1) for approx. 3 sec. The registration process starts. party does not answer or is busy the call will come back to you automatically. Barging in on an external call You are conducting an external call.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A240 user guide](http://yourpdfguides.com/dref/3954007)

<http://yourpdfguides.com/dref/3954007>

An internal party can 'barge in' on your call and join in the conversation (all parties hear a beep). Requirement: The BARGE IN function is activated. De-registering handsets You can de-register another handset from any registered Gigaset A14/A24 handset as follows: INT Select handset MENU Activating/deactivating internal barge-in MENU BASE SET BARGE IN (= on). Press ADD FEATURES The internal number disappears from the de-registered handset. Handsets that have not been deregistered retain their internal number. Press OK Enter the system PIN (default is 0000) Press OK DE-REGISTER? Press a. DE-REG H/SET Internal barge-in The display shows LINE IN USE. You wish to barge in on the call. Press the talk key. You are connected.

All parties hear a signal tone. The display shows LISTENING IN. End: Press the end call key. If one of the internal parties presses the end call key, a signal tone sounds. This does not affect the connection between the other handset and the external caller. Using several handsets Internal calls Internal calls are no-cost calls to other handsets that are registered to the same base. INT Looking for a handset ("paging") If you have mislaid your handset you can page it with the help of the base. To do this, briefly (2 seconds max.) press the register/paging key on the front of the base (page 1). All handsets will ring at the same time.

End paging: Briefly press the registration/paging key (on the base) or the talk key c on any handset. Press the display key. Your own handset is marked "<". Call a single handset: Enter number of handset, e.g. 2. Calling all handsets: Press the star key. Ending the call: Press the end call key. either .. ~ or ... P.

.. then a Pressing the registration/paging key for more than 2 seconds puts the base into registration mode. The handsets will not ring in this case. Internal conference/Call connecting You are in conversation with an external caller.

To confer: INT (the external party hears the wait melody) Select a handset c (confer with internal party). End: MENU GO BACK OK. You are reconnected with the external caller. Or to connect the call: INT Select a handset c (announce the call if required) Press the end call key. You can also press the end call key immediately (without announcing the call). If the internal Press Handset settings Changing the display language You can view the display texts in different languages. MENU O2 Select language (e.g. digit combination Q1 for German): NO12 The digit for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms Enter digit OK. MENU Press To insert a dial pause: press S for 2 seconds.

A "P" appears in the display. Press Appendix Character set chart Press the required key the number of times indicated. 1x Q 1 R P + Space Q Q Q Q Q 1 2 I 4 5 German English French Slovenian Hungarian Q Q Q Q 1 L M N O Q Romanian Croat Czech Polish Russian 2x 0 1 / 3x - 4x 1 5x ? 6x _

Activating/deactivating Auto Answer When you get a call you can simply lift the handset out of the base or charger without having to press the talk key c. To activate: MENU O 1 1. To deactivate: MENU O 1 Q. # (appears in display as j) * () , Press Specifications Power consumption In ready status: approx. 2 Watt. During charging: approx. 3 Watt. During a call: approx.

2 Watt. Activating/deactivating battery warning tone If this function is activated, a beep sounds in idle status when the battery pack is almost flat. To deactivate: MENU O 4 Q. To activate: MENU O 4 I. Press Resetting the handset Restoring the factory settings of the handset will not affect entries in the directory, the calls list or the speed dial list or the handset's registration to the base.

MENU Press OI Press RESET ? Press OK. Base station settings Changing pause after line seizure You can change the length of the pause that is inserted between pressing the talk key c and sending the number: MENU NO1L The digit for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.; 4 = 2. 5 sec. Enter digit OK. Version: 30.10.2005 Press A 3 1 0 0 8 - MI 6 4 3 - RI 0 1 - 1 - 7 6 1 9 Press Changing the pause after the Recall key (dial pause) You can change the length of the dial pause if your PABX requires this (refer to the operating instructions of the PABX): Issued by Siemens Home and Office Communication Devices GmbH & Co. KG Schlavenhorst 66 D-46395 Bocholt © Siemens Home and Office Communication Devices GmbH & Co. KG 2005 All rights reserved. Subject to availability. Right of modification reserved. @127 g (including battery pack) approx.

@10 hours in base, approx. 5 hours in charging shell approx. 10 hours approx. 170 hours (7 days) for assistance 24/7. @@@@key a for approx. display. 5 seconds or place the handset in the base. Charge/replace the Battery pack is battery pack (page 2). flat. No response The keypad lock is Press the hash key R to key press, activated.

for approx. 2 sec "HOLD KEY" (page 3). appears in the display. Move the handset The handset is No wireless connection to outside the range closer to the base. the base, dif- of the base.

The handset is not Register the handset ferent icons (page 4). registered. flash in the Check the power conThe base is not display. nector at the base switched on. (page 2).

Cords not routed Check cord routing (page 2). correctly Care Wipe the base station and handset with a damp cloth or an antistatic wipe. Never use a dry cloth! This can cause static! Authorisation This device is intended for analogue phone lines in your network. Country-specific requirements have been taken into consideration. We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/ EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: <http://www.siemens.com/gigasetdocs>. Contact with liquid ! If the handset has come into contact with liquid: 1 Switch the handset off and remove the battery pack immediately.

2 Allow the liquid to drain from the handset. 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4 Do not activate the handset again until it is dry. When it has fully dried out you will normally be able to use it again. Questions and answers If you have any queries about the use of your telephone, go to www.siemens.com/gigasetcustomercare 8 Service (Customer Care) You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at: www.siemens.com/gigasetcustomercare



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A240 user guide](#)

<http://yourpdfguides.com/dref/3954007>

*siemens.com/customercare or by referring to the section entitled Questions and answers in this manual (page 7).
If the device needs to be repaired, please contact one of our Customer Care Centers: Abu Dhabi. . . .*

.....
..... 0 26 42 38 00 Argentina
..... 0 80 08 88 98 78 Australia ...
.....
.....
.. 18 00 62 24 14 Austria
..... 05 17 07 50 04 Bahrain ..
.....
.....
..... 40 42 34 Bangladesh .
.....
.....
... 0 17 52 74 47 Belgium ..
.....
..... 0 78 15 22 21 Bosnia Herzegovina .
..... 0 33 27 66 49 Brazil
.....
.....
.. 0 80 07 07 12 48 Brunei
.....
.....
.. 02 43 08 01 Bulgaria. ...
.....
..... 02 73 94 88 Cambodia .
.....
.....
12 80 05 00 Canada
..... 1 88 87 77 02 11 China .
.....
.....
.... 0 21 50 31 81 49 Croatia .
.....
.....
.. 0 16 10 53 81 Czech Republic
.. 02 33 03 27 27 Denmark
.....
..... 35 25 86 00 Dubai ..
.....
.....
.. 0 43 96 64 33 Egypt. ...
.....
.....
..... 0 23 33 41 11 Estonia
.....
.....
... 06 30 47 97 Finland
..... 09 22 94 37 00 France.
.....
.....
..... 01 56 38 42 00 Germany
.....
.....
..01805 333 222 Greece
.....
..... 0 80 11 11 11 16 Hong Kong
.....
.....
28 61 11 18 Hungary

.....
..... 06 14 71 24 44 Iceland

.....
..... 5 11 30 00 India .

.....
..... 01 13 73 85 89 - 98 Indonesia ..

.....
0 21 46 82 60 81 Ireland

.....
..... 18 50 77 72 77 Italy.....

.....
.....
02 66 76 44 00 Ivory Coast

.....
.....
80 00 03 33 Jordan

.....
... 0 64 39 86 42 Kenya ..
.....

..... 2 72 37 17 Kuwait ..
.....

.....
..... 2 45 41 78 Latvia ...

.....
.....
.. 7 50 11 14 Lebanon ...
.....

..... 01 44 30 43 Libya

.....
.....
.. 02 13 50 28 82 Lithuania.

..... 8 22 74 20 10 Luxembourg ..

.....
.....
. 43 84 33 99 Macedonia.

..... 02 13 14 84 Malaysia...
.....

.....
.. 03 21 63 11 18 Malta

..... 00 35 32 14 94 06 32 Mauritius

.....
.....
.. 2 11 62 13 Mexico

..... 01 80 07 11 00 03 Morocco....
.....

.....
.....
..... 22 66 92 09 Netherlands.

..... 0900-3333102 New Zealand

.....
.. 08 00 27 43 63 Norway ...
.....

..... 22 70 84 00 Oman.
.....

.....
.....
..... 79 10 12 Pakistan ...

.....
 .. 02 15 66 22 00 Philippines ...

 0 27 57 11 18 Poland

 .. 08 01 30 00 30 Portugal ...

 8 00 85 32 04 Qatar ..

 ... 04 32 20 10 Romania ..

 .. 02 12 04 60 00 Russia

 ... (800) 200 10 10 Saudi Arabia ..

 0 22 26 00 43 Serbia

 .. 01 13 22 84 85 Singapore ...

 ... 62 27 11 18 Slovak Republic
 .. 02 59 68 22 66 Slovenia ...

 0 14 74 63 36 South Africa .

 08 60 10 11 57 Spain

 9 02 11 50 61 Sweden ..

 ... 0 87 50 99 11 Switzerland .

 08 48 21 20 00 Taiwan

 .. 02 25 18 65 04 Thailand...

 0 22 68 11 18 Tunisia ..

 01 71 10 81 08 Turkey .

 0 21 65 79 71 00 Ukraine .

 ... 8 80 05 01 00 00 United Arab Emirates ..
 ... 0 43 31 95 78 United Kingdom ..
 0 87 05 33 44 11 USA

 .. 1 88 87 77 02 11 Vietnam ...

45 63 22 44 Please have your record of purchase ready when calling. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. 9 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. With the phone in the idle status, press MENU (open menu), scroll to the required function and then press OK to confirm your choice. 1 SEL SERVICES 1-1 1-2 1-3 1-4 WITHHOLD NO CALL WAITING RINGBACK OFF CALL DIVERT To return to idle status: press key a long. There are two ways in which you can access a function: Scroll with keys t and s, Key in the appropriate digit combination, e.g. MENU 1 1 2 to set the time. Select services are functions provided by your network provider.

You can only use these services if you have requested them from your network provider. Your network provider can supply further information about these functions. When you have chosen a select service, do not hang up until after the confirmation tone from the phone network. The following select services are available during the call when you press the MENU display key: RINGBACK, ACCEPT, REJECT, EXTN CALL, END CALL, CONFERENCE, END CONF. 2 3 AUDIO SET UP BASE SET 2-2 2-3 3-1 RINGER MELODY DATE/TIME 5 level settings + "Crescendo" + OFF 10 selectable melodies 3-1-1 3-1-2 3-1-3 3-2 3-3 3-4 SYSTEM PIN BASE RESET ADD FEATURES DATE SET CLOCK SET CLOCK MODE Input format: DDMMYY Input format: HHMM Select 12 or 24 hour clock Change system PIN (default is 0000) Restore factory settings (system PIN does not change, handsets are still registered) 3-4-1 3-4-2 3-4-3 DIAL MODE TBR BARGE IN PRESELECT NO Select between TONE and PULSE Use s to select the setting Activate/deactivate the function 3-5 PRESELECT 3-5-1 Network provider prefix to be inserted automatically before any dialled number. 4 ANS MACHINE 4-1 MAILBOX MAILBOX --> Store the number of the network mailbox for fast access (for dialling, press the 1 key and hold in idle status). Network mailbox: Your service provider's answering machine; must be ordered separately. The network mailbox list can be displayed if your network service provider supports this function and the mailbox has been defined for fast access. 5 REGISTER HS .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A240 user guide](http://yourpdfguides.com/dref/3954007)
<http://yourpdfguides.com/dref/3954007>