



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A420A. You'll find the answers to all your questions on the SIEMENS GIGASET A420A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A420A
User guide SIEMENS GIGASET A420A
Operating instructions SIEMENS GIGASET A420A
Instructions for use SIEMENS GIGASET A420A
Instruction manual SIEMENS GIGASET A420A

1

Gigaset A420/A420A

The handset at a glance

- 1 Charge status of the batteries
- 2 Answering machine icon (A420A only)
- 3 Signal strength
- 4 Display keys
- 5 End call key and On/Off key
- 6 Talk key/Handsfree key
- 7 **Control key** (5)
 - Audio settings
 - INT Internal call
 - Directory
 - Muting during a call
- 8 **Key 1**
- 9 **Star key**
Rings on/off (press and hold); with an open connection: switch from pulse dialling to tone dialling (press briefly)
- 10 **Key 0/recall key**
Consultation call (flash): press and hold
- 11 **Hash key**
Keypad lock on/off (press and hold); toggles between upper/lower case and digits; inserts a dialling pause (press and hold)
- 12 Microphone

The base station at a glance

Basis A420A

- 2
- 3
- 4
- 5
- 6

Basis A420

- 1

Please note

New messages in the calls list/answering machine list/network mailbox list are indicated in the display by the message **New messages**, the left display key flashes (if set → page 9).

Handset display keys:
Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
	Open calls list (→ page 9).
	Open main/submenu (see menu overview → page 23).
	Go back one menu level.
	Scroll up/down or adjust volume with [M].
	Move cursor to left/right with [M].
	Backspace deletes one character at a time.
	Confirm menu function or save entry.

Registration/Paging key:
Search for handsets (press briefly, paging → page 13). Register handsets (press and hold → page 13).

Volume keys: (= quieter; = louder)
During message playback: adjust the speaking volume. While the phone is ringing: adjust the ringer melody volume.

Play/Stop key:
Switch answering machine on and off (press and hold); play back new messages from answering machine (press briefly); during message playback: cancel playback (press briefly).
Lights up: answering machine is activated.
Flashes: at least one new message is present or message is played back or being recorded.
Flashes very quickly: memory is full.

During message playback:

- 4 Skip to the start of the current message (press once) or go to the previous message (press twice).
- 5 Go to the next message.
- 6 Delete current message.

Gigaset service contact numbers:
For personal advice on our range of products and for repairs or guarantee/warranty claims call:
Service Centre UK: 08453 6708 12 (local call cost charge)
Please have your proof of purchase ready when calling.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A420A user guide](http://yourpdfguides.com/dref/4568914)
<http://yourpdfguides.com/dref/4568914>

Manual abstract:

Display Function when pressed ? Open calls list (page 9). Menu Open main/submenu (see menu overview page 23). Go back one menu level. Scroll up/down or adjust volume with q. Move cursor to left/right with r. Backspace deletes one character at a time. Confirm menu function or save entry. ? Y X OK The base station at a glance Basis A420A 2 1 Registration/Paging key: ? Search for handsets (press briefly, paging page 13).? Register handsets (press and hold page 13). 2 Volume keys: (? = quieter; + = louder)? During message playback: adjust the speaking volume.

? While the phone is ringing: adjust the ringer melody volume. 3 Play/Stop key: ? Switch answering machine on and off (press and hold); ? play back new messages from answering machine (press briefly); ? during message playback: cancel playback (press briefly).? Lights up: answering machine is activated. ? Flashes: at least one new message is present or message is played back or being recorded.? Flashes very quickly: memory is full.

During message playback: 4 Skip to the start of the current message (press once) or go to the previous message (press twice). 5 Go to the next message.

@ @ In idle status the transmission power of the handset is switched off. @ @ @ @ @ 2 Deactivating transmission power (eco mode+) With the setting No Radiation (menu tree page 24), you turn off the transmission power of the base station in standby mode completely. Please note: ? All registered handsets must support this feature.

? For quick connection of incoming calls the handset repeatedly switches to reception mode for short periods. This increases energy consumption and therefore reduces the standby and talk times. Safety precautions Warning Read the safety precautions and the user guide before use. Explain their content and the potential hazards associated with using the device to your children. Use only the power adapter indicated on the device. Use only rechargeable batteries that correspond to the specification (see "Technical Data"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced. Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.

g., doctor's surgery.? If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical Data"). Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. Your

Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier. The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms. Do not use the devices in environments with a potential explosion hazard (e.

g., paint shops). Template Bali, Version 1, 16.02.2012 If you give your Gigaset to a third party, make sure you also give them the user guide.

Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. Please note ? The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls. ? Emergency numbers cannot be dialled if the keypad lock is activated! Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 3 First steps Check the package contents Base station and handset package: One Gigaset handset, one Gigaset A420/A420A base station, one mains adapter, one phone cord, two batteries, one battery cover, one user guide. Handset and charging cradle package: One Gigaset handset, one charging cradle with mains adapter, two batteries, one battery cover, one user guide. If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset. Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 C to +45 C.

Set up the base station at a central location on a flat, non-slip surface in your house or apartment. You can also mount the base station and charging cradle on the wall. Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Care: Wipe down the base station, the charging cradle and the handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static. ? Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.

? Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Please note: Connecting the base station cables into the cable ducts. First connect the mains adapter 1. Then connect the telephone jack 2 and insert the ? The mains adapter must always be connected, as the phone will not operate without mains connection. Please note: A420A 1 1 2 1 ? Only use the mains adapter and phone cord supplied.

Pin connections on telephone cables can vary. ? The answering machine (A420A only) is ready for use approx. 30 seconds after the base station has been connected. A420 1 1 2 1 Template Bali, Version 1, 16.02.

2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 4 Connecting the charging cradle (if included) 2 1 Connect the flat plug from the power supply 1. Plug the mains adapter into the plug socket 2. 4 If you need to disconnect the plug from the charging cradle, press the release button 3 and disconnect the plug 4. 3 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries recommended by Gigaset Communications GmbH (page 18), i.e., never use conventional (non-rechargeable) batteries as this could result in significant health risks and personal injury.

For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Insert the batteries Insert the battery cover from the top.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A420A user guide](http://yourpdfguides.com/dref/4568914)
<http://yourpdfguides.com/dref/4568914>

Then slide the cover upwards until it clicks into place, with the polarity in the correct direction. The polarity is indicated in the battery compartment. To open the battery cover, for instance to replace the batteries: Reach into the notch at the top of the cover and slide the cover downwards. Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.

fm / 19.04.2012 5 Initial charging and discharging of the batteries The correct charge status can only be displayed if the batteries are first fully charged and discharged. 6h Charge the handset in the base station/charging cradle for 6 hours. Please note The handset must only be placed in the designated Gigaset base station or charging cradle.

After charging, remove the handset from the base station/charging cradle and only replace it when the batteries are fully discharged. Please note ? Base station and handset package: The handset is pre-registered with the base station. If you have purchased a model with multiple handsets, all handsets will already be registered with the base station. You do not need to register the handset again. ? However, if a handset is not registered with the base station (Register HS or Put into base is displayed), please register the handset manually (page 13).

? Handset and charging cradle package: please register the handset manually (page 13). After the first battery charge and discharge, you may place your handset in the charger after every call. Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons. ? ? ? ? Changing the display language Change the display language if you do not understand the language currently set: Menu 421 (press the keys one after the other) q (select language) OK (? = current language)? Press and hold the end call key a to return to idle status. Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. Menu q Settings OK Date/Time OK Date ~ (enter the day, month and year in 6-digit format)? OK Time ~ (enter hours and minutes in 4-digit format) OK (display message: Saved)? a (press and hold to return to idle status). You can move the position of an entry to the left or right by pressing the control key left or right r.

Please note If your phone receives the date and time during calling line display (e.g., via your network provider, a router or PABXs), you can specify whether this data should be copied to your phone: Press the key sequence: Menu P#Q5#MI 973 SET: [0] The following is displayed; the current setting flashes: Press one of the following keys to specify, when this data should be copied to your phone: ? Q Never? Once, in case the date/time is not set on your phone ? or 1 or 2 Always Your selection is displayed (e.g., 2): 973 SET: [2] Press the display key OK. Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.

2012 6 Display in idle status Once the phone is registered and the time set, the idle status is shown as in this example. Screen display ? Reception between the base station and the handset: - Good to poor: - No reception: ? Activating the answering machine (A420A only): - Your answering machine is activated. ? Battery charge status: - U Charged over 66% - V Charged between 34% and 66% - e Charged between 11% and 33% - = Charged less than 11% - = Flashes: batteries almost empty (less than 10 minutes talktime) = e V U Bate right control key v to mute the handset. Press the control key v again to reactivate the microphone. Automatic network provider preselection You can store a call-by-call number (preselection number), which is automatically placed in front of numbers when you dial them.

If, for example, you wish to make international calls via special network providers, you can save the relevant dialling code here. In the "With Preselect" list, specify the dialling codes or the first digits of the dialling codes that you wish to assign to the preselection number. In the "Without Presel." list, enter any exceptions to the "With Preselect" list. Example: Presel.

Number With Preselect Without Presel. 0999 08 081? 084 All numbers that start with 08, except for nly)/network mailbox Your selection is displayed (e.g., 5 for missed calls); the current setting flashes: 975 SET: [0] Press key Q or I, to set the behaviour for new messages: Q The presence of new messages is displayed (default setting).? The presence of new messages is not displayed. or 1 Your selection is displayed (e.g., 1): 975 SET: [1] Press the display key OK. Settings will only be changed once a new message has been received. Please note When calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (depending on your network provider).

Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 10 Calls list Prerequisite: CLIP (page 7) Depending on the type of list set, the calls list contains (page 24): ? Answered calls ? Missed calls ? Calls recorded from the answering machine (A420A only) Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. Open the calls list ? q CallsList The calls list is displayed as follows:? Number of new entries + number of old, read entries CallsList 01+02 ? Press OK to open the list. The last incoming call is displayed. If necessary, use q to select another entry. q (select entry) Menu Delete Entry Copy to Dir.

Date/Time Status Delete List Using other functions The following functions can be selected with q: Delete current entry. Copy an entry to the directory. Call date and time (if set). New Call: new missed call. Old Call: entry already read.

Warning! All old and new entries will be deleted. ? q CallsList 01+02 OK q (select entry) c Answering machine list (A420A only) /Network mailbox list You can use these lists to listen to messages on the answering machine (see "Playing back/deleting messages" page 11) or network mailbox (page 13). Calling back a caller from the calls list Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.

fm / 19.04.2012 11 Operating the answering machine (A420A only) The answering machine is operated via the handset or via the keys on the base station. Information on operating the answering machine via the keys on the base station (page 1). The following sections describe operation via the handset. You can record your own announcement messages using the handset. The pre-recorded announcement is used, if no personal announcement is available. If the memory is full, Answer M.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568914)

[GIGASET A420A user guide](http://yourpdfguides.com/dref/4568914)

<http://yourpdfguides.com/dref/4568914>

full! appears in the display and the answering machine switches itself off automatically. It activates again automatically when you delete old messages.

The answering machine has already been preset at the factory. Make individual settings using the handset. How to set a delay time, after which the answering machine is to answer a call, as well as how to set the recording length and activate call screening during the recording, see menu overview (page 23).

Activating/deactivating the answering machine Menu q Answer Machine OK q Answ. Mach. OK (? = on) When you switch on the answering machine, the icon appears in the display. Recording your own announcement You hear the ready tone (short tone). Now speak your announcement (at least 3 sec.). Press OK to confirm or press a or ? to reject your recording.

After recording, the announcement is played back for you to check. Please note: Recording ends automatically when the max. recording time of 170 seconds is reached or if there is a break in speaking of more than 2 seconds. Menu q Answer Machine OK q Announcements OK Rec announce. OK Start recording? OK Playing back or deleting announcements See menu overview page 23.

Playing back/deleting messages There are three ways to start playing back messages on the answering machine. ? Start message playback via the Answer Machine menu: ? Menu q Answer Machine OK q Play Messages OK? @@ q Answ. Mach. OK ? Start message playback via the answering machine list: ? ? q Answer M.? The list is displayed as follows: ? @@Press OK to open the list.

Fast access to the answering machine: ? To access the answering machine, simply press and hold the 1 key. @@@@The loudspeaker on the handset switches on automatically. To switch it off, press the handsfree key d. Messages consist of ? the message header (number/date/time) and ? the message body (recorded text). The header is played back first, then the body. @@? During message playback: 2 t or 1 s or 1 L Pause playback. @@Skipping back from the first message jumps to the last message. @@Go to the start of the next message. Skipping forward from the last message jumps to the first message. During playback of message header: Skip header.

During playback of message body: Go to the body of the next message. @@Playback stops. ? @@Delete all old Dial number. Continue message playback. Setting volume. Copy the caller's number to the directory. @@New messages can only be deleted during playback of message body. Deleting all old messages

During playback or when paused: Menu q Delete all old OK (Confirm the security prompt) Accepting a call from the answering machine You can accept a call while the answering machine is recording it: Menu Accept OK You can also accept the call by: ? Pressing the talk key c ? @@@@Prerequisites: ? You have set a system PIN other than 0000 (page 24). ? @@@@Stop playback. Press again to resume.

Go to the next message. @@ ~ Enter system PIN Your answering machine is activated. It tells you how much memory time is left. The messages are now played back. @@More information is available from your provider.

@@@@@3 seconds. @@1 minute. @@Handsets are assigned the lowest available internal number (1-4). @@@@The handset you are currently using is indicated by <. @@@@u q (Select the internal party) OK or c the handset is called.

Calling all handsets (group call) Press and hold u or u P or u q Call all OK or c all handsets are called. When a participant answers you can speak to him. To end the call, press a. You are in conversation with an external participant. Press the control key u and call one or all handsets. The external participant hears the hold music. When the internal participant answers: Announce the external call, if necessary. Either? press the end call key a. The call is transferred to the internal participant, or? press the display key ? . You are reconnected with the external participant.

When transferring a call you can also press the end call key a before the internal participant answers. Internal consultation call/connecting a call Listening in to an external call You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).

Prerequisite: The Listening in function must be activated. Activating/deactivating listening in Menu q Settings OK q Base OK q Listening in OK (? = on) You want to listen in to an existing external call. Press and hold the c key. You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone.

If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. Internal listening in (conference) Setting the alarm clock Activating/deactivating the alarm clock Menu q Alarm Clock OK Activation OK (? = on) When activated: ~ (Set the wake-up time) OK Setting the wake-up time Menu q Alarm Clock OK q Wake-upTime OK Enter the wake-up time in hours and minutes, then press OK. When the alarm clock rings, press any key to switch it off for 24 hours. If the alarm clock is set, the wake-up icon l will appear on the screen and the wake-up time will be displayed instead of the date. Template Bali, Version 1, 16.

02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 15 Phone settings For details on activating/deactivating advisory tones and battery low tones, see menu tree (page 23).

For details on setting the display contrast and large dialling numbers, see menu tree (page 24). For details on how to set the system PIN on the base station, see the menu overview (page 24). Changing the display language The current language is indicated by ?. If you accidentally choose a language you do not understand: Menu 421 (press the keys one after the other) q (select language) OK Menu q Settings OK q Handset OK q Language OK q (select language) OK Changing the handsfree/earpiece volume In idle status: t Handset Volume OK q Earpiece/Speaker OK q (set the volume level 1 to 5)? OK (? = selected) t q (set the volume level 1 to 5) During a conversation via the earpiece or in handsfree mode: The setting will automatically be saved after approximately 3 seconds or press the display key OK. You can also set the handsfree/earpiece volume using the menu Audio Settings (page 23). Setting the sound of the earpiece Adapt the sound of the earpiece to your needs. ? Low: Standard setting. ? High: High frequencies are emphasized. In idle status: t Handset Sound OK q Low/High OK (? = selected) You can also set the sound of the earpiece using the menu Audio Settings (page 23). Setting ring tones of the handset Setting the ringer volume In idle status: t q Ringer Volume OK q (set the volume level 1 to 5 or "Crescendo") OK (? = selected) You can also set the call volume using the menu Audio Settings (page 23).

Setting the ringer melody Set different ringer melodies for External Calls, Internal Calls and the Alarm Clock.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A420A user guide](#)

<http://yourpdfguides.com/dref/4568914>

t q Ringer Melody OK q External Calls / Internal Calls / Alarm Clock OK q (select melody)? OK (? = selected) You can also set the call volume using the menu Audio Settings (page 23). Time Control (day/night mode) You can specify a time period when you do not want the telephone to signal external calls e.g., during the night. In idle status: Template Bali, Version 1, 16.02.2012 Activating Time Control: Menu q Settings OK q Handset OK q Time Control OK Activation OK (? = activated) Menu q Settings OK q Handset OK q Time Control OK q Settings OK? Off from: ~ (Enter time in 4-digit format) OK Off until: ~ (Enter time in 4-digit format) OK Setting time period: Anonymous calls silent You can set your handset so that it doesn't ring for calls where Calling Line Identification has been withheld. The call will only be signalled on the display. Menu q Settings OK q Handset OK q An.

Call Silent OK (? = activated) Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 16 Activating/deactivating the ringer Deactivating/reactivating the ringer permanently In idle status, press and hold the star key P. If the ringer is deactivated, the icon appears in the display.

Menu Silent OK Deactivating the ringer for the current call Setting ring tones of the base station (A420A only) Set the Ringer Volume, Ringer Melody and the Time Control for the base station: Menu q Settings OK q Base OK Audio Settings OK? @@@@You will need to activate repeater mode (page 24).

@@@@Menu q Settings OK q Handset OK q Reset Handset OK Reset? OK Restoring the base station When restoring factory settings: ? Individual settings are reset. ? All lists are deleted. ? The No Radiation mode is deactivated. The date and time are retained.

The answering machine (A420A only) is ready for use approx. @@Handsets are still registered. ? The system PIN is not reset. Menu q Settings OK q Base OK q Base Reset OK Reset? @@All handsets are de-registered and ? The system PIN is reset to the original code 0000. @@@@When entering the digits, enter them slowly one after the other. @@Menu P#Q5#1L The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK. Changing the pause after the recall key Menu P#Q5#12 The number for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms enter number OK.

Appendix Entering letters/characters Standard characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. 1 1 2 a l d 4 g 5 j L m M p N t O w l) Q P * # 1) Space 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 13x 14x 15x b e h k n q u x . / \$ c f i l o r v y . (# 2 3 4 5 6 s 8 z ?) @ 7 9 ! < \ 0 = & + > % : " ? ; _ Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 18 Technical Data Batteries Technology: Nickel-metal-hydride (NiMH); Size: AAA (Micro, HR03); Voltage: 1,2 V; Capacity: 450 - 1000 mAh Handset operating times/charging times Your handset can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones. The operating time of your Gigaset depends on the capacity and age of the batteries and the way it is used. (Standby time/talk time/operating time are maximum possible values, charging times are typical values.) 550 220 14 115/85 6 5.5 Capacity (mAh) approx. 700 800 255 295 17 19 135/95 7 6. 5 150/110 8 7 1000 360 24 190/135 10 9 Standby time (hours) Talktime (hours) Operating time for 1.5 hrs of calls per day (hours),? No Radiation mode switched off/on Charging time in base station (hours) Charging time in charger (hours) Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: www.gigaset.com/service Base station power consumption In standby mode ? Handset in base station? ? Handset outside base station During a call A420 ca. 1. 0 W ca. 0.8 W ca. 1.0 W A420A ca. 1.2 W ca. 1.0 W ca. 1.

2 W General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors, up to 50 m indoors 230 V ~/50 Hz +5 C to +45 C, 20% to 75% relative humidity Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 19 Questions and answers If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service ? for 24-hour support. The table below contains a list of common problems and possible solutions.

Problem Nothing appears on the display. No wireless connection to the base station, Base flashes in the display. The display shows Register HS or Put into base. Handset does not ring. Cause The handset is not switched on.? The batteries are flat.

Solution Press the end call key a for approx. 5 seconds or place the handset in the base station. Charge or replace the batteries. The handset is outside the range of Move the handset closer to the base station.? the base station.

The base station is not turned on. Check the mains connector on the base station page 3. Handset has not been registered with the base station or has been de-registered. The ring tone is deactivated. The phone only rings if the phone number has been transferred. The phone does not ring in a specific time period. The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections. Register the handset page 13. Activate the ring tone page 16. Activate the ring tone for anonymous calls page 15.

? page 15. Deactivate the "Time Control" or change the time period You cannot hear a ringer/dialling tone from the fixed line network. Error tone sounds after system PIN prompt. PIN forgotten. Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer: 3-4 assignment of telephone leads/ EURO CTR37. The system PIN you have entered is Reset the system PIN to the default 0000 page 16. incorrect. All handsets are de-registered. All settings are reset. All lists are deleted.

Contact with liquid ! If the handset has come into contact with liquid: 1 Switch the handset off and remove the battery immediately. 2 Allow the liquid to drain from the handset. 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4 Do not switch on the handset again until it is completely dry. When it has fully dried out, you will usually be able to use it again. Template Bali, Version 1, 16.02.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A420A user guide](http://yourpdfguides.com/dref/4568914)

2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.

04.2012 20 Customer Service & Assistance You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase on www.gigaset.com/uk/service thus enabling us to provide you even with better service in case of questions or in case of a warranty claim. Your personal user account enables you to directly contact our customer service by email. In our constantly updated online service on www.gigaset.com/uk/service you can find:
? Extensive information about our products ? FAQ compilations ? Keyword search to help find topics quickly ? Compatibility database: Find out which base stations and handsets can be combined.

? Product comparison: Compare the features of several products with each other. ? Downloads for user manuals and current software updates ? E-mail contact form for customer service Our service representatives are available on the telephone for more advanced questions or in-person consultation. Here you can get competent advice on questions regarding installation, operation and configuration: UK: 0845 367 0812 (local call cost charge) Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. Authorisation This device is intended for analogue phone lines in the UK. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the Declaration of Conformity is available at this Internet address: ? www.gigaset.com/docs Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.

04.2012 21 Guarantee Certificate ? United Kingdom Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: ? In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. ? This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides. ? This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. ? The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. ? Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. ? This Guarantee shall apply to new devices purchased in the European Union. @ @ ? @ @ @ @ ? @ @ ? Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. ? The above provisions does not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications telephone service.

The relevant number is to be found in the accompanying user guide. Template Bali, Version 1, 16.02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 22 Environment Our environmental statement We at Gigaset Communications GmbH are aware of our social responsibility. That is why we actively take steps to create a better world. In all areas of our business ? from product planning and production to sales and waste of disposal ? @ @ @ @ @ @ @ @ Observe the local waste disposal regulations, details of which can be obtained from your local authority. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European ? Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. Template Bali, Version 1, 16.

02.2012 Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.fm / 19.04.2012 23 Menu overview Your phone has an extensive range of features.

These are offered in the form of menus. To select a function while the phone is in idle status, press Menu (open menu), use the control key q to scroll to the function you require and press OK to confirm. To return to idle status: press and hold the a key. Not all of the functions described in this user guide are available in all countries. Alarm Clock Activation Wake-upTime Audio Settings Handset Volume Handset Sound Ringer Volume Ringer Melody Advis.Tones Battery Low page 14 page 14 Earpiece/Speaker Low/High page 15 page 15 page 15 page 15 External Calls/Internal Calls/Alarm Clock On/off On/off Answer Machine Play Messages Answ. Mach. * Call Screening *? Net Mailbox ** Answ. Mach. ** Playing back messages on the network mailbox page 13.

Activating/deactivating the answering machine page 11. Playing back messages on the answering machine page 11. Screening of a message on the handset (handsfree mode) that is being recorded on/off.? Deactivate screening for the actual recording only: press end call key a.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A420A user guide](http://yourpdfguides.com/dref/4568914)
<http://yourpdfguides.com/dref/4568914>

? (Prerequisite: at least 1 handset with handsfree capability is registered.) Rec announce./Play announce./Del announce. Maximum/1 Minute/2 Minutes/3 Minutes Immediately/10 sec/18 sec/30 sec Auto If there are no new messages, the answering machine answers a call after 18 seconds. If new messages are present, the answering machine answers a call after just 10 seconds.

Assign key 1 with network mailbox. ? (In idle status, press and hold key 1 to dial.) Assign key 1 with answering machine.? (In idle status, press and hold key 1 to dial.) Announcements * Message Length * Ring Delay * page 11 Net Mailbox Set Key 1 * Enter number of the network mailbox page 13.

Net Mailbox Answ. Mach. Template Bali, Version 1, 16.02.2012 * base station with answering machine only ** base station with answering machine only and number of network mailbox entered Gigaset A420-A420A / Grobritannien / A31008-M2402-L101-1-7619 / Bali.

fn / 19.04.2012 24 Settings Date/Time Handset page 5 Language Big Dial Font Contrast Time Control An.Call Silent Auto Answer Register HS De-register HS Reset Handset page 15 Set bigger digits for dialling. Set the display contrast to 9 levels. Activation/Settings Activate/deactivate auto answer page 7. page 15 page 13 page 13 page 16 page 15 Base Audio Settings? (A420A only) Ringer Volume Ringer Melody Time Control page 16 page 16 page 16 page 10 Call list type System PIN Base Reset Additional Missed Calls/All Calls Change system PIN (default is 0000). page 16 Repeater XES Mode page 16 Activating/deactivating? (Activate in case of problems with echos on an analogue port of a router.) ECO DECT page 2 Listening in Preselection No Radiation/Max. Range page 2 page 7 page 14 Presel.

Number/With Preselect/Without Presel. Template Bali, Version 1, 16.02.2012 Issued by? Gigaset Communications GmbH? Frankenstr. 2a, D-46395 Bocholt Gigaset Communications GmbH 2012? Subject to availability. All rights reserved. ? Rights of modification reserved. www.gigaset.com? ? This user guide is made from 100 % recycled paper.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A420A user guide](#)

<http://yourpdfguides.com/dref/4568914>