



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A490. You'll find the answers to all your questions on the SIEMENS GIGASET A490 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET A490**  
**User guide SIEMENS GIGASET A490**  
**Operating instructions SIEMENS GIGASET A490**  
**Instructions for use SIEMENS GIGASET A490**  
**Instruction manual SIEMENS GIGASET A490**

Issued by  
Gigaset Communications GmbH  
Frankenstr. 2a  
D-46395 Bocholt  
Manufactured by Gigaset Communications  
GmbH under trademark license of  
Siemens AG.  
As of 1 Oct. 2011 Gigaset products bearing  
the trademark 'Siemens' will exclusively use  
the trademark 'Gigaset'.

© Gigaset Communications GmbH 2010  
All rights reserved. Subject to availability.  
Rights of modification reserved.  
www.gigaset.com  
This user guide is made from  
100% recycled paper.  
A31008-M2200-A601-3-ZU19



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A490 user guide](http://yourpdfguides.com/dref/3953098)  
<http://yourpdfguides.com/dref/3953098>

### Manual abstract:

@@As of 1 Oct. @@Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100% recycled paper. @@Display INT MENU " U T ~ OK Function when pressed Call other registered handsets page 14. Open main/submenu (see Menu tree page 25). Go back one menu level. Scroll up/down or adjust volume with u.

Move cursor to left/right with u. Backspace deletes one character at a time. Confirm menu function or save entry. € 2 The base station at a glance 1 Registration/paging key: Search for handsets page 13) (press briefly, "Paging" Register handsets page 13). (press and hold 2 On/Off key: activate and deactivate answering machine.

Lights up: answering machine is activated. Flashes: answering machine is operating. 3 Volume keys: (= quieter; + = louder) During message playback: adjust the speaking volume. While phone is ringing: adjust ringer volume. 4 Play/Stop key: Play back messages from the answering machine, or cancel playback.

Flashes: new messages available. Flickering: memory is full. During message playback: 5 Delete current message. 6 Skip to the start of the current message (press once) or go to the previous message (press twice). 7 Skip to next message. 1 € A495 only: 3 5 6 7 4 2 ECO DECT You are helping to protect the environment with your Gigaset A490/A495. Reduced energy consumption Your telephone has an energy-saving adapter plug and uses less energy. Reduced transmission power The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to almost zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode (see Menu tree page 26): 70% transmission power reduction in standby mode (top left display icon ½) and during a call.

The range of the base station is reduced. Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. 3 Safety precautions Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children. \$ Only use the mains unit supplied. Fit only the recommended, rechargeable batteries (€ page 16), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected.

Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g.

paint shops. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialled if the keypad lock (€ page 1) is activated! Not all of the functions described in this user guide are available in all countries. Care Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth.

This can cause static. If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by Gigaset service, as they could interfere with other wireless services. Contact with liquid! If the handset has come into contact with liquid: 1 Switch off the handset and remove the battery pack immediately. 2 Allow the liquid to drain from the handset. 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4 Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. 4 First steps Check the package contents One Gigaset A490/A495 base station, one power adapter one Gigaset A49H handset, one phone cord, two batteries, one battery cover, one user guide.

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with power adapter for each additional handset. Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. ☒ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

5 Connecting the base station ☒ Connect the plug from the power supply 1. ☒ Plug the power adapter into the plug socket 2. ☒ Then connect the telephone jack 3 and insert the cables into the cable ducts. Please note: The power adapter must always be connected, as the phone will not operate without mains connection. Only use the power adapter and phone cord supplied. Pin connections on telephone cables can vary. 2 1 3 1 1 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only rechargeable batteries recommended by Gigaset Communications GmbH (€ page 16).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A490 user guide](http://yourpdfguides.com/dref/3953098)  
<http://yourpdfguides.com/dref/3953098>

Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode.

The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. 6  $\nabla$  Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.  $\nabla$  Slide the battery cover from bottom up onto the casing until it clicks into place.  $\nabla$  If you need to open the battery cover, for instance to replace the batteries, press the ribbing at the top of the battery cover and slide it downward. Placing the handset in the base/charger Place the handset in the base/charger with its display facing forward. Each handset of your package is registered with the base at the factory. You do not need to register the handset again. If you wish to use your handset with a different base or use further handsets with your base, you have to register the handset manually (  $\nabla$   $\nabla$   $\nabla$  To charge the batteries, leave the handset in the base/charger.

Please note Only place the handset in the designated base/charger. 7 Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. 18 h  $\nabla$  Place the handset in the base station or charging cradle for 18 hours.  $\nabla$  Then remove the handset from the base station or charging cradle and do not replace it until the batteries are completely discharged. Please note After the first battery charge and discharge you may replace your handset in the base station or charging cradle after every call.

Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons. Warning Please ensure that the handset is in the charging cradle if you are absent for a long time (e.

g. during holidays) or remove the batteries from the handset. Otherwise the batteries could be damaged. Charge status of the batteries The charge status is indicated by the top right display icon. After the initial charging procedure a complete charging to full capacity takes at least 18 hours. e U (flat to full) e flashes: batteries almost flat U flashes: charging Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. MENU Settings OK Date/Time OK Date: ~ (enter the day, month and year in 6-digit format) Time: ~ (enter hours and minutes in 4-digit format) OK return to idle status)  $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$   $\nabla$  OK  $\nabla$  a (press to Please note When entering the time and date, you can move the position of an entry to the left or right by pressing the control button up or down. 8 Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example. If the answering machine is activated (A495), the answering machine icon  $\pm$  will be displayed in the header. Your answering machine is set with a prerecorded announcement.

$\pm$  U 11:56 11.12. INT MENU Activating/deactivating the handset Press and hold the a key to activate or deactivate the handset. If you place a deactivated handset in the base station or charging cradle, it will automatically activate. Your phone is now ready for use. If you have any questions about using your phone, please read the tips on troublepage 17) or contact our Customer Care shooting ("Questions and answers" team page 22.  $\nabla$  9 Making calls Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The phone number is dialled. (Or you can first press and hold c to hear the dial tone and then enter the number.) During the call you can adjust the earpiece volume using t and set the volume with u.

End the call/cancel dialling: Press the end call key a. Muting You can mute your handset when making external calls. Your caller can no longer hear you. Press the "Microphone off" key m during the call to activate/deactivate the function.  $\nabla$  c.

Handsfree (A490/A495) Activating while dialling: Enter the number ~ and press the handsfree key d. The handsfree key is illuminated red now. Switchcent; OK 11 Calls list Precondition: CLIP ( $\nabla$  page 9) Depending on the type of list set ( $\nabla$  page 26), the calls list contains: answered calls missed calls calls recorded by the answering machine (A495 only) Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. The calls list is displayed as follows: CallsList 01+02 Number of new entries + number of old, read entries Returning a call from the calls list f  $\nabla$  CallsList 01+02  $\nabla$  OK  $\nabla$  u (select entry)  $\nabla$  c Answering machine list (A495 only) You can use the answering machine list to listen to the messages that are on the answering machine. The answering machine list is displayed as follows: VoiceMail 01+02 Number of new messages + number of old, played back messages Open the calls list f  $\nabla$  CallsList 01+02  $\nabla$  OK The last incoming call is displayed.

If necessary, use u to select another entry. Opening the answering machine list f  $\nabla$  VoiceMail 01+02  $\nabla$  OK If you have new messages, playback will start with the first new message, otherwise with the first old message. Call date and time (if set) are announced each time before playback. During message playback use t to activate the menu for setting the volume and use u to set the volume. press MENU to select the following functions with u: Repeat Next Previous Delete u (select entry)  $\nabla$  MENU The following functions can be selected with u: Delete Entry Copy to Dir. Date/Time Status Using other functions Delete current entry. Copy an entry to the directory. Call date and time (if set). New Call: new missed call. Old Call: entry already Repeat current message.

Play next message. Play previous message. Delete current message. read. Show Name If you have requested CNIP, you can view the name and town that are registered for this phone number with your network provider. Warning! All old and new entries will be deleted. Delete List 12 Operating the answering machine (A495) The answer machine can be operated from the handset or by using the key on the base station ( $\nabla$  page 1). The telephone is supplied with a prerecorded announcement. You can only record your own announcement messages using the handset. @ @ @ @ @ @ @ @ @ @ @ @ Make individual settings using the handset.

@ @ @ @ Now speak your announcement (at least 3 sec.). @ @ After recording, the announcement is played back for you to check.



**You're reading an excerpt. Click here to read official SIEMENS**

**GIGASET A490 user guide**

**<http://yourpdfguides.com/dref/3953098>**

Please note Recording ends automatically when the max. @page 25.

@@Preconditions: You have set a system PIN other than page 26. @@@@ Press again to resume. 3 Skip to next message. 0 Delete current message. @@@@3 sec.

2. On the handset: within 60 sec. @@@@It tells you how much memory time is left. The messages are now played back. @@1 minute. 14 De-registering handsets Handsets can only be de-registered by resetting the base station to its default settings. This will also reset every other setpage 15. ting Listening in to an external call You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).

Precondition: The Listening in function must be activated.

Using several handsets Making internal calls Internal calls are free calls to other handsets that are registered to the same base station. To make a call to other handsets, press Activating/deactivating listening in MENU Settings OK Base Listening in OK On/Off OK OK OK Internal listening in (conference) To listen in to an existing external call, press and hold the c key. You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone. If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. ~ (1...

4, enter internal number of the handset), the handset is called or INT star key P, all handsets are called. When a participant answers you can speak to them. To end the call, press a. INT OK Internal consultation call/ connecting a call You are in conversation with an external participant. Press the INT key and call one or all handsets.

Before the internal participant has answered, press the end call key a; the call is diverted to the participant who answers the call. After the internal participant has answered, you can talk to him. Press the end call key a; the call is diverted, or press the " display key; you are reconnected to the external participant. Setting the alarm clock Activating/deactivating the alarm clock MENU Alarm Clock OK Activation OK Off or On OK OK OK When activated: Set the wake-up time OK When the alarm clock rings, press any key to switch it off for 24 hours. If the alarm clock is set, the wake-up icon l will appear on the screen and the wake-up time will be displayed instead of the date.

Setting the wake-up time MENU time OK Alarm Clock OK Wake-up OK Enter the wake-up time in hours and minutes, then press OK. 15 Phone settings For details on how to make audio settings, page 25. see Menu tree For details on how to set the system PIN on the base station, see the Menu tree page 26. Hardware reset Disconnect the power cord from the base station. Hold down the registration/paging key (page 1) on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Settings OK Handset OK Language OK select the language OK MENU OK Changing the display language Changing the dialling mode You can set the dialling mode via menu. MENU Settings Dialling Mode dialling or Pulse OK Base OK OK select Tone OK. If you accidentally choose a language you do not understand, press Setting Recall You can set the recall time manually. MENU Settings Recall OK Medium or Long OK OK OK OK OK MENU OK OK.

Select another language with u and press OK Base OK select Short or OK. Resetting the handset You can reset individual settings and changes that you have made. Entries in the directory and the handset's registration to the base station will be retained. Appendix Entering letters/characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. Standard characters 1 2 I 4 5 L M N O Q 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 13x 14x 1) Settings OK Handset OK Reset Handset OK Reset? MENU OK OK Cancel the reset with a. Restoring the base station to the factory settings When restoring factory settings: All handsets are de-registered Individual settings are reset All lists are deleted The system PIN is reset to the original code 0000 Only the date and time are retained. Software reset MENU Settings OK Base Reset OK Base OK P # a d g j m p t w . \* Abc --> 123 1 b e h k n q u x , / 123 --> abc £ c f i l o r v y ? ( # \$ % & ' ; \_ ) Space 16 Specifications Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 650 mAh We recommend the following types of battery: GP 550/700 mAh Yuasa Phone 700/800 mAh Peacelbay 550/650 mAh Corun Ni-MH AAAJ650 (650 mAh) Highpower HFR-44AAAJ650 (650 mAh) (Valid at the time of going to press) The handset is supplied with recommended batteries.

Authorisation This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.

com/docs Base station power consumption In standby mode Handset in base station Handset outside base station During a call approx. 1.3 W approx. 0.8 W approx.

1.0 W General specifications DECT standard Range Operation time (DECT version) Talk time Standby time Base station power supply Environmental conditions in operation is supported up to 300 m outdoors up to 50 m indoors up to 12 hours up to 177hours 100/240 V~, 50 Hz +5 °C to +45 °C, 20% to 75% relative humidity 17 Questions and answers If you have any queries about the use of your telephone, visit our website at www.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A490 user guide](#)

<http://yourpdfguides.com/dref/3953098>

[gigaset.com/customercare](http://gigaset.com/customercare) for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Cause Solution Press the end call key a for approx. 5 seconds or place the handset in the base station. The batter- Charge or replace the ies are flat. batteries. No wireless The hand- Move the handset connection set is out- closer to the base to the base side the station.

station, range of Base flashe the base Register the handset page 13. s in the dis- station. play. The hand- Check the mains conset is not nector on the base stapage 5. registered. tion The base station is not turned on. You cannot The phone Please always use the hear a cord sup- phone cord supplied or ringer/dial- plied has ensure that the ling tone not been pin connections are used or from the correct when purchasfixed line has been ing from a retailer: network. replaced 3-4 assignment of by a new telephone leads/ cord with EURO CTR37. the wrong jack connections. Error tone The sysReset the system PIN to sounds after tem PIN the default 0000 page 15.

system PIN you have entered is All handsets are prompt. incorrect. de-registered. All setPIN forgottings are reset. All lists ten. are deleted. Nothing The handappears in set is not the display. switched on. € € € 18 Customer Service & Assistance Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal [www.gigaset.com/service](http://www.gigaset.com/service). In our constantly updated online service you can find: Extensive information about our products FAQ compilations Keyword search to help find topics quickly Compatibility database: Find out which base stations and handsets can be combined. Product comparison: Compare the features of several products with each other. Downloads for user manuals and current software updates E-mail contact form for customer service Please register your phone online right after purchase. This enables us to provide you with even better service regarding questions or an after sales query/issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country. Our representatives are also available on the telephone hotlines for consultation. 19 Customer Service & Assistance Australia . . .

.....  
 .....  
 .... 1300 780 878 Austria.

.....  
 0043 1 311 3046 Bahrain . . . . .

. 97 31 73 11 173 Belgium . . . . .

... .0 78 15 66 79 Bosnia Herzegovina . . . . .

..... .033 276 649 Brazil . . .

..... 4003 3020 (grandes cidades e regiões metropolitanas Custo de uma ligao local) . . . . .

..... 0800 888 3020 (demais localidades - Gratuito) Bulgaria . . . . .

.. +359 2 9710666 (0.50 . ). Canada . . . . .

. 1-866 247-8758 China . . . . .

..... .0 21 400 670 6007 (RMB 0.11) Croatia. . .

... 01 2456 555 (0,23 Kn) Czech Republic. .

..... +420 23303 2727 Denmark. . . . .

.. +45 (0) 35 25 86 00 Finland . . .

..... 09 231 134 25 France . . . . .

... +33 170 706 181 Coût d'un appel local depuis une ligne fixe France Télécom. Germany. ....

.....  
.....

01805 333 222 Der Anruf kostet Sie aus den deutschen Festnetzen 0,14 pro Minute. Anrufe aus den deutschen Mobilfunknetzen kosten höchstens 0,42 pro Minute. Greece ...

.....

..... 801-1000 500 ( 0,0026 .  
) Hong Kong .....

.....  
.....

.. 2763 0203 .....

.....  
.....

..... 2389 7285 Hungary .....

.....  
.....

.06 14 71 24 44 (27 Ft) India .....

.....  
. Please refer to your ...

.....  
.....

..... local warranty card Indonesia ..

.....  
.....

..... (62-21) 5673813 ...

.....  
.....

... (62-21) 888856000 Ireland .....

.....  
.....

. 18 50 77 72 77 Italy .....

.....  
.....

199.15.11.15 ( cent 8,36 + IVA al minuto da telefono fisso della rete Telecom Italia senza scatto alla risposta mentre per le chiamate effettuate attraverso la rete di altri operatori fissi o mobili consultate le tariffe del vostro operatore) Jordan . .

.....  
.....

..... 00962 6 5625460/1/2 Kuwait .

.....  
.....

+965 -22458737/22458738 Lebanon .....

.....  
.....

. +9611240259/ .....

.....  
.....

..+9611236110 Luxembourg .....

.....  
.....

.. +352 8002 3811 Malaysia ...

.....  
.....

..... +603-8076 9696 Malta .....

.....  
.....

+390 2360 46789 (0,10 ) Mexico . . . .01800 999 4442738 (01800 999 GIGASET) Netherlands . . . . .

. . . . . 0900-3333102 (0,25 per minuut (vast net).

Voor oproepen uit het mobiele netwerk kunnen andere prijzen gelden.) New Zealand . . . .

. . . . .

. . . . . 0800 780 878 Norway .

. . . . .

. . . . .

. . . . .

. . . . @@@For samtaler fra mobil vil det gjelde egne priser.) Oman . . . . .

. . . . . +968 709281 Ext. 49/21/75 Poland . .

. . . . .

. . . . .

. . . . .

. . . . 801 140 160 Portugal . . . . .

. . . . .

. . . (351) 808 781 223 (custo de uma chamada local) Qatar . .

. . . . . 00974 4257777 / 00974 4257844 Romania . . . . .

. . . . .

. . . +40 021 204 9130 Russia . . .

. . . . .

. . . . .

. . . . .8 (495) 2281312 Saudi Arabia . . . . .

. . . . .00966 2 6500282 Ext. 209 Serbia. . .

. . . . .

. . . . .

. . . . . 0800 222 111 Singapore . . .

. . . . .

. . . . .

. . . . .

. 6735 9100 Slovak Republic . . . . 02 59 68 22 66 (4,428 sk) Slovenija . . . . .

. . . . .

. . . . .

. . . . . 01 5644171 South Africa .

. . . . .

. . . . .

+2711 46 13 181 Spain . . . . .

. . . . .

. . . . .

. . . . . 902 103935 Sweden . . .

. . . . .

. . . . .

. . . . .08-750 99 11 Switzerland . . . . .

. . . . .

. . . . .

. . . . . 0848 212 000 Taiwan . . . . .

. . . . .

. . . . .

. . . . . 02 266 24343 Turkey .

. . . . .

. . . . .

. . . . . 0216 459 98 59 Ukraine . . . . .

. . . . .

. . . . . +380-44-451-71-72 United Arab Emirates . .

.....+97144458255/.....

.....  
.....  
.....

..... +97144458254 United Kingdom. ....

.....  
.. 0 84 53 67 08 12 USA ...  
.....

.....  
.. 1-866 247-8758 Vietnam. ...  
.....  
.....

..... @@@@@Proof of purchase (receipt) has to be submitted. 20 Manufacturer warranty (Middle East) For Southern Africa: In the event of an after-sales issue/warranty claim please refer back to your point of purchase. Proof of purchase (receipt) has to be submitted. 21 22 Service Centres (Middle East) KARAMA Sea Shell Electronics Opp. Karama Centre Dubai, UAE TEL: 00971-4-3979228 FAX: 00971-4-3966205 Sou 23 Saudi Arabian Service Centers: JEDDAH SERVICE CENTER: AL-AMAL PLAZA, HAIL STREET, TEL: 02-6500282 EXT. 209, JEDDEH, SAUDI ARABIA. RIYADH SERVICE CENTER: OLAYA STREET, TEL: 01-4622470/4623850, RIYADH, SAUDI ARABIA. KHOBAR SERVICE CENTER: AL-KHOBAR STREET, TEL: 03-8944193/03-8952359, AL-KHOBAR, SAUDI ARABIA. TEL: 00966-7-2230772 TEL: 00966-4-4219232 24 Customer Service Hotline Kuwait Tel: 0096522458737 / 0096522458738 25 Menu tree Your phone has an extensive range of features. These are offered in the form of menus.

To select a function while the phone is in idle status, press MENU (open menu), use Alarm Clock Activation Wake-up time Activating/deactivating the alarm clock Input format: HHMM the t and v keys to scroll to the function you require and press OK to confirm. To return to idle status: press the a key.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A490 user guide](#)  
<http://yourpdfguides.com/dref/3953098>



Audio Settings Handset Volume Earpiece Speaker Ringer Volume Ringer Melody 3 levels available 5 levels available 5 levels + "crescendo" available External Calls Internal Calls Alarm Clock 10 melodies available 10 melodies available 10 melodies available Advis. Tones Switch advisory tones (e.g. positive or negative confirmation, menu start, key tones, battery warning) on or off. Assign key 1 with network mailbox and enter the network mailbox number (in idle status, press and hold key 1 to dial). Netw. Mailbx: your network provider's answer machine; must be requested separately. The network mailbox list can be displayed if your network provider supports this function and if key 1 has been assigned with the network mailbox. Assign key 1 with answer machine (in idle status, press and hold to dial). VoiceMail Set Key 1 (all devices) Netw. Mailbx (Devices with answer machine only) Answer Mach. Call Screening Answer Mach. Activating/deactivating the answer machine Handset Base You can use the loudspeaker on the handset to screen a message that is being recorded.

You can use the loudspeaker on the base station to screen a message that is being recorded. Announcements Rec announce Play announce Del announce & page 12 Play your announcement Delete your announcement No limit per call (overall recording time up to 12 minutes). Message Length Maximum 26 1 Minute 2 Minutes 3 Minutes Ring Delay Immediately 10 sec 18 sec 30 sec Auto Limit the recording time to 1 minute per call. Limit the recording time to 2 minutes per call. Limit the recording time to 3 minutes per call. Call is answered immediately. Call is answered after 10 seconds. Call is answered after 18 seconds. Call is answered after 30 seconds. If there are no new messages, the answer machine answers a call after 18 seconds.

If new messages are present, the answer machine answers a call after just 10 seconds. Language Delete all old Set the language for answer machine messages. & page 12 Settings Date/Time Handset Language Auto Answer Register HS Call list type Set the display language Enter date (DDMMYY format), then time (HHMM format) & page 9 & page 7 & page 15 & page 13 & page 11 & page 11 5 levels available 10 melodies available Automatically activate/deactivate auto answer Manually register the handset Missed Calls All Calls Reset Handset Base Audio Settings (A495 only) Reset the handset & page 15 Ringer Volume Ringer Melody System PIN Base Reset Additional Change system PIN (default is 0000) Restore factory settings Eco Mode & page 15 Activating/ deactivating page 2 Listening in Dialling Mode Recall & Activate/deactivate the function & page 14 Tone dialling & page 15 Pulse & page 15 Set the number for the current recall flashes & page 15 1 Gigaset A490/A495 Présentation du combiné 1 2 3 4 5 6 7 8 9 10 11 12 Niveau de charge des batteries Icône Répondeur (A495 uniquement) Touches écran Touche Message Clignote : nouveau message reçu Touche Mains-Libres Touche de navigation (u) Touche Décrocher Touche Répertoire (appui bas sur la touche de navigation) Touche Raccrocher et Touche Marche/Arrêt Sonnerie activée/désactivée (appui long en mode veille) Activation/désactivation du verrouillage clavier (appui long) Touche Retour d'appel - Double appel (flash) - Pause entre les chiffres (appui long) Microphone Touche « Microphone éteint » 1 2 ±U 11.12. INT 11:56 MENU 3 4 5 6 7 8 9 d 13 14 A noter Charger le combiné pendant 18 heures avant la première utilisation.

10 11 12 13 14 Touche écran du combiné : Appuyer sur une touche lance la fonction qui apparaît au-dessus de cette touche sur l'écran. Affichage INT MENU " U T ~ OK Fonction Appeler les autres combinés inscrits p. 14. Ouvrir le menu principal/sous-menu (voir Arborescence des menus p. 25). Niveau de menu précédent. Naviguer vers le haut ou vers le bas ou régler le volume avec la touche u. Déplacer le curseur vers la gauche/droite avec la touche u. Effacer caractère par caractère vers la gauche. Confirmer la fonction du menu ou enregistrer l'entrée. & & .



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3953098)

[GIGASET A490 user guide](http://yourpdfguides.com/dref/3953098)

<http://yourpdfguides.com/dref/3953098>