



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A49H. You'll find the answers to all your questions on the SIEMENS GIGASET A49H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A49H
User guide SIEMENS GIGASET A49H
Operating instructions SIEMENS GIGASET A49H
Instructions for use SIEMENS GIGASET A49H
Instruction manual SIEMENS GIGASET A49H

1

Gigaset A39H/A49H

Breve resumo do aparelho

- 1 Status de carga das baterias
- 2 Teclas do visor
- 3 Tecla de mensagem
Piscando: novas mensagens recebidas
- 4 A39H: □ Tecla da agenda telefónica
A49H: ◀ Tecla do viva-voz
- 5 Tecla de controle (⌂)
- 6 Tecla para falar
- 7 ■ Tecla da agenda telefónica (pressione a tecla de controle)
- 8 Tecla de encerramento de chamada e tecla liga/desliga
- 9 Tom de campainha ligado/desligado (mantenha pressionado para ativar/desativar)
- 10 Teclado bloqueado/desbloqueado (mantenha pressionada para ativar/desativar)
- 11 Tecla R (flash)
- Chamada de consulta (flash)
- Pausa de discagem (mantenha pressionado)
- 12 Microfone
- 13 Tecla de "Mute"



Observação

Carregue o aparelho por 18 horas antes do primeiro uso.

Tecla do visor do aparelho:

O ato de pressionar qualquer tecla inicia a função que aparece acima da tecla no visor.

Visor	Função quando pressionada
INT	Chamada a outros aparelhos registrados → pág. 11.
MENU	Abertura do menu principal/submenu (consulte a árvore do Menu → pág. 17).
⏪	Retroceda um nível do menu.
⬆	Role para cima ou para baixo ou ajuste o volume por meio das teclas [⬆].
↔	Mova o cursor para a esquerda/direita por meio da tecla [↔].
⌂	A tecla de retorno exclui um caractere por vez.
OK	Confirme a função do menu ou armazene a entrada.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953004)
<http://yourpdfguides.com/dref/3953004>

Manual abstract:

Durante as chamadas, use a tecla t para ativar o menu para configuração do volume do viva-voz e use a tecla u para definir o volume. 1 Charge status of the batteries 2 Display keys 3 Message key Flashes: new messages received 4 A39H: h Directory key A49H: n Handsfree key 5 Control key (u) 6 Talk key 7 r Directory key (press down on the control key) 8 End call key and On/Off key 9 Ringer tone on/off (press and hold in idle status) 10 Keypad lock on/off (press and hold) 11 Recall key - Consultation call (flash) - Dialling pause (press and hold) 12 Microphone 13 "Microphone off" key Please note Charge the handset for 18 hours before first use. Display key on handset: Pressing a key launches the function that appears above that key in the display. Function when pressed Call other registered handsets page 11. Move cursor to left/right with u. Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children. Only use the mains unit supplied. Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected.

Be aware of the technical conditions in your particular environment, e. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room.

the handset is not splashproof. Do not use your phone in environments with a potential explosion hazard, e. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. @@@@Not all of the functions described in this user guide are available in all countries.

Wipe down the handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by Gigaset service, as they could interfere with other wireless services. If the handset should come into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again.

You are helping to protect the environment with your Gigaset A39H/A49H. Your telephone has an energy-saving adapter plug and uses less energy. The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station.

The transmission power on the base station is reduced to almost zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even further by using Eco Mode. For further information, please see your phone's user guide. One Gigaset A39H/A49H handset, one charging cradle with power adapter, two batteries, one battery cover, one user guide. The charging cradle is designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The feet do not usually leave any marks on surfaces.

However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours. ❌ Connect the plug from the power adapter. Warning Use only rechargeable batteries recommended by Gigaset (€ page 12).

Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. ❌ Slide the battery cover from bottom up onto the casing until it clicks into place. @@@@This is not dangerous.

@@ g. During holidays) or remove the batteries from the handset. Otherwise the batteries could be damaged. @@@@Your phone is now ready for use. @@@@~ (Enter the phone number) The phone number is dialled. @@@@You can mute your handset when making external calls. Your caller can no longer hear you but you can still hear them. @@@@ the handsfree key is illuminated red now. @@@@The handset indicates an incoming call by ringing and by a display on the screen. Press the talk key c to accept the call.

When Auto Answer is activated (see Menu page 14), simply remove the handtree set from the base station/charging cradle. In idle state, use t to activate the menu for setting the call volume and use u to set the volume. You can save up to 80 phone numbers (max. 32 digits) with corresponding names (max. When you get a call, the caller's number will be displayed on your handset; the caller's name will be displayed if it is stored in the directory. Preconditions: 1 You have asked your network provider for the caller's number (CLIP) to be displayed on your handset screen. 2 The caller has asked the network provider for his number to be identified (CLI). © appears in the display if you have not requested Calling Line Identification, Withheld appears if the caller has withheld CLI, and Unavailable appears if the caller has not requested CLI. You have Sending the directory to another handset Preconditions: The sending and receiving handsets must both be registered to the same base station. The other handset and the base station can send and receive directory entries.

The following options: Use u to scroll through the entries until the required name is selected. Enter the first character of the name and scroll to the entry with u, if required. The following functions can be selected with u: Dialling from the last number redial list c (press briefly) € u (select entry) € c Managing entries in the last number redial list c (press briefly) € u (select entry) Then dial or use other functions with MENU. Send the complete list to another handset (€ page 9). You can select the following settings: Then dial or use other functions with MENU.

The message key flashes as soon as a new entry appears in the calls list/answer machine list.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953004)
<http://yourpdfguides.com/dref/3953004>

a message appears in the display. When you press the f key, all the lists are displayed. If only one list contains new messages, this will be opened automatically. Please note If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (depending on your network provider).

If necessary, use u to select another entry. The following functions can be selected with u: New Call: new missed call. Old Call: entry already To return calls using the incoming calls list, your phone's area code ("local area code") must be stored. For further information, please see your phone's user guide.

Precondition: CLIP (ç page 8) Depending on the type of list set (ç page 14), the calls list contains: answered calls missed calls Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. Number of new entries + number of old, read entries All old and new entries will be deleted. @@@@ When a participant answers you can speak to them. @@ Called or INT ç star key P ç OK, all handsets Changing the display You are in conversation with an external participant. Press the INT key and call one or all handsets. Before the internal participant has answered, press the end call key a; the call is diverted to the participant who answers the call.

After the internal participant answers, you can talk to him. Press the end call key a to divert the call, or press the " display key to reconnect to the external participant. If you accidentally choose a language you do not understand, press Select another language with u and press OK. You can reset individual settings and changes that you have made. When the alarm clock rings, press any key to switch it off for 24 hours. Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and .



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A49H user guide](#)

<http://yourpdfguides.com/dref/3953004>