



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A49H. You'll find the answers to all your questions on the SIEMENS GIGASET A49H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET A49H**  
**User guide SIEMENS GIGASET A49H**  
**Operating instructions SIEMENS GIGASET A49H**  
**Instructions for use SIEMENS GIGASET A49H**  
**Instruction manual SIEMENS GIGASET A49H**

## Gigaset A49H

### The handset at a glance

- 1 Charge status of the batteries
- 2 Display keys
- 3 Message key  
**Flashes:** new messages received
- 4 Speaker key
- 5 Control key (C)
- 6 Talk key
- 7 Directory key  
(press **down** on the control key)
- 8 End call key and On/Off button
- 9 Ringer tone on/off  
(press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Flash key  
- Consultation call (flash)  
- Dialing pause (press and hold)
- 12 Microphone
- 13 Mute key

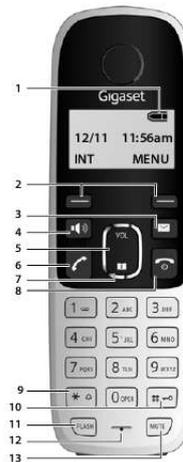

### Please note

Charge the handset for 18 hours before first use.

### Display keys on handset:

Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
INT	Call other registered handsets → page 10.
MENU	Open main/submenu (see Menu tree → page 19).
➤	Go back one menu level.
⬆	Scroll up/down or adjust volume with [C].
↔	Move cursor to left/right with [C].
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953085)  
<http://yourpdfguides.com/dref/3953085>

### Manual abstract:

Move cursor to left/right with u. You are helping to protect the environment with your Gigaset A490. @@@@The base station's transmission power is reduced to almost zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even further by using Eco Mode. For further information, please see your phone's user guide. Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children. Use only the power adapter supplied. only insert approved rechargeable batteries of the same type. Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.

Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e. Notice to Hearing Aid Wearers: This phone system is compatible with inductively coupled hearing aids. Do not install the phone in a bathroom or shower room. the handset is not splashproof.

Do not use your phone in environments with a potential explosion hazard, e. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialed if the keypad lock (ç page 1) is activated! Not all of the functions described in this user guide are available in all countries. Wipe down the handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. If you give your phone to a third party, make sure you also give them the user guide. Remove faulty base stations from use as they could interfere with other wireless services. If the handset comes into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven, etc. ).

Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. One Gigaset A49H handset, One charging cradle with power adapter, Two batteries, One battery cover, One user guide. The charging cradle is designed for use in dry rooms in a temperature range of +41°F to +113°F. This is up to 984 feet in unobstructed outdoor areas and up to 165 feet inside buildings. The feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Never expose the telephone to the influence of heat sources, direct sunlight or Protect your Gigaset from moisture, dust, corrosive liquids and fumes. Warning Use only rechargeable nickel-metal hydride (NiMH) UL-approved AAA batteries recommended by Gigaset Communications GmbH (ç page 11). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. ✕ Insert the batteries with the polarity in the correct direction. Bottom up onto the casing until it clicks into place. Before you can use the phone, you must first register the handset to the base station.

the actual registration procedure will depend on the type of base station. You must activate manual registration of the handset on both the handset and the base station. The following is displayed after successful registration: If more than one handset is registered to the base station, the internal handset number appears in the top left of the display, e. The correct charge level can only display if the batteries are first fully charged and discharged. ✕ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are completely discharged.

After the first battery charge and discharge you may replace your handset Always repeat the charging and discharging procedure if you remove the The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons.

Warning Please ensure that the handset is in the charging cradle if you are absent for a long time (e. g. During holidays) or remove the batteries from the handset. Otherwise the batteries could be damaged. After the initial charging procedure a complete charging to full capacity takes at least 18 hours. Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. MENU Settings OK Date/Time OK Date: ~ (enter the month, day and year in 6-digit format) OK Time: ~ (enter hours and minutes in 4-digit format, change am/pm by pressing P or #) OK a (press to return to idle state) Please note When entering the time and date, you can move the position of an entry to the left or right by pressing the control button up or down.

Once the phone is registered and the time set, the idle display shows as in this example. If more than one handset is registered to the base station, the internal handset number appears in the top left of the display, e. Your phone is now ready for use. If you have any questions about using your phone, please read the tips on troublepage 12) or contact our Customer Care team shooting ("Troubleshooting" page 16. Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The phone number is dialed. (Or you can first press and hold c to hear the dial tone and then enter the number. ) During the call you can adjust the earpiece volume using t and set the volume with u. You can mute your handset when making external calls. Your caller can no longer hear you but you can still hear them.

Press the Mute key m during the call to activate/deactivate the function. Activating while dialing: Enter the number ~ and press the speaker key d. the speaker key is illuminated red now. Switching between earpiece and speaker mode: During a call and press the speaker key d to activate or deactivate the speakerphone. During a call, use t to activate the menu for setting the speaker volume and use u to set the volume.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3953085)

[GIGASET A49H user guide](http://yourpdfguides.com/dref/3953085)

<http://yourpdfguides.com/dref/3953085>

The handset indicates an incoming call by ringing and by a display on the screen. Press the talk key *c* to accept the call. When Auto Answer is activated (see Menu page 19), simply remove the handset set from the base station/charging cradle. In idle state, use *t* to activate the menu for setting the call volume and use *u* to set the volume. You can save up to 80 entries in the directory.

Each entry can contain a maximum of 32 characters for the phone number and an additional 14 characters for the name. Caller ID (CID) and Caller Name ID (CNID) are optional subscription services provided by your telephone service provider. These features supply incoming caller identification information that displays on your handset. When you get a call, the caller's number displays on your handset; the caller's name displays if it is stored in the directory or if CNID has been requested. *®* appears in the display if you have not requested Caller ID, *Withheld* appears if the caller has withheld CID, and *Unavailable* appears if the caller has not requested CID. Following options: Use *u* to scroll through the entries until the required name is selected. Enter the first character of the name and scroll to the entry with *u*, if required. Dialing from the last number redial list *c* (press briefly) *¢ u* (select entry) *¢ c* Managing entries in the last number redial list *c* (press briefly) *¢ u* (select entry) The following functions can be selected with *u*: You can select the following settings: Create and save a new entry for the directory. Then dial or use other functions with *MENU*. Then dial or use other functions with *MENU*.

The message key flashes as soon as a new entry appears in the calls list/answering machine list. a message appears in the display. When you press the *f* key, all the lists display. If only one list contains new messages, this opens automatically. Please note If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (depending on your network provider). Send the complete list to another handset (*¢* page 9). Sending the directory to another handset Prerequisites: The sending and receiving handsets must both be registered to the same base station. The other handset and the base station can send and receive directory entries. Prerequisite: CID (*¢* page 8) Depending on the type of list set (*¢* page 19), the calls list contains: answered calls missed calls While the list is being transferred the handset displays Copy ##, identifying the handset numbers affected. When the transfer is complete, both handsets beep.

Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. Number of new entries + number of old, read entries Making internal calls Internal calls are free calls to other handsets registered to the same base station. To make a call to other handsets, press If necessary, use *u* to select another entry. The following functions can be selected with *u*: 4, enter internal number of the handset), the handset is called or INT star key *P*, all handsets are called. When a participant answers you can speak to them.

When you are using one handset for an external call, press the INT key to call one or all handsets. Before the internal participant answers, press the end call key *a*; the call is diverted to the participant who answers the call. After the internal participant answers, you can talk to him. Press the end call key *a* to divert the call, or press the " display key to reconnect to the external participant. New Call: new missed call.

*@@* warning! All old and new entries are deleted. *@@@* Press the relevant key the number of times indicated. *@@@@* You can reset individual settings and changes that you have made. *@@* DECT standard WDCT standard Range Operation time (DECT versed after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e. *@@@@@@@@@@@@@@@@* Connection to party line service is subject to state tariffs. *@@* Privacy of communications may not be ensured when using this phone. *@@@@@@@@* Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the system base should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the base farther away from the TV or VCR will often reduce or eliminate the interference. However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1.

Connect the base station into an outlet on a circuit different from that to which the receiver is connected. This phone system is compatible with inductively coupled hearing aids. In the event of a power outage, your cordless telephone will not operate. the cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages. 9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock. 10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.

11. To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

12. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a. ) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation. Avoid using a telephone (other than a cordless type) during a thunderstorm.

There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrestor. 14. Do not use the telephone to report a gas leak in the vicinity of the leak. 15. Emergency/911 numbers may not be dialed if the keypad is locked. 26 AWG telecommunication line cord must be used with this phone. The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines. for body worn operation , the portable part (handset) has been tested and meets FCC RF exposure guidelines.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953085)  
<http://yourpdfguides.com/dref/3953085>

Use with an accessory that contains metal parts may not ensure compliance with FCC RF exposure guidelines.

Notice to telephone company service: If you need service from your telephone company, please provide them with the information Facility interface Code (FIC) Service Order Code (SOC) Universal Service Order Code (USOC) as indicated on the label on the bottom side of the base station. Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons. 1. Read and understand all instructions. Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool. Serious damage and/or injury may result if the unit falls. 6. Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered.

This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided. 7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company. 8.

Do not place objects on the power cord. Install the unit where no one can step or trip on the cord. To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions. Only use the batteries specified for use with this product. 2.

DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. Do not dispose of the batteries in a fire; the cells may explode. do not expose batteries to water. Check with local codes for special disposal instructions. Released electrolyte is corrosive and may cause damage to the eyes or skin. Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual. 7. Periodically clean the charge contacts on both the charger and handset.

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: 1-866-247-8758. Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications. The Product warranty period is one (1) year from the original date of purchase by you. , sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only. Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair. Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.

Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed. Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions. equipment and components not manufactured , supplied or authorized by Gigaset NAM. Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses. Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.

Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM. This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i. @@@@In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory. All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater. Support service will be provided for you by accessing the toll free customer service number: 1-866-247-8758 Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953085)  
<http://yourpdfguides.com/dref/3953085>

*Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.*

*If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at <http://www>. We reserve the right, to make changes without notice in equipment design and/or components. To select a function while the phone is in idle state, press MENU (open menu), use The t and v keys to scroll to the function you require and press OK to confirm. Assign key 1 with network mailbox and enter the network mailbox number (in idle state, press and hold key 1 to dial). netw. Mailbx: your network provider's answering machine; must be requested separately. The network mailbox list can display if your network provider supports this function and if key 1 has been assigned with the network mailbox. Date/Time Handset Enter date (MMDDYY format), then time (HHMM format, change am/pm by page 7 pressing P or #) Language (English, Spanish or French) Auto Answer Register HS Call list type Reset Handset Base Set the display language This Class B digital apparatus complies with Canadian ICES-003.  
Durante una llamada, use la tecla t para activar el menú y ajustar el volumen de manos libres, y use u para ajustar el volumen. .*



**[You're reading an excerpt. Click here to read official SIEMENS GIGASET A49H user guide](http://yourpdfguides.com/dref/3953085)**  
**<http://yourpdfguides.com/dref/3953085>**