



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A510A. You'll find the answers to all your questions on the SIEMENS GIGASET A510A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET A510A**  
**User guide SIEMENS GIGASET A510A**  
**Operating instructions SIEMENS GIGASET A510A**  
**Instructions for use SIEMENS GIGASET A510A**  
**Instruction manual SIEMENS GIGASET A510A**



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

**Manual abstract:**

VIP calls are then recognised by their ringtone and their background colour ( page 31). If you don't (always) want it to ring Use time control for calls ( page 46) or ensure that all calls from a withheld number are not signalled ( page 46). Other practical information Transfer the directory from an existing Gigaset handset ( page 31), use the shortcut function ( page 31) and adjust the background colour and contrast of the display to your requirements ( page 45).

Environment Gigaset Green Home ? be environmentally aware when using your phone. For details of our ECO DECT products, visit [www.gigaset.com/service](http://www.gigaset.com/service). For more information about your phone, visit [www.gigaset.com/gigasetA510](http://www.gigaset.com/gigasetA510).

After purchasing your Gigaset phone, please register it at [www.gigaset.com/service](http://www.gigaset.com/service) ? this will ensure that any questions you may have or warranty services you request are dealt with even faster! Have fun using your new phone! Version 4, 16.09.2005 1 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / overview.

fm / 19.05.2011 Overview Overview 1 23.04. Redial U 14 13 INT 1 10:53 Menu 11 2 3 10 12 4 5 6 7 9 8 Please note To change the display language, proceed as described on page 15/page 45.

1 Signal strength ( page 18) Icon changes when Eco Mode+ is activated ( page 41) 2 Control key ( page 20) Mute microphone ( page 29) 3 Talk/Handsfree key Flashing: incoming call; Lights up: handsfree mode activated; accept call; open redial list (press briefly); start dialling (press and hold); During a call: switch between earpiece and handsfree mode ( page 28) 4 Key 1 Open answering machine (A510A only)/ network mailbox (press and hold) 5 Star key Activate/deactivate ringtones (press and hold); With an open connection: switch from pulse dialling to tone dialling (press briefly) 6 Message key ( page 32) Access to call and message lists; Flashing: new message or new call 7 Microphone 8 Recall key - Consultation call (flash) - Insert a dialling pause (press and hold) 9 Hash key Keypad lock on/off (press and hold in idle status); toggles between upper/lower case and digits 10 End call key, On/Off key End call; cancel function; go back one menu level (press briefly); back to idle status (press and hold); activate/deactivate handset (press and hold in idle status) 11 Display keys ( page 4) 12 Display in idle status 13 Charge status of the batteries ( page 18) 14 Answering machine icon (A510A only) Answering machine switched on; Flashing: answering machine is recording a message or is being operated by another internal party Gigaset service contact numbers: For personal advice on our range of products and for repairs or guarantee/warranty claims call: Version 4, 16.09.2005 Service Centre UK: 0845 367 0812 (local call cost charge) 2 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / overview.fm / 19.05.2011 Overview Display icons The following icons are displayed depending on the settings and the operating status of your telephone: Signal strength ( page 18) or Eco Mode + icon ( page 41) Keypad locked ( page 22) Ringtone switched off ( page 46) Answering machine activated (A510A only) Batteries are charged ( page 18) Charge status of the batteries ( page 18) U INT 1 23.04. @@@@Menu Open a menu for further functions. OK Confirm selection. Del.

Delete key: Delete character by character from right to left. @@Flashes: at least one new message is present. Flashes very quickly: memory is full. During message playback: 5 Go to the next message. 6 Skip to the start of the current message (press once) or go to the previous message (press twice). 7 Delete current message. Gigaset A510A base Please note: If the answering machine is being operated from a handset or if it is recording a message (On/Off key flashes), it cannot be operated from the base at the same time. Gigaset A510 base 2 1 7 5 6 4 Registration/paging key ? Press briefly: search for handsets ("paging") page 43. ? Press and hold: register handsets and DECT devices page 42. 3 Version 4, 16.

09.2005 1 Registration/paging key Search for handsets (press briefly, paging page 43). Register handsets (press and hold page 42). 2 On/Off key Activating/deactivating the answering machine. Lights up: answering machine is activated.

Flashes: message is being played back or recorded. 3 Volume keys ( = quieter; = louder) During message playback: adjust the speaking volume. While phone is ringing: adjust ringer volume. 5 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / A510AIVZ.fm / 16.

05.2011 Contents Contents Gigaset A510/A510A ? your high-quality accessory . . . . .

. . . . . 1 Overview .

. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .

. . . . . 2 Display icons . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .

3 Display keys . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . .  
. . . . .

. . . . . 4 Main menu icons . . . . .

.....  
.....  
.....  
.....

*4 Base overview . . . . .*

.....  
.....  
.....  
.....

*..... 5 Safety precautions . .*

.....  
.....  
.....

*..... 9 First steps . . .*

.....  
.....  
.....  
.....

*... 10 Checking the package contents . . . . .*

.....  
.....  
.....  
.....

*..... Setting up the base and charging cradle (if included) .*

.....  
.....  
.....

*.... Connecting the base . . . . .*

.....  
.....  
.....

*. Connecting the charging cradle (if included) . . . . .*

.....  
.....  
.....

*..... Setting up the handset for use . . . . .*

.....  
.....  
.....  
.....

.....  
.....  
.. *Changing the display language* .....

.....  
.....  
.....

..... *Setting the date/time* ..

.....  
.....  
.....

.....  
.....  
.....

.... *What would you like to do next?* .....

.....  
.....  
.....

.....  
.....  
.....

*Control key* .....

.....  
.....  
.....

.....  
.....  
.....

..... *Keys on the keypad* .....

.....  
.....  
.....

.....  
.....  
.....

.... *Correcting incorrect entries* .....

.....  
.....  
.....

.... *Menu guidance* ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

. *Activating/deactivating the handset* ....

.....  
.....  
.....  
.....  
..... *Activating/deactivating the keypad lock* ..

.....  
.....  
.....  
.....  
..... *Understanding the operating steps* ....

.....  
.....  
.....  
.....  
..... *10 11 11 12 13 15 16 19 20 20 21 22 22 23 Using the phone* .

.....  
.....  
.....  
.....  
..... *20 Menu tree* .

.....  
.....  
.....  
.....  
..... *25 Making calls* .....

.....  
.....  
.....  
..... *27 Making an external call* .

.....  
.....  
.....  
.....  
.....  
.....  
..... *Ending a call* .....

.....  
.....  
.....  
.....  
.....  
.....  
..... *Accepting a call* ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*Calling Line Identification .....*

.....  
.....  
.....

.....  
.....  
.....

*.. Notes on phone number display (CLIP) .....*

.....  
.....  
.....  
.....

*. Handsfree operation .....*

.....  
.....  
.....

.....  
.....  
.....

*..... Switching to mute ..*

.....  
.....



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

.....  
.....

..... *Automatic network provider preselection* .....

.....  
.....  
.....

... 27 27 27 27 28 28 29 29 *Version 4, 16.09.2005 6 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / A510AIVZ.fm / 16.05.2011 Contents Using the directory and lists* ..

.....  
.....

.. *30 Directory* ..

.....  
.....  
.....  
.....

..... *Redial list* .....

.....  
.....  
.....

... *Function of the message key* .....

.....  
.....

.. *Answering machine list (Gigaset A510A only)* .....

.....  
.....

..... *Calls list* .....

.....  
.....  
.....  
.....

.....  
.....

..... *Operation via the handset* .....

.....  
.....  
.....

.....  
.....  
.....

..... *Activating/deactivating call screening* .....

.....  
.....  
.....  
.....

..... *Setting the recording parameters* .....

.....  
.....  
.....

.....  
.....  
.....

*Resetting fast access for the answering machine using key 1* .....

..... *Operating when on the move (remote o..*

.....  
.....  
.....

.....  
.....  
.....

*. Authorisation* .....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *Guarantee Certificate United Kingdom* .....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *Guarantee Certificate Ireland* .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....



.. Setting up the base and charging cradle (if included) The base and charging cradle are designed for use in dry rooms in a temperature range of +5C to +45C. Set up the base at a central point in the building on a level, non-slip surface or mount the base or charger on the wall page 62. Please note Pay attention to the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated ( page 41). The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Please note: u Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.

u Protect your Gigaset from moisture, dust, corrosive liquids and fumes. Connecting the base First connect the telephone jack 1 and insert the cables into the cable ducts. Then connect the power adapter 2. 2 1 Please note: u The power adapter must always be connected, as the phone will not operate without a mains connection. u Use only the power adapter and phone cord supplied.

Pin connections on telephone cables can vary (pin connections page 57). u The answering machine is ready for use approx. 15 seconds after the base has been connected or reset. Version 4, 16.09.

2005 11 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 First steps Connecting the charging cradle (if included) 2 Connect the flat plug from the power adapter 1. Plug the power adapter into the plug socket 2. 1 4 To disconnect the plug from the charger, press the release button 3 and disconnect the plug 4. 3 Version 4, 16.09.2005 12 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.

05.2011 First steps Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the battery and closing the battery cover Warning Use only rechargeable batteries ( page 55) recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Insert the batteries with the polarity in the correct direction. The polarity is indicated in the battery compartment. a b First insert the battery cover at the top a. Then press the cover b until it clicks into place. To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the casing, then pull the battery cover in an upward direction.

Version 4, 16.09.2005 13 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.

2011 First steps Initial charging and discharging of the batteries The correct charge status can only be displayed if the batteries are first fully charged and discharged. Charge the handset in the base for 6 hours. 6h Please note The handset must only be placed in the designated Gigaset A510/A510A base or charger. After charging, remove the handset from the base and only replace it when the batteries are fully discharged. u The handset is pre-registered with the base.

If you have purchased a model with multiple handsets, all handsets will already be registered with the base. You do not need to register the handset again. However, if a handset is not registered with the base (Register handset or Place handset into base flashes on the display), please register the handset manually page 42. u After the first battery charge and discharge, you may place your handset in the charger after every call. u Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. u The batteries may warm up during charging. This is not dangerous. u After a while, the charge capacity of the batteries will decrease for technical reasons. Please note If you have any questions about using your phone, please read the tips on troubleshooting ( page 51) or contact our Customer Care team ( page 50). Version 4, 16.

09.2005 14 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 First steps Changing the display language Change the display language if you do not understand the language currently set. Press right on the control key. L 4 English Press the keys L and 4 slowly one after the other. The display for setting languages appears and the current language (e.g., English) is selected.

Press down on the control key s ... Francais Back U ..

. until the language you wish to use is displayed e.g., French. OK Press the key below OK to select this language.

Francais English x The selection is marked with . Press and hold the end call key a to return to idle status. Version 4, 16.09.2005 15 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 First steps Setting the date/time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm clock can be used. Please note Depending on your network provider, the date and time may be displayed automatically. Redial Time Press the key below Time on the display screen to open the input field.

(If you have already set the date/time, open the input field via the menu page 26.) Enter Date: [04.04.2011] The Date/Time submenu is shown on the display. The active input position flashes.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

Enter the day, month and year as an 8-digit number via the keypad, e.g., Q4Q42Q11 for 4 April 2011. To change the input position, e.g., to correct an entry, press right or left on the control key. Back OK Press the key below OK on the display screen to save your entry. Enter Time: [07:15] Back Version 4, 16.09.2005 OK Enter the hours and minutes in 4-digit format via the keypad, e.g., QM15 for 07:15 am. Change the input position with the control key if necessary. Confirm with OK. 16 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.  
fm / 19.05.2011 First steps Saved ? The display shows Saved. You will hear a confirmation tone and the handset automatically reverts to idle status, or returns to the "Settings" menu if the setting was made via the menu. Please note If your phone receives the date and time during calling line display (e.g., via your network provider, a router or PABXs), you can specify whether this data should be copied to your phone: Press the following keys in sequence: v P#Q5#MI You will see the following display and the current setting will flash: 973 SET: [0] Press one of the following keys to determine when the date should be copied across: Q Never Or 1 Once, in case the date/time is not set on your phone Or 2 Always Your selection is displayed (e.g., 2 for Always): 973 SET: [2] Press the display key OK. Version 4, 16.

09.2005 17 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 First steps Display in idle status Once the phone is registered and the time set, the screen display is as follows (example). U u Reception between the base and the handset: ? Good to poor: INT 1 ? No reception: u Activating the answering machine: 12.04. 10:53 Your answering machine is set with a prerecorded announcement. Redial Menu u Charge status of the batteries: ? U charged over 66% ? V charged between 34% and 66% ? e charged between 11% and 33% ? = charged to below 11% ? = flashes: battery almost empty (less than 10 minutes talktime) ? = e V V lit up: batteries charging u INT 1 Internal name of the handset ( page 44) If Eco Mode+ ( page 41) is activated, the icon is displayed in the top left corner of the display. Screen display Your phone is now ready for use.  
Version 4, 16.09.2005 18 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.

2011 First steps What would you like to do next? Now that you have successfully set up your Gigaset, you can immediately start calling ? or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions. Information on ...  
Using the phone Setting ringtones Recording your own announcement for the answering machine Registering existing Gigaset handsets to a base Transferring directory entries from existing Gigaset handsets to new handset(s) Setting Eco Mode / Eco Mode+ Operating the telephone on a PABX Setting the earpiece volume ... is located here. g g g g g g g g page 20 page 46 page 35 page 42 page 31 page 41 page 49 page 45 Version 4, 16.09.2005 19 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 Using the phone Using the phone Control key In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black e.

g., v for "press the right edge of the control key". The control key has a number of different functions: When the handset is in idle status v s u t Open the main menu. Open the directory. Open the list of handsets. Call up the menu for setting the handset's call volume ( page 45). In menus and lists t/s Scroll up/down line by line. In input fields You can use the control key to move the cursor up t, down s, right v or left u. During an external call v s u t Mute the microphone.  
Open the directory.

Initiate an internal consultation call. Adjust the loudspeaker volume for earpiece and handsfree mode. Keys on the keypad c/Q/P etc. Press the matching key on the handset. ~ Enter digits or letters.  
Correcting incorrect entries You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then: u Use the display key Del. to delete the character to the left of the cursor u Insert characters at the cursor position u Overwrite the highlighted (flashing) character e.g., when entering time and date.

Version 4, 16.09.2005 20 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 Using the phone Menu guidance Your telephone's functions are accessed via a menu consisting of several levels (menu overview page 25). With the handset in idle status, press the display key Menu or right on the control key v to open the main menu. The functions in the main menu are displayed in the form of a list with names and icons (example on the right). You can scroll between functions using the control key q. The selectable function is shown in the display.

Back W OK Press the display key OK or right on the control key v to select the displayed function. This opens the corresponding submenu and the first entry is displayed. If you press the display key Back or briefly press the end call key a, the display returns to idle status. Main menu (first menu level) Selecting a function Settings Submenus The functions in the submenu are displayed with the corresponding names. You can scroll between functions using the control key q. The relevant function is shown in the display. Press the display key OK to select the displayed function. This opens the corresponding submenu and the first entry is displayed. If you press the display key Back or briefly press the end call key a, you return to the previous menu level or cancel the operation. Any settings you have not confirmed by pressing OK will be discarded.

Selecting a function Reverting to idle status From any point in the menu: Press and hold the end call key a or Do not press any key: after 2 minutes, the display will automatically revert to idle status. An example of the display in idle status is shown on page 18. Version 4, 16.09.2005 21 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.

fm / 19.05.2011 Using the phone Activating/deactivating the handset a In idle status, press and hold the end call key (confirmation tone).  
Activating/deactivating the keypad lock The keypad lock prevents any unwanted use of the phone. # In idle status, press and hold the hash key (confirmation tone).

The keypad lock is activated or deactivated. When it is switched on, the icon appears in the display. If the keypad lock is activated, a corresponding message is displayed when you press a key. The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished. Please note When the keypad lock is active, you cannot call emergency numbers. Version 4, 16.09.2005 22 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.

05.2011 Using the phone Understanding the operating steps The operating steps are shown in abbreviated form, for example: Menu Settings Eco Mode+ ( = on) This means you should proceed as follows: Redial Menu Press the key below Menu on the display screen to open the main menu.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

Press down on the control key s ... Settings Back W OK ... until the Settings menu item appears. Press the key below OK on the display screen to confirm your selection.

Press down on the control key s ... Version 4, 16.09.

2005 23 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / starting.fm / 19.05.2011 Using the phone Eco Mode+ Back W .. until the Eco Mode+ menu item appears. OK Press the key below OK on the display screen to switch the function on or off (= on). Press the key below Back on the display screen to jump back to the previous menu level. Or Press and hold the end call key a to return to idle status. Version 4, 16.09.2005 24 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / menuetree.fm / 19.05.

2011 Menu tree Menu tree The menu entries are partially subdivided. The page numbers refer to the relevant description in the user guide. To open the main menu: press the display key Menu when the phone is in idle mode. Alarm Clock Activation Wake up time page 42 page 42 Voice Mail Play Messages Network Mailbox \*\* Answer Machine \*\* Answerphone \* Call Screening \* page 35 Handset Base Announcements \* Record Announcement Play Announcement Delete Announcement Message Length \* Unlimited 1 Minute 2 Minutes 3 Minutes Ring Delay \* Immediately 10 sec 18 sec 30 sec Auto Network Mailbox Set Key 1 \* page 40 Network Mailbox Answer Machine page 40 page 40 page 38 page 35 page 35 page 36 page 38 page 37 page 40 page 35 \* Base with answering machine only \*\* Base with answering machine and number of network mailbox is already entered Version 4, 16.09.2005 25 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / menuetree.fm / 19.05.2011 Menu tree Settings Date/Time Audio Settings page 16 Call Volume Ringer Volume Advisory Tones Battery Low Ringtones (Handset) Ringtones (Base) page 45 page 46 page 47 page 47 page 46 page 47 page 45 page 45 page 45 Display Screensaver Colour Schemes Contrast Language Registration page 45 Register Handset De-register Handset page 42 page 43 page 45 page 44 page 34 page 29 page 47 page 47 page 48 page 47 page 48 Telephony Auto Answer Listening in Calls List Type Preselection Music on hold System Reset Handset Base Reset Repeater Mode System PIN Eco Mode Eco Mode+ page 41 page 41 Version 4, 16.09.

2005 26 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / telephony.fm / 19.05.2011 Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key.

Or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling process with the end call key a. You are shown the duration of the call while the call is in progress. Calling Line Identification When you receive a call, the caller's number is displayed on the screen if the following prerequisites are met: u Your network provider supports CLIP, CLI. ? CLI (Calling Line Identification): The caller's number is transmitted.

? CLIP (Calling Line Identification Presentation): The caller's number is displayed. u You have requested CLIP from your network provider. u The caller has requested CLI from the network provider. Call display with CLIP/CLI If the caller's number is saved in your directory, the caller's name will be displayed. Please note Dialling with the directory ( page 30), calls list ( page 34) and redial list ( page 32) saves you from repeatedly keying in phone numbers.

1234567890 Menu 1 2 Ending a call a Press the end call key. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key c. To accept the call, press the talk key c. Gigaset A510A: Instead of accepting the call, you can also redirect it to the answering machine: Menu Divert to AM OK If the handset is in the charger and the Auto Answer function is activated ( page 45), the handset automatically answers calls when you remove it from the base/charger. If the ringer is intrusive, you can deactivate it: Version 4, 16.

09.2005 Menu Silent OK 1 Ringer icon 2 Number or name of caller The following is displayed instead of the number: u External Call, if no number is transmitted. u Withheld, if the caller has withheld Calling Line Identification. u Unavailable, if the caller has not arranged Calling Line Identification. Please note The ringer can be switched off for unknown calls (calls with Calling Line Identification withheld) ( page 46). You can accept the call as long as it is displayed on the screen. 27 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / telephony.fm / 19.05.2011 Making calls Notes on phone number display (CLIP) By default, the number of the caller is shown in the display of your Gigaset telephone.

You do not have to make any other settings on your Gigaset telephone. Have you requested the phone number display service from your network provider? However, if the caller's number is not displayed, this can be due to the following: Check whether your provider supports phone number display (CLIP) and that the function has been activated for you. If necessary, contact your provider. Additional information on this subject can be found on the Gigaset website at: [www.gigaset.com](http://www.gigaset.com).

com/service u You have not ordered CLIP from your network provider u Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information. Handsfree operation In handsfree mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation. Is your telephone connected via a PABX/gateway? You can establish this by checking for an additional device connected between your telephone and home connection, e.g.

, a PABX, gateway etc. In most cases, simply resetting this device will remedy the situation: Briefly disconnect the PABX power plug. Re-insert the plug and wait for the device to restart. Please note Inform your caller before you use the handsfree function so that the caller knows a third party may be listening. Activating/deactivating handsfree mode During a call and when listening to the answering machine (Gigaset A510A only), activate or deactivate handsfree mode. d Press the handsfree key. Each key press switches between earpiece and handsfree mode. If handsfree mode is activated, the key is lit up. If you wish to place the handset in the charger during a call: Press and hold handsfree key d while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the handsfree volume, see page 45.

If the caller number is still not displayed: Check the CLIP (phone number display) settings of your PABX and activate this function if necessary. In the user manual for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number transmission", "caller ID" etc.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A510A user guide](#)

<http://yourpdfguides.com/dref/4568844>

). If necessary, contact the device manufacturer. If this does not resolve the problem, it is possible that your network provider does not provide the CLIP service for this number. Version 4, 16.09.2005 28 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / telephony.fm / 19.05.2011 Making calls Switching to mute You can deactivate your handset's microphone during a call. v Press right on the control key to mute the handset. The display shows Microphone is switched off. Press the key again to unmute the microphone. Storing preselection numbers Menu Settings Telephony Preselection Preselection Number ~ Enter or change the preselection number (call-by-call number).

OK Press the display key. Save or change entries in the preselection lists Each of the two lists can contain 11 entries, each with 4 digits. Depending on the country, numbers may be preset in the "With Preselection" list. This means, for example, that all national calls or calls to the mobile network are automatically linked to the preselection number you have stored previously. Menu Settings Telephony Preselection With Preselection / Without Preselection s Select entry.

Enter or edit first digits of ~ number. OK Press the display key. Automatic network provider preselection You can store a call-by-call number (preselection number), which is automatically placed in front of numbers when you dial them. In the With Preselection list, specify the dialling codes or the first digits of the dialling codes that you wish to assign to the preselection number. In the Without Preselection list, enter the exceptions to the With Preselection list. Examples: Preselection Number With Preselection Without Preselection 0999 08 081 084 Temporarily cancelling preselection c (press and hold) Menu Automatic Preselect off ~ (dial number) All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999. Phone number 07112345678 08912345678 08412345678 Dialled number 07112345678 0999 08912345678 08412345678 Permanently deactivating preselection Menu Settings Telephony Preselection Preselection Number Del. Press and hold the display key until the preselection number is deleted. OK Press the display key. Version 4, 16.

09.2005 29 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / direct\_charges.fm / 19.05.2011 Using the directory and lists Using the directory and lists The options are: u Directory u Redial list u Calls lists u Answering machine list (Gigaset A510A only) You can create a personalised directory for your own individual handset. You can also send lists/entries to other handsets ( page 31). Storing a number in the directory s Menu New Entry ~ Enter the number and press OK. ~ Enter the name and press OK. Order of directory entries Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority.

The sort order is as follows: 1. Space 2. Digits (0?9) 3. Letters (alphabetical) 4. Other characters To work round the alphabetical order of entries, insert a space or a digit before the first letter of the name.

These entries will then move to the beginning of the directory. Directory You can save a total of 150 entries in the directory. Please note To quickly access a number from the directory (shortcut), you can assign the number to a key ( Using speed dial keys, page 31). In the directory, you can save u Numbers and corresponding names u VIP ringtones and colours. You open the directory in idle status using the s key.

Selecting directory entries s Open the directory. You have the following options: u Use s to scroll through the entries until the required name is selected. u Enter the first character of the name, if necessary scroll to the entry with the s key. Dialling with the directory s s (Select entry) c Press the talk key. Length of the entries Number: Name: max. 32 digits max. 16 characters Saving the first number in the directory s Dir. empty New Entry? ~ Enter the number and press OK. ~ Enter the name and press OK. Version 4, 16.

09.2005 30 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / direct\_charges.fm / 19.05.2011 Using the directory and lists Managing directory entries s s (Select entry) Menu Press the display key. The following functions can be selected with q: VIP Caller Melody Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it. The entry is flagged with the icon in the directory. You recognise VIP calls by the ringtone. VIP Caller Colour Mark a directory entry as a VIP (Very Important Person) by assigning a specific background colour to it. The entry is displayed with this background colour in the address book and marked with the icon.

VIP calls are then recognised by their background colour. Edit Entry Edit the number if required and press OK. Edit the name if required and press OK. Use Number Edit or add to a saved number and then dial it with c or save it as a new entry; to do so, display the number and press: Menu Copy to Directory OK Delete Entry Delete selected entry. Send Entry Send a single entry to a handset (Transferring the directory to another handset, page 31). Delete List Delete all directory entries. Send List Send the entire directory to a handset ( Transferring the directory to another handset, page 31). Shortcut Assign the current entry as a shortcut to a selected key ( Using speed dial keys, page 31). Version 4, 16.09.

2005 Using speed dial keys You can assign directory entries to the keys Q and 2? O: s q (select entry) Menu Shortcut ~ (press the key you want to assign the number to) To dial, press and hold the required speed dial key. Transferring the directory to another handset You can transfer directory entries from other handsets to your new handset ? even entries from old handsets. Prerequisites: u The sending and receiving handsets must both be registered to the same base. u The other handset and the base can send and receive directory entries. s s (Select entry) Menu (Open menu) Send Entry / Send List s Select the internal number of the receiving handset and press OK. You can transfer several individual entries one after the other by responding to the Entry copied. Next entry? prompt with OK. A message appears on the display to confirm a successful transfer. You will hear the confirmation tone. Please note: u Entries with identical numbers are not overwritten on the receiving handset.

u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. u VIP melodies and colours assigned to entries are not transferred. 31 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / direct\_charges.fm / 19.05.2011 Using the directory and lists Adding a displayed number to the directory You can copy numbers displayed in a list, e.g., the calls list or redial list, to the directory. A number is displayed: Menu Copy to Directory Complete the entry ( Storing a number in the directory, page 30). Gigaset A510A: Message playback is interrupted during the number transfer from the answering machine list.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>



Managing entries in the redial list Press the talk key briefly Or Redial Press the display key. s Select entry. Menu Open menu. The following functions can be selected with q: Use Number (As in the directory, page 31) Copy to Directory ( Storing a number in the directory, page 30) Delete Entry Delete selected entry.

Delete List Delete all entries in the redial list.

c Copying a number from the directory In some operating situations you can open the directory to copy a number (e.g., during an external call or in redialling mode). Your handset need not be in idle status. s Open the directory.  
q Select an entry and press OK. Function of the message key Opening lists Use the message key f to open the following lists: u Network mailbox or answering machine list (Gigaset A510A only), if your network provider supports this function and fast access is set for the network mailbox ( page 40). u Calls list An advisory tone sounds as soon as a new entry arrives in a list. Depending on the type of the new entry, an icon appears in the display while in idle status: Icon New message ... ... in the answering machine list (Gigaset A510A only) or on the network mailbox .

.. in the missed calls list Redial list The redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed. Manual redial c Redial s c Press the talk key briefly Or Press the display key. Select entry. Press the talk key. The number is dialled. ? Version 4, 16.

09.2005 32 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / direct\_charges.fm / 19.05.2011 Using the directory and lists The number of new entries is displayed under the corresponding icon.

Activating/deactivating flashing message key You can specify whether you want the message key f to flash for new messages (default setting). Proceed as follows: Press the following keys in sequence: v P#Q5#M You will see: ? 03 01 Please note If calls are saved in the network mailbox, you will receive a message if the list type has been set accordingly (see your network provider user guide). After pressing the message key f, you can see all lists containing messages and the network mailbox list. The list is displayed with the number of new entries (1) and the number of old, read entries (2) (example): 97 Press one of the following keys to select the type of message: 5 for missed calls Or M for messages on the answering machine (Gigaset A510A only)/network mailbox Your selection is displayed (e.g. , 5 for missed calls), the current setting flashes: 975 SET: [0] Press Q or I to determine the setting for new messages: Q The message key flashes (it goes off when the key is pressed) Or I The message key does not flash Your selection is displayed (e.g., I): Calls List: 02+03 Back W OK 1 2 Select a list with q. To open, press OK. 975 SET: [1] Press the display key OK. Answering machine list (Gigaset A510A only) You can use the answering machine list to listen to the messages that are on the answering machine ( page 36). Version 4, 16.09.2005 33 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / direct\_charges.fm / 19.

05.2011 Using the directory and lists Calls list Prerequisite: Calling Line Identification Presentation (CLIP, page 27) Depending on the type of list, the calls list contains the last 25 numbers of u All calls ? Accepted calls ? Unanswered calls ? Calls recorded by the answering machine (Gigaset A510A only) u Missed calls ? Unanswered calls and ? Calls not recorded by the answering machine (Gigaset A510A only) In idle status, you can open the calls list by pressing the message key f. List entry Example of list entries: New Call 1234567890 28.06. 02 08:34 Back W Menu u Status of entry ? New Call: New missed call. ? Old Call: Entry already read. ? Call recv.: Call was answered. ? Answer M (Gigaset A510A): the answering machine accepted the call. A message was left.

u Entry number u Number or name of caller u Call date and time (if set, page 16). Press the talk key c to call the selected caller back. Use the Menu display key to select the following options: Delete Entry Delete selected entry. Copy to Directory ( Storing a number in the directory, page 30) Delete List Delete all entries in the list. After exiting the calls lists, all viewed entries are assigned the status "old".

Setting the calls list type Calls List Type Missed Calls / All Calls Select and press OK ( = on). a Press and hold (idle status). The calls list entries are retained when you change the list type. Menu Settings Telephony Version 4, 16.09.

2005 34 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / answering\_m.fm / 19.05.2011 Operating the Gigaset A510A base answering machine Operating the Gigaset A510A base answering machine You can operate the answering machine via the handset, the buttons on the base ( page 5) or by remote control (from another phone/mobile phone). You can record your own announcements using the handset. Recording an announcement Record Announcement Press OK, talk after tone OK Press the display key to start the recording. You hear the ready tone (short tone). Now say your announcement (at least 3 secs.). Just as if making a call via the earpiece, place the telephone against your ear and speak into the microphone at a normal volume.

OK Press the display key to end the recording. Cancel the recording with a or Back. Restart the recording with OK. After recording, the announcement is played back for you to check. Menu Voice Mail Announcements Operation via the handset The handset loudspeaker activates automatically if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key d. Switching the answering machine on/off Menu Voice Mail Answerphone ( = on) Please note: If the message memory is full, the answering machine cannot be activated. You will receive an instruction to delete old messages. When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set, a corresponding announcement is made (set time page 16).

The icon appears in the display. The telephone is supplied with a prerecorded announcement. This pre-recorded announcement is used if no personal announcement is available. u Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds. u If you cancel the recording, the prerecorded announcement is used.

Playing back an announcement Menu Voice Mail Announcements Play Announcement If you have not recorded a personal announcement, the pre-recorded announcement is played. Version 4, 16.09.2005 35 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / answering\_m.fm / 19.

05.2011 Operating the Gigaset A510A base answering machine Deleting an announcement Menu Voice Mail Announcements Delete Announcement OK Press the display key to confirm the prompt. @@Press 2 again to resume. Or Menu Stop playback. @@Press twice to go back to the previous message.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A510A user guide](#)

<http://yourpdfguides.com/dref/4568844>

s or I Go to the next message. Press twice to skip ahead two messages. @@@@ Press the message key. Answ. Mach.

: Select as required and press OK. @@@@After the entry time and date have been played back (after approx. @@@@Recording stops and you can speak to the caller. @@The f key on the handset flashes. You can answer the call even if it is not signalled on the handset. Activating/deactivating two-way record You can record an external call with the answering machine. Inform the caller that the call is being recorded. During the conversation: Menu Open menu. Two-way Recording Select and press OK. Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

End Press the display key to stop two-way record. The maximum recording time depends on the memory available on the answering machine. If the memory is full, you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

Diverting an external call to the answering machine You can divert an incoming external call to the answering machine, even if it is deactivated. Prerequisite: the answering machine has available memory.

An external call is signalled on the handset: Menu Divert to AM OK The answering machine starts immediately in answer & record mode and records the call. @@@@ Press the end call key. @@@@you do not have to select it via the menu. @@@@Menu Voice Mail Set Key 1 Answer Machine Select and press OK. @@@@ When operating remotely ( page 39), you can then tell after approx.

@@@~- Enter system PIN. Your answering machine is activated. It tells you how much memory is left. The messages are played. @@@@ When you hear your announcement, press 9 and enter the system PIN. You are informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad. @@ Press twice to go back to the previous message. B Stop playback.

Press again to resume. 3 Go to the next message. @@ More information is available from your provider. @@@@ If you accept the call, new messages OK played back. @@you do not have to select it via the menu. Gigaset A510: The network mailbox is preconfigured for fast access. You only need to enter the number of the network mailbox. @@@@ You can switch to the network mailbox. @@ Set Key 1 Network Mailbox (= selected) The setting for fast access applies to all handsets. Please note Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the calls list will then show this designation.

Calling the network mailbox 1 Press and hold. You are connected straight to the network mailbox. Please note You can also connect to the network mailbox via the menu: Menu Voice Mail Play Messages Network Mailbox (Gigaset A510A only) 40 Version 4, 16.09.2005 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.

fm / 19.05.2011 ECO DECT ECO DECT You are helping to protect the environment with your Gigaset. Activate/deactivate Eco Mode: Menu Settings Eco Mode OK Reducing energy consumption Your telephone has a power-saving adapter plug and uses less power. Press the display key.

(An advisory message appears when Eco Mode is activated; confirm with OK.) = on. Activate/deactivate Eco Mode+: Menu Settings Eco Mode+ OK Reducing radiation The radiation from your telephone is reduced automatically: u Handset: The closer the handset is to the base, the lower the radiation. u Base: The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base. You can reduce the radiation from the handset and base even more by using Eco Mode: Eco Mode Reduces radiation from the base and handset by 80% ? whether you are making a call or not. Eco Mode reduces the range of the base by approx. 50%. Using Eco Mode always makes sense when a reduced range is sufficient. Press display key (= on). Status displays Display icon Reception strength: ? Good to poor ? No reception Eco Mode+ enabled (displays instead of the reception strength icon when in idle status) Switching off radiation Eco Mode+ When you activate Eco Mode+, the radiation (DECT transmission power) of base and handset is switched off automatically and only turns on when calls are made.

This is also true when multiple handsets are used, if the handsets support Eco Mode+. Eco Mode / Eco Mode+ can be activated/ deactivated independently of one another and can also be used with multiple handsets. u When using Eco Mode+ you can ensure that the range of the base is sufficient by pressing and holding the talk key c. You hear the dial tone if the base can be reached. u When Eco Mode+ is enabled: ? Call setup is delayed by approx. 2 seconds. ? Handset standby time is reduced by approx. 50%. u Registering handsets that do not support Eco Mode+ causes the mode to be deactivated on the base and all other handsets. u Activating Eco Mode reduces the range of the base.

u Eco Mode / Eco Mode+ and repeater support ( page 47) cancel each other out, i.e., if you use a repeater you cannot use Eco Mode or Eco Mode+. Please note Version 4, 16.09.

2005 41 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.fm / 19.05.2011 Using the handset as an alarm clock Using the handset as an alarm clock Prerequisite: The date and time have already been set ( page 16). Using multiple handsets Registering handsets You can register up to four handsets on your base.

Each additional handset must be registered with the base in order for it to work properly! Activating/deactivating the alarm clock Menu Alarm Clock Activation (= on) After you activate the alarm clock, the menu for setting the wake up time opens automatically. The icon and wake up time are shown on the display. A wake-up call is signalled on the display ( page 3), with the selected ringer volume and melody ( page 46). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off. During a call, the wake-up call is only signalled by a short tone. Registering a Gigaset handset to a Gigaset A510/A510A You must manually register the handset on both the handset (1) and the base (2). Once registration is complete, the handset returns to idle status. The handset's internal number is shown on the display, e.g.

, INT 1. If not, repeat the procedure. 1) On the handset Menu Settings Registration Setting the wake-up time Menu Alarm Clock Wake up time Register Handset ~ If required, enter the system PIN for the base (the default is 0000) and press OK. @@ Off Press the display key. The wakeup call is deactivated. Or Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. @@@@ (The handset you are currently using is highlighted with <). ~ Enter the current system PIN and press OK. OK Press the display key.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

Or: u Initiate internal call. P Press the star key. Or: u Initiate internal call. Call All Select and c Press the talk key. @@u Open the list of handsets. @s Select a handset or Call All and press OK. @@ Briefly press the register/paging key on the base ( page 5). @@@@ You are reconnected with the external participant. When transferring a call, you can also press the end call key a before the internal participant answers. If the internal participant does not answer or the line is busy, the call will automatically return to you.

Back Calling a specific handset u ~ Initiate internal call. Enter the number of the handset. Initiate internal call. Select handset. Press the talk key. Or: u s c Version 4, 16.09.2005 u Calling all handsets ("group call") Press and hold. 43 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.fm / 19.

05.2011 Using multiple handsets Accepting a waiting call If you receive an external call during an internal call, you will hear the call waiting tone (short tone). With Calling Line Identification, the caller's number will appear in the display. a Press the end call key to end the internal call. c Press the talk key to accept the external call. Internal listening in The line is engaged with an external call. Your screen will display information to that effect. To listen in to the external call. c Press and hold the talk key. You can listen in to the call.

All participants hear a signal tone. During this time, this handset displays the Conference Call message and it is not possible to dial another number from this handset. a Press the end call key. All participants hear a signal tone. If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant.

Listening in to an external call (conference) Prerequisite: The Listening in function must be activated. You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of additional listeners by a signal tone. Ending listening in Changing the name of a handset The names "INT 1", "INT 2" etc. are assigned automatically on registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list. u Open the list of handsets. Your own handset is indicated by <. s Select handset. Menu Open menu. Rename ~ Enter the name. OK Press the display key.

Activating/deactivating listening in Menu Settings Telephony Listening in Press OK to activate/deactivate the function (= on). Version 4, 16.09.2005 44 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.fm / 19.05.2011 Handset settings Handset settings Your handset comes with default settings, but you can change the settings to suit your individual requirements. Contrast Nine contrast settings are available. Activating/deactivating auto answer If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key c. Menu Settings Telephony Auto Answer OK Press the display key = on).

Changing the display language You can view the display texts in different languages. Menu Settings Language The current language is indicated by a . s Select a language and press OK. If you accidentally choose a language you do not understand: v L4 s Select the correct language and press OK. Changing the handsfree/ earpiece volume You can set the volume for handsfree mode and earpiece mode to five different levels.

In idle status: t Call Volume Earpiece Volume / Handsfree Volume Select and press OK. q Set the volume (e.g., volume 3 = ?). OK Press the display key to save the setting.

During a conversation via the earpiece or in handsfree mode: t Press the control key to open the menu for setting the volume. Set the earpiece or handsfree volume by pressing q. The setting will automatically be saved after approximately 3 seconds or press the display key OK. Setting the display/ screensaver You have a choice of four colour schemes and several different contrasts. You can also configure a screensaver. Menu Settings Display You have the following options: Screensaver In idle status a digital clock can be displayed as a screensaver. This replaces the idle status display. You can choose between No Screensaver and Digital Clock. The screensaver is not displayed in certain situations e.g.

, during a call or if the handset is de-registered. To show the display in idle status, briefly press end call key a. Colour Schemes You can view the display backlight in different colours. Four colour schemes are available. Please note You can also set the call volume using the menu ( page 26). Version 4, 16.09.2005 45 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.fm / 19.05.2011 Handset settings Changing ringtones u Volume: You can choose between five volumes (e.g., volume 3 = ?) and the "crescendo" ring (volume increases with each ring 6 = ?). u Ringtones: You can select from a list of pre-loaded ringtones and melodies. You can set different ringtones for the following functions: u Internal calls u External calls u Alarm clock External Calls Select and press OK.

q can be used for the following: Melodies You can set the ringtone as described above. Time Control You can specify a time period when you do not want the telephone to signal external calls e.g., during the night. Activation is switched on or off by pressing OK (= activated) Settings Ringer off from: /Ringer off until: Enter time in 4-digit format.

Setting the ringer volume The ringer volume is the same for all types of ring. In idle status: t Ringer Volume q Set the volume. OK Press the display key to save the setting. Please note During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody/background colour in the directory (VIP). Anonymous Calls Silent You can set your handset so that it does not ring for calls where Calling Line Identification has been withheld (not answering machine). The call will only be signalled on the display. Switch the Anonymous Calls Silent function on or off by pressing OK (= activated). Please note You can also adjust the ringer volume via the menu ( page 26). Setting ringtone Set different ringtones for external calls, internal calls and the alarm clock. Please note You can also set the ringtones via the menu ( page 26).

For internal calls and the alarm clock In idle status: t Ringtones (Handset) Internal Calls / Alarm Clock Select and press OK. q Select melody and press OK (= selected). Activating/deactivating the ringer You can: u Permanently deactivate the ringer in idle status or when receiving a call u Deactivate the ringer for the current call only. The ringer cannot be re-activated while a call is in progress. For external calls: Version 4, 16.09.2005 In idle status: t Ringtones (Handset) 46 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)  
<http://yourpdfguides.com/dref/4568844>

fm / 19.05.2011 Base settings Deactivating the ringer permanently P Press and hold the star key.

The icon appears in the display. Base settings The base settings are carried out using a registered Gigaset handset. Reactivating the ringer P Press and hold the star key. Deactivating the ringer for the current call Menu Silent OK Changing the ringtones for the Gigaset A510A base u Volume: You can choose between five volumes and the "crescendo" ring, page 46. Select "0" to deactivate the base ringer.

u Ringtones: You can set a ringtone for external calls, page 46. u Time control: You can specify when the base should not ring (e.g., during the night). Menu Settings Audio Settings Ringtones (Base) Ringer Volume / Ringer Melody / Time Control For more information on adjusting the settings, see page 46.

Activating/deactivating advisory tones/battery warning tones Your handset uses advisory tones to tell you about different activities and statuses. These can be activated and deactivated independently of each other: u Advisory Tones ? Confirmation tone: at the end of an entry/setting and when a new entry arrives in the answering machine list or calls list. ? Error tone: when you make an incorrect entry. ? Key click: every key press is confirmed. u Battery Low The battery requires charging. t Advisory Tones / Battery Low Select and press OK to activate or deactivate ( = activated). The menu end tone when scrolling at the end of a menu cannot be deactivated. Activating/deactivating music on hold Music on hold Press OK to activate or deactivate music on hold ( = on). Menu Settings Telephony Restoring the handset default settings You can reset any individual settings and changes that you have made. The following settings are not affected by a reset: u Registering the handset to the base u Date/time u Entries in the directory, calls lists Menu Settings System Reset Handset OK Confirm prompt.

Repeater support You can increase the range and signal strength of the base using a repeater. You will need to activate repeater mode. This will terminate any calls that are in progress at the time. Prerequisite: a repeater is registered. Menu Settings System Repeater Mode Press OK to activate/deactivate repeater mode ( = activated). 47 Version 4, 16.09.2005 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / registr\_sett.fm / 19.05.

2011 Base settings After activating or deactivating the repeater, switch your handset off and on again ( page 22). u Eco Mode / Eco Mode+ ( page 41) and repeater support cancel each other out i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+. u The default encrypted transmission setting is deactivated when repeater mode is activated.

Resetting the base to the default settings When restoring default settings: u Individual settings are reset u All lists are deleted u Eco Mode and Eco Mode+ are deactivated The date and time are retained. Please note Please note The answering machine is ready for use approx. 15 seconds after the base has been connected or reset. Protecting against unauthorised access Protect the system settings of the base station with a PIN known only to yourself. The system PIN must be entered when, for example, registering/de-registering a handset to/from the base or when restoring the default settings.

Resetting the base via the menu When resetting via the menu u Handsets are still registered u The system PIN is not reset. Menu Settings System Base Reset OK Press the display key. Changing the system PIN You can change the 4-digit system PIN set on the base (default setting: 0000) to a 4-digit PIN that only you know. Gigaset A510A: setting a system PIN enables remote operation of the answering machine page 39. Menu Settings System System PIN ~ Enter the current system PIN and press OK. ~ Enter your new system PIN and press OK. Resetting the base using the button on the base When resetting the base using the button on the base u All handsets are de-registered and u The system PIN is reset to the original code 0000 Carry out the following steps: Resetting the system PIN If you have forgotten your system PIN, you can reset the PIN to the original code 0000 using the button on the base. This will also reset other settings; see the section entitled "Resetting the base to the default settings". Version 4, 16.09.

2005 Remove the mains cable from the base Hold down the registration/paging key on the base ( page 5) and reconnect the power cable to the base at the same time. Hold the key down for at least 5 seconds. Please note All handsets are de-registered and must be re-registered. All settings are reset to the default settings. 48 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / pabx.fm / 16.05.2011 Connecting the base to the PABX Connecting the base to the PABX The following settings are only necessary if your PABX requires them; see the PABX user manual. Setting pauses Changing the pause after line seizure You can change the length of the pause that is inserted between pressing the talk key c and sending the number. Menu Open main menu.

P#Q5#10 Press keys. ~ Enter number for the length of the pause (1 = 1 sec.; 2 = 3 secs; 3 = 7 secs) and press OK. Dialling mode and Flash time Changing the dialling mode The following dialling modes can be selected: u Tone dialling (DTMF) u Pulse dialling (PD). Menu Open main menu.

P#Q5#11 Press keys. ~ 1 OK Pulse dialling mode (DP). Or: ~ Q OK Tone dialling (DTMF). Changing the pause after recall key You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX). Menu Open main menu.

P#Q5#14 Press keys. ~ Enter a number for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press OK. Please note Tone dialling (DTMF) is now the most common dialling mode. Pulse dialling mode (PD) is used only for a few old PABXs. Setting flash time Your phone is preset for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX. Menu Open main menu.

P#Q5#12 Press keys. ~ Enter number for the flash time and press OK.

0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms Switching temporarily to tone dialling (DTMF) If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call. Prerequisite: You are conducting a call or have already dialled an external number. P Press the star key. After the call ends, pulse dialling is automatically reactivated. Version 4, 16.09.2005 49 Gigaset A510-A510A / GBR / A31008-M2202-L101-1-7619 / appendix.fm / 19.

05.2011 Service (Customer Care) You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568844)

[GIGASET A510A user guide](http://yourpdfguides.com/dref/4568844)

<http://yourpdfguides.com/dref/4568844>