



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A585. You'll find the answers to all your questions on the SIEMENS GIGASET A585 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A585
User guide SIEMENS GIGASET A585
Operating instructions SIEMENS GIGASET A585
Instructions for use SIEMENS GIGASET A585
Instruction manual SIEMENS GIGASET A585

SIEMENS



Gigaset A580 - A585

Gigaset

Issued by:
Gigaset Communications GmbH
Schlierhorst 66, D-46395 Bochum
Gigaset Communications GmbH is a trademark licensee of Siemens AG
© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)
<http://yourpdfguides.com/dref/2186108>

Manual abstract:

Rights of modifications reserved. @@Play back new and old messages (press and hold). LED flashes: At least one new message is present. LED flickers: Memory is full. @@@@6 Delete current message. 7 Adjust volume during message playback: = quieter; = louder. While an external call is being signalled: adjust ringer tone volume. Gigaset A585 base station Please note: u If the answer machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station. u If the LED flashes although the answer machine is switched off, it means that there is still at least one new message that has not been played back yet. Gigaset A580 base station 7 1 Registration/paging key: Press briefly: Search for handsets (paging), page 42.

Press and hold: Register handsets and DECT page 41. devices, 2 On/Off key: Activate/deactivate answer machine. LED lights up: Answer machine is activated. LED flashes: The answer machine is recording a new message. Registration/Paging key: Press briefly: Search for handsets page 42. (paging), Press and hold: Register handsets and page 41. DECT devices, 2 Contents Contents The handset at a glance

.....

.....

.....

.....

1 The base station at a glance

.....

.....

.....

2 Safety precautions

.....

.....

.....

..... 6 First steps . . .

.....

.....

.....

.....

.....

... 7 Check the package contents . . .

.....

.....

.....

.....

.....

. 7 Setting up the base station and charging cradle (if included)

... 8 Connecting the base station

.....

.....

.....

.....

. 8 Connecting the charging cradle (if included)

.....

.....

..... 9 Setting up the handset for use

.....

.....

.....

.....

10 What would you like to do next?

.....

.....

.....

.... 16 Using the phone

.....

.....

.....
.....

23 Making an external call

.....
.....
.....

. Ending a call

.....
.....
.....
.....
.....

Answering a call

.....
.....
.....

. Calling Line Identification

.....
.....
.....

..... Handsfree talking

.....
.....
.....
.....

Muting

.....
.....
.....
.....
.....

..... 23 23 23 23 24 24 Using the directory and lists

.....
.....
.....

... 25 Directory

.....
.....
.....
.....
.....

..... 25 Last number redial list

.....
.....
.....
.....

.....
..... *De-registering handsets*
.....
.....

.....
.....
Locating a handset ("paging").....
.....

.....
.....
.....
. Making internal calls

.....
.....
.....

.... *Listening in to an external call (conference)*.....
.....
.....
..... *Changing date and time* .

.....
.....
.....
.....

..... *Changing the display language* .
.....
.....
.....

.....
.... *Setting the display* .
.....
.....

.....
.....
.....
..... *Activating/deactivating auto answer* .

.....
.....
.....
.....

Changing the handsfree/earpiece volume

.....
.....
.....
.....
..... *Changing ringer tones*

.....
.....
.....
.....
..... *Advisory tones* ..

.....
.....
.....
..... Restoring the handset to the factory settings

.....
.....
.....
Protecting against unauthorised access

.....
.....
... Changing ringer tones

.....
.....
.....
.....

Repeater support
.....
.....
.....

.....
.....
.....
. Restoring the base station to the factory settings

..... 41 42 42 42 43 43 43 44 44 44 44 45 45 46 46 46 46 Handset settings

.....
.....
.....

.....
... 43 Base station settings
.....
.....

.....
.....
... 46 Connecting the phone to a PABX

.....
.....
... 48 Dialling modes and recall

.....
.....
.....
... 48 Setting pauses

.....
.....
.....
.....

. 48 Switching temporarily to touch tone dialling (DTMF)

.....
..... 48 Service (Customer Care)

.....
.....



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET A585 user guide
http://yourpdfguides.com/dref/2186108](http://yourpdfguides.com/dref/2186108)

..
.....
.....
.....
.....
.....
.....
.....

55 Mounting the base station to the wall

.....
.....

58 Mounting the charging cradle to the wall

.....
.....

...ive film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries recommended by Gigaset Communications GmbH * (page 52). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode.

The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. * Gigaset Communications GmbH is a trademark licensee of Siemens AG. Insert the batteries the right way round. The polarity is indicated in/on the battery compartment. a b First insert the battery cover Then press the cover b until it clicks into place. at the top a. If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the cavity on the casing and pull the battery cover upwards. 10 First steps Placing the handset in the base station and registering Before you can use the phone, you must first register the handset to the base station. Place the handset with the display facing up in the base station. Place handset into base Menu Handset is registering The handset registers automatically.

Registration can take up to 5 minutes. Do not remove the handset from the base station during this time. V Menu The following is displayed after successful registration: u the strength of the reception signal between base station and handset: good to poor: i no reception: \ flashes u battery charge status: = e V U (flat to full) = flashes: batteries almost flat e V U flashes: charging procedure If you have purchased a model with multiple handsets, repeat the registration process for each handset. Handsets are assigned the lowest available internal number (14). If more than one handset is registered to the base station the internal handset number appears on the display, e.

g. INT 2. If the internal numbers 14 are already assigned to other devices, the number 4 will be overwritten. u Each key press interrupts the automatic registration. u If automatic registration does not work, the handset will have to be Please note registered manually (page 41). To charge the batteries, leave the handset in the charging cradle. Please note Only place the handset in the base station or charging cradle that is intended for it. Should you have any questions and problems page 49. 11 First steps Initial charging and discharging of batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. Place the handset in the base station or charging cradle for ten hours. 10 h Then remove the handset from the base station or charging cradle and do not replace it until the batteries are completely discharged. u After the first battery charge and discharge you may replace your hand- Please note set in its base station or charging cradle after every call. batteries from the handset and reinsert them. u Always repeat the charging and discharging procedure if you remove the u The batteries may warm up during charging. This is not dangerous.

u After a while, the charge capacity of the batteries will decrease for technical reasons. 12 First steps Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. Menu Press the key below Menu on the display screen to open the main menu. Press the bottom of the control key ... Settings U ... until the Settings menu item appears.

OK Press the key below OK on the display screen to confirm your selection. Date/Time U The Date/Time menu item appears on the display. OK Press the key below OK on the display screen to open the input field. 13 First steps Enter Date: [01.10.

2008] The active line is marked [...]. OK T Enter day, month and year as an 8-digit number via the handset, e.

g. Q Q2QQN for 01/10/08. If you want to correct an entry, press the top or bottom of the control key to toggle between fields. T OK Press the key below OK on the display screen to confirm your selection. Enter Time: [07:15] Enter the hours and minutes as OK T four digit numbers via the handset e.g. Q M 5 for 7:15 hours. If necessary, use the control key to toggle between fields. Press the key below OK on the display screen to confirm your selection. Saved The display shows Saved.

You will hear a confirmation tone. Press and hold the end call key a to return to the idle status. 14 First steps Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example. If the answer machine is activated, the answer machine icon will also be displayed in the header. Your answer machine is set with a prerecorded announcement. V 07:15 Menu 01.10.08 Please note The range icon is only displayed in idle status if Eco Mode+ (page 40) is deactivated. Your phone is now ready for use. 15 First steps What would you like to do next? Now you have successfully started your Gigaset you will probably want to adapt it to your personal requirements.

Use the following guide to quickly locate the most important subjects. If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" page 17. Information on ...

Setting the ringer tone melody and volume Setting the handset volume Recording a personal message for the answer machine Setting Eco Mode / Eco Mode+ Operating the telephone on a PABX Registering existing Gigaset handsets to a base station Transferring directory entries from existing Gigaset handsets to the new handset(s) ... is located here. page 44 page 44 page 35 page 40 page 48 page 41 page 26 g g g g g g g g If you have any questions about using your phone, please read the tips on troubleshooting (page 49) or contact our Customer Care team (page 49).

16 Using the phone Using the phone Control key In the following description the side of the control key you need to press for each operation is indicated accordingly, e.g. t for "press the top of the control key". The control key has a number of different functions: When the handset is in idle status s t Open the directory. Call up the menu for setting the handset's call volume (page 44), ringer tones (page 44) and advisory tones (page 45). Scroll up/down line by line. In the main menu, in submenus and lists t/s In input fields Use the control key to move the cursor to the left t or right s. During an external call s t Open the directory. Adjust the loudspeaker volume for earpiece and handsfree mode.

[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](#)



<http://yourpdfguides.com/dref/2186108>

Display keys The function of the display keys changes depending on the particular operating situation.

Example: U OK Current display key functions are shown in the bottom display line. Display keys Important display keys: Menu Open a context-dependent menu. OK W Confirm selection. Delete key: deletes one character at a time from right to left. Go back one menu level or cancel operation. Open the last number redial list. 17 Using the phone Keys on the keypad c / Q / * etc. Press the matching key on the handset. ~ Enter digits or letters. Correcting incorrect entries You can correct incorrect characters in the text by navigating to the incorrect entry using the control key.

You can then: u press X to delete the character to the left of the cursor, u insert characters to the left of the cursor, u overwrite the character (flashing) when entering the time and date etc. Menu guidance Your telephone's functions are accessed using a menu that has a number of levels. Main menu (first menu level)

When the handset is in idle status, press Menu to open the main menu The main menu functions are shown on the display as a list with name and icon. To access a function, i.e.

to open the corresponding submenu (next menu level): Navigate to the function using the control key q. Press the display key OK. Submenus The functions in the submenus are displayed as lists. To access a function: Scroll to the function with the control key q and press OK. Or: Enter the corresponding digit combination (page 21).

Briefly press the end call key a once to return to the previous menu level/ cancel the operation. Reverting to idle status You can revert to idle status from anywhere in the menu as follows: Press and hold the end call key a. Or: Do not press any key: after 2 minutes the display will automatically revert to idle status. Any settings you have not confirmed by pressing OK will be discarded. An example of the display in idle status is shown on page 15. 18 Using the phone Activating/deactivating the handset a With the phone in idle status, press and hold the end call key (confirmation tone) to switch off the handset. Press and hold the end call key again to switch the handset on. Activating/deactivating the keypad lock The keypad lock prevents any inadvertent use of the phone. # Press and hold the hash key to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the icon on the display and a message when you press a key. The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished. 19 Using the phone Illustration of operating steps in the user guide The operating steps are shown in abbreviated form. Example: The illustration: Menu Settings Handset Auto Answer (= on) means: Menu Press the display key Menu to open the main menu. Settings Press the bottom of the control OK U key s until the Settings menu item appears on the display. Press the display key OK to confirm your selection. Handset Press the bottom of the control OK U key s until the Handset menu item appears on the display. Press the display key OK to confirm your selection. Auto Answer U OK The Auto Answer menu item appears on the display.

Press the display key OK to activate/deactivate the function (= on) 20 Menu tree Menu tree Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut). Example: Menu M 2 2 for "Set ringer tone volume". With the telephone in idle status, press Menu (open main menu): 1 SMS 1-1 Write Message 1-2 Incoming 1-3 Outgoing 1-4 Settings 4 page 31 page 32 page 31 1-4-1 Service Centres page 33 Alarm Clock 4-1 Activation 4-2 Wake up time 5 page 41 page 41 5-1-1 Network Mailbox 5-1-2 Answer Machine Voice Mail 5-1 Set Key 1 5-2 Answerphone 5-3 Call Screening page 35 5-3-1 Handset 5-3-2 Base page 39 page 39 page 37 page 37 5-4 Announcements 5-4-1 Record Announcement 5-4-2 Play Announcement 5-4-3 page 35 page 35 Delete Announcement page 36 page 37 5-5 Message Length 5-5-1 Unlimited 5-5-2 1 Minute 5-5-3 2 Minutes 5-5-4 3 Minutes 5-6 Ring Delay 5-6-1 Immediately 5-6-2 10 sec 5-6-3 18 sec 5-6-4 30 sec 5-6-5 Auto page 37 21 Menu tree 7 m Settings 7-1 Date/Time 7-2 Audio Settings page 13 7-2-1 Call Volume 7-2-2 Ringer Volume 7-2-3 Ringer Melody 7-2-4 Advisory Tones 7-2-5 Battery Low page 44 page 44 page 45 page 45 page 45 page 44 page 43 page 44 page 41 page 45 page 46 page 28 page 46 page 46 7-4-5-1 Repeater Mode 7-4-5-3 Eco Mode 7-4-5-4 Eco Mode+ 7-3 Handset 7-3-1 Display 7-3-2 Language 7-3-3 Auto Answer 7-3-4 Register Handset 7-3-5 Reset Handset 7-4 Base 7-4-1 Audio Settings (A585 base station only) 7-4-2 Calls List Type 7-4-3 System PIN 7-4-4 Base Reset 7-4-5 Additional Features 7-4-6 Listening in 7-4-7 Preselection page 43 page 29 page 46 page 40 page 40 22 Making calls Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. Or: c~ Press and hold the talk key c and then enter the number.

You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. u Dialling with the directory Menu display key and select Silent. You can To deactivate the ringer tone, press the take the call as long as it is displayed on the screen. Calling Line Identification When you receive a call, the caller's number is displayed on the screen if the following conditions are met: u Your network provider supports CLIP, CLI.

CLI (Calling Line Identification): the caller's number is transmitted. CLIP (Calling Line Identification Presentation): the caller's number is displayed. u You have arranged CLIP with your network provider. u The caller has arranged CLI with the network provider. Please note (page 25), calls list (page 27) and last number redial list (page 27) saves repeated typing of numbers. u You can assign a number from the directory to a key for speed dialling (page 26). Call display with CLIP/CLI If the caller's number is saved in your directory, the caller's name will also be displayed. Ending a call a Press the end call key. 1234567 Menu 1 2 Answering a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d. You can answer the call by: Pressing the talk key c.

Pressing the handsfree key d. If the handset is in the charging cradle and the Auto Answer function is activated (page 44), the handset automatically answers the call when you remove it from the charging cradle.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)
<http://yourpdfguides.com/dref/2186108>

1 Ringer tone icon 2 Number or name of caller The following is displayed in place of the number: u External Call, if no number is transmitted. u Withheld, if the caller has withheld Calling Line Identification. u Unavailable, if the caller has not arranged Calling Line Identification. 23 Making calls Handsfree talking In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call. Activating/deactivating handsfree mode Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Switching between earpiece and handsfree mode d Press the handsfree key.

During a call and when listening to the answer machine (Gigaset A585 only), activate or deactivate handsfree mode. If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key d while placing the handset in the base station. If the handsfree key d does not light up, press the key again. For instructions on how to adjust the loudspeaker volume, see page 44. Muting You can deactivate the microphone in your handset during an external call.

Mute Press the display key to mute the handset. On Press the display key to switch the microphone back on. 24 Using the directory and lists Using the directory and lists The options are: u Directory u Last number redial list u SMS list u Call history u Answer machine list (Gigaset A585 only) You can save up to 150 entries in the directory. You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (page 26).

Storing a number in the directory s Menu New Entry ~ Enter the number and press ~ OK. Enter the name and press OK. Order of directory entries The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Directory In the directory you can save numbers and corresponding names. With the handset in idle status, open the directory by pressing the s key. Selecting a directory entry Length of entries Number: Name: max. 32 digits max. 16 characters Please note You can assign a number from the directory to a key for speed dialling page 26. s Open the directory. You have the following options: u Use q to scroll to the entry until the required name is selected. u Enter the first character of the name, or scroll to the entry using s if required. s q (Select entry) c Press the talk key. The number is dialled.

Dialling with the directory Saving the first number in the directory s Dir. empty New Entry? ~ Enter the number and press ~ OK. Managing directory entries s q (Select entry) Enter the name and press OK. Editing entries Menu ~ Edit Entry ~ Edit the number if required, and press OK. Edit the name if required, and press OK.

25 Using the directory and lists Using other functions Menu Press the display key. The following functions can be selected with q: Use Number Save or modify a saved number and then dial with c or save as a new entry; to do so, press Menu Copy to Directory OK after the number appears on the display. Delete Entry Delete selected entry. Send Entry Send a single entry to a handset (page 26). Delete List Delete all directory entries.

Send List Send complete list to a handset (page 26). Shortcut Assign the current entry for speed dial to a selected key. Enter the internal number of the receiving handset and press OK. Successful transmission is acknowledged with the message Entry copied. . You can transfer several individual entries one after the other by responding OK to the Next entry? prompt. ~ Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. Copying a displayed number to the directory You can copy numbers displayed in a list, e.g.

the calls list or redial list, to the directory. A number is displayed: Menu Copy to Directory Complete the entry page 25. Gigaset A585: The message playback is interrupted during the number transfer from the answer machine list. Using speed dial keys You can assign directory entries to the keys 0 and 2-9: s q (select entry) Menu Shortcut ~ (press the key you want to assign the number to) To dial, press and hold the required speed dial key. Using a number from the directory In some operating situations you can open the directory to copy a number, for example. Your handset need not be in idle status. s Open the directory. q Select entry. OK Press the display key. Select function with q.

Sending the directory to another handset Preconditions: must both be registered to the same base station. u The other handset and the base station can send and receive directory entries. s q (select entry) Menu (open menu) Send Entry / Send List 26 u The sending and receiving handsets Using the directory and lists Last number redial list The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.

The message key f will flash as soon as a new entry is received in a list (switches off when the key is pressed). The message You have new messages appears in the display in idle status. Please note If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide). Manual last number redial c s c Press the key briefly. Select entry.

Press the talk key again. The number is dialled. List selection The lists displayed after pressing the message key f depend on whether there are any new messages. f key does not flash (no new messages): Select a list with q. To open, press OK. f key flashes (new messages received): You see all the lists with new messages. If only one list contains new messages, this will be opened automatically. Managing entries in the last number redial list c s Press the key briefly. Select entry. Open menu.

The following functions can be selected with q: Use Number (as in the directory, page 26) Copy to Directory Copy an entry to the directory (page 25). Delete Entry (as in the directory, page 26) Delete List (as in the directory, page 26) Menu Incoming SMS message list All received SMS messages are saved in the incoming message list, page 32. Call history Precondition: Calling Line Identification (CLIP, page 23) The calls list contains the last 25 numbers, depending on the settings u all calls answered calls unanswered calls calls recorded by the answer machine (Gigaset A585 only) u missed calls unanswered calls and calls not recorded by the answer machine (Gigaset A585 only) Opening lists with the message key You can use the message key f to open the following list selection: u SMS list u Answer machine list (Gigaset A585 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 39).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)
<http://yourpdfguides.com/dref/2186108>

u Call history 27 Using the directory and lists The calls list is displayed as follows: List entry Example of a list entry: Calls List: U 02+03 OK 1 2 New Call 01/02 12:14 1234567890 1 Number of new entries 2 Number of old, read entries 01.10.08 U Menu Setting the call history type Menu Missed Calls / All Calls Select and press OK (= on). a Press and hold (idle status). The call history entries are retained when you change the list type. Settings Base Calls List u Status of entry Answer machine list (Gigaset A585) You can use the answer machine list to listen to the messages that are on the answer machine. The answer machine list is displayed as follows: Answ. Mach.: U 01+02 OK 1 2 1 Number of new entries 2 Number of old, read entries f Calls List / Answ. Mach. 01+02 The last incoming call is displayed in the calls list. The first new message received is displayed in the answer machine list. Playback begins. New messages are placed after old messages when they have been played back. You can scroll through the list with q. Opening calls/answer machine list (Gigaset A585) In the calls list New Call: new missed call. Old Call: entry already read. Call rcv.: call taken. In the answer machine list Answer M (Gigaset A585): the answer machine took the call. A message was left. New Msg. (Gigaset A585): new message on the answer machine. Old Msg. (Gigaset A585): previously played back message on the answer machine. u Entry number 01/02 means e.g. : first of a total of two entries. u Number or name of caller Press the talk key c to make a return call. You can add the caller's number to the directory (page 26). u Call date and time (if set, page 43). You can delete the current entry with Menu Delete Entry. Answer machine list (Gigaset A585 only) You can use the answer machine list to listen to the messages that are on the answer machine. 28 Making cost-effective calls Making cost-effective calls Automatic network provider code (preselection) You can specify a call-by-call number (preselection number) that is automatically placed in front of numbers when you dial them. u The "with preselection" list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used. u The "without preselection" list contains the "exception to the rule". Example: You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection. If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection". When dialling, the first digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed: u The preselection number is not prefixed if the dialled number does not match any entries in the two lists matches an entry in the "without preselection" list u The preselection number is prefixed if the first digits of the dialled number match only one entry in the "with preselection" list. OK a Press the display key. The entry is saved. Press and hold (idle status). Save or change entries in the preselection lists Each of the two lists can contain 11 entries, each with 4 digits. Numbers may be prefixed according to the country in the "with preselection" list. This means, for example, that all national calls or calls to the mobile network are automatically linked to the preselection number you have saved previously. Menu Settings Base Preselection With Preselection / Without Preselection q Select entry and press OK. ~ Enter or edit first digits of number. OK Press the display key. The entry is saved. a Press and hold (idle status). Temporarily cancelling preselection c (press and hold) Menu Automatic Preselect off Permanently deactivating preselection Settings Base Preselection Preselection Number Menu ~ OK a Press <C> to delete the preselection number. Press the display key. The entry is saved. Press and hold (idle status). Saving preselection numbers Menu Settings Base Preselection Preselection Number ~ Enter or edit preselection number (call-by-call number). 29 Making cost-effective calls Displaying the call duration The duration of a call is displayed u during the conversation, u until about three seconds after the call has ended if you do not replace the handset in the base station or charging cradle. Please note The actual duration of the call can vary from that shown by a few seconds. 30 SMS (text messages) SMS (text messages) Your phone is supplied ready for sending SMS messages immediately. Writing/sending an SMS ~ Menu Preconditions: u Calling Line Identification is enabled for your phone line. the fixed line network (information on this can be obtained from your network provider). u You are registered with your service provider to send and receive SMS messages. SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from every SMS centre that is entered, provided you have registered with your service provider. Your SMS messages are sent through the SMS centre that is entered as the active send service centre (page 33). Only one SMS centre can be the active send service centre at any one time. If no SMS service centre is entered, the SMS menu only contains the entry Settings. Enter an SMS Service Centre (page 33). Information on writing an SMS can be found in the appendix (page 54). An SMS may contain up to 160 characters. u Your network provider supports SMS in Write an SMS. For how to enter text, page 54. Menu Send Text Select and press OK. s/~ Enter the number with area code (including your local area code) from the directory or key it in manually, and press OK. The SMS is sent. u If you are interrupted by an external SMS Write Message Please note call while writing an SMS, the text is automatically saved in the draft message list. u If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later. Draft message list You can save an SMS in the draft message list, and edit and send it later. Saving an SMS in the draft message list Write an SMS (page 31). Menu Save Text Menu SMS Outgoing The first entry in the list is displayed, e.g.: 1 Saved 01/02 2 Opening the draft message list Please note: u If your phone is connected to a PABX, please read page 33. u To receive SMS messages you must be registered with your service provider. 01. 10.08 U Menu 09:23 1 Current number 2 Total number of SMS 31 SMS (text messages) Reading or deleting individual SMS messages q Open the draft message list.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)
<http://yourpdfguides.com/dref/2186108>

Menu Read SMS Select SMS. Or: Menu Select and press OK to read the SMS. Scroll through the SMS using q. due to an error. New SMS messages are signalled on all Gigaset C45 handsets by a message in the display, the flashing message key f and an advisory tone. u SMS messages that could not be sent Opening the incoming message list with the f key Delete Entry Select and press OK to delete the message. f Press. The incoming message list is displayed as follows (example): SMS: Writing/changing an SMS You are reading an SMS in the draft message list.

Menu Press the display key. You have the following options: Write Message Write and then send a new SMS or save. Use text Change the text of the stored SMS and then send it. U 02+05 OK 1 2 1 Number of new entries 2 Number of old, read entries An entry in the list is displayed as in the following example: 1 2 New 01/02 1234567890 Deleting draft message list Open the draft message list. Menu Delete List OK 01.

10.08 U Menu 12:14 a Select and press OK. Press the display key to confirm the delete. The list is cleared. Press and hold (idle status).

1 Number of the SMS currently displayed 2 Total number of new SMS messages Opening the incoming message list via the SMS menu Menu SMS Incoming Receiving an SMS All received SMS messages are saved in the incoming message list. Since an SMS remains in the list even after it has been read, you should regularly delete SMS messages from the list. Reading or deleting individual SMS messages q Open the incoming message list. Menu Read SMS Select SMS. Incoming message list The incoming message list contains: u All received SMS messages, starting with the latest. 32 Or: Menu Select and press OK to read the SMS. Scroll through the SMS using q. After you have read a new SMS, its status turns to "old". Delete Entry Select and press OK to delete the SMS. SMS (text messages) Deleting the incoming message list All new and old SMS messages in the list are deleted.

Open the incoming message list. Menu Delete List Select and press OK. OK Press the display key to confirm the delete. The list is cleared. Setting SMS centres Entering/changing SMS centres You should find out about the services Adding the number of the message sender to the directory q Open the incoming message list. Copy to Directory Complete the entry page 25. Menu Select SMS. Replying to or forwarding SMS messages You are reading an SMS. Menu Press the display key. You have the following options: Reply Write and send a reply SMS directly (page 31).

Use text Edit the text of the SMS and then send it. Send Text Forward the text of an SMS to another recipient. and special functions offered by your service provider before you make a new application and before you delete preconfigured phone numbers. Menu SMS Settings Service Centres q Select an SMS centre (e.g.

SMS centre # 1) and press OK. You have the following options: Active Send Srv. Cent. If the SMS messages are to be sent through this SMS centre, press OK to activate the SMS centre (= on). If a different SMS centre was active previously, then this will be deactivated.

SMS centre # Enter the number of the SMS centre and press OK. Sending an SMS via another SMS centre active send service centre (page 33). Send the SMS. Activate the SMS centre (2 or 3) as the SMS on a PABX u You can only receive an SMS when the Changing the character set You are reading an SMS. Menu Press the display key. Character Set Text is shown in the selected character set. Calling Line Identification is forwarded to the extension of the PABX (CLIP). The CLIP evaluation of the phone number for the SMS centre takes place in your Gigaset. u If required, you must prefix the number for the SMS centre with the access code (depending on your PABX). If in doubt, test your PABX, e.

g. by sending an SMS to your own number: once with and once without the access code. 33 SMS (text messages) u When you send SMS messages, your You cannot send messages. 1. You have not requested the CLIP service (Calling Line Identification Presentation). Ask your service provider to enable this service. sender number may be sent without your extension number. In this case the recipient cannot reply to you directly. Sending and receiving SMS messages on ISDN PABXs is only possible via the MSN number assigned to your base station. Activating/deactivating SMS function The SMS function is active by default. If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone. The settings you have made for sending and receiving SMS messages (e.g. the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after you turn off your phone.

Menu Press the display key.

M4023 Enter the digits. Deactivate SMS function. Q OK Or: OK Activate SMS function. 2. SMS transmission has been interrupted (e.

g. by a call). Re-send the SMS. 3. Network provider does not support this feature. 4. No number or an invalid number is entered for the SMS centre set as the active send service centre. Enter the number (page 33). You receive an incomplete SMS. 1.

Your phone's memory is full. Delete old SMS messages (page 32). 2. The service provider has not yet sent the rest of the SMS. The SMS is played back. 1. The "display call number" service is not activated. Ask your service provider to enable this feature (there is a charge for this). SMS troubleshooting Error codes when sending E0 Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated. FE Error occurred during SMS transfer.

FD Connection to SMS centre failed; see selfhelp. 2. Your mobile phone operator and your fixed line network SMS service provider have not agreed on a co-operation. Obtain information from your fixed line network SMS service provider. 3.

Your end device has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e. you are no longer registered with the provider. Have the device (re-)registered to receive SMS messages. Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider. Obtain information from your fixed line network SMS service provider. @@@@@ You hear the ready tone (short tone). Now speak your announcement (at least 3 sec.). Cancel recording with a or . Restart the recording with OK. OK Press the display key to end the recording.

@@@The icon appears in the display. The key lights up on the base station. The telephone is supplied with a prerecorded announcement.

@@@@@u The recording is cancelled if the answer machine memory is full. @@@@a Press and hold (idle status). @@Press twice to skip to the next but one message. @@@@@@@@Answ. Mach. @@@@Recording stops and you can speak to the caller.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)
<http://yourpdfguides.com/dref/2186108>

@@The f key on the handset flashes.

@@Press 2 again to resume. or Menu Stop playback. Press OK to resume. t or Return to the start of the current message. @@The options are: 1 Minute, 2 Minutes, 3 Minutes or Unlimited.

Menu Voice Mail Message Length q Select a recording time and press OK (= on). a Press and hold (idle status). Permanently activating/deactivating call screening a Press and hold (idle status). Call screening can be simultaneously activated on the base station and handset. Voice Mail Call Screening Handset / Base (= on) Menu Resetting fast access for the answer machine using key 1 The integrated answer machine has already been preset for fast access at the factory.

However, if you have set the network mailbox for fast access (page 39), you can reset this setting. Menu Voice Mail Set Key 1 Answer Machine Select and press OK. a Press and hold (idle status). When you have selected the answer machine, press and hold key 1. You will be connected directly. The setting for fast access applies to all registered handsets. Deactivating call screening for the current recording a Press the end call key. Setting up the answer machine The answer machine has already been preset at the factory. Make individual settings using the handset. Setting call acceptance You can set when you want the answer machine to answer a call.

The options are: Immediately, 10 sec, 18 sec or 30 sec and Auto. In Auto mode, the following applies for call acceptance: u If there are no new messages, the answer machine answers a call after 18 seconds. u If new messages are present, the answer machine accepts a call after just 10 seconds. Menu Voice Mail Ring Delay q Select an option Immediately / 10 sec / 18 sec / 30 sec / Auto and press OK (= on). a Press and hold (idle status). 37 Operating the answer machine of the Gigaset A585 base station Operating when on the move (remote operation) You can check and activate your answer machine from any other telephone (hotel, pay phone etc.). Activating the answer machine Phone home and let the phone ring Preconditions: u You have set a system PIN other than 0000 (page 46). u The phone you are using for remote operation has touch tone dialling (DTMF), i.e.

you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer). until you hear: "Please enter PIN". ~ Enter system PIN. Your answer machine is activated.

It tells you how much memory time is left. The messages are now played back. The answer machine cannot be deactivated remotely. Calling the answer machine and playing back messages Dial your own number. When you hear your announcement, press 9 and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answer machine with the keypad. The following keys are used for operation: A To return to the start of the current message. Press twice to go back to the previous message. B Stop playback. Press again to resume. 3 Go to the next message. 0 Delete current message. ~ 9~ 38 Using the network mailbox Using the network mailbox The network mailbox is your network provider's answer machine within the network.

You cannot use the network mailbox unless you have requested it from your network provider. Viewing the network mailbox report When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 27). Configuring fast access for the network mailbox With fast access, you can dial the network mailbox or the integrated answer machine (Gigaset A585 only) directly. Gigaset A580: Fast access is set for the network mailbox. You only need to enter the number of the network mailbox. Gigaset A585: The integrated answer machine is set for fast access. Instead, you can define fast access for the network mailbox, e.

g. the T-Home voice mailbox. Ask your network provider about this. Configuring fast access for the network mailbox and entering the network mailbox number Menu Network Mailbox Select and press OK (= on). ~ Enter the network mailbox number and press OK.

a Press and hold (idle status). The setting for fast access applies to all handsets. Voice Mail Set Key 1 Calling the network mailbox Press and hold. You are connected straight to the network mailbox. Press handsfree key d if required.

You will hear the network mailbox announcement. d 39 ECO DECT ECO DECT You are helping to protect the environment with your Gigaset A580/A585. Status displays Display icon i \ (flashes) Reception strength: good to low no reception Eco Mode+ enabled (displayed instead of the reception strength icon when in idle status) Reduced energy consumption Your telephone has an energy-saving adapter plug and uses less energy. Reduced transmission power The transmission power of your telephone is reduced automatically: u The handset's transmission power is reduced depending on the distance to the base station.

u The transmission power at the base station is reduced to virtually zero when only one handset is registered and is standing in the base station. You can reduce the transmission power of the handset and base station even further by using Eco Mode or Eco Mode+: u Eco Mode 80% transmission power reduction in standby and talk mode. u Eco Mode+ 100% transmission power deactivation in standby mode. u With Eco Mode+ enabled, press and Please note u u u Activate/deactivate Eco Mode / Eco Mode+: Menu Settings Base Additional Features Eco Mode / Eco Mode+ OK Press the display key (= on). hold the talk key c to check base station reachability. You will hear the dial tone if the base station is reachable.

When Eco Mode+ is enabled: call setup will be delayed by approx. 2 seconds. handset standby time will be reduced by approx. 50%. Registering handsets that do not support Eco Mode+ will cause the mode to be deactivated on the base station and all other handsets. Activating Eco Mode reduces the range of the base station. Eco Mode / Eco Mode+ and repeater support (page 46) cancel each other out, i.e. you cannot use Eco Mode and Eco Mode+ when using a repeater. 40 Setting the alarm clock Setting the alarm clock Precondition: The date and time have already been set (page 13).

Using several handsets Registering handsets You can register up to four handsets on your base station. Activating/deactivating the alarm clock Menu Alarm Clock Activation (= on) After you activate the alarm clock, the menu for setting the wake-up time opens automatically (page 41). If the alarm clock is set, the wake-up time appears with the icon in the display instead of the date.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/2186108)

[GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)

<http://yourpdfguides.com/dref/2186108>

Alarm Clock Wake up time OK. Please note Each additional handset must be registered on the base station in order for it to work properly! For how to register your handset automatically, page 11.

If automatic registration does not work, you will have to register the handset manually. Setting the wake-up time Menu ~ Enter the wake-up time in hours and minutes, then press Manual registration of Gigaset A58H to Gigaset A580/A585 You must activate manual registration of the handset on both the handset and the base station. Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display, e.g.

INT 1. If it does not appear, repeat the procedure. When the alarm clock rings... Alarm repeat after 5 minutes Press the display key or any key. If you press Snooze three times, the alarm clock switches off for 24 hours. Snooze On the handset Menu Turning off the alarm clock for 24 hours Off Press the display key. ~ Settings Handset Register Handset Enter the system PIN of the base station (the default is 0000) and press OK. Handset is registering flashes on the display.

On the base station Within 60 sec., press and hold the registration/paging key on the base station (page 2) (approx. 3 sec.). 41 Using several handsets Registering other handsets You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows. Making internal calls Internal calls to other handsets registered on the same base station are free. On the handset Start to register the handset as described in its user guide.

Calling other handsets k ~ Start internal call. The display shows Insert INT No..

Enter the internal number of the receiving handset and press OK. The handset is called. Press the display key and OK. All handsets are called. Press the end call key.

On the base station Press and hold the registration/paging key on the base station (page 2) (approx. 3 sec.). or: All De-registering handsets Handsets can only be de-registered by resetting the base station to its default settings. This will also reset every other setting page 46.

Ending a call a Locating a handset ("paging") You can locate your handset using the base station. Briefly press the registration/paging key on the base station (page 2). All handsets will ring simultaneously ("paging"), even if the ringer tones are deactivated. Transferring a call to another handset/ making an internal consultation call You are talking to an external participant and can call an internal participant at the same time to forward the call or to consult.

Calling internal participants When an internal participant answers: If necessary announce the external call. Either a Press the end call key. The call is transferred. Ending paging Briefly press the registration/paging key on the base station or press the talk key c on the handset. or Press the display key. You are reconnected with the external participant.

When transferring a call you can also press the end call key a before the internal participant answers. Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show Recall). 42 Handset settings Answering a waiting call If you receive an external call during an internal call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if phone number identification is enabled. a Press the end call key to end the internal call. c Press the talk key to take the external call. This does not affect the connection between the other internal participants and the external caller. Handset settings Your handset is preconfigured, but you can change the settings to suit your individual requirements. Listening in to an external call (conference) You are conducting an external call. An internal participant can listen in on this call and take part in the conversation.

A signal tone and Conference Call on the display indicates the inclusion of a new participant to the conversation to all participants Precondition: The Listening in function must be activated. Changing date and time To change the time, open the input field with: Menu Settings Date/Time Enter Date: Enter the day, month and year in 8-digit format, e.g. Q Q2QQN for 01/10/08. Enter Time: Enter hours and minutes as 4 digits, e.

g. Q M 5 for 07:15 a.m. OK Press the display key Activating/deactivating listening in Menu a Settings Base Listening in (= on) Changing the display language You can view the display texts in different languages. Menu Settings Handset Language The current language is indicated by .

q Select a language and press a OK. Press and hold (idle status). Internal listening in The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call. c Press and hold the talk key. You are linked into the call. All participants hear a signal tone. Conference Call appears in the display. Press and hold (idle status).

Ending listening in a An internal participant presses the end call key. All participants hear a signal tone. If you accidentally choose a language you do not understand: Menu N 3 2 Press keys in sequence. q Select the correct language and press OK. 43 Handset settings Setting the display You can display a digital clock when the handset is in idle status. Menu Settings Handset Display You have the following options: Screensaver The available settings are No Screensaver or Digital Clock. Adjusting the volume via the menu Menu Handsfree Volume q Adjust the volume and press a OK. Settings Audio Settings Call Volume Earpiece Volume / Press and hold (idle status). Changing ringer tones u Volume: Activating/deactivating auto answer When this function is activated, when a call arrives you can simply lift the handset out of the base station without having to press the talk key c. Menu Settings Handset Auto Answer (= on) a Press and hold (idle status).

Changing the handsfree/ earpiece volume You can adjust the volume for handsfree talking to one of five settings (1-5, e.g. volume 3 = S) and the earpiece volume to one of three (1-3, e.g. volume 2 =).

Five volume levels (15; e.g. volume 3 = ^) and "crescendo" ring (6; volume increases with each ringer tone =). u Melody: List of pre-loaded ringer melodies. The first three melodies are the "classical" ringer tones.

You can also set different ringer melodies for the following functions: u External Calls: for external calls u Internal Calls: for internal calls u Alarm Clock: for the alarm clock For how to set the ringer tones for the base station, page 46. Setting the ringer volume The ringer volume is the same for all types of ring. Menu Settings Audio Settings Ringer Volume Or in idle status: t Ringer Volume.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/2186108)

[GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)

<http://yourpdfguides.com/dref/2186108>

Then: q Adjust the volume and press a OK. Setting the volume during a call The setting applies to the current mode (earpiece or hands-free). You are conducting an external call. t Press the control key. q Set the volume. The setting will automatically be saved after approx. 3 seconds, if not then press the display key OK.

Press and hold (idle status). 44 Handset settings Setting the ringer melody Set different ringer melodies for external calls, internal calls and the alarm clock. Menu Settings Audio Settings Ringer Melody External Calls / Internal Calls / Alarm Clock Select and press OK. q Select melody (= on) and press OK. a Press and hold (idle status). charging. You cannot deactivate the confirmation tone for placing the handset in the base station. u Battery low beep: the battery requires Activating/deactivating advisory tones Settings Audio Settings Advisory Tones Menu Select and press OK (= on). Activating/deactivating the ringer You can turn off the ringer on your handset before you take a call or while the phone is in idle status. You can take a call so long as it is displayed on the screen.

Setting the battery low beep Menu Settings Audio Settings Battery Low Deactivating the ringer * Press the star key and hold, until the icon appears in the display. Press and hold the star key in idle status. On / Off / During Call Select and press OK (= on). The battery low beep is activated or deactivated or sounds during a call. Reactivating the ringer * Restoring the handset to the factory settings You can reset any individual settings and changes that you have made.

This will not affect entries in the directory, calls list or SMS lists, or the handset's registration to the base station. Menu Settings Handset Reset Handset Confirm query with OK or reject it with . a Press and hold (idle status). Advisory tones Your handset uses "advisory tones" to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other: u Advisory tones: Key click: every key press is confirmed. Confirmation tone (rising tone sequence): at the end of an entry/ setting, when the handset is placed in the base station and on arrival of an SMS or a new entry in the answer machine list or the calls list. Error tone (descending tone sequence): when you make an incorrect entry. Menu end tone: when scrolling at the end of a menu. 45 Base station settings Base station settings The base station settings are carried out using a registered Gigaset A58H handset. Settings Base Audio Settings Ringer Volume / Ringer Melody Menu page 44. For how to adjust the settings, Protecting against unauthorised access Protect the system settings of the base station with a PIN known only to yourself. You may have to enter the system PIN into the base station when manually registering a handset. Repeater support With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Precondition: A repeater is registered. The Eco Mode / Eco Mode+ mode is deactivated. Menu Settings Base Additional Features Repeater Mode Yes Press the display key. When repeater mode is active, the menu item is marked with . Changing the system PIN You can change the base station's 4-digit default system PIN ("0000") to a 4-digit PIN known only to yourself. Menu Settings Base System PIN ~ Enter the old system PIN and press OK. For security, the PIN is shown as four stars (****). ~ Enter your new system PIN and press OK. a Press and hold (idle status). Please note Repeater support and Eco Mode / Eco Mode+ (page 40) cancel each other out, i.

e. both functions cannot be used at the same time. Resetting the system PIN If you have forgotten the system PIN, you can reset it to the original code 0000 by resetting the base station to its default settings. This will also reset every other setting, see "Restoring the base station to the factory settings" page 46.

Restoring the base station to the factory settings When restoring factory settings: u Handsets are de-registered When resetting via the menu: all Gigaset handsets When resetting using the key on the base station: also all handsets of other GAP capable devices u Individual settings are reset u All lists are deleted u The system PIN is reset to the original code 0000 u Eco Mode+ is deactivated Only the date and time are retained.

Changing ringer tones u Volume: You can choose between five volumes and the "crescendo" ring, page 44. Select "0" to deactivate the base station ringer. u Ringer tones: You can set a ringer melody for external calls, page 44. 46 Base station settings Resetting the base station via the menu Menu OK Settings Base Base Reset Press the display key to confirm. Resetting the base station using a key on the base station Disconnect the power cord from the base station.

Hold down the registration/paging key (page 2) on the base station while reconnecting the power cable to the base station. Press and hold the key until you hear a confirmation tone. The base station has now been reset. 47 Connecting the phone to a PABX Connecting the phone to a PABX The following settings are only necessary when your PABX requires them; see the PABX user guide. You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification. Setting pauses Changing pause after line seizure You can change the length of pause that is inserted between pressing the talk key c and sending the number. Menu M 4 O O ~ Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec) and press OK. a Press and hold (idle status).

Dialling modes and recall The current setting is indicated by . Changing the pause after the recall key You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX). Menu M 4 O 4 ~ Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press OK. a Press and hold (idle status). Changing the dialling mode The following dialling modes can be selected: u Touch tone dialling (DTMF) u Dial pulsing (DP) Menu M 4 O ~ OK Dial pulsing mode (DP). Or: ~ Q OK Touch tone dialling (DTMF). a Press and hold (idle status). Setting recall For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX. Menu M 4 O 2 ~ Enter digits for the recall time and press OK.

0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 180 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms a Press and hold (idle status). Switching temporarily to touch tone dialling (DTMF) If your PABX still operates with dial pulsing (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/2186108)

[GIGASET A585 user guide](http://yourpdfguides.com/dref/2186108)

<http://yourpdfguides.com/dref/2186108>