




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A58H. You'll find the answers to all your questions on the SIEMENS GIGASET A58H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A58H
User guide SIEMENS GIGASET A58H
Operating instructions SIEMENS GIGASET A58H
Instructions for use SIEMENS GIGASET A58H
Instruction manual SIEMENS GIGASET A58H

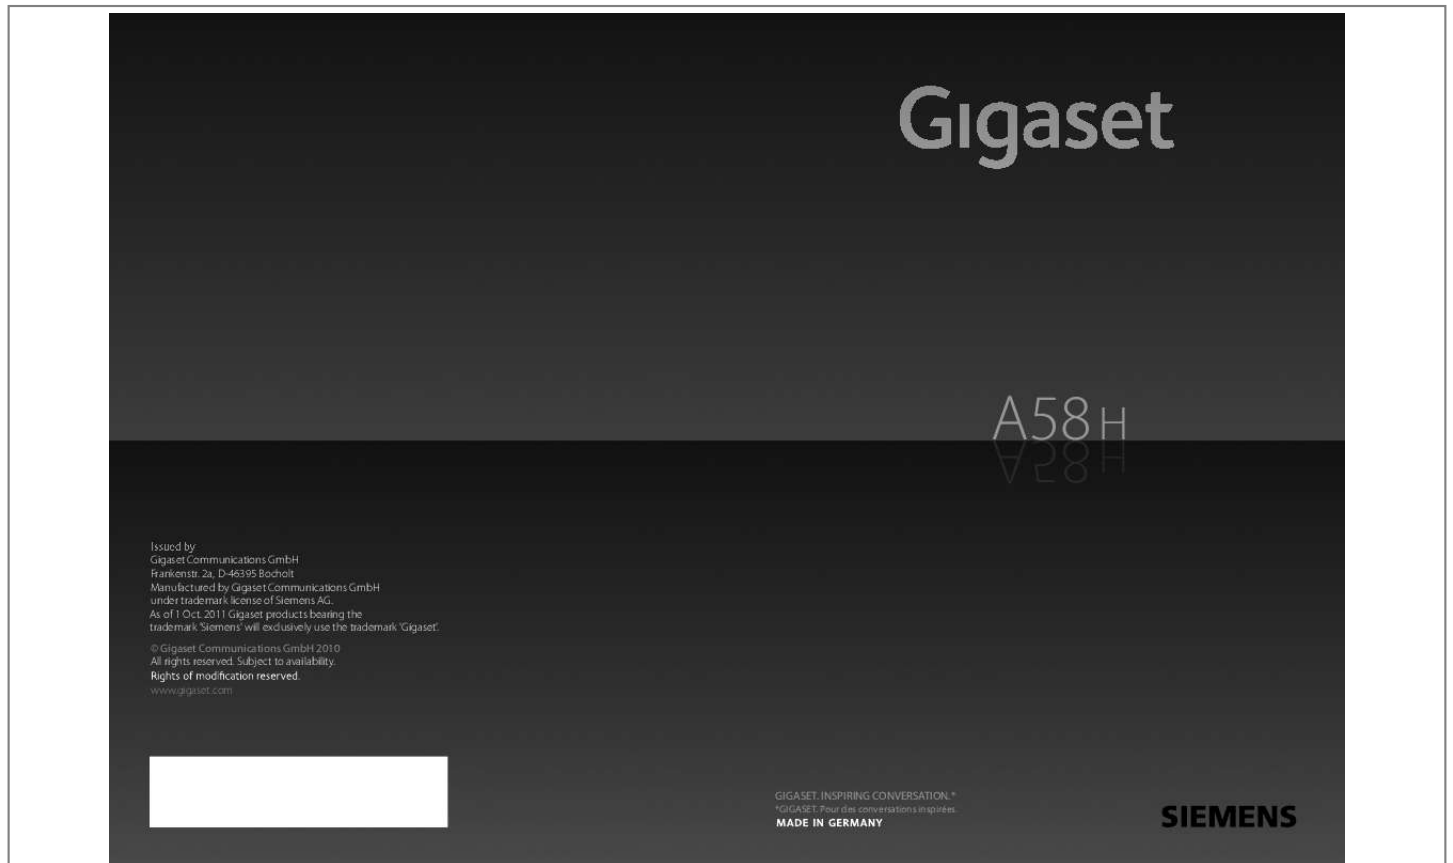

[You're reading an excerpt. Click here to read official SIEMENS GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)
<http://yourpdfguides.com/dref/3954918>

..... 14 Using the phone

.....
.....
.....

.....
.....
.....

..... 15 Control key

.....
.....
.....

.....
.....
.....

.. Display keys

.....
.....
.....

.....
.....
.....

..... Keys on the keypad

.....
.....
.....

.....
.....
.....

..... Correcting incorrect entries

.....
.....
.....

.....
.....
.....

..... Menu guidance

.....
.....
.....

.....
.....
.....

..... Activating/deactivating the handset

.....
.....
.....

..... Activating/deactivating the keypad lock

.....
..... *Muting* ..
.....
.....

.....
.....
.....

.....
.....
... *Making internal calls* ..
.....

.....
.....
.....

.....
.....
20 20 20 20 20 21 Using the directory and lists
.....

.....
.....
.....
..... *21 Directory*.....

.....
.....
.....

.....
.....
.....

.. *21 Last number redial list*

.....
.....
.....

..... *23 Opening lists with the message key* ...

.....
.....
.....

..... *23 ECO DECT* ..
.....
.....

.....
.....
.....

..... 23 Setting the alarm clock

.....
.....
.....

.....
.....

... 24 Handset settings ...

.....
.....
.....
.....
.....

..... 24 Changing date and time ...

.....
.....
.....

.....
.....
.....
.....

Changing the display language

.....
.....
.....

.....
.....

. Setting the display ...

.....
.....
.....
.....

.....
.....

Activating/deactivating auto answer

.....
.....
.....

..... Changing the handsfree/earpiece volume

.....
.....
.....
.....

.. Changing ringer

.....
.....
.....

.....
.....
.....
.....

... Advisory tones

.....

.....
.....

.....
.....
.....
.....

..... *Restoring the handset default settings*

.....
.....
.....

.....
.....

. 24 24 24 25 25 25 26 26 2 Contents Service (Customer Care)

.....

.....
.....
.....

..... 27 *Questions and answers* .

.....
.....
.....
.....

.....
.....
.....

... *Authorisation*

.....
.....
.....
.....

.....
.....
.....

..... *Guarantee Certificate (United Kingdom)* . . .

.....
.....
.....
.....

..... *Guarantee Certificate (Ireland)*

.....
.....
.....

.....
.....
.....

... 27 28 28 29 *Environment*

.....
.....
.....
.....

.....
.....

. 30 *Appendix*

.....

.....
.....
.....
.....

.. 31 Caring for your telephone ...

.....
.....
.....
.....

.... Contact with liquid

.....
.....
.....
.....
.....

.. Specifications

.....
.....
.....
.....
.....

..... Writing and editing text

.....
.....
.....
.....
.....

31 31 31 32 Accessories

.....
.....
.....
.....
.....

..... 33 Mounting the charging cradle to the wall

.....
.....
.....

. 33 Index

.....
.....
.....
.....

.....
.....

. @@Explain their contents and the potential hazards associated with using the telephone to your children. \$ Only use the mains adapter supplied, as indicated on the underside of the charger. Only use the recommended, rechargeable batteries (page 31), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the charging cradle in bathrooms or shower rooms. The charging cradle is not splashproof (page 31). Do not use your phone in environments with a potential explosion hazard (e.g. paint shops). If you give your Gigaset to someone else, make sure you also give them the user guide. Please note Not all of the functions described in this user guide are available in all countries.

4 First steps First steps Check the package contents 1 2 3 4 5 1 one Gigaset A58H handset, 2 one charging cradle, 3 one mains adapter, 4 two batteries, 5 one battery cover, 6 one user guide. Setting up the charging cradle The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 C to +45 C. Set up the charging cradles at a central location on a flat, non-slip surface in your house or apartment. Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings.

The range is reduced when Eco Mode (page 23) is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. For instructions on how to mount the charging cradle to a wall, please see page 33. 5 First steps Please note: u Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.

u Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Connecting the charging cradle 2 1 Connect the flat plug of the mains adapter 1. Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)
<http://yourpdfguides.com/dref/3954918>

1 6 First steps Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries (page 31) recommended by Gigaset Communications GmbH. Never use conventional (non-rechargeable) batteries as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Insert the batteries the right way round.

The polarity is indicated in/on the battery compartment. a b First insert the battery cover at Then press the cover b until it clicks into place. the top a. If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the cavity on the casing and pull the battery cover upwards. 7 First steps Registering the handset to the base station Before you can use the phone, you must first register the handset to the base station. The actual registration procedure will depend on the type of base station. Automatically register the A58H handset to the Gigaset A580/A585 base station \ into base the display screen to confirm your selection. Saved The display shows Saved. You will hear a confirmation tone. Press and hold the end call key a to return to the idle status.

12 First steps Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example V 07:15 Menu Your phone is now ready for use. 01.10.08 Please note The range icon is only displayed in idle status if Eco Mode+ is deactivated (depending on the base station, see your phone's user guide). 13 First steps What would you like to do next? Now you have successfully started your Gigaset you will probably want to adapt it to your personal requirements.

Use the following guide to quickly locate the most important subjects. If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" page 15. Information on ...

Setting the ringer melody and volume Setting the handset volume Setting Eco Mode / Eco Mode+ Transferring directory entries from existing Gigaset handsets to the new handset(s) ... is located here. page 25 page 25 page 23 g g g page 22 If you have any questions about using your phone, please read the tips on troubleshooting (page 27) or contact our Customer Care team (page 27). 14 Using the phone Using the phone Control key In the following description the side of the control key you need to press for each operation is indicated accordingly, e.g. t for "press the top of the control key". The control key has a number of different functions: When the handset is in idle status s t Open the directory. Call up the menu for setting the handset's call volume (page 25), ringer melodies (page 25) and advisory tones (page 26).

In the main menu, in submenus and lists t/s Scroll up/down line by line. In input fields Use the control key to move the cursor to the left t or right s. During an external call s t Open the directory. Adjust the loudspeaker volume for earpiece and handsfree mode. 15 Using the phone Display keys The function of the display keys changes depending on the particular operating situation. Example: U OK Current display key functions are shown in the bottom display line. Display keys Important display keys: Menu Open a context-dependent menu. OK W Confirm selection. Delete key: deletes one character at a time from right to left. Go back one menu level or cancel operation.

Open the last number redial list. Keys on the keypad c / Q / * etc. Press the matching key on the handset. ~ Enter digits or letters. Correcting incorrect entries You can correct incorrect characters in the text by navigating to the incorrect entry using the control key.

You can then: u press X to delete the character to the left of the cursor, u insert characters to the left of the cursor, u overwrite the (flashing) character when entering the time and date etc. Menu guidance Your telephone's functions are accessed using a menu that has a number of levels. Main menu (first menu level) When the handset is in idle status, press Menu to open the main menu The main menu functions are shown on the display as a list with name and icon. To access a function, i.e.

to open the corresponding submenu (next menu level): Navigate to the function using the control key q. Press the display key OK. 16 Using the phone Submenus The functions in the submenus are displayed as lists. To access a function: Scroll to the function with the control key q and press OK. Or: Enter the corresponding digit combination (page 19). Briefly press the end call key a once to return to the previous menu level/cancel the operation. Reverting to idle status You can revert to idle status from anywhere in the menu as follows: Press and hold the end call key a. Or: Do not press any key: after 2 minutes the display will automatically revert to idle status. Any settings you have not confirmed by pressing OK will be discarded. An example of the display in idle status is shown on page 13.

Activating/deactivating the handset a With the phone in idle status, press and hold the end call key (confirmation tone) to switch off the handset. Press and hold the end call key again to switch the handset on. Activating/deactivating the keypad lock The keypad lock prevents any inadvertent use of the phone. # Press and hold the hash key to activate or deactivate the keypad lock. You will hear the confirmation tone. When the keypad lock is activated you will see the icon on the display and a message when you press a key. The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished. 17 Using the phone Illustration of operating steps in the user guide The operating steps are shown in abbreviated form. Example: The illustration: Menu Settings Handset Auto Answer (= on) means: Menu Press the display key Menu to open the main menu.

Settings Press the bottom of the control key OK U s until the Settings menu item appears on the display. Press the display key OK to confirm your selection. Handset Press the bottom of the control key OK U s until the Handset menu item appears on the display. Press the display key OK to confirm your selection.

Auto Answer U OK Press the bottom of the control key s until the Auto Answer menu item appears on the display.

Press the display key OK to activate/deactivate the function (= on). 18 Menu tree Menu tree Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954918)

[GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)

<http://yourpdfguides.com/dref/3954918>

Example: Menu M 2 2 for "Set ringer volume". With the telephone in idle status, press Menu (open main menu): 1 4 SMS (Menu dependent on base station) Alarm Clock 4-1 Activation 4-2 Wake up time 5 7 page 24 page 24 page 11 7-2-1 Call Volume 7-2-2 Ringer Volume 7-2-3 Ringer Melody 7-2-4 Advisory Tones 7-2-5 Battery Low Voice Mail (Menu dependent on base station) m Settings 7-1 Date/Time 7-2 Audio Settings page 25 page 25 page 25 page 26 page 26 page 24 page 24 page 25 page 8 page 26 7-3 Handset 7-3-1 Display 7-3-2 Language 7-3-3 Auto Answer 7-3-4 Register Handset 7-3-5 Reset Handset 7-4 Base (Menu dependent on base station) 19 Making calls Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key.

Or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. u Dialling with the directory To deactivate the ringer, press the Menu display key and select Silent. You can take the call as long as it is displayed on the screen. Handsfree talking In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call. Activating/deactivating handsfree mode Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Please note (page 21) and last number redial list (page 23) saves repeated typing of numbers.

u You can assign a number from the directory to a key for speed dialling (page 22). Switching between earpiece and handsfree mode Ending a call a Press the end call key. Answering a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d. You can answer the call by: Pressing the talk key c. Pressing the handsfree key d. If the handset is in the charging cradle and the Auto Answer function is activated (page 25), the handset automatically answers the call when you remove it from the charging cradle. d Press the handsfree key.

Activate/deactivate handsfree during a call. If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key d while placing the handset in the base station. If the handsfree key d does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume (page 25). Muting You can deactivate the microphone in your handset during an external call. Mute Press the display key to mute the handset. On Press the display key to switch the microphone back on. 20 Using the directory and lists Making internal calls Internal calls to other handsets registered on the same base station are free.

Calling other handsets k ~ or: All Start internal call. The display shows Insert INT No.. Enter the internal number of the receiving handset. The handset is called.

Press the display key. All handsets are called. s Dir. empty New Entry? ~ Enter the number and press OK. ~ Enter the name and press OK. Saving the first number in the directory s Menu New Entry ~ Enter the number and press OK. ~ Enter the name and press OK. Saving the first number in the directory Ending a call a Press the end call key. Order of directory entries The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority.

The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Using the directory and lists The options are: u Directory

u Last number redial list u Lists dependent on the base station (base station user guide). Selecting a directory entry Directory You can save up to 150 numbers and corresponding names in the directory. You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (page 22).

With the handset in idle status, open the directory by pressing the s key. s Open the directory. You have the following options: u Use q to scroll to the entry until the required name is selected. u Enter the first character of the name, or scroll to the entry using s if required. Dialling a number from the directory Length of the entries Number: Name: max.

32 digits max. 16 characters s q (Select entry) c Press the talk key. The number is dialled. Please note You can assign a number from the directory to a key for speed dialling page 22. 21 Using the directory and lists Managing directory entries s q (Select entry) Sending the directory to another handset Preconditions: u The sending and receiving handsets must Editing an entry ~ Menu Edit Entry Edit the number if required, and press OK.

Edit the name if required, and press OK. ~ Using other functions Press the display key. The following functions can be selected with q: Use Number Save or modify a saved number and then dial with c or save as a new entry; to do so, press Menu Copy to Directory OK after the number appears on the display.

Delete Entry Delete a selected entry. Send Entry Send a single entry to a handset (page 22). Delete List Delete all directory entries. Send List Send complete list to a handset (page 22). Shortcut Assign the current entry for speed dial to a selected key. Menu both be registered to the same base station. u The other handset and the base station can send and receive directory entries.

s q (Select entry) Menu (open menu) Send Entry / Send List ~ Enter the internal number of the receiving handset and press OK. Successful transmission is acknowledged with the message Entry copied. . You can transfer several individual entries one after the other by responding OK to the Next entry? prompt. Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. Copying a displayed number to the directory You can copy numbers displayed in a list, e.g. the call history or the last number redial list, or in an SMS (depending on the base station) to the directory. If you have CNIP, the first 16 characters of the transmitted name are copied to the Enter Name line.

A number is displayed: Menu Copy to Directory Complete the entry page 21. Using speed dial keys You can assign directory entries to the keys 0 and 29: s q (Select entry) Menu Shortcut ~ (press the key you want to assign the number to) To dial, press and hold the required speed dial key. 22 ECO DECT Using a number from the directory In some operating situations you can open the directory to copy a number, for example.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954918)

[GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)

<http://yourpdfguides.com/dref/3954918>

Your handset must be in the idle status. s Open the directory.

q Select entry. OK Press the display key. Select function with q. Opening lists with the message key f. An advisory tone sounds as soon as a new message arrives in a list. The f key flashes (it goes off when the key is pressed).

In idle status, the display shows an icon for the new message. If you press the message key f, you access the lists that contain new messages. Last number redial list The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed. c s c ECO DECT You are helping to protect the environment with your Gigaset handset. Reducing energy consumption Manual last number redial Press the key briefly. Select entry. Press the talk key again. The number is dialled.

By using an energy-saving power supply, your telephone consumes less power. Reducing radiation (dependent on base) The radiation can only be reduced if your base supports this function. @@@@ Select entry. Menu Open menu. @@@@ Q Q2QQN for 01/10/08. Enter Time: Enter hours and minutes as 4 digits, e.g. Q M 5 for 07:15 a.m. @@@@ @q Select a language and press OK.

a Press and hold (idle status). @@@@ @volume 3 = S) and the earpiece volume to one of three (1-3, e.g. volume 2 =). Five volume levels (15; e.g. @ @u Melody: List of pre-loaded ringer melodies. @@@@ @ You are conducting an external call. t Press the control key. q Set the volume.

The setting will automatically be saved after approx. @@@@ q Select melody (= on) and press OK. @@@@ @ The following tones can be activated and deactivated independently of each other: u Advisory tones: Key click: every key press is confirmed. Confirmation tone (rising tone sequence): at the end of an entry/setting, when replacing the handset in the charging cradle and when an SMS is received (depending on the base station) or a new entry is made in the calls list. Error tone (descending tone sequence): when you make an incorrect entry. Menu end tone: when scrolling at the end of a menu. u Battery low tone: the battery requires charging. You cannot deactivate the confirmation tone for placing the handset in the charging cradle. Restoring the handset default settings You can reset individual settings and changes that you have made. This will not affect entries in the directory, calls list or SMS lists (depending on the base station), or the handset's registration to the base station.

Menu Settings Handset Reset Handset Confirm query with OK or reject it with . a Press and hold (idle status). 26 Service (Customer Care) Service (Customer Care) We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere.

www.gigaset.com/customercare It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide. For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on: UK helpdesk: 0 84 53 67 08 12. Ireland: 18 50 77 72 77.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. Questions and answers If you have any questions about using your phone, visit us at www.gigaset.com/customercare at any time.

The table below contains a list of common problems and possible solutions. The display is blank. 1. 2. The handset is not switched on. Press and hold the end call key a. The batteries are flat. Charge or replace the batteries (page 7). " Base" flashes in the display. 1. The handset is outside the range of the base station. Move the handset closer to the base station. The base station's range is reduced because Eco Mode is activated (depending on the base station, please see your phone's user guide). Deactivate Eco Mode or reduce the distance between the handset and the base station. 2.

3. The base station is not turned on. Check the base station mains adapter. Handset does not ring. 1. The ringer is deactivated. Activate the ringer (page 26). The other party cannot hear you. You have pressed the Mute display key. The handset is "muted". Activate the microphone again (page 20). You hear an error tone (descending tone sequence) when inputting. Action has failed/invalid input. Repeat the operation. Watch the display and refer to the user guide if necessary.

27 Service (Customer Care) Authorisation This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.

gigaset.com/docs u This Guarantee shall not apply to or Guarantee Certificate (United Kingdom) Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. u This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides. extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. u The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.

u Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. u This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Faraday House, Sir William Siemens Square, Frimley, Camberley, Surrey, GU16 8QD.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET A58H user guide](#)

<http://yourpdfguides.com/dref/3954918>

u Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. u The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. u Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. u The above provisions does not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

28 Service (Customer Care) Guarantee Certificate (Ireland) Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. u This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if: u The device is opened (this is classed as third party intervention) u Repairs or other work done by persons not authorised by Gigaset Communications. u Components on the printed circuit board are manipulated u The software is manipulated u Defects or damage caused by dropping, breaking, lightning or ingress of moisture.

This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.) u Devices fitted with accessories not authorised by Gigaset Communications u This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g.

installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. u The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. u Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. u This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Faraday House, Sir William Siemens Square, Frimley, Camberley, Surrey, GU16 8QD. u Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. u The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.

u Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. u The above provisions does not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. @@@@The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design. Further information on environmentally friendly products and processes is available on the Internet under www.gigaset.com/docs. Ecological energy consumption The use of ECO DECT (page 23) saves energy and is an active contribution towards protecting the environment. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. IThis crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Environmental management system Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001. ISO 14001 (Environment): certified since September 2007 by TV SD Management Service GmbH. ISO 9001 (Quality): certified since 17/02/1994 by TV Sd Management Service GmbH. 30 Appendix Appendix Caring for your telephone Wipe the charger and handset with a damp cloth (do not use solvent or a microfiber cloth) or an antistatic cloth. Never use a dry cloth as this can cause static.

Contact with liquid ! We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life: u GP 700 mAh u Yuasa Phone 700 mAh u Yuasa Phone 800 mAh u Yuasa AAA 800 u Peacebay 600 mAh The device is supplied with two recommended batteries. If the handset should come into contact with liquid: 1. Switch the handset off and remove the battery immediately. 2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4. Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will usually be able to use it again. Handset operating times/charging times The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times.) Capacity (mAh) approx. 550 Standby time (hours) Talktime (hours) 180 23 650 210 25 95 800 265 33 115 1000 330 41 145 Specifications Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954918)

[GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)

<http://yourpdfguides.com/dref/3954918>

2 V Capacity: 5501000 mAh Operating time 80 for 1.5 hrs of calls per day (hours) Charging time, 8 base station (hours) Charging time, 6 charging cradle (hours) 10 12 15 7 9 11 At the time of going to print, batteries up to 800 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: www.gigaset.com/customer-care 31 Appendix Writing and editing text The following rules apply when writing text: u Use t s to move the cursor to the left or right.

u Characters are inserted to the left of the cursor. u The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Press the hash key # briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key # before entering the letter. You can see briefly in the display whether upper case, lower case or digits is selected.

Setting upper/lower case or digits Writing an SMS (depending on the base station)/name Press the relevant key several times to enter the corresponding letters/characters. Standard characters 2a b c 2 3d e f 3 4g h i 4 5j k l 5 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 13x 14x 1) 2) 1\$ Lm n o 6 Mp q r s 7 Nt u v 8

Ow x y z 9 Q. , ? ! 0 + - : " ** / () < = > % # ; _ # @ & 1) Space 2) Line break When you press and hold a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field. 32 Accessories Accessories

Ordering Gigaset products You can order Gigaset products from your specialist retailer.

Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with. Mounting the charging cradle to the wall 21 mm approx. 2.5 mm 33 Index Index A Accepting a call

.
.
. 20 Accessories

.
. 33 Activating advisory tones

. 26 call acceptance

. 25 handset

. 17 keypad lock

. 17 Advisory tones

. 26 Alarm clock

. 24 Alarm repeat

. 24 Authorisation

. 28 Auto answer

. 20, 25 D Deactivating advisory tones

. 26 call acceptance

. 25 handset

.....	
.....	
.....	
.....	17 keypad lock
.....	
.....	17 Delete key
.....	
.....	16 Deleting characters
.....	
.....	16 Dialling directory
.....	
.....	21 with speed dial
.....	
.....	22 Dialling pause entering
.....	
.....	1 Digital clock
.....	
.....	24 Directory
.....	
.....	21 copying number
.....	
.....	23 copying number from text
.....	
.....	22 managing entries
.....	
.....	22 opening
.....	
.....	15 order of entries
.....	
.....	21 saving entry
.....	
.....	21 saving the first number
.....	
.....	21 sending entry/list to handset
.....	22 Display changing display language
.....	
.....	24 in idle status
.....	
.....	

..... 17 keys .

.....
.....
.....

16 screensaver.

.....
.....

..... 24 setting

.....
.....
.....

... 24 Display keys

.....
.....
.....

.. 1 Disposal

.....
.....
.....

.. 30 B Base station setting up

.....
.....
.....

5 Battery charging

.....
.....
.....

1, 10 display

.....
.....
.....

.. 1 icon. ...

.....
.....
.....

.. 1, 9 inserting ...

.....
.....
.....

.. 7 recommended batteries ...

..... 31 warning tone .

.....
.....
.....

.. 26 C Call accepting

.....
.....
.....

... 20 ending ..

.....
.....
.....

.. 20 external ...

.....
.....
.....

.....	
.....	
20 internal	
.....	
.....	
... 21 Call acceptance ..	
.....	
.....	
..... 25 Call duration	
.....	
.....	
.....	
.. 20 Calling external	
.....	
.....	
.....	
20 internal	
.....	
.....	
..... 21 Caring for your telephone. .	
.....	
.. 31 Changing earpiece volume ...	
.....	
.....	
.. 25 handsfree volume.	
.....	
.....	
. 25 Character set	
.....	
.....	
. 32 Charge status display	
.....	
.....	
..... 1 Confirmation tone.	
.....	
.....	
..... 26 Control key ...	
.....	
.....	
.....	
.. 1, 15 Correcting incorrect entries	
.....	
..... 16 Customer Care	
.....	
.....	
..... 27 E Earpiece mode. .	
.....	
.....	
.....	
.. 20 Earpiece volume	
.....	
.....	
..... 25 ECO DECT .	
.....	
.....	
.....	
.....	
.. 23 End call key ...	

.....	
.....	
.....	1, 20 Ending a call . . .
.....	
.....	
.....	
.....	20 Ending, see Deactivate Entry selecting from directory
.....	
.....	21 Environment.
.....	
.....	
.....	30 Error tone
.....	
.....	
.....	26 G General troubleshooting.
.....	
.....	27 Guarantee Certificate
.....	
.....	
.....	28 34 Index H Handset activating/deactivating
.....	
.....	17 advisory tones
.....	
.....	
.....	26 contact with liquid
.....	
.....	
.....	31 display language.
.....	
.....	
.....	24 earpiece volume
.....	
.....	
.....	25 handsfree volume.
.....	
.....	
.....	25 idle status
.....	
.....	
.....	
.....	17 muting
.....	
.....	
.....	
.....	20 restoring to factory settings.
.....	26 setting
.....	
.....	
.....	
.....	24 setting up
.....	
.....	
.....	7 Handsfree key
.....	
.....	
.....	

..1 message key...
.....
.....

.....1 on/off key...
.....
.....

.....1 recall key.....
.....
.....

.....1 speed dial.....
.....
.....

..22 star key.....
.....
.....

.....1, 26 talk key...
.....
.....

... 1, 20 I Icon battery.....
.....
.....

... 9 display.....
.....
.....

... 16 for new messages.....
.....
.....

.. 23 keypad lock...
.....
.....

..... 17 Idle status display....
.....
.....

..... 17 returning to.....
.....
.....

..... 17 Incorrect input (correction) .
.....
.....

.. 16 Installing, base station .



You're reading an excerpt. [Click here to read official SIEMENS GIGASET A58H user guide](http://yourpdfguides.com/dref/3954918)
<http://yourpdfguides.com/dref/3954918>

...
.....
.....

5 Internal call.....

.....
.....
.....

... 21 key.....

.....
.....
.....

..... 1 making calls ...

.....
.....
.....

. 21 L Last number redial.....

.....
.....

. 23 Lock activating/deactivating keypad lock . . 17 M Mains adapter.....

.....
.....

... 4 Making calls answering a call.

.....

*.....
20 external.....*

.....
.....

..... 20 internal ..

.....
.....
.....

..... 21 Manual last number redial.....

.....

... 23 Medical appliances .

.....

*.....
4 Menu end tone.....*

.....
.....

..... 26 overview ..

.....
.....
.....

..... 19 prompting.....

.....
.....
.....

16 Message key.....

.....
.....

..... 1 opening lists. .

.....
.....
.....

	.. 23 Microphone

	1 Muting the handset
.....	20 35 Index N Number copying from directory .

	... copying to directory.....

	entering with directory

	... saving in the directory.....
.....	23 22 23 21 T Talk key .

.....	1, 20 V Volume earpiece volume ...

.....	25 handset handsfree volume. ...

	25 ringer ..

.....	25 O On/Off key. .

.....	1 Order in directory . .

.....	21 W Warning tone (battery) .

	26 Writing and editing text

	32 P Pack contents

.....	5 Q Questions and answers ...

	27 R Range . .

	5 Recall key. . .

	1 Ringer changing . .

.....
.....
25 setting melody.....
.....
..... 25 setting volume...
.....
.....
..... 25 S Screen protection, see Screensaver Screensaver.

.....
.....
.....
..... 24 Searching in directory.....

.....
... 21 Sending directory entry to handset ..

.....
..... 22 Service

.....
.....
.....
..... 27 Setting date

.....
.....
.....
... 11, 24 melody (ringer).....

.....
..... 25 time .
.....
.....

.....
.. 11, 24 wake up time ...
.....
.....

..... 24 Setting up handset

.....
.....
.....
..... 7 Shortcut.

.....
.....
.....
..... 19 SMS writing

.....
.....
.....
..... 32 Snooze (alarm clock)

..... 24 Specifications

.....
.....
.....
.. 31 Speed dial ...

.....
.....

22 Star key

.....

.....

... 1, 26 36.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A58H user guide](#)

<http://yourpdfguides.com/dref/3954918>