



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET A590. You'll find the answers to all your questions on the SIEMENS GIGASET A590 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET A590
User guide SIEMENS GIGASET A590
Operating instructions SIEMENS GIGASET A590
Instructions for use SIEMENS GIGASET A590
Instruction manual SIEMENS GIGASET A590

1

Gigaset A590

El teléfono a primera vista



- 1 Pantalla en estado inactivo
- 2 Tecla de retroceso : Para modificar texto: tecla de retroceso; En el menú: volver al nivel anterior
- 3 Tecla Comunicación interna (→ página 19)
- 4 Tecla de descolgar / lista de últimos números de rellamada * (→ página 16)
- 5 Tecla de control: En modo Inactivo: abrir directorio, abrir lista de llamadas. En el menú, directorio y listas: Subir/Bajar
- 6 Tecla asterisco / Activar/desactivar los tonos de timbre *
- 7 Tecla de rellamada Llamada de consulta (flash); insertar pausa*
- 8 Tecla OK
- 9 Tecla Menú (→ página 12)
- 10 Tecla de colgar/ Encendido/Apagado *
- 11 Tecla numeral (#) / tecla bloqueo teclado (bloquear/desbloquear el teclado * (→ página 10)
- 12 Tecla Call by Call* (→ página 13)
- 13 Tecla Silenciar (microfono apagado, → page 13)

* Para activar la función marcada con un asterisco (*) presione prolongadamente la tecla correspondiente.

Pantalla en estado inactivo

▶ Presione prolongadamente la tecla para alternar entre la visualización de nombre/número y fecha/hora.



Íconos de la pantalla

- Señal de radio
Estable: el aparato está conectado a la base
Parpadeo: el teléfono está fuera del alcance o no está registrado
- Ícono de batería
Estable: carga total, más de 1 hora de conversación
Parpadeo: cargando
Estable: menos de 1 hora de conversación
Parpadeo: casi agotada
- El reloj despertador está activado
- El timbre está desactivado
- El bloqueo del teclado está activado

- Ícono descolgar
Estable: llamada en curso
Parpadeo: llamada entrante recibida
- El directorio está abierto
- Ícono lista de llamadas
Estable: ya se revisaron las llamadas de la lista de llamadas
Parpadeo: llamadas nuevas en la lista de llamadas
Apagado: no hay entradas en la lista de llamadas
- BAC**: En modo de edición: retroceso. Presione para eliminar un carácter a la vez.
En el menú: presione para volver al nivel anterior o salir del menú.
- OK**: Confirmar la función del menú o guardar una entrada con .
- En menús y listas: subir/bajar con .
- En modo conversas: ajuste el volumen con .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A590 user guide](http://yourpdfguides.com/dref/3953113)
<http://yourpdfguides.com/dref/3953113>

Manual abstract:

In menu, phone book and lists: Scrolling up/down 6 Star key / Ringer on/off * 7 Recall key Consultation call (flash) Insert pause* 8 OK key 9 Menu key (page 9) 10 End call key / Power on/off * 11 Hash (#) key / Keypad lock on/off * (page 9) 12 Call-by-call key * (page 11) 13 Mute key (microphone off) (page 11) * To activate a function marked with an asterisk (*) press and hold the corresponding key. Display in idle mode Press and hold the A key to toggle between name/number and date/time display. Radio signal Steady: Handset is linked with base Flashing: Handset is out of range or not registered Battery icon Steady: Full, more than 1 hour talking time Flashing: Charging Steady: Less than 1 hour talking time Flashing: Almost flat Alarm clock is activated Ringer is deactivated Keypad lock is activated Talk icon Steady: Ongoing call Flashing: Incoming call received Phone book is opened Calls list icon Steady: Already inspected calls in calls list Flashing: New calls in calls list Off: No entry in calls list { In editing mode: Backspace. Press A to delete one character at a time In menu: Press A to go back to previous level or exit menu. \ Confirm menu function or save entry with B. In talk mode: Adjust volume with p. 1 Display in idle mode 2 Back key 3 Phone book (page 15) Show first entry / Add new entry* 4 Redial key (page 14) 5 OK key / Clock key * 6 Intercom key: Paging (page 16) Registration * (page 16) 7 Calls list key (page 13) Open / Scrolling up/down 8 Mute key (page 12) / Delete key* when editing phone book, lists or predialling 9 Recall key Consultation call (flash) Dialling pause* 10 Volume keys Ringer volume (page 19) Talk volume (page 12) 11 Loudspeaker (Hands-free) key (page 12) 12 Star key / Ringer off key* 13 Call-by-call key * (page 12) 14 Hash (#) Key / Keypad lock on/off key* (page 9) Base display Time (HH:MM): Current time or time of incoming call in calls list Current date or date of incoming call in calls list Number of entries in calls list or phone book if opened Displayed in calls list, redial and dialled numbers and phone book entries. indicates that there are more characters on the right or left side to be displayed. Talk icon Steady: Ongoing call Flashing: Incoming call received Microphone is deactivated (Mute) Phone book is opened Ringer is deactivated Keypad lock is activated Calls list icon Steady: Already inspected calls in calls list Flashing: New calls in calls list Off: No call in calls list Using the calls list on the handset . Using the phone book .

Storing numbers for speed dialling . Making internal calls . Making internal calls (handset) . Using the phone . Making an external call .

Using shortcut keys for speed dialling . Making an external call . Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children. Only use the mains unit supplied.

Never use a conventional (nonrechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. @Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. the handset and base station are not splashproof. @@@@Disposal All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. it is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. If the handset should come into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. One Gigaset A590 base station one mains adapter for base station one corded handset with cable one cordless Gigaset A59H handset one handset charging cradle with mains adapter two batteries one battery cover one phone cord one user guide The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 C to +45 C.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Please note: Never expose the telephone to heat sources, direct sunlight or other electrical appliances. Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: The mains adapter should always be connected, as the phone has only basic phone functions without mains connection. Only use the mains adapter and phone cord supplied. Pin connections on telephone cables can vary. If you buy a replacement phone cord, make sure that the phone jack has the correct type of wiring.

Warning Use only the rechargeable batteries recommended by Gigaset Communications GmbH (page 20). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. From bottom up onto the casing until it clicks into place. Opening the battery cover If you need to open the battery cover, for instance to replace the batteries: press the ribbing at the top of the battery cover and slide it downward. Before you can use the handset, you must first charge the batteries. If you want to register further handsets, you have to register each individual handset manually (page 16). Handsets are assigned the lowest available internal number (1-4). If four handsets are registered you will have to deregister one handset before you can register another.

Full, more than 1 hour talking time Charging Less than 1 hour talking time Almost flat. Put the handset into the charging cradle to recharge.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3953113)

[GIGASET A590 user guide](http://yourpdfguides.com/dref/3953113)

<http://yourpdfguides.com/dref/3953113>

The correct charging level can only be displayed if the batteries are first fully charged and discharged. place the handset in the charging cradle for fifteen hours. Then remove the handset from the charging cradle and do not replace it until the batteries are completely discharged. After the first battery charge and discharge cycle you may replace your handset in the charging cradle Always repeat the charging and discharging procedure if you have removed the batteries from the handset and re-insert them. The batteries may warm up during charging. This is not dangerous. Warning Please ensure that the handset is in the charging cradle if you are absent for a long time (e. g.

During holidays) or remove the batteries from the handset. Else the batteries could be damaged. If the signal becomes poor during a call the earpiece will briefly intermit voice transmission by emitting an out of range warning tone. In this case you should reduce the distance to the base station. If the signal becomes too low the line is disconnected.

Set the date and time so that the correct date and time can be assigned to incoming calls and the alarm can be used. Use ~ to enter the time (HH:MM) and then the date (DD-MM). To correct your input use the key. Press to save the new clock settings. Your phone is now ready for use.

If you have any questions about using your phone, please read the tips on troubleshooting ("Writing and editing text" page 20) or visit our website (page 20). Using the phone During a call p Adjust the earpiece volume. The keypad lock is deactivated automatically if someone calls you or if paging is activated. It is reactivated when the call is finished. Please note When the base keypad is locked, the following advanced settings are not available. Press and hold a for at least 5 seconds to power off the handset. T Display the first entry in the calls list. Changes that you have not confirmed or saved will be lost. If no key is pressed for more than 60 seconds the handset will automatically return to idle mode. You will find information on multiple line input in the appendix to this user guide, page 20.

In editing mode the display shows { in the lower left corner. @@@@ 1: Press B to confirm your selection. {: Press A to go back to the previous level or to exit the menu. The icon appears in the display when the keypad lock is activated. @@@@ cLI information is displayed if available. The call is stored in the calls list, page 13. @@ Answer the waiting call. the waiting call becomes the active call. @@ Press Z2 again, to toggle between the 2 callers. The waiting call is automatically refused after 40 seconds.

@@ To accept an incoming call press c. @@@@ Precondition: The keys must be set up for speed dialling, page 15. Press and hold key or key 2.

@@@@ You can adjust the earpiece volume during a call. You can mute your phone when making external calls.

@@@@ You will hear an announcement of your provider. ~ Enter the IDD number. @@@@ ~ (enter number in idle mode) (pick up receiver) or (pick up receiver) ~ (enter number) T9;s phone book including speed dialling numbers. Use { to discard action and return to phone book list. Please delete expired entries to keep up the phone book storage.

In the base phone book you can store up to 30 phone numbers (max. @@@@ Storing a number into the phone book Adding or changing a speed dial number The name of the currently assigned phone number will be shown or NO NUMBER if there is no number assigned. p (scroll through the phone book) Press to display the hidden digits of a long Dialling from the phone book To use the call-by-call function (page 11) via the Q key the call-by-call number must be stored in the phone book. Deleting an entry from the phone book Please delete expired entries to keep up the phone book storage. (open phone book) press and hold (confirm action) To cancel the delete action press before pressing . You can locate the handsets using the base station. This also applies if the ringer tones are deactivated. the displays will show INTERCOM X . In case of an incoming call, the handset quits the paging mode and then rings. After 30 seconds handset and base station go back to idle mode.

Before you can use your handset, you must register it to the base station. On the base Press and hold the paging key for at least 5 sec. Making internal calls Internal calls are free calls to other handsets that are registered to the same base station or to the base station itself. In this case repeat the procedure. Please note The default system PIN may have been changed, (page 19). The handset name can be changed, (page 18). Making internal calls (handset) 0 = base station, 1-4 = handset number, * = all If only 1 handset is registered you need not enter a number to call the handset from the base. To answer the call press c. ? To end the call , press a. Incoming call during internal call an incoming call is indicated by an acoustic signal.

C (answer external call, end internal call) or k (hold internal call, accept external call) k (start conference) Please note Do not deregister handsets unless necessary! When you are speaking to an external participant, you can call an internal participant at the same time for consultation. Press and hold k (put external call on hold) k~ (enter internal number of participant) You are connected with the internal participant. Transferring a call to another handset You can transfer an external call to another handset. K (put external call on hold) k~ (enter internal number of participant) You are connected with the internal participant. You can transfer an external call to a handset.

? (put external call on hold) All handsets will be called. Replace receiver or press d (transfer external call to internal participant) The first handset accepting the call is connected. When you are speaking to an external participant, an internal caller can listen in on this call and take part in a conference call. Starting a conference call k (put external call on hold) k~ (enter internal number of participant) You are connected with the internal participant. Press and hold k (start conference) Ending a conference call Press the end call key a.

If an internal participant presses the end call key a, the other handset remains connected to the external participant. When you are speaking to an external participant, an internal caller can listen in on this call and take part in a conference call. Starting a conference call (put external call on hold) All handsets will be called. The first handset accepting the call is connected. press and hold (start conference) Ending a conference call Replace receiver or press d. If an internal participant presses the end call key a, the other handset remains connected to the external participant. Making internal calls (base) Your handset is preconfigured, but you can change the settings to suit your individual requirements. The first handset accepting the call is connected. Calling all other handsets is aborted. Incoming call during internal call An incoming external call during an internal call is indicated by an acoustic signal.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A590 user guide](http://yourpdfguides.com/dref/3953113)
<http://yourpdfguides.com/dref/3953113>

When you are speaking to an external participant, you can call an internal participant at the same time for consultation. ? (put external call on hold) All handsets will be called. The first handset accepting the call will be connected. ~ (enter name) You will find information on multiple line input in the appendix to this user guide, page 20. Please note Once the date and time are set, if there is a power cut of the mains, you should reset date and time. You can choose between 5 sound levels for the ringer volume; LEVEL 1 LEVEL 4 and RINGER OFF (default: An alarm will sound for 1 minute at the set time once or daily. You can also deactivate the ringer completely using the * key. You can choose between 10 ringer melodies (default: MELODY 1). To cut off the alarm press any key on the keypad. You can choose from 3 alarm melodies (default: Your telephone will beep whenever a key on the handset is pressed. You can deactivate this acoustical signal (default: ON). If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key c. ~ (enter time (HH:MM) and date (DD/MM)) To correct your input backspace with . Press to save the new clock settings. When switching the ringer off the key beep is also deactivated.

@@For operation on a PABX, you may have to change the following values. @@@@First ~ then . @@You can reset any individual settings and changes that you have made. Phone book and calls list entries are not affected. After restoring the base, handsets are not affected.

Really dialled number The following rules apply when writing text: Control the cursor with p. Characters are inserted on the left of the cursor. The first letter of the name of phone book entries is automatically capitalised. Press the relevant key several times to enter letters/ characters. Environmental conditions +5 C to +45 C; in operation 20 % to 75 % humidity Dialling mode Base size Handset size DTMF/DP aprox. 1)Space 2)without effect when entering names We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life: Sanyo NiMH 800 Panasonic 700 mAh GP 700 mAh Yuasa AAA 700/800mAh Corun AAA 550/650mAh The device is supplied with two recommended batteries. If you have any queries about the use of your telephone, visit our website at www. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET A590 user guide](http://yourpdfguides.com/dref/3953113)
<http://yourpdfguides.com/dref/3953113>