



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AL110. You'll find the answers to all your questions on the SIEMENS GIGASET AL110 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SIEMENS GIGASET AL110
User guide SIEMENS GIGASET AL110
Operating instructions SIEMENS GIGASET AL110
Instructions for use SIEMENS GIGASET AL110
Instruction manual SIEMENS GIGASET AL110

1

Gigaset AL110/AL110A

The handset at a glance

- 1 Charge status of the batteries
- 2 Answer machine icon (AL110A only)
- 3 Display keys
- 4 Message key
- 5 Directory key
- 6 Control key (M)
- 7 Talk key
- 8 End call key and On/Off key
- 9 Ringtone on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
 - Consultation call (flash)
 - Dialling pause (press and hold)
- 12 Microphone
- 13 "Microphone off" key

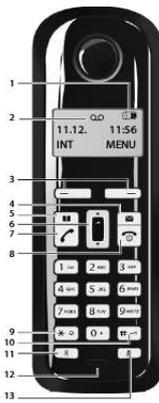

Note

New messages in the calls list/answer machine (network mailbox) list (→ p. 8) are indicated by a flashing display.

Display keys:
Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
INT	Call other registered handsets → p. 10.
MENU	Open main/submenu (see Menu tree → p. 15).
↩	Go back one menu level.
⬆	Scroll up/down or adjust volume with ⬆.
⬅	Move cursor to left/right with ⬅.
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

The base station at a glance



Registration/paging key:
Search for handsets (press briefly, "Paging" → p. 10)
Register handsets (press and hold → p. 10).

ECO DECT

You are helping to protect the environment with your Gigaset AL110/AL110A.

Reduced energy consumption
Your telephone has an energy-saving adapter plug and uses less energy.

Reduced transmission power
The transmission power of your telephone is reduced automatically:
The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station.

You can reduce the transmission power of the handset and base station even more by using Eco Mode/Eco Mode+ (see Menu tree → p. 16):

- ◆ Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced).
- ◆ Eco Mode+: 100% transmission power deactivation in standby mode (top left display/icon Ⓚ). Press and hold the talk key T to check that the base station can be reached. You will hear the ringing tone if the base station can be reached.

Gigaset helpdesk: 0845 3670812 (for further details → p. 13)



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL110 user guide](http://yourpdfguides.com/dref/4570154)
<http://yourpdfguides.com/dref/4570154>

Manual abstract:

10. handsets Open main/submenu (see Menu tree p. 15). ϵ " U T ϵ Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time. @@The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station p. 16); even more by using Eco Mode/Eco Mode+ (see Menu tree \square Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced).

\square Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon $\frac{1}{2}$). @@@@10) briefly, "Paging" Register handsets (press and p. 10). @@@@Explain their contents and the potential hazards associated with using the telephone to your children. Care Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static. \$ Only use the mains unit supplied. Contact with liquid Fit only the recommended, rechargeable p. 12), i. e. never use a conventional batteries (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room.

The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. ! ϵ If the handset has come into contact with liquid: 1. Switch off the handset and remove the battery pack immediately. 2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.

). 4. Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. f If you give your Gigaset to someone else, make sure you also give them the user guide.

Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialled if the keypad lock p. 1) is activated! (Not all of the functions described in this user guide are available in all countries. ϵ AL110/AL110A / UK /

A31008-M2303-L101-1-7619A31008-M2303-L101-1-7619 / starting.fm / 07.06.2011 3 First steps Check the pack contents \square \square \square \square \square \square One Gigaset AL110/AL110A base station, one mains adapter, one Gigaset AL110H handset, one phone cord, one battery pack, one battery cover, one user guide plus one quick start guide. If you have purchased a model with multiple handsets, the package should contain one battery pack, a battery cover and a charging cradle with mains adapter for each additional handset.

Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5 °C to +45 °C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. \sphericalangle Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The p. 16). range is reduced when Eco Mode is activated (ϵ The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: \square Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.

\square Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Connecting the base station \sphericalangle First connect the mains adapter 1. \sphericalangle Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: 1 1 2 1 \square The mains adapter must always be connected, as the phone will not operate without mains connection. \square Only use the mains adapter and phone cord supplied.

Pin connections on telephone cables can vary. AL110/AL110A / UK / A31008-M2303-L101-1-7619A31008-M2303-L101-1-7619 / starting.fm / 07.06.2011 4 Connecting the charging cradle (if included) 2 1 \sphericalangle Connect the flat plug from the power supply 1.

\sphericalangle Plug the mains adapter into the plug socket 2. 4 If you need to disconnect the plug from the charging cradle, press the release button 3 and disconnect the plug 4. 3 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the battery pack and closing the battery cover Warning \square Place the battery leads in the lead guides so that the battery cover cannot catch on leads and damage them when it is closed. \square Use only the rechargeable battery pack recommended by Gigaset Communications p. 12), i.e. never use a conventional (non-rechargeable) battery pack as this GmbH (could result in significant health risks and personal injury. For example, the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

ϵ \sphericalangle Insert the plug into the socket as shown in the enlarged view. \sphericalangle Insert the battery pack. \sphericalangle Place the leads in the lead guides. \sphericalangle Place the cover on the battery compartment as shown in the diagram, then push it up until it clicks into position. If you need to open the battery cover, for instance to replace the batteries: Press down on the battery cover below its upper end and slide the cover down.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4570154)

[GIGASET AL110 user guide](http://yourpdfguides.com/dref/4570154)

<http://yourpdfguides.com/dref/4570154>

AL110/AL110A / UK / A31008-M2303-L101-1-7619A31008-M2303-L101-1-7619 / starting.fm / 07.06.2011 5 Placing the handset in the base/charging cradle Place the handset in the base/charging cradle with its display facing forward. Each handset is registered with the base at the factory. You do not need to complete a registration. If you wish to use your handset with a different base or use further handsets with your p. 10). base, you will have to register the handset manually (To charge the batteries, leave the handset in the base/charging cradle. @@@@This is not dangerous. @@Charge status of the batteries: 11.12. @@2. p. 16) is activated, the 1/2 icon is displayed in the top left. @@@@12) or contact our Customer Care team p. 13. @@~ (Enter the phone number) c. The phone number is dialled. @@End the call/cancel dialling: Press the end call key a. @@16). "Preselection" Using the directory and lists Directory To open the directory: press h. You can save up to 40 phone numbers (max. 32 digits) with corresponding names (max. 14 characters).

p. 11. Enter letters/characse other functions with MENU. Copy an entry to the directory. Delete selected entry. Delete all entries. Delete List Warning! All old and new entries will be deleted. Calling back a caller from the calls list f CallsList 01+02 OK u (select entry) c Answer machine list (AL110A only) You can use the answer machine list to listen to the messages that are on the answer machine. The answer machine list is displayed as follows: VoiceMail 01+02 Number of new messages + number of old, played back messages Calls list/answer machine (network mailbox) list An advisory tone sounds and the message key flashes as soon as a new entry appears in the calls list/answer machine list. A message appears in the display. When you press the f key, all the lists are displayed. If only one list contains new messages, this will be opened automatically. Please note: If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (depending on your network provider). Opening the answer machine list f VoiceMail 01+02 OK If you have new messages, playback will start with the first new message, otherwise with the first old message. Using other functions Calls list Prethe alarm clock rings, press any key to switch it off for 24 hours. If the alarm clock is set, the wake-up icon l will appear on the screen and the wake-up time will be displayed instead of the date. INT called. ~ (1... 4, enter internal number of the handset) OK, the handset is called or INT star key P OK, all handsets are Setting the wake-up time MENU OK Alarm Clock OK Wake-up time Enter the wake-up time in hours and minutes, then press OK. AL110/AL110A / UK / A31008-M2303-L101-1-7619 / main.fm / 07.06.2011 11 Phone settings For details on how to make audio settings, see Menu p. 15. tree For details on how to set the system PIN on the base p. 16. station, see the Menu tree Operating the base station on the PABX The following settings are only necessary when your PABX requires them, see the user guide for your PABX. When entering the digits, enter them slowly one after the other.

Changing the display language MENU Settings OK Handset OK Language OK select the language The current language is indicated by %c. Changing the dialling mode MENU 4 I O 1 1 The number for the set dial- If you accidentally choose a language you do not understand: MENU ling mode flashes: 0 = touch tone dialling (DTMF); 1 = dial pulsing (DP) enter number OK. Select the correct language with u and press OK. 4 2 1 (press the keys one after the other) recall flashes: 0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms enter number OK. Setting recall MENU 4 I O 1 2 The number for the current Reseting the handset You can reset individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base station will be retained. MENU Settings Reset Handset Changing pause after line seizure You can set the length of the pause inserted between pressing the talk key c and sending the phone number. MENU 4 I O 1 O The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK. Cancel the reset with a. OK Handset OK OK Restoring the base station to the factory settings When restoring factory settings: All handsets are de-registered Individual settings are reset All lists are deleted The system PIN is reset to the original code 0000 Only the date and time are retained. Software reset MENU Settings OK Base Reset OK pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 enter number OK. ms Changing the pause after the recall key MENU 4 I O 1 4 The number for the current Appendix Entering letters/characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. Base OK Hardware reset Disconnect the power cord from the base station. p. 1) on Hold down the registration/paging key (the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Repeater mode With a repeater you can increase the range of your base station. You will need to activate repeater mode p. 16). Repeater mode and Eco mode or Eco (p. 1) cancel each other out. mode+ (AL110/AL110A / UK / A31008-M2303-L101-1-7619 / main.fm / 07.06.2011 12 Standard characters 1 2 I 4 5 L M N O Q 1x 2x 1) I a b d e g h j k m n p q t u w x . , * / Abc --> 123 123 --> abc Questions and answers 6x á é í ñ ß ú ý + = & 7x 8x 9x 10x 11x 12x 13x 14x à è ì ó â ê î ò ã ç P # 3x £ c f i l o r v y ? (# 4x \$ 2 3 4 5 6 s 8 z !) @ 5x ¥ ä ë ö 7 ü 9 0 < \ If you have any queries about the use of your telephone, visit our website at www.gigaset.com/uk/service for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Cause Solution ô õ Nothing appears in the display. The handset is not Press the end call switched on. key a for approx. 5 seconds or place the handset in the base station. The batteries are Charge or replace the batteries. flat. @station. The handset is not registered. Register the handset p. 10.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL110 user guide](http://yourpdfguides.com/dref/4570154)
<http://yourpdfguides.com/dref/4570154>

First digits of dialling codes, should be dialled without preselection. 4-3-7-2 With Preselect 4-3-7-3 Without Presel Restore factory settings & p. 11 Version: 15-06-2011 Issued by Gigaset Communications GmbH Frankenstr. 2a D-46395 Bocholt © Gigaset Communications GmbH 2011 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100 % recycled paper. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL110 user guide](#)
<http://yourpdfguides.com/dref/4570154>