



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AL140. You'll find the answers to all your questions on the SIEMENS GIGASET AL140 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AL140
User guide SIEMENS GIGASET AL140
Operating instructions SIEMENS GIGASET AL140
Instructions for use SIEMENS GIGASET AL140
Instruction manual SIEMENS GIGASET AL140

Gigaset AL140/AL145

Please note:
New messages in the calls list/ answer machine (network mail-box) list (page 5) are indicated by a flashing icon in the display.

- 1 Charge status of the battery pack
- 2 Internal number of the handset
- 3 Display keys
- 4 Message key
- 5 Directory key
- 6 Control key
- 7 Talk key
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
 - Center (flash)
 - Dialling pause (press and hold)
- 12 Microphone
- 13 Alarm clock key



Base station



Display keys:
Pressing the keys launches whichever function that appears above them in the display.

Display icon	Function when pressed
INT	Call all registered handsets.
MENU	Open main/submenu (see Menu tree, page 11).
←	Go back one menu level.
↓	Scroll up/down or adjust volume with
→	Move cursor to left/right with
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

Safety precautions

Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children.

Only use the mains unit supplied.

Only use the approved, rechargeable battery pack, never a conventional (non-rechargeable) battery pack, as this could result in significant health risks and personal injury. Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.

The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof.

Do not use your phone in environments with a potential explosion hazard, e.g. paint shops.

Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK: 08453 6708 12
(local call cost charge)

Please have your proof of purchase ready when calling.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL140 user guide](http://yourpdfguides.com/dref/3953218)
<http://yourpdfguides.com/dref/3953218>

Manual abstract:

Open main/submenu (see Menu tree, page 11). Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time. @@@@Only use the mains unit supplied. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof.

Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. \$ Only use the approved, rechargeable battery pack, never a conventional (non-rechargeable) battery pack, as this could result in significant health risks and personal injury. Batteries should not be disposed of in general household waste.

Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from. Gigaset service contact numbers: For personal advice on our range of products and for repairs or guarantee/warranty claims call: (local call cost charge) Please have your proof of purchase ready when calling. Service Centre UK: 08453 6708 12 2 If you give your Gigaset to someone else, make sure you also give them the user guide. Only use the mains unit supplied and the phone cords supplied. If you ever purchase another phone cord from Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Emergency numbers cannot be dialled if the keypad lock (page 1) is activated! Not all of the functions described in this user guide are available in all countries. a store, ensure that the phone conductors are correctly connected: 3-4 connection of the telephone conductors/EURO CTR37. You can also mount the base station on the wall. Step 2: Setting up the handset Please note: The display is protected by a plastic film. Please remove the protective film! Fitting the battery pack that the battery cover cannot catch on leads and damage them when it is closed. Use only the rechargeable battery pack recommended by Gigaset Communications GmbH * (page 8), i.e. never use a conventional (nonrechargeable) battery pack as this could result in significant health risks and personal injury. For example, the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

Never use non-Gigaset battery chargers as this could damage the battery pack. Only place the handset in the charging cradle that is intended for it. * Gigaset Communications GmbH is a trademark licensee of Siemens AG. Place the battery leads in the lead guides so ECO DECT ECO DECT reduces power consumption by using an energy efficient power supply and also reduces the transmission power of the base station. The transmission power of the base station is reduced when just one handset is registered to the base station and the handset is in the base station.

Your handset also reduces the transmission power depending on the distance to the base station. Setting up the telephone for use Step 1: Connecting the base station Insert the plug into the socket as shown in the enlarged view. Insert the battery pack. Place the leads in the lead guides. 1 2 First connect the mains unit (230 V) to power cord 1 and then connect the phone jack to phone cord 2, as shown above.

Place the cords in the cord recesses. The two cords must be plugged in at all times. 3 Charging the battery pack To charge the battery pack, leave the handset in the base station for approx. 7 hours. The battery pack is now fully charged. The charge status of the battery pack is only correctly displayed after uninterrupted charging/discharging. Therefore you should not interrupt the charging process. Charging is electronically controlled to prevent overcharging. The battery pack heats up during charging. This is normal and not dangerous.

After a time its charge capacity will decrease for technical reasons. You must set the date and time to ensure that the times of calls are logged correctly (see Menu tree page 11). Once the phone is registered and the time set, the idle display looks as shown on page 1. If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and answers", page 9) or contact our customer service department (page 10). Closing the battery cover Place the cover on the battery compartment as shown in the diagram, then push it up until it clicks into position. Making calls Opening the battery cover Press down on the battery cover below its upper end and slide the cover down. Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The number is dialled. (Or you can first press and hold c [dial tone] and then enter the number.)

During the call you can adjust the earpiece volume using t.

End the call/cancel dialling: Press the end call key a. You can automatically insert a network provider dialling code before any phone number (see "Preselection" Menu tree, page 11). Step 3: Registering the handset to the base station and charging the battery pack Precondition: The handset must not already be registered to a base station. The handset is automatically registered to the Gigaset A140/AL145 base station. Place the handset in the charging cradle of the base station with its display facing forward.

You will hear a confirmation tone. Leave the handset in the base station until it is registered. Automatic registration can take up to 5 minutes. While this is happening, Registering flashes in the screen. The handset is assigned the lowest unassigned internal number (14).

If several handsets are registered on the base station, the internal number is shown in the top left of the display after registration, e.g. 2. If the internal numbers 1 to 4 have already been assigned (four handsets have already been registered), handset number four is deregistered and overwritten.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3953218)

[GIGASET AL140 user guide](http://yourpdfguides.com/dref/3953218)

<http://yourpdfguides.com/dref/3953218>

Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4. Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again.

The handset is not Press the end call key a for approx. 5 seconds or place the handset in the base station. Charge/replace the Battery pack is battery pack (page 3). flat.

The keypad lock is Press the hash key R for approx. 2 seconds. (page 1). Move the handset The handset is outside the range closer to the base of the base station. tion. The handset is not Register the handset registered. (page 3). The base station is Check the power cannot turned on. nector at the base station (page 2). Cords not routed Check cord routing correctly.

(page 2). The phone cord Please always use the supplied has not phone cord supplied been used or has or ensure that the jack been replaced by connections are cora new cord with rect when purchasing the wrong jack from a retailer (page 2). connections. You have entered Reset the system PIN the wrong system to the default 0000. PIN. To do this, unplug the mains unit from the mains socket and hold the paging key the mains adapter in again the paging key down for at least another 2 seconds and then release. The reset procedure is now carried out. The handsets are deregistered. The calls list is cleared. £Press £Plug £Hold 10 Service (Customer Care) We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere.

www.gigaset.com/customercare It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on: UK helpdesk: 0 84 53 67 08 12. Please have your proof of purchase ready when calling with regard to guarantee/warranty claims. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. be valid for six months from the date of purchase. This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.

This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. Ownership of devices or components replaced by and returned to Gigaset Communications GmbH shall vest in Gigaset Communications GmbH. @@@@ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. Insofar as no Guarantee default exists, Gigaset Communications GmbH reserves the right to charge the customer for replacement or repair. The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications GmbH. The relevant number is to be found in the accompanying user guide.

Authorisation This device is intended for analogue phone lines in the UK. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs. Guarantee Certificate United Kingdom Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications GmbH shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall 11 Menu tree Your phone has an extensive range of features.

These are offered in the form of menus. With the phone in idle status, press MENU (open menu), scroll to the required function and then press OK to confirm your choice. 1 1-1 1-2 To return to idle status: press and hold key a. There are two ways in which you can access a function: Scroll with keys t and v, Key in the appropriate digit combination, e.g.

MENU 1 1 to set the date and time. Alarm Clock Activation Wake-up time Activating/deactivating the alarm clock Input format: HHMM 2 2-1 2-2 Audio Settings Ringer Volume Ringer Melody 5 levels + "crescendo" available 2-2-1 2-2-2 2-2-3 External Calls Internal Calls Alarm Clock 10 ringer tones available for external calls 10 ringer tones available for internal calls 10 ringer tones available for alarm clock 2-3 2-4 Advis. Tones Battery Low activating/deactivating 2-4-1 2-4-2 2-4-3 Off On During Call Tone when battery pack is almost flat: never always only during a call 3 3-1 3-2 Settings Date/Time Handset Enter date (DDMMYY format), then time (HHMM format) 3-2-1 3-2-2 3-2-3 3-2-4 Language Auto Answer Register HS Reset Handset System PIN Base Reset Listening in Preselection Set the display language Activate/deactivate auto answer Manually register the handset Reset the handset Change system PIN (default is 0000) Restore factory settings (system PIN does not change; handsets are deregistered) Activate/deactivate the function 3-3-5-1 Presel. Number Network provider dialling code, should be inserted automatically before the dialled phone number. First digits of the dialling codes, should be dialled with preselection.

First digits of dialling codes, should be dialled without preselection. 3-3 Base 3-3-2 3-3-3 3-3-4 3-3-5 3-3-5-2 With Preselect 3-3-5-3 Without Presel 12 4 4-1 Voice Mail Set Key 1 (all devices) 4-1-1 Netw. Mailbx Assign key 1 with answer machine or network mailbox (in idle status, press and hold to dial). Netw. Mailbx: your network provider's answer machine; must be requested separately. The network mailbox can be displayed if your network provider supports this function and if key 1 has been assigned with the network mailbox.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3953218)

[GIGASET AL140 user guide](http://yourpdfguides.com/dref/3953218)

<http://yourpdfguides.com/dref/3953218>

4-1-2 4-2 4-4 Answer Mach. Announcements 4-4-1 4-4-2 4-4-3 4-5 Message Length 4-5-1 4-5-2 4-5-3 4-5-4 4-6 Ring Delay 4-6-1 4-6-2 4-6-3 4-6-4 4-6-5
Answer Mach. Rec announce Play announce Del announce Maximum 30 sec 60 sec 120 sec Immediately 10 sec 20 sec 30 sec Auto If there are no new
messages, the answer machine accepts a call after 20 seconds. If new messages are present, the answer machine accepts a call after just 10 seconds.



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET AL140 user guide
http://yourpdfguides.com/dref/3953218](http://yourpdfguides.com/dref/3953218)