



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AL14H. You'll find the answers to all your questions on the SIEMENS GIGASET AL14H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET AL14H**  
**User guide SIEMENS GIGASET AL14H**  
**Operating instructions SIEMENS GIGASET AL14H**  
**Instructions for use SIEMENS GIGASET AL14H**  
**Instruction manual SIEMENS GIGASET AL14H**

### Gigaset AL13H handset

**Please note:**  
New messages in the calls list/answer machine (network mail-box) list (page 4) are indicated by a flashing icon in the display.

- 1 Charge status of the battery pack
- 2 Internal number of the handset
- 3 Display keys
- 4 Message key
- 5 Directory key
- 6 Control key
- 7 Talk key
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
  - Center (flash)
  - Dialling pause (press and hold)
- 12 Microphone
- 13 Alarm clock key



**Display keys:**  
Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call all registered handsets.
MENU	Open main/submenu (see Menu tree, page 7).
←	Go back one menu level.
↕	Scroll up/down or adjust volume with [M].
→	Move cursor to left/right with [M].
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

### Safety precautions

Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children.

Only use the mains unit supplied.

Only use the approved, rechargeable battery pack, never a conventional (non-rechargeable) battery pack, as this could result in significant health risks and personal injury. Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof.

Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).

If you give your Gigaset to someone else, make sure you also give them the user guide.

Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL14H user guide](http://yourpdfguides.com/dref/3954998)  
<http://yourpdfguides.com/dref/3954998>

### Manual abstract:

Display keys: Pressing a key launches the function that appears above that key in the display. Display icon Function when pressed Call all registered handsets. Open main/submenu (see Menu tree, page 7). Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time. Confirm menu function or save entry. 1 Charge status of the battery pack 2 Internal number of the handset 3 Display keys 4 Message key 5 Directory key 6 Control key 7 Talk key 8 End call and On/Off key 9 Ringer on/off (press and hold in idle status) 10 Keypad lock on/off (press and hold) 11 Recall key - Confer (flash) - Dialling pause (press and hold) 12 Microphone 13 Alarm clock key 1 2 2 11.12. INT 11:56 MENU V INT MENU " U 3 4 5 6 7 8 T ~ OK 9 10 11 12 13 Safety precautions W Read this user guide and the safety precautions carefully before use. @@ Only use the mains unit supplied. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof. @@@@ Batteries should not be disposed of in general household waste. @@ The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services. 2 All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialled if the keypad lock (page 1) is activated! Not all of the functions described in this user guide are available in all countries.

Insert the plug into the socket as shown in the enlarged view. Insert the battery pack. Place the leads in the lead guides. Closing the battery cover Place the cover on the battery compartment as shown in the diagram, then push it up until it clicks into position. ECO DECT ECO DECT reduces power consumption by using an energy efficient power supply. Your handset also reduces the transmission power depending on the distance to the base station. Setting up the telephone for use Setting up the handset for use Please note: The display is protected by a plastic film. Please remove the protective film! Opening the battery cover Press down on the battery cover below its upper end and slide the cover down. Registering the handset You must initiate handset registration on the handset and on the base station. Once it has been registered, the handset returns to idle status.

If several handsets are registered to the base station, the internal number is shown in the top left of the display after registration, e.g. 2. @@@@ For example, the battery pack could explode. @@@@~ (Enter the phone number) The number is dialled.

@@ End the call/cancel dialling: Press the end call key a. @ @ 1 minute. @@ Precondition: The handset is not registered to a base station. @@ You will hear a confirmation tone. @@@ 7 hours.

The battery pack is now fully charged. @@ Therefore you should not interrupt the charging process. Charging is electronically controlled to prevent overcharging. The battery pack heats up during charging. This is normal and not dangerous. @@@@ Press the talk key c to accept the call. When Auto Answer is activated (see Menu tree, page 7), simply remove the handset from the base station/charging cradle. Using the directory and lists Directory To open the directory: press h. You can save up to 40 phone numbers (max. 32 digits) with corresponding names (max.

14 characters). Please note: You can assign a number from the directory to a key for quick dialling (page 4). Saving the first number in the directory h € New Entry? € OK ~ ~ Enter number and press OK. Enter name and press OK. Activating/deactivating the handset Press and hold the end call key a. If you place a deactivated handset into the charging cradle, it will automatically activate itself. Storing a number in the directory h € MENU € New Entry € OK ~ ~ Enter number and press OK. Enter name and press OK. 4 ing options: Use u to scroll through the entries until the required name is selected. Enter the first character of the name and scroll to the entry with u, if required.

Selecting a directory entry Open the directory with h. You have the follow- Last number redial list This list contains the ten last dialled numbers. Dialling from the last number redial list c c Press the key briefly. Select entry. Press the talk key again.

The number is dialled. Dialling with the directory h € u (select entry) € c Using other functions u h € u (select entry) € MENU New Entry Show Number Use Number The following functions can be selected with u: Store new number. Display the phone number. Edit or add to a saved number. Then dial or use other functions with MENU.

Edit selected entry. Delete selected entry. Send a single entry to another handset (page 4). Delete all directory entries. Send the complete list to another handset (page 4). For quick dial, assign the current entry to a key. Managing entries in the last number redial list c Press the key briefly. Select entry. Press the display key. u MENU You can select the following settings: Use Number Copy to Dir.

@@ A message appears in the display. When you press the f key, all the lists are displayed. @@@, ? @@ When the alarm clock rings, press any key to switch it off for 24 hours. P\* / ( ) <=> % Abc --> --> # 123 123 # @ \ & \$ abc 1) Space 2) Line break Q O € OK MENU € Alarm Clock € OK € Wake-up time Specifications Recommended battery pack (Valid at the time of going to press) Nickel-metal-hydride (NiMH): AL13H handset: V30145-K1310-X383 The handset is supplied with the recommended battery pack. Enter the wake-up time in hours and minutes, then press OK. Resetting the handset You can reset any individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base station will be retained.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954998)

[GIGASET AL14H user guide](http://yourpdfguides.com/dref/3954998)

<http://yourpdfguides.com/dref/3954998>

*MENU Settings OK Handset OK Reset Handset OK \* \* Cancel the reset with a. \* \* \* General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors, up to 50 m indoors 230 V ~/50 Hz +5° C to +45 °C; 20% to 75% humidity 6 Care Wipe down the base station and handset with a damp cloth (no solven).*



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET AL14H user guide](#)

<http://yourpdfguides.com/dref/3954998>