



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AL18H. You'll find the answers to all your questions on the SIEMENS GIGASET AL18H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AL18H
User guide SIEMENS GIGASET AL18H
Operating instructions SIEMENS GIGASET AL18H
Instructions for use SIEMENS GIGASET AL18H
Instruction manual SIEMENS GIGASET AL18H

1

Gigaset AL18H handset

1 Charge status of the batteries
2 Display keys
3 Message key
3 Flashes: new messages received
4 Directory key
5 Control key (M)
6 Talk key
7 End call and On/Off key
8 Ringer on/off (press and hold in idle status)
9 Keypad lock on/off (press and hold)
10 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
11 Microphone
12 "Microphone off" key

Display key on handset:
Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
INT	Call other registered handsets → page 7.
MENU	Open main/submenu (see Menu tree → page 10).
←	Go back one menu level.
↑ ↓	Scroll up/down or adjust volume with M.
← →	Move cursor to left/right with M.
⌫	Backspace deletes one character at a time.
OK	Confirm menu function or save entry.

PG
M105

ECO DECT

You are helping to protect the environment with your Gigaset AL18H.

Reduced energy consumption

Your telephone has an energy-saving adapter plug and uses less energy.

Reduced transmission power (depending on the base station)

The transmission power can only be reduced if your base station supports this function.

The transmission power of your telephone is reduced automatically:

- ◆ The handset's transmission power is reduced depending on the distance to the base station.
- ◆ The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station.

You can reduce the transmission power of the handset and base station even more by using Eco Mode/ Eco Mode+. For further information, please see your phone's user guide.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL18H user guide](http://yourpdfguides.com/dref/3955074)
<http://yourpdfguides.com/dref/3955074>

Manual abstract:

Display 1 INT 11.12. INT 2 3 4 5 6 7 11:56 MENU V MENU " U T ~ OK h Function when pressed Call other registered page 7. handsets Open main/submenu (see page 10). Menu tree Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time. Confirm menu function or save entry. ¢ ¢ 8 9 10 11 12 ECO DECT You are helping to protect the environment with your Gigaset AL18H.

Reduced energy consumption Your telephone has an energy-saving adapter plug and uses less energy. Reduced transmission power (depending on the base station) The transmission power can only be reduced if your base station supports this function. The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode/ Eco Mode+.

For further information, please see your phone's user guide. 2 Safety precautions Read this user guide and the safety precautions carefully before use. Explain their contents and the potential hazards associated with using the telephone to your children. Care Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth.

This can cause static. \$ Only use the mains unit supplied. Contact with liquid ! Fit only the recommended, rechargeable batteries (¢ page 9), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. @@doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the phone in a bathroom or shower room. The phone is not splashproof. @@@@ Allow the liquid to drain from the handset. @@ Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. If you give your Gigaset to someone else, make sure you also give them the user guide. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialled if the keypad lock (¢ page 1) is activated! Not all of the functions described in this user guide are available in all countries. 3 First steps Check the pack contents One Gigaset AL18H handset, one charging cradle, one mains adapter, two batteries, one battery cover, one user guide.

Setting up the charging cradle The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C. Place the charging cradle on a level, non-slip surface. ✕ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated (¢ page 1).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle 2 1 ✕ Connect the flat plug from the power supply 1. ✕ Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. 1 4 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries (¢ page 9) recommended by Gigaset Communications GmbH *.

Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. * Gigaset Communications GmbH is a trademark licensee of Siemens AG. ✕ Insert the batteries the right way round. @@@@@Registration can take up to 5 minutes. @@1. @@On the base station: Within 60 sec. @@3 sec.).

@@@@@2. @@@@@@ from the handset and reinsert them. @@This is not dangerous. @@@@@Your phone is now ready for use! @@@@@~ (Enter the phone number) The phone number is dialled. @@@@@You can save up to 40 phone numbers (max.

32 digits) with corresponding names (max. 14 characpage 8. ters). @@@@@Press the talk key c to accept the call. @@In idle status, use t to activate the menu for setting the call volume and use u to set the volume.

Saving the first number in the directory h ¢ New Entry? ¢ OK ¢ ~ (enter number) ¢ OK ¢ ~ (enter number) ¢ OK Storing a number in the directory h ¢ MENU ¢ New Entry ¢ OK ¢ ~ (enter number) ¢ OK ¢ ~ (enter number) ¢ OK Selecting a directory entry Open the directory with h. You have the following ¢ ¢ ¢ Muting You can mute your handset when making external calls. Your caller can no longer hear you. Press the "Microphone off" key m during the call to activate/deactivate the function. options: Use u to scroll through the entries until the required name is selected. Enter the first character of the name and scroll to the entry with u, if required. Dialling with the directory h ¢ u (select entry) ¢ c Using other functions h Making internal calls Internal calls are free calls to other handsets that are registered to the same base station.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955074)

[GIGASET AL18H user guide](http://yourpdfguides.com/dref/3955074)

<http://yourpdfguides.com/dref/3955074>

To make a call to other handsets, press The following functions can Set the wake-up time & OK 1) Space P # 3x £ c f i l o r v y ? (# 4x \$ 2 3 4 5 6 s 8 z !) @ 5x ¥ ä ë ï 6x 7x 8x 9x 10x 11x 12x 13x 14x ¤ àâãäç éêê ûî ð öñòóô 7ß üüùú 9ÿÿæø 0+-:; <=>% \&\$ å j ' ' ; _ 9 Cyrillic 1 2 I 4 5 L M N O Q 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 1) 1\$ Problem No wireless connection to the base station, Base flashes in the display. Cause The handset is outside the range of the base station. The handset is not registered.

The base station is not turned on. Solution Move the handset closer to the base station. A L . * ABC --> 123 Y , /# È ? (@ 5 6 X !) \ 2 4 J M 7 0 < & A 3 G K N P 8 9 + = \$ B D H L O Q T W > C E I R U X : % F & Register the handset page 5. Check the mains plug on the base station. S V Y " Service (Customer Care) Z ' ; _ 1) Space P # Specifications Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 400800 mAh We recommend the following types of battery: GP 550/700 mAh Yuasa Phone 700/800 mAh Peacebay 550/650 mAh (Valid at the time of going to press) The handset is supplied with recommended batteries. We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere. www.gigaset.com/customer care It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide. For fast and dependable assistance with any repairs or guarantee/warranty claims, contact our Service Centre. Russia 8 (495) 228 1312 Please have your proof of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. General specifications DECT standard GAP standard Range Environmental conditions in operation is supported is supported up to 300 m outdoors up to 50 m indoors +5 °C to +45 °C, 20% to 75% relative humidity Authorisation This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. @@@@ @@@@ 5 seconds or place the handset in the base station.

Charge or replace the batteries. The batteries are flat. Certificate No DE.M05.B00783 valid to 25.08.2011 Gigaset Communications GmbH Hofmannstrasse 61, 81379, Munich, Germany. 10 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. To select a function while the phone is in idle status, press MENU (open menu), use the t and v keys to scroll to the function you require and press OK to confirm.

To return to idle status: press and hold the a key. 1 Alarm Clock Activating/deactivating the alarm clock Input format: HHMM 1-1 Activation 1-2 Wake-up time As an alternative to selecting functions using the t and v buttons, you can also enter the digit combination that is in front of the function in the menu tree. For setting the time and date, for example: MENU & 4 1 & OK 2 Audio Settings Can be set to one of 3 levels (AL18H) 5 levels + "crescendo" available 2-3-1 External Calls 2-3-2 Internal Calls 2-3-3 Alarm Clock 10 ringer tones available for external calls 10 ringer tones available for internal calls 10 ringer tones available for alarm clock 2-1 Handset Volume 2-2 Ringer Volume 2-3 Ringer Melody 2-4 Advis. Tones 2-5 Battery Low Activating/deactivating 2-5-1 Off 2-5-2 On 2-5-3 During Call Warning tone to indicate battery is almost flat: never always only during a call 3 4 Voice Mail (Menu dependent on base station) Settings Enter date (DDMMYY format), then time (HHMM format) 4-2-1 Language 4-2-2 Auto Answer 4-2-3 Register HS 4-2-4 Reset Handset Set the display language 4-1 Date/Time 4-2 Handset & page 8 & page 5 Automatically activate/deactivate auto answer Manually register the handset Reset the handset & page 7 & page 8 4-3 Base (Menu dependent on base station) Version: 17-11-2008 A 3 1 0 0 8 - M2 0 5 2 - S 3 0 1 - 1 - 9 U1 9 Issued by Gigaset Communications GmbH Schlavenhorst 66 D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100% recycled paper. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AL18H user guide](http://yourpdfguides.com/dref/3955074)
<http://yourpdfguides.com/dref/3955074>