



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS180. You'll find the answers to all your questions on the SIEMENS GIGASET AS180 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS180
User guide SIEMENS GIGASET AS180
Operating instructions SIEMENS GIGASET AS180
Instructions for use SIEMENS GIGASET AS180
Instruction manual SIEMENS GIGASET AS180

1

Gigaset AS180/AS280

The handset at a glance

- 1 Charge status of the batteries
- 2 Display keys
- 3 Message key
Flashes: new messages received
- 4 AS180:
□ Directory key
AS280:
☞ Handsfree key
- 5 Control key (☞)
- 6 Talk key (☞)
- 7 AS280:
□ Directory key (press down)
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
- 12 Microphone
- 13 "Microphone off" key



Display keys on handset:
Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets → page 9.
MENU	Open main/submenu (see Menu tree → page 13).
☞	Go back one menu level.
☞	Scroll up/down or adjust volume with ☞.
☞	Move cursor to left/right with ☞.
⏪	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

The base station at a glance
AS180/AS280 base station



Registration/paging key:
Search for handsets (press briefly, "Paging" → page 9)
Register handsets (press and hold → page 9).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS180 user guide](http://yourpdfguides.com/dref/3954282)
<http://yourpdfguides.com/dref/3954282>

Manual abstract:

Menu tree Go back one menu level. " Scroll up/down or adjust U volume with u. Move cursor to left/right T with u. Backspace deletes one character at a time from right to left. @@@@ Explain their content and the potential hazards associated with using the telephone to your children. Care Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static. \$ Only use the mains adapter supplied. Contact with liquid ! Fit only the recommended, rechargeable batteries (€ page 11), i.

e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g.

doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room.

The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. If the handset should come into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again.

ECO DECT You are helping to protect the environment with your Gigaset AS180/AS280. If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services.

Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Reduced energy consumption Your telephone has a power-saving adapter plug and uses less power. Reduced transmission power The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode/Eco Mode+ (see Menu tree page 14): Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced). Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon 1/2).

Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. € Emergency numbers cannot be dialled if the keypad lock (€ page 1) is activated! Not all of the functions described in this user guide are available in all countries. 3 First steps Check the pack contents one Gigaset AS180/AS280 base station, one mains adapter, one Gigaset AS18H/AS28H handset, one phone cord, two batteries, one battery cover, one user guide. If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset.

Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. ☒ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (€ page 14) is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the base station ☒ First connect the mains adapter 1. ☒ Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: 2

1 1 1 The mains adapter must always be connected, as the phone will not operate without mains connection. Only use the mains adapter and phone cord supplied. Pin connections on telephone cables can vary. 4 Connecting the charging cradle (if included) 2 1 ☒ Connect the flat plug from the power supply 1. ☒

Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. 1 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the

battery cover Warning Use only the rechargeable batteries (€ page 11) recommended by Gigaset Communications GmbH *.

Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. * Gigaset Communications GmbH is a trademark licensee of Siemens AG. ☒ Insert the batteries the right way round.

The polarity is indicated in/on the battery compartment. + ☒ Slide the battery cover back into the main casing until it clicks into place.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS180 user guide](http://yourpdfguides.com/dref/3954282)
<http://yourpdfguides.com/dref/3954282>

If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the grooved area on the top of the cover and slide down. 5 Placing the handset in the base station and registering Put into base V Before you can use the phone, you must first register the handset to the base station. MENU ↵ Place the handset with the display facing up in the base station.

Registering V The handset registers automatically. Registration can take up to 5 minutes. Do not remove the handset from the base station during this time. V INT MENU After successful registration, the idle screen is displayed. Charge status of the batteries: = e V U (flat to full) = flashes: batteries almost flat e V U flashes: charging If you have purchased a model with multiple handsets, repeat the registration process for each individual handset. Handsets are assigned the lowest available internal number (14). If more than one handset is registered to the base station, the internal handset number appears in the top left of the display, e.g. 2. If the internal numbers 14 are already assigned to other devices, number 4 will be overwritten.

Please note Each key press interrupts the automatic registration. If automatic registration does not work, the handset will have to be registered manually (¢ page 9). it. Only place the handset in the base station or charging cradle that is intended for Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. 8h ↵ Place the handset in the base station or charging cradle for eight hours. ↵ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are fully discharged. 6 Please note After the first battery charge and discharge you may replace your handset in the base station or charging cradle after every call. from the handset and reinsert them. sons. Always repeat the charging and discharging procedure if you remove the batteries The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical rea- Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. MENU Settings OK Date/Time OK Date: ~ (enter the day, month and year in 6-digit format) OK Time: ~ (enter hours and minutes in 4-digit format) OK (display message: Saved) a (press and hold to return to idle status) ¢ ¢ ¢ ¢ ¢ ¢ ¢ ¢ Please note When entering the time and date, you can move the position of an entry to the left or right by pressing the control button up or down. Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example. vate the handset. If you place a deactivated handset in the base station or charging cradle, it will automatically activate. Your phone is now ready for use! If you have any questions about using your phone, please read the tips on troubleshooting page 11) or contact our Customer Care team page 12. ("Questions and answers" Activating/deactivating the handset Press and hold the end call key a to activate or deacti- 11.12. INT 11:56 MENU V ¢ ¢ 7 Making calls Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The phone number is dialled. (Or you can first press and hold c [dial tone] and then enter the number.) During the call you can adjust the earpiece volume using t and set the volume with u. End the call/cancel dialling: Press the end call key a. You can automatically insert a network provider dialling code before any phone number (see Menu page 14). tree "Preselection" Handsfree talking (AS280 only) To activate while dialling: Enter the number ~ and press the handsfree key d. Switching between earpiece and handsfree mode: During a call and when listening to the answer machine (AS285 only), press the handsfree key d to activate or deactivate handsfree talking. During a call, use t to activate the menu for setting the handsfree volume and use u to set the volume. ¢c. ¢ Using the directory and lists Directory To open the directory: press h.

You can store up to 40 (AS180) or 80 (AS280) numbers (max. 32 digits) and associated names (max. 14 characters). Enter letters/characters page 11. Accepting a call u to select another entry. ¢ OK u (select entry) ¢ MENU Delete Entry Copy to Dir. Date/Time Status Last number redial list This list contains the ten last dialled numbers. The following functions can be selected with u: Delete current entry. Copy an entry to the directory. Call date and time (if set). New Call: new missed call. Old Call: entry already read. @@@@Then dial or select other functions from the MENU. Copy an entry to the directory. Delete selected entry.

Delete all entries. Copy to Dir. @@page 13. @@@@When a participant answers you can speak to them. @@Press the INT key and call one or all handsets.

The external participant hears the hold music. @@ After the internal participant has answered, you can talk to him. @@@@For automatic registration of handsets to page 5. @@@@3 seconds). Registration takes approx. @@Press and hold the c key. You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone.

@@This will page 10. @@@@Hold down the registration/paging key (¢ page 1) on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Repeater mode With a repeater you can increase the range of your base station. You will need to activate repeater mode (¢ page 14). Repeater mode and Eco mode or Eco mode+ (¢ page 1) cancel each other out. Setting the wake-up time MENU Enter the wake-up time in hours and minutes, then press OK. ¢ Alarm Clock ¢ OK ¢ Wake-up time ¢ OK Phone settings For details on how to set audio settings, see Menu page 13. tree For details on how to set the system PIN on the page 14. base station, see the Menu tree Operating the base station on the PABX The following settings are only necessary if your PABX requires them, see the user guide for your PABX.

When entering the digits, enter them slowly one after the other. ¢ ¢ Changing the display language MENU Settings OK Handset OK Language OK select the language ¢ ¢ If you accidentally choose a language you do not understand: MENU The current language is indicated by . ¢ ¢ ¢ ¢ ¢ OK Changing the dialling mode MENU ¢ 4 I O 1 1 ¢ The number for the set dialling mode flashes: 0 = touch tone dialling (DTMF); 1 = dial pulsing (DP) enter number ¢ ¢OK.



You're reading an excerpt. Click here to read official SIEMENS GIGASET AS180 user guide
<http://yourpdfguides.com/dref/3954282>

Select the correct language with u and press OK. $\text{c} \ 4 \ 2 \ 1$ (press the keys one after the other) Setting recall MENU $\text{c} \ 4 \ 1 \ 0 \ 1 \ 2 \ \text{c}$ The number for the current recall flashes: 0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; enter number OK.

7 = 800 ms Resetting the handset You can reset individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base station will be retained. MENU Settings Reset Handset $\text{c} \ \text{c}$ Changing pause after line seizure You can set the length of the pause inserted between pressing the talk key c and sending the phone number. Cancel the reset with a. $\text{c} \ \text{c} \ \text{c} \ \text{OK} \ \text{c} \ \text{OK} \ \text{c} \ \text{OK}$ Restoring the base station to the factory settings When restoring factory settings: All handsets are de-registered Individual settings are reset All lists are deleted The system PIN is reset to the original code 0000 Only the date and time are retained.

MENU 41010 The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK. $\text{c} \ \text{c} \ \text{c} \ \text{c}$ Changing the pause after the recall key MENU $\text{c} \ 4 \ 1 \ 0 \ 1 \ 4 \ \text{c}$ The number for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms enter number OK. $\text{c} \ \text{c} \ 11$ Appendix Entering letters/characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. Standard characters 1 2 1 4 5 L M N O Q 1x 2x 1) 1 ab de gh jk mn pq tu wx ., */ Abc --> 123 123 --> abc Base station power consumption In standby mode Handset in base station Handset outside base station During a call approx. 1.

3 W approx. 1.3 W approx. 1.5 W General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors up to 50 m indoors 230 V ~/50 Hz +5°C to +45°C, 20% to 75% relative humidity 1) Space P # 3x £ c f i l o r v y ? (# 4x \$ 2 3 4 5 6 s 8 z !) @ 5x ¥ ä ë ì 6x 7x 8x 9x 10x 11x 12x 13x 14x ¤ à â ã ä ç è é ê ì ï ó ò ô õ Questions and answers If you have any queries about the use of your telephone, visit our website at www.gigaset.com/customercare for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Cause Solution Nothing The handset is not Press the end call appears in the switched on. key a for approx. display. 5 seconds or place the handset in the base station. The batteries are Charge or replace the batteries. flat. No wireless Move the handset The handset is connection to outside the range closer to the base the base sta- of the base stastation. tion, Base tion. flashes in the The handset is not Register the handset page 9. display. registered. The base station is Check the mains connector on the base not turned on.

page 3. station You cannot The phone cord Please always use the hear a ringer/ supplied has not phone cord supplied dialling tone been used or has or ensure that the from the fixed been replaced by pin connections are line network. a new cord with correct when purchasing from a retailer: the wrong jack 3-4 assignment of connections. telephone leads/EURO CTR37. You have entered Reset the system PIN Error tone sounds after the wrong to the default 0000 page 10. system PIN system PIN. All handsets are deprompt. registered. All setPIN forgotten. tings are reset.

All lists are deleted. òñ 7β üú 9ÿ 0+ <= \& ùù ýæø -:; >% \$ â ; " ' ; _ Greek 1 2 1 4 5 L M N O Q 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 1) 1£\$. * ABC --> 123 , / # 2 5 8 ? (@ A 3 4 J T !) \ B D G K 6 7 U 9 0 < & C E H L M P V W + = \$ F I N O Q R X > S Z " ' ; _ ¢ Y : % ¢ 1) Space P # Specifications

Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 400800 mAh We recommend the following types of battery: GP 550/700 mAh Yuasa Phone 700/800 mAh Peacebay 550/650 mAh (Valid at the time of going to press) The handset is supplied with recommended batteries. $\text{c} \ 12$ Service (Customer Care) We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere. www.gigaset.com/customercare It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide.

For fast and dependable assistance with any repairs or guarantee/warranty claims, contact our Customer Care Line. Greece 801 1000 500 (0,026 Euro) Please have your proof of purchase ready when calling. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. Authorisation This device is designed for the analogic telephone connection in the greek telephone net. Gigaset Communications GmbH hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

If you require a copy of the original, visit the website: www.gigaset.com/docs. Guarantee Certificate Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.

g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase. This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals. This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET AS180 user guide](#)

<http://yourpdfguides.com/dref/3954282>

@@@The Guarantee is issued by Gigaset Communications GmbH, Schlavenhorst 66, D-46395 Bocholt, Germany. Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information.

The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.) The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. The above provisions do not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

13 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. To select a function while the phone is in idle status, press MENU (open menu), use the t and v keys to scroll to the function you require and press OK to confirm. To return to idle status: press and hold the a key. 1 Alarm Clock Activating/deactivating the alarm clock Input format: HHMM As an alternative to selecting functions using the t and v buttons, you can also enter the digit combination that is in front of the function in the menu tree.

For setting the time and date, for example: MENU € 4 1 € OK 1-1 Activation 1-2 Wake-up time 2 Audio Settings Can be set to one of 3 levels (AS180) 2-1-1 Earpiece 2-1-2 Speaker Can be set to one of 3 levels (AS280) Can be set to one of 5 levels (AS280) 2-1 Handset Volume 2-1 Handset Volume 2-2 Ringer Volume 2-3 Ringer Melody 5 levels + "crescendo" available 2-3-1 External Calls 2-3-2 Internal Calls 2-3-3 Alarm Clock 10 ringer melodies available for external calls 10 ringer melodies available for internal calls 10 ringer melodies available for alarm clock 2-4 Advis. Tones 2-5 Battery Low Activate/deactivate 2-5-1 Off 2-5-2 On 2-5-3 During Call Warning tone to indicate battery is almost flat: never always only during a call Assign key 1 with network mailbox and enter the network mailbox number (in idle status, press and hold key 1 to dial). Netw. Mailbx: your network provider's answer machine; must be requested separately. The network mailbox list can be displayed if your network provider supports this function and if key 1 has been assigned with the network mailbox.

3 Voice Mail 3-1-1 Netw. Mailbx 3-1 Set Key 1 (all devices) 14 4 Settings Enter date (DDMMYY format), then time (HHMM format) 4-2-1 Language 4-2-2 Auto Answer 4-2-3 Register HS 4-2-4 Reset Handset 4-3 Base 4-3-2 Call list type Set the display language 4-1 Date/Time 4-2 Handset € page 10 € page 9 Automatically activate/deactivate auto answer Manually register the handset Reset the handset € page 7 € page 10 4-3-2-1 Missed Calls € page 8 4-3-2-2 All Calls € page 8 € page 10 4-3-5-1 Repeater 4-3-3 System PIN 4-3-4 Base Reset 4-3-5 Additional Change system PIN (default is 0000) Restore factory settings 4-3-6 Listening in 4-3-7 Preselection € page 10 € page 2 4-3-5-3 Eco Mode activate/deactivate € page 2 Activate/deactivate the function € page 9 activate/deactivate 4-3-5-2 Eco Mode+ activate/deactivate 4-3-7-1 Presel. Number Network provider dialling code, should be inserted automatically before the dialled phone number. 4-3-7-2 With Preselect 4-3-7-3 Without Presel First digits of the dialling codes, should be dialled with preselection. First digits of dialling codes, should be dialled without preselection. A 3 1 0 0 8 - M2 0 0 2 - T 1 0 1 - 1 - 8 U1 9 Issued by Gigaset Communications GmbH Schlavenhorst 66 D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.

com This user guide is made from 100% recycled paper. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS180 user guide](http://yourpdfguides.com/dref/3954282)
<http://yourpdfguides.com/dref/3954282>