



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS185. You'll find the answers to all your questions on the SIEMENS GIGASET AS185 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS185 User guide SIEMENS GIGASET AS185 Operating instructions SIEMENS GIGASET AS185 Instructions for use SIEMENS GIGASET AS185 Instruction manual SIEMENS GIGASET AS185



Gigaset
AS185
SIEMENS

MADE IN GERMANY
GIGASET HELPLINE: 0845 3670812

Pack contents



- one Gigaset AS185 Base station
- one mains adapter
- one Gigaset AS185 handset
- one phone cord
- two batteries
- one battery cover
- the Quick start guide

If you have purchased a model with multiple handsets the package should contain two batteries, a battery cover, a charging cradle (if with mains adapter) for each additional handset.

Connecting the base station



Connect power adapter (1) and Phone jack (2) to the base and plug the cable excess.

Please note:


- The mains adapter must always be connected, as the Phone will not operate without a mains connection.
- Always use the power adapter and Phone cord supplied. Pin connections on telephone cables can vary.

Connecting the charging cradle (if included)

- Connect the flat plug from the mains adapter (1) to the charging cradle (2).
- Plug the mains adapter into the plug socket (3).

If you need to disconnect the plug from the charging cradle, press the release button (4) and disconnect the plug (5).

Preparing the handset

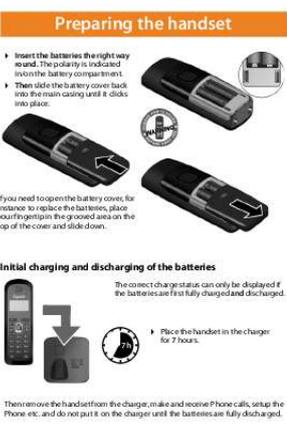

Insert the batteries the right way round. The polarity is indicated in the battery compartment.

Then slide the battery cover back into the main casing until it clicks into place.

You need to open the battery cover, for instance to replace the batteries, place your fingertip in the groove at the top of the cover and slide down.

Initial charging and discharging of the batteries


The correct charge status can only be displayed if the batteries are first fully charged and discharged.

Place the handset in the charger for 7 hours.

Then remove the handset from the charger, make and receive Phone calls, setup the Phone etc. and do not put it on the charger until the batteries are fully discharged.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the Alarm can be used.

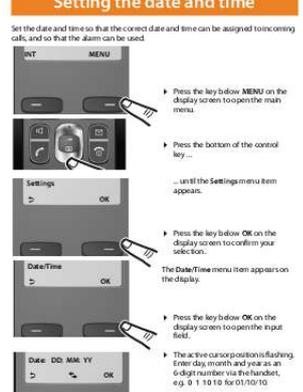

- Press the key below MENU on the display screen to open the main menu.
- Press the bottom of the control key...
- ... until the Settings menu item appears.
- Press the key below OK on the display screen to confirm your selection.
- The Date/Time menu item appears on the display.
- Press the key below OK on the display screen to open the input field.
- The active cursor position is flashing. Enter day, month and year as a 6-digit number via the handset, e.g. 9 1 10 10 for 01/10/10.

Answer machine

Message Indication key (M) on handset will flash to indicate one or all of the following events:

- missed calls (if caller ID is enabled for your line numbers will be shown)
- new messages on the answer machine
- new Text messages (SMS) received

Activating/deactivating the answer machine

MENU → Voice Mail → OK → Answer Mach. → OK (✓ = on)

If the answer machine is activated, the answering machine icon (AM) will be displayed in the header.

To receive your messages, just press the flashing (M) key on your handset.

Registration handset

Your handsets should already be registered by default, if your handset is flashing the icon (R) then it can be that:

- Your base station is not switched on, please check if the power supply is connected properly.
- There is too much distance between the handset and base.
- Your handset has not been pre-registered in the factory.

In the case that the handset has not been pre-registered, or you want to register an additional handset to your base station, use the manual registration procedure below.

Automatic registering procedure

Put into base MENU → Register

Place the handset with the display facing up in the base station.

The handset registers automatically. Registration can take up to 5 minutes. Do not remove the handset from the base station during this time.

Manual registration procedure

- On the handset: MENU → Settings → OK → Handset → OK → Register RS → OK → enter the system PIN for the base and press OK. Default PIN = 0000
- On the base station: Within 60 seconds of entering the system PIN, press and hold the registration paging key (R) (press 3 seconds). Registration time approx. 1 minute.

You can register up to four handsets to your base. You can also register other Gigaset handsets and handsets from other devices with GSP functionality.

Frequently asked questions

Base station status:

A: Press a button for 2 seconds (long press) to obtain dial tone. A short press opens the redial list.

The line is busy / no display:

A: Have you used the new line cable provided? Please do not use an old cable.

The display is not clear / no messages:

A: The display is protected by a plastic film, please make sure you have removed the protective film.

The handset is not registered:

A: If your handset is not registered, please follow the Registration handset procedure. (Described on this page).

The caller ID is not working:

A: Have you indicated for the service (CLIP) on your provider?

Message indicator flashing and cannot receive my messages:

A: Message indicator will flash to indicate missed calls, as well as new messages or text messages. (Described on this page).

Please check:

- Have you used the phone cord supplied?
- Have you fully inserted the power cable into the base station.
- Have you positioned the batteries correctly.
- Have you charged the batteries for 7 hours.
- Have you set up the Date/Time.

You have questions? As a Gigaset customer you can take advantage of our comprehensive service offerings. You can find help quickly in the User Manual and in the service pages of our Gigaset online portal <http://www.gigaset.com>

If you have problems setting up or operating this product please call:
GIGASET UK HELPLINE 0845 3151012
GIGASET IRL HELPLINE 1850 777277

Product may not be fully compatible with the national telephone network. It is clearly specified on the box and the CE mark as well as on the bottom of the base station for which country countries the equipment has been developed. If the equipment is used in a manner inconsistent with the advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (e.g. an exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase from which the warranty period starts and the type of goods that have been purchased.



You're reading an excerpt. [Click here to read official SIEMENS GIGASET AS185 user guide](http://yourpdfguides.com/dref/3954340)

Manual abstract:

Please ensure the power lead is fully inserted. Preparing the handset 1 1 2 1 Insert the batteries the right way round. The polarity is indicated in/on the battery compartment. Then slide the battery cover back into the main casing until it clicks into place. 3 4 5 u The mains adapter must always be connected, as the Phone will not operate u Always use the power adapter and Phone cord supplied. Pin connections on Telephone cables can vary. d h Please note: without a mains connection. ASI85 6 7 AS1 85 Connecting the charging cradle (if included) f you need to open the battery cover, for nstance to replace the batteries, place your fingertip in the grooved area on the op of the cover and slide down. GIGAS ET. INSPIR ING CONV ERSAT ION.

1 2 Connect the flat plug from the mains adapter 1. Quick start guide 1 one Gigaset AS185 Base station 2 one mains adapter 3 one Gigaset AS18H handset 4 one phone cord 5 two batteries 6 one battery cover 7 this Quick start guide Initial charging and discharging of the batteries Plug the mains adapter into the plug socket 2. The correct charge status can only be displayed if the batteries are first fully charged and discharged. d h GIGASET. INSPIRING CONVERSATION.

If you have purchased a model with multiple handsets the package should contain two batteries, a battery cover, a charging cradle 8 with mains adapter 9 for each additional handset. 8 9 7h 4 Place the handset in the charger for 7 hours. If you need to disconnect the plug from the charging cradle, press the release button 3 and disconnect the plug 4. 3 GIGASET HELPLINE: 0845 3670812 Then remove the handset from the charger, make and receive Phone calls, setup the Phone etc. and do not put it on the charger until the batteries are fully discharged.

Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. INT MENU Answer machine Message Indication Key `on handset will flash to indicate one or all of the following events: Registration handset Your handsets should already be registered by default, if your handset is flashing the text "No Base" then it can be that: Frequently asked questions Q: There is no dial tone. A: Press call button for 2 seconds (long press) to obtain dial tone. A short press opens the redial list. Q: The line is crackling / not clear. A: Have you used the new line cable provided? Please do not use an old cable. Q: The display is not clear / seems to be broken. A: The display is protected by a plastic film, please make sure you have removed the protective film. Q: The handset is not registered. A: If your handset is not registered, please follow the Registration handset procedure.

(Described on this page) Q: The caller ID is not working. A: Have you subscribed to this service (CLIP) from your provider? Q: Message indicator flashing and I cannot retrieve my message. @ @ @ @ @ @ @ @ Press the bottom of the control key until the Settings menu item appears. To retrieve your messages, just press the flashing `key on your handset.

Voice Mail OK Answer Mach. OK (= on) Automatic registering procedure V Put into base MENU Settings " OK Dial tone The dial tone will only be heard when pressing the c call button for 2 seconds. A short press will open the redial list. You can also use the dspeaker button. Place the handset with the display facing up in the base station.

d h Please check: Have you used the phone cord supplied Have you fully inserted the power cable into the base station Have you inserted the batteries correctly Have you charged the batteries for 7 hours Have you set up the Date/Time Date/Time Press the key below OK on the display screen to confirm your selection. V Put into base Registering MENU " OK The Date/Time menu item appears on the display. The handset registers automatically. Registration can take up to 5 minutes. Do not remove the handset from the base station during this time.

To download the latest software and manuals, visit our web-site: <http://www.gigaset.com> You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal: <http://www.gigaset.com> If you have problems setting up or operation this product please call OK Display in idle status Press the key below OK on the display screen to open the input field. The active cursor position is flashing. Enter day, month and year as an 6-digit number via the handset, e.g. Q 1 1Q1Q for 01/10/10.

Manual registration procedure 1. On the handset: MENU Date: DD: MM: YY u 2: internal number, if more then one handset is registered u : answering machine is activated u Battery charge status: = flashes: batteries almost empty = e V U (empty to full) e V U flashes: charging procedure system PIN for the base and press OK. Default PIN = 0000 Settings OK Handset OK Register HS OK enter the GIGASET UK HELPLINE 0845 3670812 GIGASET IRL HELPLINE 1850 777277 Product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. 2. On the base station: Within 60 seconds of entering the system PIN, press and hold the registration/paging key (min. 3 seconds). Registration takes approx.

1 minute. You can register up to four handsets to your base. You can also register other Gigaset handsets and handsets from other devices with GAP functionality. " T The handset and base at a glance The handset at a glance 1 Charge status of the batteries 2 Answer machine icon 3 Display keys 4 Message key Flashes: new messages received 5 Handsfree key 6 Control key (u) 7 Talk key 8 Directory key (press down) 9 End call and On/Off key 10 Ringer on/off (press and hold in idle status) 11 Keypad lock on/off (press and hold) 12 Recall key - Consultation call (flash) - Dialling pause (press and hold) 13 Microphone 14 "Microphone off" key Display keys on handset: Pressing a key launches the function that appears above that key in the display. 1 2 11. 12. INT Making calls Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The phone number is dialled.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS185 user guide](http://yourpdfguides.com/dref/3954340)
<http://yourpdfguides.com/dref/3954340>

Software reset MENU Settings OK Base OK Base Reset OK You can set the length of the pause inserted between pressing the talk key c and sending the phone number. MENU 4 I O IO The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK. The number for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms enter number OK. Listening in to an external call You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference). Precondition: The Listening in function must be activated. Standard characters 12 1) 1 ab de gh jk mn pq tu wx ., P* / 1 2 3 4 5 6 7 8 9 0 # Abc --> 123 123 --> abc Changing the pause after the recall key MENU 4IO14 Activating/deactivating listening in MENU Hardware reset Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Locating a handset ("paging") You can locate your handset using the base station.

u Briefly press the registration/paging key on the base station. u All handsets will ring simultaneously ("paging"), even if the ringer tones are deactivated. End paging: briefly press the registration/paging key on the base station or the talk key c on a handset. Settings OK Base OK Listening in OK (= on) Internal listening in (conference) You want to listen in to an existing external call. Press and hold the c key.

You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone. If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. Repeater mode With a repeater you can increase the range of your base station. You will need to activate repeater mode. Repeater mode and Eco mode or Eco mode+ cancel each other out. 3 c f i l o r v y ? (# 4 \$ 2 3 4 5 6 s 8 z !) @ 5 7 9 0 < \ 6 + = & 7 8 9 10 11 12 13 14 > : " % ' ; _ 1) Space Only use the mains adapter supplied. Fit only the recommended, rechargeable batteries, i.

e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room.

The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. If you give your Gigaset to someone else, make sure you also give them the user guide.

Please remove faulty base stations from use or have them repaired by Service, as they could interfere with other wireless services. Disposal: Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Contact with liquid ! If the handset should come into contact with liquid: u Switch the handset off and remove the batteries immediately. u Allow the liquid to drain from the handset. u Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). u Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. Base station power consumption In standby mode Handset in base station Handset outside base station During a call approx.

1.3 W approx. 1.3 W approx. 1.5 W General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors up to 50 m indoors 230 V ~/50 Hz +5C to +45C, 20% to 75% relative humidity Authorisation This device is intended for analogue phone lines in the UK. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: ECO DECT You are helping to protect the environment with your Gigaset AS185. Guarantee Certificate United Kingdom Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device.

In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. u This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides. u This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads).

User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. @ @ @ @ @ @ @ @ u Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon). Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. www. gigaset.com/docs Issued Gigaset Communications GmbH Frankenstr. 2a, D-46395 Bocholt.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS185 user guide](http://yourpdfguides.com/dref/3954340)
<http://yourpdfguides.com/dref/3954340>

Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG. As of 1 Oct. 2011 Gigaset products bearing the trademark "Siemens" will exclusively use the trademark "Gigaset". Gigaset Communications GmbH 2010 All rights reserved. Subject to availability. Rights of modification reserved. www.

gigaset.com This user guide is made from 100% recycled paper. A31008-M2036-L151-1-7619 .



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET AS185 user guide](#)

<http://yourpdfguides.com/dref/3954340>