



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS200. You'll find the answers to all your questions on the SIEMENS GIGASET AS200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS200
User guide SIEMENS GIGASET AS200
Operating instructions SIEMENS GIGASET AS200
Instructions for use SIEMENS GIGASET AS200
Instruction manual SIEMENS GIGASET AS200

1

Gigaset AS200/AS200A

The handset at a glance

- 1 Charge status of the batteries
- 2 Answer machine icon (AS200A only)
- 3 Display keys
- 4 Message key
Flashes: new messages received
- 5 Directory key
- 6 Control key (☰)
- 7 Talk key
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
- 12 Microphone
- 13 "Microphone off" key



 
Display keys on handset:

Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets → page 10.
MENU	Open main/submenu (see Menu tree → page 16).
☰	Go back one menu level.
↕	Scroll up/down or adjust volume with [↑/↓].
↔	Move cursor to left/right with [←/→].
⌫	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

The base station at a glance

AS200A base station



- 1 Registration/paging key:
Search for handsets (press briefly, "Paging" → page 10)
Register handsets (press and hold → page 10).
 - 2 On/Off key: activate and deactivate answer machine.
Lights up: answer machine is activated.
Flashes: there is at least one new message or message is in the process of being recorded.
Flashes very quickly for about four seconds: memory is full.
 - 3 Volume keys: (- = quieter; + = louder)
During message playback: adjust the speaking volume.
While phone is ringing: adjust ringer volume.
 - 4 Play/Stop key:
Play back messages from the answer machine, or cancel playback.
- During message playback:**
- 5 Delete current message.
 - 6 Skip to the start of the current message (press once) or go to the previous message (press twice).
 - 7 Skip to next message.

AS 200 base station



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS200 user guide](http://yourpdfguides.com/dref/3954313)
<http://yourpdfguides.com/dref/3954313>

Manual abstract:

Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time from right to left. @ @2 On/Off key: activate and deactivate answer machine. Lights up: answer machine is activated. @@Flashes very quickly for about four seconds: memory is full. 3 Volume keys: (= quieter; + = louder) During message playback: adjust the speaking volume. While phone is ringing: adjust ringer volume. 4 Play/Stop key: Play back messages from the answer machine, or cancel playback.

During message playback: 5 Delete current message. 6 Skip to the start of the current message (press once) or go to the previous message (press twice). 7 Skip to next message. ¢ ¢ 2 Safety precautions Read this user guide and the safety precautions carefully before use. Explain their content and the potential hazards associated with using the telephone to your children.

Care Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static. \$ Only use the mains adapter supplied. Contact with liquid ! Fit only the recommended, rechargeable batteries (¢ page 13), i.

e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room.

The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. If the handset should come into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again.

ECO DECT You are helping to protect the environment with your Gigaset AS200/AS200A. If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services.

Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Reduced energy consumption Your telephone has a power-saving adapter plug and uses less power. Reduced transmission power The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode/Eco Mode+ (see Menu tree page 17): Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced). Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon ½). Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. Registering handsets that do not support Eco Mode+ causes the mode to be deactivated on the base and all other handsets. ¢ Emergency numbers cannot be dialled if the keypad lock (¢ page 1) is activated! Not all of the functions described in this user guide are available in all countries. 3 First steps Check the pack contents one Gigaset AS200/AS200A base station, one mains adapter, one Gigaset AS200 handset, one phone cord, two batteries, one battery cover, one user guide.

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset. Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. ✕ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (¢ page 17) is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Connecting the base station ✕ First connect the mains adapter 1. ✕ Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: The mains adapter must always be connected, as the phone will not operate without mains connection. Only use the mains adapter and phone cord supplied.

Pin connections on telephone cables can vary. 2 1 1 4 Connecting the charging cradle (if included) 2 1 ✕ Connect the flat plug from the power supply 1. ✕ Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. 1 Setting up the handset for use The display is protected by a plastic film.

Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries (¢ page 13) recommended by Gigaset Communications GmbH.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET AS200 user guide](#)

<http://yourpdfguides.com/dref/3954313>

Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. ✕ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment. + ✕ Slide the battery cover back into the main casing until it clicks into place. If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the grooved area on the top of the cover and slide down. 5 Placing the handset in the base station and registering V Put into base MENU Before you can use the phone, you must first register the handset to the base station. ✕ Place the handset with the display facing up in the base station.

V Registering The handset registers automatically. Registration can take up to 5 minutes. Do not remove the handset from the base station during this time. V INT MENU After successful registration, the idle screen is displayed. Charge status of the batteries: = e V U (flat to full) = flashes: batteries almost flat e V U flashes: charging If you have purchased a model with multiple handsets, repeat the registration process for each individual handset. Handsets are assigned the lowest available internal number (14). If more than one handset is registered to the base station, the internal handset number appears in the top left of the display, e.g. 2. If the internal numbers 14 are already assigned to other devices, number 4 will be overwritten.

Please note Each key press interrupts the automatic registration. If automatic registration does not work, the handset will have to be registered manually (€ page 10). Only place the handset in the base station or charging cradle that is intended for it. Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. ✕ Place the handset in the base station or charging cradle for eight hours.

✕ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are fully discharged. 8h 6 Please note After the first battery charge and discharge you may replace your handset in the base station or charging cradle after every call. Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons. Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. MENU Settings OK Date/Time OK Date: ~ (enter the day, month and year in 6-digit format) OK Time: ~ (enter hours and minutes in 4-digit format) OK (display message: Saved) a (press and hold to return to idle status) € € € € € € € € € € € € Please note When entering the time and date, you can move the position of an entry to the left or right by pressing the control button up or down.

Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example. If the answer machine is activated (AS200A), the answer machine icon × will be displayed in the header. Your answer machine is set with a pre-recorded announcement. ± V 11:56 MENU 11.12. INT the handset. If you place a deactivated handset in the base station or charging cradle, it will automatically activate.

Activating/deactivating the handset Press and hold the end call key a to activate or deactivate Your phone is now ready for use! If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and answers" page 13) or contact our Customer Care team page 14. € € 7

Making calls Making external calls and ending calls External calls are calls using the public telephone network. ~ (Enter the phone number) The phone number is dialled. (Or you can first press and hold c [dial tone] and then enter the number.) During the call you can adjust the earpiece volume ct entry) € MENU Delete Entry Copy to Dir. The following functions can be selected with u: Delete current entry. Copy an entry to the directory. Call date and time (if set). New Call: new missed call. Old Call: entry already read.

Answ.: call taken. Dialling from the last number redial list c (press briefly) € u (select entry) € c Managing entries in the last number redial list c (press briefly) € u (select entry) € MENU You can select the following settings: Use Number Date/Time Status Delete List Edit or add to the number. Then dial or select other functions from the MENU. Copy an entry to the directory.

Delete selected entry. Delete all entries. Warning! All old and new entries will be deleted. Copy to Dir. Delete Entry Delete List Calling back a caller from the calls list f € CallsList 01+02 € OK € u (select entry) €c Voicemail list (AS200A) You can use the voicemail list to listen to the messages that are on the answer machine.

The voicemail list is displayed as follows: VoiceMail 01+02 Calls list/voicemail (network mailbox) list An advisory tone sounds and the message key flashes as soon as a new entry appears in the calls list/voicemail list. A message appears in the display. When you press the f key, all the lists are displayed. If only one list contains new messages, this will be opened automatically. Please note: If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been set (depending on your network provider). Number of new messages + number of old, played back messages Opening the voicemail list f € VoiceMail 01+02 € OK If you have new messages, playback will start with the first new message, otherwise with the first old message. Calls list Precondition: CLIP (€ page 7) Depending on the type of list set, the calls list contains (€ page 17) answered calls missed calls 9 Using other functions u (select entry) € MENU Continue Volume Copy to Dir. Delete all old The following functions can be selected with u: Resume paused playback. Set the volume. Copy an entry to the directory.

Delete all old messages. Stopping and controlling playback During message playback: 2 t v Stop playback. Press 2 again to resume. Go to the start of the current message. Skip to the previous message. Skip to the next message. Go to the next message but one. 2xt 2xv Answer machine operation (AS200A) The answer machine can be operated from the handset or by using the key on the base station (€ page 1).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS200 user guide](http://yourpdfguides.com/dref/3954313)
<http://yourpdfguides.com/dref/3954313>

The telephone is supplied with a pre-recorded announcement. You can only record your own announcement messages using the handset. This pre-recorded announcement is used if no personal announcement is available. If the memory is full, the answer machine switches itself off automatically. It activates again automatically when you delete old messages. Deleting individual messages While playback is paused, press the ~ display key. Deleting all old messages During playback or pause: MENU prompt) & Delete all old & OK (confirm the security Picking up a call from the answer machine You can still accept a call while the answer machine is recording the message by pressing c .

Recording stops and you can speak to the caller. Setting up the answer machine The answer machine has already been preset at the factory. Make individual settings using the handset. Details on how to set a delay time, after which the answer machine is to answer a call, as well as details on how to set the recording length and activate call screening during the recording, are available from the Menu tree page 16. Activating/deactivating the answer machine MENU Voice Mail OK (= on) & & OK & Answer Mach.

When the answer machine is switched on, the ± icon appears in the display. Recording your own announcement & MENU Voice Mail OK Announcements OK Rec announce OK Speak after OK OK & & & & Setting a different language You can change the language used for voice prompts and the pre-recorded announcement. MENU & You hear the ready tone (short tone). Now say your announcement (at least 3 seconds). Press OK to confirm or press a or " to reject your recording. After recording, the announcement is played back for you to check. Please note: Recording ends automatically when the max. recording time of 170 seconds is reached or if there is a break in speaking of more than 2 seconds. & 4 3 9 2 1 (starts the procedure). Select the language: 0 (xxxx), 1 (xxxx), 2 (xxxx).

The display shows Saved. Assigning key 1 for fast access to the answer machine (network mailbox) Simply press and hold key 1 on the handset and you will be connected directly to the answer machine (network mailbox). See Menu tree page 16. Playing back or deleting announcements See Menu tree & page 16. & Playing/deleting messages Open the voicemail list to play back messages. 10 Remote operation when on the move You can check and activate your answer machine from any other telephone (hotel, pay phone etc.). Requirements: You have set a system PIN other than 0000 page 17. @@@@ Press twice to go back to the previous message. Stop playback.

Press again to resume. Skip to next message. @@@@@3 seconds). Registration takes approx. @@This will also reset other settings page 11. @@It tells you how much memory time is left. The messages are now played back. @@@@@@ When a participant answers you can speak to them. @@Press the INT key and call one or all handsets. The external participant hears the hold music.

@@ After the internal participant has answered, you can talk to him. @@@@ Press and hold the c key. You can listen in to the call. All participants hear a signal tone. To end: press the end call key a. All participants hear a signal tone. If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. Cancel the reset with a. & & OK & Handset & OK & OK Restoring the base station to the factory settings When restoring factory settings: All handsets are de-registered Individual settings are reset All lists are deleted The system PIN is reset to the original code 0000 Only the date and time are retained. Software reset MENU Settings OK Base Reset OK Setting the alarm clock Activating/deactivating the alarm clock & MENU Alarm Clock OK (= on) & & OK & Activation & & & Base & OK When activated: & Set the wake-up time & OK When the alarm clock rings, press any key to switch it off for 24 hours.

If the alarm clock is set, the wake-up icon l will appear on the screen and the wake-up time will be displayed instead of the date. Hardware reset Disconnect the power cord from the base station. Hold down the registration/paging key (& page 1) on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Repeater mode With a repeater you can increase the range of your base station. You will need to activate repeater mode (& page 17). Repeater mode and Eco mode or Eco mode+ (& page 1) cancel each other out. Setting the wake-up time & MENU OK & Alarm Clock & OK & Wake-up time Enter the wake-up time in hours and minutes, then press OK. 12 Operating the base station on the PABX The following settings are only necessary if your PABX requires them, see the user guide for your PABX. When entering the digits, enter them slowly one after the other. Appendix Entering letters/characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode. Standard characters 1 2 1 4 5 L M N O Q 1x 2x 1) 1 ab de gh jk mn pq tu wx ., */ Abc --> 123 123 --> abc Changing the dialling mode MENU & 4 I O 1 1 & The number for the set dial- ling mode flashes: 0 = touch tone dialling (DTMF); 1 = dial pulsing (DP) enter number & & OK. Setting recall MENU & 4 I O 1 2 & The number for the current recall flashes: 0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms enter number OK.

& & Changing pause after line seizure You can set the length of the pause inserted between pressing the talk key c and sending the phone number. MENU 4 I O I O The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK. & & & P # 3x £ c f i l o r v y ? (# 4x \$ 2 3 4 5 6 s 8 z !) @ 5x ¥ ä ë ï ö 7 ü 9 0 < \ 6x ¢ á é í ñ ß ú ý + = & 7x 8x 9x 10x 11x 12x 13x 14x à è ì ó â ê î ò ã ç ô õ ù ÿ æ ø - : ; > % § å j ' ' ; _ 1) Space Greek 1 2 1 4 5 L M N O Q 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 1) 1£\$ Changing the pause after the recall key MENU & 4 I O 1 4 & The number for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms enter number OK.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS200 user guide](http://yourpdfguides.com/dref/3954313)

<http://yourpdfguides.com/dref/3954313>

ç ç . * ABC --> 123 2ABC 3DE 4GH 5JKL 6M 7P 8TUV 9W , / # ? (@ !) \ 0 < & + = \$ F I N O Q R X > S Z " ' ; _ Y : % P # 1) Space I3 Specifications
Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 400800 mAh We recommend the following types of battery: GP 550/700 mAh Yuasa Phone 700/800 mAh Peacebay 550/650 mAh (Valid at the time of going to press) The handset is supplied with recommended batteries. Questions and answers If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Cause Solution Base station power consumption In standby mode Handset in base station Handset outside base station During a call approx. 1.

3 W approx. 1.3 W approx. 1.5 W General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors up to 50 m indoors 230 V ~/50 Hz +5°C to +45°C, 20% to 75% relative humidity Nothing The handset is not Press the end call appears in the switched on. key a for approx. display. 5 seconds or place the handset in the base station. The batteries are Charge or replace the flat. batteries.

No wireless The handset is out- Move the handset connection to side the range of closer to the base the base sta- the base station. station. tion, Base The handset is not flashes in the registered. Register the handset display. The base station is page 10.
not turned on. Check the mains connector on the base station page 3. You cannot The phone cord Please always use the hear a ringer/ supplied has not phone cord supplied or dialling tone been used or has ensure that the from the fixed been replaced by a pin connections are line network. new cord with the correct when purchaswrong jack coning from a retailer: nections. 3-4 assignment of telephone leads/EURO CTR37.

Error tone You have entered Reset the system PIN to sounds after the wrong the default 0000 system PIN. system PIN page 11. prompt. All handsets are deregistered. All settings are reset. All lists are PIN forgotten. deleted. ç ç ç 14 Customer Service & Assistance You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase on www.gigaset.com.

[gigaset.com/gr/service](http://www.gigaset.com/gr/service) thus enabling us to provide you even with better service in case of questions or in case of a warranty claim. Your personal user account enables you to directly contact our customer service by email. In our constantly updated online service on www.gigaset.com/gr/service you can find: Extensive information about our products FAQ compilations Keyword search to help find topics quickly Compatibility database: Find out which base stations and handsets can be combined. Product comparison: Compare the features of several products with each other. Downloads for user manuals and current software updates E-mail contact form to our customer service Our service representatives are available on the telephone for more advanced questions or in-person consultation. Service Greece 801 1000 500 (0.026 per minute from the Greek phone network.

For calls from mobile phone networks, other prices may apply.) Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

15 Authorisation This device is designed for the analogic telephone connection in the greek telephone net. Gigaset Communications GmbH hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). If you require a copy of the original, visit the website: www.gigaset.com/docs.

Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.) The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide. Guarantee Certificate Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET AS200 user guide](#)

<http://yourpdfguides.com/dref/3954313>

This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/ or failure to comply with information contained in the user manuals. This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads).

User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. @@@@The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria. 16 Menu tree Your phone has an extensive range of features. These are offered in the form of menus.

To select a function while the phone is in idle status, press MENU (open menu), use the t and v keys to scroll to the function you require and press OK to confirm. 1 Alarm Clock Activating/deactivating the alarm clock Input format: HHMM To return to idle status: press and hold the a key. As an alternative to selecting functions using the t and v buttons, you can also enter the digit combination that is in front of the function in the menu tree. For setting the time and date, for example: MENU 4 1 4 OK 1-1 Activation 1-2 Wake-up time 2 Audio Settings 5 levels + "crescendo" available 2-3-1 External Calls 2-3-2 Internal Calls 2-3-3 Alarm Clock 10 ringer melodies available for external calls 10 ringer melodies available for internal calls 10 ringer melodies available for alarm clock 2-1 Handset Volume Can be set to one of 3 levels 2-2 Ringer Volume 2-3 Ringer Melody 2-4 Advis. Tones 2-5 Battery Low Activate/deactivate 2-5-1 Off 2-5-2 On 2-5-3 During Call Warning tone to indicate bat- never tery is almost flat: always only during a call Assign key 1 with network mailbox and enter the network mailbox number (in idle status, press and hold key 1 to dial).

Netw. Mailbx: your network provider's answer machine; must be requested separately. The network mailbox list can be displayed if your network provider supports this function and if key 1 has been assigned with the network mailbox. Assign key 1 with answer machine (in idle status, press and hold to dial). 3 Voice Mail 3-1-1 Netw. Mailbx 3-1 Set Key 1 (all devices) (Only devices with answer machine) 3-2 Answer Mach. 3-3 Call Screening 3-1-2 Answer Mach. Activating/deactivating the answer machine 3-3-2 Base 3-4 Announcements 3-4-1 Rec announce 3-4-2 Play announce 3-4-3 Del announce 3-5 Message Length 3-5-1 Maximum 3-5-2 1 Minute 3-5-3 2 Minutes 3-5-4 3 Minutes 4 page 9 You can use the loudspeaker on the base station to screen a message that is being recorded. Play your announcement Delete your announcement Do not limit the recording time for each call. Limit the recording time to 1 minute per call.

Limit the recording time to 2 minutes per call. Limit the recording time to 3 minutes per call. 17 3-6 Ring Delay 3-6-1 Immediately 3-6-2 10 sec 3-6-3 18 sec 3-6-4 30 sec 3-6-5 Auto Call is answered immediately. Call is answered after 10 seconds. Call is answered after 18 seconds. Call is answered after 30 seconds. If there are no new messages, the answer machine answers a call after 18 seconds. If new messages are present, the answer machine answers a call after just 10 seconds. 4 Settings Enter date (DDMMYY format), then time (HHMM format) 4-2-1 Language 4-2-2 Auto Answer 4-2-3 Register HS 4-2-4 Reset Handset Set the display language 4-1 Date/Time 4-2 Handset 4 page 11 4 page 10 Automatically activate/deactivate auto answer Manually register the handset Reset the handset 4 page 7 4 page 11 4-3 Base 4-3-1 Audio Settings (AS200A) 4-3-1-1 Ringer Volume 4-3-1-2 Ringer Melody 5 level settings + "crescendo" + "off" 10 selectable melodies 4-3-2 Call list type 4-3-2-1 Missed Calls 4-3-2-2 All Calls 4 page 8 4 page 8 4-3-3 System PIN 4-3-4 Base Reset 4-3-5 Additional Change system PIN (default is 0000) Restore factory settings 4-3-5-1 Repeater 4-3-6 Listening in 4-3-7 Preselection 4 page 11 4 page 2 4-3-5-3 Eco Mode activate/deactivate 4 page 2 Activate/deactivate the function 4 page 11 activate/deactivate activate/deactivate 4-3-5-2 Eco Mode+ 4-3-7-1 Presel. Number Network provider dialling code, should be inserted automatically before the dialled phone number.

First digits of the dialling codes, should be dialled with preselection. First digits of dialling codes, should be dialled without preselection. 4-3-7-2 With Preselect 4-3-7-3 Without Presel 4 page 11 18 Issued by Gigaset Communications GmbH Frankenstr. 2a D-46395 Bocholt Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG. As of 1 Oct.

2011 Gigaset products bearing the trademark "Siemens" will exclusively use the trademark "Gigaset". © Gigaset Communications GmbH 2011 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100 % recycled paper. .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS200 user guide](http://yourpdfguides.com/dref/3954313)
<http://yourpdfguides.com/dref/3954313>