



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS285. You'll find the answers to all your questions on the SIEMENS GIGASET AS285 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS285
User guide SIEMENS GIGASET AS285
Operating instructions SIEMENS GIGASET AS285
Instructions for use SIEMENS GIGASET AS285
Instruction manual SIEMENS GIGASET AS285

1

Gigaset AS280/AS280DUO/AS285

The handset at a glance

- 1 Charge status of the batteries
- 2 Answer machine icon (AS285 only)
- 3 Display keys
- 4 Message key
Flashes: new messages received
- 5 Handsfree key
- 6 Control key (H)
- 7 Talk key
- 8 Directory key (press down)
- 9 End call and On/Off key
- 10 Ringer on/off (press and hold in idle status)
- 11 Keypad lock on/off (press and hold)
- 12 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
- 13 Microphone
- 14 "Microphone off" key



Display keys on handset:
Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets → page 12.
MENU	Open main/submenu (see Menu tree → page 15).
←	Go back one menu level.
↑	Scroll up/down or adjust volume with [M].
→	Move cursor to left/right with [M].
⌫	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.



A31008-M2002-B501-1-UV19

Issued by
Gigaset Communications GmbH
Schlavenhorst 66
D-46395 Bocholt
Gigaset Communications GmbH is a licensee of the
Siemens trademark.

© Gigaset Communications GmbH 2008
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com
This user guide is made from 100% recycled paper.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS285 user guide](http://yourpdfguides.com/dref/4569109)
<http://yourpdfguides.com/dref/4569109>

Manual abstract:

Menu tree Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time from right to left. Confirm menu function or save entry. 11.12. @@Subject to availability. Rights of modification reserved. @@@@Lights up: answer machine is activated.

Flashes: there is at least one new message or message is in the process of being recorded. Flashes very quickly for about four seconds: memory is full. 3
Volume keys: (= quieter; + = louder) During message playback: adjust the speaking volume. While phone is ringing: adjust ringer volume. 4 Play/Stop key: Play back messages from the answer machine, or cancel playback.

During message playback: 5 Delete current message. 6 Skip to the start of the current message (press once) or go to the previous message (press twice). 7 Skip to next message. € € Read this user guide and the safety precautions carefully before use. Explain their content and the potential hazards associated with using the telephone to your children.

\$ Only use the mains adapter supplied. Fit only the recommended, rechargeable batteries (€ page 13), i.e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof. Do not use your phone in environments with a potential explosion hazard, e.g. paint shops. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health.

@@@Please remove faulty base stations from use or have them repaired by our service, as they could interfere with other wireless services. 3

Care Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static.

Contact with liquid ! If the handset should come into contact with liquid: Switch the handset off and remove the batteries immediately. Allow the liquid to drain from the handset. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will normally be able to use it again. ECO DECT You are helping to protect the environment with your Gigaset AS280/AS280DUO/AS285. Reduced energy consumption Your telephone has a power-saving adapter plug and uses less power. Reduced transmission power The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode/Eco Mode+ (see Menu tree page 16): Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced). Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon ½). Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. € 4 First steps Check the pack contents one Gigaset AS280DUO/AS285 base station, one mains adapter, one Gigaset AS28H handset, one phone cord, two batteries, one battery cover, one user guide.

If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset. Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. ☒ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (€ page 16) is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Connecting the base station ☒ First connect the mains adapter 1. ☒ Then connect the telephone jack 2 and insert the cables into the cable ducts. @@ Only use the mains adapter and phone cord supplied. @@@@ Please remove the protective film! @@@@Registration can take up to 5 minutes.

@@@Handsets are assigned the lowest available internal number (14). @@2. If the internal numbers 14 are already assigned to other devices, number 4 will be overwritten. Please note Each key press interrupts the automatic registration. If automatic registration does not work, the handset will have to be registered manually (€ page 11).

it. Only place the handset in the base station or charging cradle that is intended for Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. 8h ☒ Place the handset in the base station or charging cradle for eight hours. ☒ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are fully discharged. 7 Please note After the first battery charge and discharge you may replace your handset in the base station or charging cradle after every call. from the handset and reinsert them.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569109)

[GIGASET AS285 user guide](http://yourpdfguides.com/dref/4569109)

<http://yourpdfguides.com/dref/4569109>

Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. Error tone sounds after system PIN prompt. PIN forgotten. ϵ 15 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. To select a function while the phone is in idle status, press MENU (open menu), use the t and v keys to scroll to the function you require and press OK to confirm. To return to idle status: press and hold the a key. 1 Alarm Clock Activating/deactivating the alarm clock Input format: HHMM As an alternative to selecting functions using the t and v buttons, you can also enter the digit combination that is in front of the function in the menu tree.

@@@ Netw. @@@@ Assign key 1 with answer machine (in idle status, press and hold to dial). 3 Voice Mail 3-1-1 Netw. Mailbx 3-1 Set Key 1 (all devices) (Only devices with answer machine) 3-2 Answer Mach. 3-3 Call Screening 3-1-2 Answer Mach. Activating/deactivating the answer machine 3-3-1 Handset 3-3-2 Base You can use the loudspeaker on the handset to screen a message that is being recorded, . You can use the loudspeaker on the base station to screen a message that is being recorded. 3-4 Announcements 3-4-1 Rec announce 3-4-2 Play announce 3-4-3 Del announce ϵ page 10 Play your announcement Delete your announcement 16 3-5 Message Length 3-5-1 Maximum 3-5-2 1 Minute 3-5-3 2 Minutes 3-5-4 3 Minutes 3-6 Ring Delay 3-6-1 Immediately 3-6-2 10 sec 3-6-3 18 sec 3-6-4 30 sec 3-6-5 Auto Do not limit the recording time for each call. Limit the recording time to 1 minute per call. Limit the recording time to 2 minutes per call.

Limit the recording time to 3 minutes per call. Call is answered immediately. Call is answered after 10 seconds. Call is answered after 18 seconds. Call is answered after 30 seconds. If there are no new messages, the answer machine answers a call after 18 seconds. If new messages are present, the answer machine answers a call after just 10 seconds. 4 Settings Enter date (DDMMYY format), then time (HHMM format) 4-2-1 Language 4-2-2 Auto Answer 4-2-3 Register HS 4-2-4 Reset Handset Set the display language 4-1 Date/Time 4-2 Handset ϵ page 12 ϵ page 11 Automatically activate/deactivate auto answer Manually register the handset Reset the handset ϵ page 8 ϵ page 12 4-3 Base 4-3-1 Audio Settings (AS285 only) 4-3-1-1 Ringer Volume 4-3-1-2 Ringer Melody 5 level settings + "crescendo" + "off" 10 selectable melodies 4-3-2 Call list type 4-3-2-1 Missed Calls 4-3-2-2 All Calls ϵ page 9 ϵ page 9 4-3-3 System PIN 4-3-4 Base Reset 4-3-5 Additional Change system PIN (default is 0000) Restore factory settings 4-3-5-1 Repeater 4-3-6 Listening in 4-3-7 Preselection ϵ page 13 ϵ page 3 4-3-5-3 Eco Mode activate/deactivate ϵ page 3 Activate/deactivate the function ϵ page 12 activate/deactivate 4-3-5-2 Eco Mode+ activate/deactivate 4-3-7-1 Presel. Number Network provider dialling code, should be inserted automatically before the dialled phone number. 4-3-7-2 With Preselect 4-3-7-3 Without Presel First digits of the dialling codes, should be dialled with preselection. ϵ page 12 . . First digits of dialling codes, should be dialled without preselection. ϵ page 12 . .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS285 user guide](#)
<http://yourpdfguides.com/dref/4569109>