



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS28H. You'll find the answers to all your questions on the SIEMENS GIGASET AS28H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS28H
User guide SIEMENS GIGASET AS28H
Operating instructions SIEMENS GIGASET AS28H
Instructions for use SIEMENS GIGASET AS28H
Instruction manual SIEMENS GIGASET AS28H

Gigaset AS28H handset

- 1 Charge status of the batteries
- 2 Display keys
- 3 Message key
Flashes: new messages received
- 4 Handsfree key
- 5 Control key (M)
- 6 Talk key
- 7 Directory key (press down)
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 11 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
- 12 Microphone
- 13 "Microphone off" key



Display keys on handset:
Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets → page 7.
MENU	Open main/submenu (see Menu tree → page 10).
↵	Go back one menu level.
⬆	Scroll up/down or adjust volume with \updownarrow .
↔	Move cursor to left/right with \leftarrow .
⬅	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

ECO DECT

You are helping to protect the environment with your Gigaset AS28H.

Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reduced transmission power (depending on the base station)

The transmission power can only be reduced if your base station supports this function.

The transmission power of your telephone is reduced automatically:

- ◆ The handset's transmission power is reduced depending on the distance to the base station.
- ◆ The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station.

You can reduce the transmission power of the handset and base station even more by using Eco Mode/ Eco Mode+. For further information, please see your phone's user guide.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS28H user guide](http://yourpdfguides.com/dref/3954384)
<http://yourpdfguides.com/dref/3954384>

Manual abstract:

Display icon INT Function when pressed Call other registered handpage 7. sets Open main/submenu (see page 10). Menu tree Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time from right to left. Confirm menu function or save entry. 11.12. INT 11:56 MENU V MENU € " U T ~ OK € d h ECO DECT You are helping to protect the environment with your Gigaset AS28H.

Reduced energy consumption Your telephone has a power-saving adapter plug and uses less power. Reduced transmission power (depending on the base station) The transmission power can only be reduced if your base station supports this function. The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco Mode/ Eco Mode+.

For further information, please see your phone's user guide. 2 Safety precautions Read this user guide and the safety precautions carefully before use. Explain their content and the potential hazards associated with using the telephone to your children. Care Wipe the charging cradle and the handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth.

This can cause static. \$ Only use the mains adapter supplied. Contact with liquid ! Fit only the recommended, rechargeable batteries (€ page 9), i.e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected. @@doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the phone in a bathroom or shower room. The phone is not splashproof. @@@@ Allow the liquid to drain from the handset. @@ Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. If you give your Gigaset to someone else, make sure you also give them the user guide. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Emergency numbers cannot be dialled if the keypad lock (€ page 1) is activated! Not all of the functions described in this user guide are available in all countries. 3 First steps Check the pack contents one Gigaset AS28H handset, one charging cradle, one mains adapter, two batteries, one battery cover, one user guide.

Setting up the charging cradle The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5°C to +45°C. Place the charging cradle on a level, non-slip surface. ☒ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (€ page 1) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle 2 1 ☒ Connect the flat plug from the power supply 1. ☒ Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. 1 4 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries (€ page 9) recommended by Gigaset Communications GmbH*.

@@@ Registration can take up to 5 minutes. @@1. @@@@3 seconds). @@@@2. @@@@@from the handset and reinsert them. @@This is not dangerous. @@ 11.12. @@Your phone is now ready for use! @@@@~ (Enter the phone number) The phone number is dialled. @@@@You can save up to 80 phone numbers (max.

32 digits) with corresponding names (max. 14 characters). @@Press the talk key c to accept the call. @@In idle status, use t to activate the menu for setting the call volume and use u to set the volume. Saving the first number in the directory h € New Entry? € OK € ~ (enter number) € OK € ~ (enter name) € OK Storing a number in the directory h € MENU € New Entry € OK € ~ (enter number) € OK € ~ (enter name) € OK Selecting a directory entry Open the directory with h.

You have the following € Switch to mute You can mute your handset when making external calls. Your caller can no longer hear you. Press the "Microphone off" key m during the call to activate/deactivate the function. options: Use u to scroll through the entries until the required name is selected. Enter the first character of the name and scroll to the entry with u, if required.

Dialling with the directory h € u (select entry) € c Using other functions Handsfree talking To activate while dialling: Enter the number ~ and press the handsfree key d. Switching between earpiece and handsfree mode: During a call and when listening to the answer machine (AS285 only), press the handsfree key d to activate or deactivate handsfree talking. During a call, ukey the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3954384)

[GIGASET AS28H user guide](http://yourpdfguides.com/dref/3954384)

<http://yourpdfguides.com/dref/3954384>

