



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET AS300. You'll find the answers to all your questions on the SIEMENS GIGASET AS300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET AS300
User guide SIEMENS GIGASET AS300
Operating instructions SIEMENS GIGASET AS300
Instructions for use SIEMENS GIGASET AS300
Instruction manual SIEMENS GIGASET AS300

1

Gigaset AS300

The handset at a glance

- 1 Charge status of the batteries
- 2 Display keys
- 3 Message key
Flashes: new messages received
- 4 Handsfree key
- 5 Control key (M)
- 6 Talk key
- 7 Directory key (press down)
- 8 End call and On/Off key
- 9 Ringer on/off (press and hold in idle status)
- 10 Keypad lock on/off (press and hold)
- 7 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)
- 12 Microphone
- 13 "Microphone off" key



Display keys on handset:

Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets → page 9.
MENU	Open main/submenu (see Menu tree → page 13).
↵	Go back one menu level.
⬆	Scroll up/down or adjust volume with [V].
↔	Move cursor to left/right with [←/→].
⌫	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

The base station at a glance

AS300 base station



Registration/paging key:
Search for handsets (press briefly, "Paging" → page 8)
Register handsets (press and hold → page 9).



A31008-M2208-B5011-1-UV19

Issued by
Gigaset Communications GmbH
Friedrichs: 2a
D-46395 Bocholt
Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG.
As of 1 Oct. 2011 Gigaset products bearing the trademark "Siemens" will exclusively use the trademark "Gigaset".

© Gigaset Communications GmbH 2011
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com

This user guide is made from 100% recycled paper.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS300 user guide](http://yourpdfguides.com/dref/3954825)
<http://yourpdfguides.com/dref/3954825>

Manual abstract:

1 Display icon INT Function when pressed 11.12. INT 2 3 4 5 6 7 8 11:56 MENU V MENU € " U T ~ OK Call other registered handsets page 9. Open main/submenu (see page 13). Menu tree Go back one menu level. Scroll up/down or adjust volume with u. Move cursor to left/right with u. Backspace deletes one character at a time from right to left. Confirm menu function or save entry. € 9 10 11 12 13 The base station at a glance AS300 base station Registration/paging key: Search for handsets (press page 8) briefly, "Paging" Register handsets (press and page 9).

hold € € Issued by Gigaset Communications GmbH Frankenstr. 2a D-46395 Bocholt Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG. As of 1 Oct. 2011 Gigaset products bearing the trademark "Siemens" will exclusively use the trademark "Gigaset". © Gigaset Communications GmbH 2011 All rights reserved.

Subject to availability. Rights of modification reserved. www.gigaset.com This user guide is made from 100 % recycled paper.

2 Safety precautions Read this user guide and the safety precautions carefully before use. Explain their content and the potential hazards associated with using the telephone to your children. Care Wipe down the base station and handset with a damp cloth (no solvents) or an antistatic cloth. Never use a dry cloth. This can cause static. \$ Only use the mains adapter supplied. Contact with liquid ! Fit only the recommended, rechargeable batteries (€ page 11), i.e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury. The operation of medical appliances may be affected.

@@doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof. @@@@ Allow the liquid to drain from the handset. @@ Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. ECO DECT You are helping to protect the environment with your Gigaset AS300.

If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by Service, as they could interfere with other wireless services. Disposal Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Reduced energy consumption Your telephone has a power-saving adapter plug and uses less power.

Reduced transmission power The transmission power of your telephone is reduced automatically: The handset's transmission power is reduced depending on the distance to the base station. The transmission power on the base station is reduced to virtually zero when only one handset is registered and the handset is in the base station. You can reduce the transmission power of the handset and base station even more by using Eco page 14): Mode/Eco Mode+ (see Menu tree Eco Mode: 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced). Eco Mode+: 100% transmission power deactivation in standby mode (top left display icon ½). Press and hold the talk key c to check that the base station can be reached. You will hear the ringing tone if the base station can be reached. Registering handsets that do not support Eco Mode+ causes the mode to be deactivated on the base and all other handsets. € Emergency numbers cannot be dialled if the keypad lock (€ page 1) is activated! Not all of the functions described in this user guide are available in all countries. 3 First steps Check the pack contents one Gigaset AS300 base station, one mains adapter, one Gigaset AS300H handset, one phone cord, two batteries, one battery cover, one user guide. If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charging cradle with mains adapter for each additional handset.

Setting up the base station and charging cradle (if included) The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C. Set up the base station at a central location on a flat, non-slip surface in your house or apartment. ☒ Please note Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (€ page 14) is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. You can also mount the base station and charging cradle on the wall. Please note: Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the base station ☒ First connect the mains adapter 1. ☒ Then connect the telephone jack 2 and insert the cables into the cable ducts. Please note: 2 1 1 The mains adapter must always be connected, as the phone will not operate without mains connection. Only use the mains adapter and phone cord supplied. Pin connections on telephone cables can vary.

4 Connecting the charging cradle (if included) 2 1 ☒ Connect the flat plug from the power supply 1. ☒ Plug the mains adapter into the plug socket 2. 2 If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. 1 Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Inserting the batteries and closing the battery cover Warning Use only the rechargeable batteries (€ page 11) recommended by Gigaset Communications GmbH.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS300 user guide](http://yourpdfguides.com/dref/3954825)
<http://yourpdfguides.com/dref/3954825>

Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. ❏ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment. + ❏ Slide the battery cover back into the main casing until it clicks into place. If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the grooved area on the top of the cover and slide down. 5 Placing the handset in the base station and registering V Put into base MENU Before you can use the phone, you must first register the handset to the base station. ❏ Place the handset with the display facing up in the base station. V Registering The handset registers automatically.

Registration can take up to 5 minutes. Do not remove the handset from the base station during this time. V INT MENU After successful registration, the idle screen is displayed. Charge status of the batteries: = e V U (flat to full) = flashes: batteries almost flat e V U flashes: charging If you have purchased a model with multiple handsets, repeat the registration process for each individual handset. Handsets are assigned the lowest available internal number (14). If more than one handset is registered to the base station, the internal handset number appears in the top left of the display, e.g. 2. If the internal numbers 14 are already assigned to other devices, number 4 will be overwritten. Please note Each key press interrupts the automatic registration.

If automatic registration does not work, the handset will have to be registered manually (¢ page 9). Only place the handset in the base station or charging cradle that is intended for it. Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. ❏ Place the handset in the base station or charging cradle for eight hours. ❏ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are fully discharged.

8h 6 Please note After the first battery charge and discharge you may replace your handset in the base station or charging cradle after every call. Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. The batteries may warm up during charging. This is not dangerous. After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. MENU Settings OK Date/Time OK Date: ~ (enter the day, month and year in 6-digit format) OK Time: ~ (enter hours and minutes in 4-digit format) OK (display message: Saved) a (press and hold to return to idle status) ¢ ¢ ¢ ¢ ¢ ¢ ¢ ¢ Please note When entering the time and date, you can move the position of an entry to the left or right by pressing the control button up or down. Display in idle status Once the phone is registered and the time set, the idle display is shown as in this example. V 11.12. INT 11:56 MENU the handset. If you place a deactivated handset in the base station or charging cradle, it will automatically activate. Activating/deactivating the handset Press and hold the end call key a to activate or deactivate Your phone is now ready for use! @@@@~ (Enter the phone number) The phone number is dialled. @@End the call/cancel dialling: Press the end call key a. @@@@During a call, use t to activate the menu for setting the handsfree volume and use u tentry already read.

@@@@Then dial or select other functions from the MENU. Copy an entry to the directory. Delete selected entry. @@@@@page 13. @@A message appears in the display. When you press the f key, all the lists are displayed. @@@@@@@@For automatic registration of handsets to page 5. @@Press and hold the c key. You can listen in to the call. All participants hear a signal tone.

To end: press the end call key a. All participants hear a signal tone. @@@@@This will also reset page 10. @@@@@If the alarm clock is set, the wake-up icon l will appear on the screen and the wake-up time will be displayed instead of the date. INT When a participant answers you can speak to them.

To end the call, press the end call key a. ¢ ~ (1...4, enter internal number of the handset), the handset is called or INT ¢ star key P, all handsets are called. Setting the wake-up time ¢ MENU OK ¢ Alarm Clock ¢ OK ¢ Wake-up time Enter the wake-up time in hours and minutes, then press OK. Internal consultation call/connecting a call You are in conversation with an external participant. Press the INT key and call one or all handsets. The external participant hears the hold music. Before the internal participant has answered, press the end call key a; the call is diverted to the participant who answers the call. After the internal participant has answered, you can talk to him. Press the end call key a; the call is diverted, or press the display key "; you are reconnected to the external participant. Phone settings For details on how to set audio settings, see Menu page 13. tree For details on how to set the system PIN on the base page 14. station, see the Menu tree ¢ ¢ Changing the display language ¢ MENU Settings OK Handset OK Language OK select the language ¢ The current language is indicated by .

¢ ¢ ¢ ¢ ¢ OK If you accidentally choose a language you do not understand: MENU Listening in to an external call You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference). Select the correct language with u and press OK. ¢ 4 2 1 (press the keys one after the other) 10 Resetting the handset You can reset individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base station will be retained. MENU Settings Reset Handset Changing pause after line seizure You can set the length of the pause inserted between pressing the talk key c and sending the phone number. MENU 4IOIO The number for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. enter number OK.

Cancel the reset with a. ¢ ¢ ¢ OK ¢ Handset ¢ OK ¢ OK ¢ ¢ ¢ Restoring the base station to the factory settings When restoring factory settings: All handsets are de-registered Individual settings are reset All lists are deleted The system PIN is reset to the original code 0000 Only the date and time are retained.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS300 user guide](http://yourpdfguides.com/dref/3954825)
<http://yourpdfguides.com/dref/3954825>

Software reset MENU Settings OK Base Reset OK pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms enter number OK. Changing the pause after the recall key MENU ϕ 4 I O 1 4 ϕ The number for the current ϕ ϕ Appendix Entering letters/characters Press the relevant key the number of times indicated. Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode.

Standard characters 1 2 I 4 5 L M N O Q 1x 2x 1) 1 ab de gh jk mn pq tu wx ., */Abc --> 123 123 --> abc ϕ ϕ ϕ Base ϕ OK Hardware reset Disconnect the power cord from the base station. Hold down the registration/paging key (ϕ page 1) on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds. Repeater mode With a repeater you can increase the range of your base station. You will need to activate repeater mode (ϕ page 14). Repeater mode and Eco mode or Eco mode+ (ϕ page 1) cancel each other out. P # 3x £ c f i l o r v y ? (# 4x \$ 2 3 4 5 6 s 8 z !) @ 5x ¥ ä ë ì ö 7 ü 9 0 < \ 6x ¤ á é í ñ ß ú ý + = & 7x 8x 9x 10x 11x 12x 13x 14x à è ì ó â ê î ð ã ç ô õ û ù ý æ ø - : ; > % \$ á ; " ' ; _ Operating the base station on the PABX The following settings are only necessary if your PABX requires them, see the user guide for your PABX. When entering the digits, enter them slowly one after the other. 1) Space Hebrew 1 2 I 4 5 L M N O Q 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x 1) Changing the dialling mode MENU ϕ 4 I O 1 1 ϕ The number for the set dial- ling mode flashes: 0 = touch tone dialling (DTMF); 1 = dial pulsing (DP) enter number ϕ ϕ OK. Setting recall MENU ϕ 4 I O 1 2 ϕ The number for the current recall flashes: 0 = 80 ms; 1 = 100 ms; 2 = 120 ms; 3 = 400 ms; 4 = 250 ms; 5 = 300 ms; 6 = 600 ms; 7 = 800 ms enter number OK. . P* # 1) Space Abc --> 123 1£\$ 12a 3d 4 5 6m 7p 8t 9 , ? ! 0 / () < # @ \ 123 --> abc ¥ b e g j n q u w + = & ¤ c f h i k l o r s v x y z - : " > % ` ; _ ϕ 11 Specifications Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 400-800 mAh We recommend the following types of battery: GP 550/700 mAh Yuasa Phone 700/800 mAh Peacebay 550/650 mAh (Valid at the time of going to press) The handset is supplied with recommended batteries. Questions and answers If you have any queries about the use of your telephone, visit our website at www.gigaset.com.

www.gigaset.com/service for 24-hour support. The table below contains a list of common problems and possible solutions. Problem Cause Solution Base station power consumption In standby mode Handset in base station Handset outside base station During a call approx. 1.3 W approx. 1.3 W approx. 1.5 W General specifications DECT standard GAP standard Range Base station power supply Environmental conditions in operation is supported is supported up to 300 m outdoors up to 50 m indoors 230 V ~/50 Hz +5°C to +45°C, 20% to 75% relative humidity Nothing The handset is not Press the end call appears in the switched on.

key a for approx. display. 5 seconds or place the handset in the base station. The batteries are Charge or replace the batteries. flat. No wireless The handset is out- Move the handset connection to side the range of closer to the base the base sta- the base station. station. The handset is not tion, Base flashes in the registered. Register the handset page 9. display. The base station is Check the mains not turned on. connector on the base page 3. station You cannot The phone cord Please always use the hear a ringer/ supplied has not phone cord supplied or dialling tone been used or has ensure that the from the fixed been replaced by a pin connections are line network. new cord with the correct when purchasing from a retailer: wrong jack con3-4 assignment of nections. telephone leads/EURO CTR37. You have entered Reset the system PIN to Error tone the wrong sounds after the default 0000 page 10. system PIN system PIN. All handsets are deprompt. registered. All settings PIN forgotten.

are reset. All lists are deleted. ϕ ϕ 12 Customer Service & Assistance You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal www.gigaset.com/service In our constantly updated online service you can find: Extensive information about our products FAQ compilations Keyword search to help find topics quickly Compatibility database: Find out which base stations and handsets can be combined. Product comparison: Compare the features of several products with each other. Downloads for user manuals and current software updates E-mail contact form for customer service Our service representatives are available on the telephone for more advanced questions or in-person consultation. Service hotline Israel Newpan LTD 1-700-700-727 Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed.

If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. Authorisation This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the declaration of conformity is available at this Internet address: www.gigaset.com/docs 13 Menu tree Your phone has an extensive range of features. These are offered in the form of menus. To select a function while the phone is in idle status, press MENU (open menu), use the t and v keys to scroll to the function you require and press OK to confirm.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS300 user guide](http://yourpdfguides.com/dref/3954825)
<http://yourpdfguides.com/dref/3954825>

1 Alarm Clock Activating/deactivating the alarm clock Input format: HHMM To return to idle status: press and hold the a key. @@@@@Netw. @@The network mailbox list can be displayed if your network provider supports this function and if key 1 has been assigned with the network mailbox. 3 Voice Mail 3-1-1 Netw. Mailbx 3-1 Set Key 1 (all devices) 14 4 Settings Enter date (DDMMYY format), then time (HHMM format) 4-2-1 Language 4-2-2 Auto Answer 4-2-3 Register HS 4-2-4 Reset Handset 4-3 Base 4-3-2 Call list type Set the display language 4-1 Date/Time 4-2 Handset ç page 9 ç page 9 ç page 8 ç page 8 Automatically activate/deactivate auto answer Manually register the handset Reset the handset ç page 7 ç page 10 4-3-2-1 Missed Calls 4-3-2-2 All Calls 4-3-3 System PIN 4-3-4 Base Reset 4-3-5 Additional Change system PIN (default is 0000) Restore factory settings 4-3-5-1 Repeater 4-3-6 Listening in 4-3-7 Preselection ç page 10 ç page 2 4-3-5-3 Eco Mode activate/deactivate ç page 2 Activate/deactivate the function ç page 9 activate/deactivate 4-3-5-2 Eco Mode+ activate/deactivate 4-3-7-1 Presel. Number Network provider dialling code, should be inserted automatically before the dialled phone number. First digits of the dialling codes, should be dialled with preselection. First digits of dialling codes, should be dialled without preselection. 4-3-7-2 With Preselect 4-3-7-3 Without Presel ç page 10 .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET AS300 user guide](http://yourpdfguides.com/dref/3954825)
<http://yourpdfguides.com/dref/3954825>