



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C1. You'll find the answers to all your questions on the SIEMENS GIGASET C1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SIEMENS GIGASET C1 User guide SIEMENS GIGASET C1 Operating instructions SIEMENS GIGASET C1 Instructions for use SIEMENS GIGASET C1 Instruction manual SIEMENS GIGASET C1

### Gigaset

**EN** Dear Customer,  
Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.  
We hope you enjoy your Gigaset.

**DE** Sehr geehrte Kunden, sehr geehrter Kunde,  
die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.  
Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.

**FR** Chère Cliente, Cher Client,  
la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.  
Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.

**IT** Gentile cliente,  
la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.

**NL** Geachte klant,  
Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.  
Wij wensen u veel plezier met uw Gigaset.

**ES** Estimado cliente,  
la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.  
Le deseamos que disfrute con su Gigaset.

**PT** Scaos clientes,  
Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.  
Desejamos que tenha bons momentos com o seu Gigaset.

Issued by  
Gigaset Communications GmbH  
Schlierhofer Str. 10-12 99630 Buchhof  
Gigaset Communications GmbH is a trademark  
licensee of Siemens AG

**DA** Kære Kunde,  
Gigaset Communications GmbH er retlig efterfølger af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer.  
Vi håber, du får meget glæde af din Gigaset.

**FI** Arvoisa asiakkaamme,  
Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset-tuotemerkkisiä käyttöohjeissa mahdollisesti esittettyä Siemens AG:n tai SHC:n selostusta on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selostuksina.  
Toivomme teille paljon iloa Gigaset-laitteestanne.

**SV** Kära kund,  
Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.  
Vi önskar dig mycket nöje med din Gigaset.

**NO** Kjære kunde,  
Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geopdriften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.  
Vi håper du får stor glede av din Gigaset-enhet.

**EL** Αγαπητέ πελάτη,  
η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης, θεωρούνται κατά συνέπεια δηλώσεις της Gigaset Communications GmbH.  
Σας ευχόμαστε καλό άνοιξιμό με τη συσκευή σας Gigaset.

**HR** Poštovani klijentice,  
Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koja je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.  
Nadamo se da će zadovoljstvom koristiti svoj Gigaset uređaj.

**SL** Spoštovani kupci!  
Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje podjetje znanilko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo niso večje kot izjave podjetja Gigaset Communications GmbH.  
Želimo vam veliko užitek ob uporabi naprave Gigaset.

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.  
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C1 user guide](http://yourpdfguides.com/dref/3952823)  
<http://yourpdfguides.com/dref/3952823>

### Manual abstract:

Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset. „We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M" in compliance with ANNEX V of the R&TTE-Directive 99/5/EC. @@@@Talk/directory key: Top half: N Answer a call N Initiate dialling N Switch from handsfree to "earpiece" mode Bottom half: Open directory Handsfree key: N Switch from "earpiece" to handsfree mode N Lights up: Handsfree is activated N Flashes: Incoming call Message key Access to calls and messages list Key 1 Select network mailbox/ answering machine (press for approx. Current functions and display keys The display keys give you access to the functions shown in the display. End call and On/Off key N End call N Cancel function N One menu level back (short press) N Back to idle status (press for approx. 1 second) N Handset on/off (press for approx. 2 seconds) Hash key Keypad lock on/off (press for approx. 1 second) Speed dial list key Open the speed dial list (short press) Microphone Recall key Insert a dial pause (hold key down) (press for around 2 seconds) N When texting: Toggles between upper/lower case and digits Making external calls and ending a call . Internal calls, ending a call .

Muting the handset during an external call . Storing a telephone number in the speed dial list . Linking a call-by-call number with a phone number . 14 Accepting/rejecting call waiting during an internal call . Care and contact with liquid .

Only use the power supply unit supplied, as indicated on the underside of the device. fit only the recommended rechargeable batteries (page 18) of the same type! @@@@The operation of medical appliances may be affected. @@The handset may cause an intrusive 'hum' in hearing aids. Do not use the phone in environments subject to explosion hazard (e. @@Dispose of the batteries and phone in accordance with environmental regulations.

Not all of the functions described in these instructions are available in all countries. The pack contains: N one Gigaset C 1 handset, N one charging shell, N two batteries, N one power supply unit with power cord, N one set of operating instructions. N Insert the batteries ensuring correct polarity see figure on left. N Position the battery cover so that it is open by around 3 mm, then slide up until it N To open the battery cover, press on the chequered area and slide down.

Never use conventional batteries (non-rechargeable) or other battery types as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed (hazardous). When you place the C 1 handset into the C 100/C 150, C 200/C 250 or S 100/S 150 base, it will register to the base automatically. Proceed step by step as follows: 1. Wait till the handset has registered automatically to the base: This operation takes around one minute. while registration is in progress the screen displays Registering and Base 1 flashes.

The allocated internal number appears in the top left of the display after registration. 3. Now leave the handset in the charger for the batteries to charge - the batteries are supplied uncharged. For the initial charge we recommend a continuous, uninterrupted charging period of five hours, whatever charge status is indicated. After a while the charge capacity of the batteries will decrease for technical reasons. You should therefore avoid removing the batteries unnecessarily and ending the charging process prematurely. N Once initial charging is complete, you can replace your handset in the This ensures that the batteries are charged in a way that maximises their life. N The batteries heat up during charging. This is normal and not dangerous. If automatic registration is interrupted or if you wish to use your C 1 handset at a different Gigaset base (1000, 2000, 3000 or 4000 family), then you must register it manually.

Please refer to the operating instructions for the base to find out how to prepare the base for registration. You can view the display texts in different languages. The current language is checked (the default language is English). If you set the wrong language in error, press MENU M 2. Now select the correct language with s and press OK to confirm your choice.

To deactivate the handset, press the 'end call' key a again in the idle status and hold. You can lock the keys on your handset by pressing and holding the hash key R (confirmation tone; you see the Ø icon in the display) and unlock them by pressing and holding the hash key again. The keypad lock deactivates automatically when you receive a call. It re-activates when the call is finished. When the keypad lock is active, you cannot even call emergency numbers. The display keys are the horizontal rocker keys just below the display. Depending on the particular operating situation, their function changes according to whether you press the left or right side of the key. The current function is shown in the display directly above the key to which it relates. Here is a typical example The various symbols have the following meanings when the keys are pressed: Last number redial key: Open the list of the last 10 numbers you dialled. Menu key: Open the main menu when in idle status Open a status-dependent menu while making a call. scroll up / down. Move cursor left / right. Delete key: Delete input from right to left one character at a time. Press the 'end call' key a for around 1 second, or press no key: The display automatically reverts to the idle status after 2 minutes. @@@@The menu options that are available will depend on your base.

@@@@@@@@@@To do this, press S for around 2 seconds. Now enter the telephone number. @@@@ press the top half of the c key.

@@@@@@@@@@The directory makes dialling easier for you. to open the directory , press the bottom half of the h key. @@You open the speed dial list with the C key. @@@@@@@Enter the number and confirm. @@When you press and hold one of these digits, e. g. @@Enter the number and confirm.

Speed dial digits cannot be assigned more than once at a time. @@@@Then with the display keysselect the directory or speed dial list entry and press MENU to open the list. Use the key to scroll to the menu function you require. Linking a call-by-call number with a phone number This function can be used to put a network provider's prefix (which is stored in the speed dial list) in front of the telephone number ('linking'). C (open speed dial list); s MENU; Use Number OK Open the directory by pressing the bottom half of the key.

Dialling telephone numbers from the last number redial list New calls/messages are indicated by a message and the letter icon Û in the display. Press the message key f to view the corresponding list. Transferring a call to another handset You can make an internal call while an external call is in progress.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3952823)

[GIGASET C1 user guide](http://yourpdfguides.com/dref/3952823)

<http://yourpdfguides.com/dref/3952823>

Accepting/rejecting call waiting during an internal call If you get an external call while conducting an internal call, you will hear the call waiting tone (short tone). To accept the call: MENU; Accept Call Waiting OK (you speak to the outside caller).  
to reject the call: MENU; Reject Call Waiting OK (you speak to the internal caller). The rejected call waiting tone can still be heard at other handsets. You can change the settings to suit your requirements. With this function you simply lift the handset out of its charging shell when a call arrives - there is no need to press c (the default is On). You can adjust the earpiece volume on three levels (13) and the handsfree volume on five levels (15) you can even do this while an external call is in progress. There are six different volumes and ten melodies for you to choose from. To cancel the ringer for the current call, press the display key MENU and then Silent. The following advisory tones can be activated and deactivated individually (the default setting is On). N Key click: Every key press is confirmed N Acknowledge tones: Confirmation tone, Error tone, End-of-menu tone N Battery tone: The batteries must be charged. Press the 'end call' key briefly to return to the previous menu level.

You can reset settings and changes you have made. Entries in the directory, the calls list and the speed dial list and the handset's registration on the base will be retained. Earpiece volume Handsfree volume Ringer volume Ringer melody Auto answer Battery tone/Key click/Confirmation tone Display language Last number redial list 1 3 5 1 activated activated English empty page 14 page 14 page 15 page 15 page 14 page 15 page 8 page 13 Care and contact with liquid! wipe the base and handset with a damp cloth (use no solvent) or an antistatic cloth. Never use a dry cloth, this can cause static. If the handset should come into contact with liquid, on no account switch the device on. remove all batteries immediately. Allow the liquid to drain out of the device, and then pat all parts of the device dry. Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

Our online support on the Internet: [www.my-siemens.com/customer-care](http://www.my-siemens.com/customer-care) If you need any repair work, or have a guarantee claim to submit, our Service-Center Ireland 18 50 77 7 redial key. Language, see Changing display language Last number redial . 5 Preparing to use the phone .  
„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M" in compliance with ANNEX V of the R&TTE-Directive 99/5/EC.  
@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@N Om van hoofdletters naar kleine letters te gaan, drukt u vóór de invoer van de letter op P. You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:  
[www. .](http://www.)



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C1 user guide](#)  
<http://yourpdfguides.com/dref/3952823>