



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C250. You'll find the answers to all your questions on the SIEMENS GIGASET C250 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET C250 User guide SIEMENS GIGASET C250 Operating instructions SIEMENS GIGASET C250 Instructions for use SIEMENS GIGASET C250 Instruction manual SIEMENS GIGASET C250

Gigaset

<p>EN Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p>DE Sehr geehrte Kundin, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p>FR Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p>IT Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p>NL Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p>ES Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p>PT Scares clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Qualquer declaração por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.</p> <p>Issued by Gigaset Communications GmbH Schlierhofer Str. 10-1099 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG</p>	<p>DA Kære Kunde, Gigaset Communications GmbH er retlig arvtager af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p>FI Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivotamme teille paljon iloa Gigaset-laitteestanne.</p> <p>SV Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p>NO Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-gjeførlene i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p>EL Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης, θεωρούνται κατά συνέπεια δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλό άνοιξιμο με τη μονάδα της Gigaset.</p> <p>HR Poštovani klijentice, Gigaset Communications GmbH pravni je nasljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koja je nastavila Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p>SL Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p> <p>© Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com</p>
--	--



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)
<http://yourpdfguides.com/dref/3955139>

Manual abstract:

@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset. Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset.

Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset. SCAROS clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset. DA Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoii puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaisissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset. Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Zelimo vam veliko užitkov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved.

Subject to availability. Rights of modifications reserved. www.gigaset.com CS Vázení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále pejala segment produkt Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je teba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.

Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápa ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní. Stimata client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul su, a continuat activitatea companiei Gigaset a Siemens AG.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)
<http://yourpdfguides.com/dref/3955139>

Orice afirmatii efectuate de Siemens AG sau SHC i incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperm ca produsele Gigaset s fie la înlinea dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Siemens AG. , Siemens AG SHC, , Gigaset Communications GmbH.

Gigaset. Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, meglelégedéssel használja Gigaset készülékét.

PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobierc prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przešla segment produktów Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, które mona znale w instrukcjach obsługi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktów Gigaset. Sayin Müterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunun ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmi bildiriler olarak algılanmalidir. Gigaset'ten memnun kalmanızı ümit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) , , Gigaset Siemens AG.

, Siemens AG SHC , Gigaset Communications GmbH. , Gigaset . TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG © Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com s Be inspired The handset at a glance The handset at a glance Talk/Handsfree key: Top half: N Answer a call N Initiate dialling N Switch from handsfree to "earpiece" mode Bottom half: N Switch from "earpiece" to handsfree mode N Lights up: Handsfree is activated N Flashes: Incoming call Display (display screen) Charge status = flat U fully charged = flashes: battery is almost flat or is charging Current functions and display keys The display keys give you access to the functions shown in the display. End call and On/Off key N End call N Cancel function N One menu level back (press briefly) N Back to idle status (press for approx. 1 second) N Handset on/off (press for approx. 2 seconds) Hash key Keypad lock on/off (press for approx. 1 second) Speed dial list key Open speed dial list (press briefly) Microphone Recall key Insert a dial pause (hold key down) U Ú v MENU Message key text messages, network mailbox, calls list/ answering machine (C 250 only) N Flashes: new SMS, messages, calls Open directory Key 1 Select answering machine (C 250 only)/network mailbox (press for approx. 2 seconds) Star key N Ringer on/off (press for N Accesses the lists of approx. 2 seconds) N When texting: Toggles between upper/lower case and digits 1 Table of Contents Table of Contents The handset at a glance

. 1 Safety precautions

. 6 Preparing to use your phone

. 7 Installing the base

. . 7 Connecting the base

. . . 8 Preparing to use the handset

. . . 9 Attaching the belt clip

.....
.....
.....
.....

..... 11 Activating/deactivating the handset ...

.....
.....
.....

.....
.....

11 Activating/deactivating the keypad lock

.....
.....
.....

11 Operating the telephone, menu guidance 12 Keys

.....
.....
.....

..... Operating the answering machine from the handset ..

.....
.....
.....

.. Recording memos

.....
.....
.....
.....

.... Operating the answering machine with voice prompts .

.....
.....

..... Operating the answering machine while you are away from home (remote operation) ...

.....
.....
.....

.....
.....
.....

..... 58 59 64 66 67 Setting the Answering Machine of the C 250 Base ..

.....
.....
.....
.....

..... 69 Ring delay and charge saving function for remote operation

.....
.....

... Setting the recording time and recording quality

.....
.....
.....

. Activating/deactivating call screening

.....
.....

.....
.....	<i>Resetting fast access on the answering machine . .</i>
.....
.....
.....
.....	<i>69 70 70 71 Using the network mailbox</i>
.....
.....	<i>72 Configuring the network mailbox for fast access .</i>
.....
.....
.....	<i>72 Viewing a message from the network mailbox . . .</i>
.....
.....
.....	<i>72 Registering and de-registering handsets . . .</i>
.....	<i>73 Automatic registration: Gigaset C 2 on Gigaset C 200 or C 250 .</i>
.....
.....	<i>Manual registration: Gigaset C 2 on Gigaset C 200 or C 250</i>
.....
.....	<i>Manual registration: Gigaset 1000 to 4000 and other handsets with GAP functionality</i>
.....
.....	<i>De-registering handsets .</i>
.....
.....
.....
.....	<i>Paging a handset</i>
.....
.....
.....
.....	<i>Changing the base .</i>
.....
.....
.....
.....	<i>73 74 75 75 75 76 3 Table of Contents Using several handsets</i>
.....
.....
.....	<i>77 Internal calls, ending a call</i>
.....
.....
.....
.....	<i>Changing the name of a handset . .</i>
.....

.....
.....
.....
..... *Changing a handset's internal number . .*

.....
.....
.....
.....
.....
..... *Internal consultation calls*

.....
.....
.....
.....
.....
..... *Accepting/rejecting call waiting during an internal call*

.....
.....
.....
.....
.....
..... *Listening in to an external call . .*

.....
.....
.....
.....
.....
..... *Call Director (calling a specific handset) (C 250 only) .*



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)
<http://yourpdfguides.com/dref/3955139>

.....
.....
.....
Using a handset as a room monitor

.....
.....
.....
..... *Setting the Walk and Talk mode* .

.....
.....
.....
.....
.....
.....
.....
77 77 78 79 79 80 81 83 85 Handset settings

.....
.....
.....
.....
.....
.....
.....
..... *87 Changing the display language* ...

.....
.....
.....
.....
.....
.....
.....
..... *Activate/deactivate Auto Answer* .

.....
.....
.....
.....
.....
.....
.....
..... *Adjusting the loudspeaker volume* .

.....
.....
.....
.....
.....
.....
.....
..... *Changing the ringer tone* ..

.....
.....
.....
.....
.....
.....
.....
..... *Activating/deactivating advisory tones*

.....
.....
.....
.....
.....
.....
.....
..... *Restoring the handset factory settings*

.....
.....
.....
.....
.....
.....
.....
..... *87 87 88 89 92 93 Setting the base* ...

.... 94 Protecting the telephone from unauthorised access

.....
.....
.....

Changing the loudspeaker volume of the base (C 250 only)

.....
.....

.... Changing the ringer volume and the ringer melody (C 250 only) .

.....

.... Activating/cancelling the key click on the base: (C 250 only)

.....
.....

... Repeater support

.....
.....
.....

.....
.....

. Restoring the base factory settings

.....
.....
.....
.....

..... 94 95 96 96 97 97 Connecting the base to a PABX

.....

99 Dialling modes and recall

.....
.....
.....

..... 99 Setting pauses ...

.....
.....
.....

.....
.....

. 100 Switching temporarily to tone dialling (DTMF)

.....
.....

100 4 Table of Contents Appendix

.....
.....

.. 101 Care

.....
.....
.....

.....
.....

.....
.... *Contact with liquid*

.....
.....
.....
.....

.....
.... *Questions and Answers* .

.....
.....
.....
.....
.....

. *Service (Customer Care)*

.....
.....
.....

.....
.....
.. *Specifications* ...

.....
.....
.....
.....

.....
. *Answering machine remote operation (C 250 only)*

.....
.....

..... *Character set chart*

.....
.....
.....
.....

..... *Predictive text*

.....
.....
.....
.....

.....
.... *101 101 101 103 105 107 107 108 Accessories* .

.....
.....
.....

.... *110 Menu Tree* .

.....
.....
.....
.....

112 Main menu

. 112 Directory key and speed dial list key

. . . 116 Calls List/Answering Machine List (C 250 only)

. 116 Index

. 117 5 Safety precautions Safety precautions \$! Only use the power supply unit supplied, as indicated on the underside of the device. Fit only the recommended rechargeable batteries (page 105) of the same type! Use no other types of batteries or non-rechargeable batteries, as they could damage health and cause personal injury. < OE Ensure correct polarity when fitting rechargeable batteries, and use the battery type according to these instructions (you will see polarity symbols in the handset's battery compartments). The operation of medical appliances may be affected.

Be aware of the technical conditions within the particular environment (e.g. doctor's practice). The handset may cause an intrusive 'hum' in hearing aids. Do not install the base in bathrooms or shower rooms (page 101). The handset and base are not watertight. Drivers must not use their phones while driving (Walk and Talk function). Switch off your phone while on board an aircraft (Walk and Talk function) and ensure that it cannot be switched on again accidentally. Do not use the phone in environments subject to explosion hazard (e.g.

auto paint shops). Ensure that your Gigaset is accompanied by these instructions when you give it to others to use. Dispose of the batteries and phone in accordance with environmental regulations. i 6 Not all of the functions described in these instructions are available in all countries. Preparing to use your phone Preparing to use your phone The pack contains: N one Gigaset C 200 or C 250 base, N one Gigaset C 2 handset, N one power supply unit with power cord, N one telephone cord, N one belt clip for the handset, N two batteries, N one set of operating instructions.

Installing the base Hints on installing The base is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C. Install the base at a central location in your home, e.g. in the hall. N Never expose the telephone to heat sources, direct sunlight, other W Range electrical appliances. vapours. N Protect your Gigaset from moisture, dust, corrosive liquids and The base has a range of approx. 300 m outdoors and up to 50 m indoors. 7

Preparing to use your phone Connecting the base Phone outlet Cable recess Underside of base (enlarged view) 1. Phone jack with phone cord N Fit the small jack on the phone cord into the socket in the base (it clips into place), N Place cord in cable recess, N Fit phone jack into phone outlet. 1. Outlet Cable recess Underside of base (enlarged view) 2. Power supply unit 230 V with power cord N Insert the small jack on the power cord into the socket on the underside of the base, N Place cord in cable recess, N Plug the power supply unit into your power outlet. Internal phone jack connections: 3 2 1 4 5 6 1 2 3 4 5 6 unassigned unassigned a b unassigned unassigned 2. N Keep the power supply unit plugged in at all times to ensure your i 8 phone is ready for use whenever you need it.

N If ever you purchase a phone cord from a store, ensure that the phone conductors are correctly connected (3-4 connection). Preparing to use your phone Preparing to use the handset Removing protective film The display is protected by a plastic film. Remove the protective plastic film! Inserting the batteries N Insert the batteries ensuring correct polarity see figure on left. N Position the battery cover so that it is open by around 3 mm, then slide up until it closes with a click, N To open the battery cover, press on the chequered area and slide down. W Use only the rechargeable batteries recommended by Siemens on page 105! Never use conventional batteries (non-rechargeable) or other battery types as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed (hazardous). The phone could also malfunction or be damaged. 9 Preparing to use your phone Placing the handset into the base and charging the batteries When you place the handset into the base, the handset will register automatically to the base. Proceed step by step as follows: 1. Place the handset in the base with the display up.

2. Wait till the handset has registered automatically to the base (page 73): This operation takes around one minute. While registration is in progress the screen displays Registering and Base 1 flashes.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955139)

[GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)

<http://yourpdfguides.com/dref/3955139>

After registration, you will see a '1' in the top left of the display - this means that the handset has been assigned the first internal number. You can change the handset name (page 77).

3. Now leave the handset in the base for the batteries to charge the batteries are supplied uncharged. Battery charging is indicated in the top right of the display by the flashing battery icon = : = e Batteries flat Batteries 1/3 charged V U Batteries 2/3 charged Batt. fully charged Should automatic registration be interrupted, register the handset manually as described starting on page 74. You can get help from a table containing basic questions and answers (page 101).

i To register additional handsets, refer to page 74. W For the initial charge we recommend a continuous, uninterrupted charging period of five hours, whatever charge status is indicated. After a while the charge capacity of the batteries will decrease for technical reasons. The battery charging status is correctly displayed only after uninterrupted charging/ discharging. You should therefore avoid removing the batteries unnecessarily and ending the charging process prematurely. N Once initial charging is complete, you can replace your handset in the i Note base after each call. Charging is controlled electronically. This ensures that the batteries are charged in a way that maximises their life. N The batteries heat up during charging. This is normal and not dangerous.

Your telephone is now ready for use. With the Gigaset C 250, the answering machine with pre-recorded announcement is also activated. To correctly record the time of calls and, if applicable, messages (C 250 only) you must now set the date and time (page 15). 10 Preparing to use your phone Attaching the belt clip Push the belt clip onto the back of the handset until the lugs click into the recesses on either side of the handset. Activating/deactivating the handset To activate the handset press the 'end call' key a and hold. You will hear a confirmation tone (rising tone sequence). To deactivate the handset, press the 'end call' key a again in the idle status and hold (confirmation tone). i The handset activates automatically when placed in the base or charger.

Activating/deactivating the keypad lock You can 'lock' the keys on your handset, e.g.

when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation. Press the hash key and hold (confirmation tone). The Ø icon appears in the display. To deactivate the keypad lock, press the hash key R again and hold (confirmation tone).

N The keypad lock deactivates automatically when you receive a call. It i re-activates when the call is finished. bers. N When the keypad lock is active, you cannot even call emergency num- 11 Operating the telephone, menu guidance Operating the telephone, menu guidance Keys Talk/Handsfree key The Talk/Handsfree key d is a rocker key with two functions. You press the top half of the key to initiate a call.

When you press the bottom half you initiate a call and the handsfree function activates automatically. Rocker key: Top half of the key = Talk key Bottom half of the key = Handsfree key Display keys The display keys are the horizontal rocker keys just below the display. Depending on the particular operating situation, their function changes according to whether you press the left or right side of the key. The current function is shown in the display directly above the key to which it relates. Example Ū u v MENU Display keys The various functions are explained below: Display icon [_____] · [_____] INT [_____] OK [_____] MENU Meaning when key is pressed Last number redial key: Open the list of the last 10 numbers you dialled. INT key: Open the list of handsets when in idle status. OK key: Confirm menu function or confirm an input and store. Menu key: Open the main menu when in idle status Open a status-dependent menu while making a call. Scroll up/down. Move cursor left/right.

Access to wake-up function. Delete key: Delete input from right to left one character at a time. ¼ [_____] Ū 12 Operating the telephone, menu guidance Correcting wrong inputs After a correct input you will hear a confirmation tone (rising tone sequence), an incorrect input is indicated by an error tone (falling tone sequence). You can repeat the input. If you have entered incorrect characters in the text, you can correct them as follows: Deleting characters to the left of the cursor with Ū To correct a telephone number or text, use the display keys uv to move the cursor to the right of the incorrect character. Now press the display key Ū. The character is deleted. Now enter the correct character. Inserting characters on the right of the cursor If you have omitted a character, use the display keys uv to go to the place where you want to insert the character, and key it in. Idle status Display in idle status Gigaset C 200 1 INT P 12:50 12.

04.03 V MENU ¼ Time and date are already set or Gigaset C 250 1 INT P 12:50 12.04.03 × V MENU Time and date are already set ¼ Reverting to idle status from anywhere in the menu N Press the 'end call' key a for around 1 second, or N Press no key: The display automatically reverts to the idle status after 2 minutes. Changes which you have not confirmed/stored by pressing OK will be rejected.

13 Operating the telephone, menu guidance Menu operation, with 'Setting Handsfree Volume' as an example 1. MENU 2. s 3. OK 4. s 5.

OK 7. OK Press the display key. The menu opens. Press the display key repeatedly until Audio Settings appears on the screen. Confirm with the display key. Press the display key repeatedly until Handsfree Volume appears on the screen. Confirm with the display key. 6. u v Press the left or right display key to select the required volume (15). Now press the display key to confirm the setting.

8. a Press and hold the 'end call' key to return to the idle status. 14 Date and Time Date and Time Setting the date and the time Correct date and time settings are essential if you want to know exactly when calls/messages (C 250) were received. [_____] MENU [_____] [_____] Calender/Clock [_____] OK [_____] [_____] Date/Time [_____] OK [_____] OK Open the menu. Select the menu item and confirm. Select the menu item and confirm. Enter the date: Enter the day/month/year and confirm. Example: For 20.05.2003, enter 200520. Enter the time: [_____] OK Enter hours/minutes and confirm. Example: For 9.35, enter 0935. Only when the 12-hour display is selected: Select a.m. or p.m. and confirm. Long press (back to idle status).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955139)

[GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)

<http://yourpdfguides.com/dref/3955139>

[] [] OK ¼ appears on the bottom line of the display.

Changing the time mode You can choose between the 12 hour and the 24 hour display (factory setting) for the time (a.m. = 1st half of the day; p.m. = 2nd half of the day). [] MENU [] [] Calender/Clock [] OK [] [] Time Mode [] OK Open the menu. Select the menu item and confirm. Select the menu item and confirm. either ..

[] [] 24 hour [] OK Select the menu item and confirm (= On). or ... [] 12 hour OK Confirm (= On). Long press (back to idle status). 15 Date and Time Setting the alarm clock You can use your handset as an alarm clock. Precondition: You have set the date and time (page 15) . Activating/deactivating the alarm clock and setting the wake-up time either .

.. [] ¼ [] Alarm Clock OK [] OK Activate the alarm clock: Press the display key. Confirm (= On). Set the wake-up time: Enter hours/minutes and confirm. Example: For 7.15, enter QM15. The top line of the screen displays the alarm clock icon ¼. When the 12-hour display is selected: Select a.m. or p.m. and confirm (= On), e.g. am. Deactivate the alarm clock: Press the display key. Confirm (disappears). Long press (back to idle status). N A wake-up call only sounds when the handset is in the idle status and [] [] am [] OK or ..

[] ¼ [] Alarm Clock OK i the room monitor function is not activated. N To find out how to set the wake-up volume and melody, turn to page 89. N When you deactivate the alarm clock the ¼ icon will only go out if there is no active appointment. 16 Date and Time Cancelling a wake-up call A wake-up call sounds on the handset with its selected ringer melody, and Alarm Clock appears in the display. Press any key to cancel the wake-up call. The alarm clock is still switched on. Setting an appointment You can use your handset to remind yourself of an appointment. You do this by setting the time of the appointment. Activating/deactivating the appointment function [] MENU [] [] Calender/Clock [] OK [] Set Appointment OK [] OK [] OK Open the menu. Select the menu item and confirm. Confirm (= On). Confirm again if an appointment is activated. Enter the date: Enter the day/month and confirm. Example: For 20.

05. enter 2QQ5. Enter the time: Enter hours/minutes and confirm. Example: For 9:05 enter QOQ5. Name the appointment: Enter a name (up to 16 characters) and confirm (for inputting text see page 107).

Delete an existing appointment. Long press (back to idle status). The top line displays the alarm clock icon ¼. [] OK [] OK N If you do not give the appointment a name, its date and time will i appear in the display when it is due. N To find out how to set the wake-up volume and melody, turn to page 89. N If you are using the 12 hour clock, select a.m. or p.m. with s and press OK to confirm.

N The handset will only display an appointment when it is in the idle status. An appointment is not displayed when the room monitor is active or while a phone call is in progress. 17 Date and Time Deactivating an appointment call An appointment call sounds with its selected ringer melody (page 89). [] OK Press the display key. The alarm clock icon ¼ disappears when the alarm clock is not activated. Cancelling an appointment [] MENU [] Calender/Clock [] OK [] Set Appointment OK Open the menu. Select the menu item and confirm. Confirm (disappears). Viewing an appointment you have not kept If the handset reminds you of an appointment but you do not keep it, a message appears in the display together with the name of the appointment. If you did not name the appointment, its date and time are displayed. Press any key to cancel the message. 18 Making calls Making external calls and ending a call External calls are calls into the public telephone network. Enter the number and press the Talk/Handsfree key. The number is dialled. End the call: Press the end call key. i N You can also press the Talk/Handsfree key c first (you hear the dialling tone) and then enter the number. N You can use the end call key a to cancel the dialling operation. Inserting a dialling pause You can insert a dialling pause between the prefix and the actual telephone number. To do this, press S for around 2 seconds. Now enter the telephone number. i To call another handset, see the description on page 77. Answering a call Your handset rings, the call is displayed on the screen and the handsfree key d flashes. Press c to answer the call. If the handset is in the base/charger and the Auto Answer function is activated (page 87), then you just need to lift the handset out of the base/ charger to take the call. i If the ringer is intrusive, press P for around 1 second. You can take the call so long as it is displayed on the screen. 19 Making calls Calling Line Identification When you get a call, you will see the caller's number and/or name displayed on the screen. Preconditions: 1. You have asked your network provider for the caller's number (CLIP) or name (CNIP) to be displayed on your handset screen. 2. The caller has asked the network provider for his number to be identified (CLI). 3. Your network provider supports CLIP, CLI and CNIP. CLIP CNIP CLI Calling Line Identification Presentation Calling Name Identification Presentation Calling Line Identification Screen display with CLIP/CLI With calling line identification, the caller's telephone number is displayed on the handset screen. If you have stored an entry for this number in your directory, then that entry will be displayed instead of the number, e.g. 'Anna'. Å 1234567890 MENU The screen displays External Call if the number is not identified. The screen displays Withheld if the caller withholds his number, (page 24) or Unavailable if he has not requested CLI. Ringer symbol Telephone number or 'Anna' Screen display with CNIP If you have CNIP, then the name (town) that is registered with your network provider for the calling number will also be displayed on your handset.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)
<http://yourpdfguides.com/dref/3955139>

Anna Lechner, Berlin 1234567890 MENU Name and town Number The screen displays External Call if the number is not identified. The screen displays Withheld if the caller withholds his number, (page 24) or Unavailable if he has not requested CLI. i You may have to pay a charge to use calling line identification. Please ask your network provider for details. 20 Making calls Handsfree Activating/deactivating handsfree Activate while dialling: Enter the telephone number and press the top half of the key.

Activate during a call: Press the bottom half of the key. Deactivate handsfree: Press the top half of the key. As soon as you terminate the handsfree mode you switch to 'earpiece mode' and continue the call on the handset. N If you wish to place the handset in the base during a call you must i press the bottom half of the d key and hold it down while you position the handset in the base. N You should inform your caller that you intend to use the handsfree function before you activate it.

Adjusting the volume while in handsfree mode A call is in progress and handsfree is activated. Press the bottom half of the key again. [] [] [] OK Decrease or increase the volume. Now press the display key to store the setting. 21 Making calls Activating/deactivating open listening (call screening at the base) (C 250 only) You can activate the built-in base loudspeaker to allow other people in the room to hear what your external caller is saying. Precondition: A call in is progress. [] MENU Press the display key to open the menu. Activate open listening: Select the menu item and confirm. Deactivate open listening: Confirm. Long press (back to idle status).

N You should inform your caller that you intend to use the open listen- either ... []

[] Open Listening On [] OK or ...

[] Open Listening Off OK i ing function before you activate it. N

You can adjust the volume on the base with the δ and ñ keys (page 96). Handset muting You can mute your handset during external calls, e.g. if you wish to talk confidentially to another person in the room. The external caller cannot hear your conversation during this time (hold melody). You do not hear your caller either. [] INT [] MENU []

[] *****Back***** [] OK Open list of handsets. The call is 'held' (wait melody).

Cancel muting: Press the display key to open the menu. Select and confirm, or press the end call key a. 22 Using the directory and other lists Using the directory and other lists Directory and speed dial list You can store up to 100 numbers in the directory and the speed dial list (depending on the size of individual entries). The directory makes dialling easier for you. You open the directory with the h key.

You can mark any directory entry as 'VIP'. The speed dial list is a special directory in which you can store particularly important numbers such as private telephone numbers and prefixes of network providers (so-called 'call-by-call numbers'). You open the speed dial list with the C key. You create the directory and speed dial list for your individual handset. You can send the lists/individual entries to the other handsets if you want them to be available at other handsets as well (page 28). The speed dial list is operated in just the same way as the directory, except for the way in which entries are stored. N The EATONI predictive text helps you input names (page 108, this feature is deactivated when you purchase your phone). i N Please refer to the Character Set Chart (page 107) to see how to enter text correctly. name. N You can enter up to 32 digits for a number and up to 16 letters for a N Turn to page 19 for instructions on how to insert a dialling pause.

Storing a telephone number in the directory Open the directory. [] MENU

[] [] New Entry OK [] OK [] MENU

[] [] Save Entry OK Press the display key to open the menu. Confirm.

Enter the number and confirm. Enter the name and press the display key. Confirm. The entry is stored. Long press (back to idle status). i If your phone is connected to a PABX you may have to enter the access code (outside line code) as the first digit of your directory entry (refer to the operating instructions of your PABX). 23 Using the directory and other lists Storing a telephone number in the speed dial list You can assign a digit (0, 29) to up to nine entries on your speed dial list.

When you press and hold one of these digits, e.g. '3', and press the top half of the d key you are immediately connected to the telephone number that is assigned '3'. Open the speed dial list. [] MENU [] [] New Entry OK [] OK [] MENU [] [] Save Entry OK [] MENU [] [] Shortcut [] OK [] [] Shortcut: 2 [] OK Press the display key to open the menu.

Confirm. Enter the number and confirm. Enter the name and press the display key. Confirm. The entry is stored.

Press the display key to open the menu. Select the menu item and confirm. Select the digit and confirm. Long press (back to idle status). i Speed dial digits cannot be assigned more than once at a time. Dialling with the directory/speed dial list or Open the directory or speed dial list Scroll to the entry: Select entry. Press the key. The number is dialled. either ..

. or ... Enter the first letter: Enter the first letter of the name you require. Press the key. The number is dialled. 24 Using the directory and other lists Editing an entry in the directory/speed dial list or Open the directory or speed dial list. Select the entry and press the display key. Select the menu item and confirm.

Change the number and confirm. Edit the name. Press the display key to open the menu. Confirm. The entry is stored.

Long press (back to idle status). [] [] MENU []

[] Edit Entry [] OK [] OK [] MENU

[] [] Save Entry OK Copying and editing a directory entry So that you do not have to enter a similar entry twice, you can create a copy and then edit that entry.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955139)

[GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)

<http://yourpdfguides.com/dref/3955139>

Open the directory. [_____] [_____] MENU [_____] [_____]
 Copy and Edit [_____] OK Select the entry and press the display key. Select the menu item and confirm.
 either ... [_____] OK Change the number and confirm. Edit the name and confirm. Press the display key to open the menu. Confirm. The entry is stored. If
 you only edit the name, you will see a message telling you that the number already exists. Press the display key to confirm the prompt.

Long press (back to idle status). or ... [_____] OK [_____] MENU
 [_____] [_____] Save Entry OK ... then [_____] OK i The 'VIP' setting and
 the voice patterns (C 250 only) are not copied. 25 Using the directory and other lists Marking a directory entry as VIP You can mark directory entries of
 callers who are particularly important to you as 'VIP' (Very Important Person). You can also assign a particular melody to VIP numbers.
 You can then tell who is calling you from the ringer melody. The VIP melody sounds after the first ring tone. Precondition: Calling Line Identification is
 activated (page 20). Open the directory. [_____] [_____] MENU [_____]
 [_____] VIP Entry [_____] OK [_____] [_____] OK Select the entry
 and press the display key.
 Select the menu item and confirm (= On). You hear the current melody. Select a melody (110) (page 89) and confirm. The number ends with 'VIP'. Long press
 (back to idle status).

Deleting a single entry or directory/speed dial list or Open the directory or speed dial list. Select the entry and press the display key. Delete a single entry:
 Select the menu item and confirm. Delete the entire directory/speed dial list: Select the menu item and confirm. Press the display key to confirm the prompt.
 Long press (back to idle status). [_____] [_____] MENU either ... [_____]
 [_____] Delete Entry [_____] OK or .

.. [_____] [_____] Delete List [_____] OK [_____] OK ... then 26 Using
 the directory and other lists Adding a displayed telephone number to the directory When a telephone number appears in the display (CLIP) you can add it to
 your directory. This can be done while dialling from the last number redial list, from the calls list/ answering machine list (C 250 only) or during a call.
 [_____] MENU [_____] [_____] Copy to Directory [_____] OK
 [_____] OK [_____] MENU [_____] [_____] Save Entry OK
 Press the display key to open the menu. Select the menu item and confirm. Confirm the telephone number.
 Enter a name if required. Press the display key to open the menu. Confirm. The entry is stored. Long press (back to idle status).

i If you have CNIP (page 20) as well as CLIP, then the name that goes with the telephone number will also be displayed (up to 16 characters long). Picking a
 phone number from the directory/speed dial list If you are prompted to enter an external telephone number while you are operating your telephone, you can
 use the directory to do this. Precondition: The input field for external telephone numbers is displayed. or Open the directory or speed dial list. Select the entry
 and confirm.
 [_____] [_____] OK The telephone number is added to the entry field. 27 Using the directory and other lists Sending a single entry or complete
 list to a handset You can send single entries or the complete list to another handset that is registered on the same base. This saves you the need to make
 double entries. VIP settings and speed dial (shortcut) digits are not sent. or Open the directory or speed dial list. Select the entry and press the display key.
 Send a single entry: Select the menu item and confirm. Send complete list: Select the menu item and confirm. [_____] [_____] MENU either
 ..

. [_____] [_____] Send Entry [_____] OK or ... [_____]
 [_____] Send List [_____] OK ... then [_____]
 [_____] INT 2 [_____] OK Select the handset to which you wish to send the entry
 or list and confirm, e.g. handset 2.

Your selections are sent to that handset. Long press (back to idle status). After an entry has been sent you are asked if you want to send another entry. If you
 confirm with the display key OK you can select more entries to send; once you have finishing sending, press the 'end call' key a. The successful transfer of
 data is confirmed with a message and with the confirmation tone at the receiving handset.

Existing entries in the receiving handset are retained. Entries with identical numbers or names are not overwritten. The number of entries that are stored in
 the receiving handset may therefore differ from the number of entries that you have sent to it. The transfer is cancelled if the phone rings and you take the call
 or if the memory of the receiving handset is full. The last entry to be transferred appears in the display.

28 Using the directory and other lists Directory with voice-activated dialling (C 250 only) With voice-activated dialling, you dial simply by speaking the name
 of the person you wish to call. You must record your voice pattern, i.e. you speak the name and store it. The name which you speak is stored in the telephone.
 Up to four users can record a voice pattern for an entry. Before a user records a voice pattern therefore, he must first 'identify' himself, e.g. as User 2. A
 maximum of 20 voice patterns can be stored for directory entries.

If a voice pattern is stored for an entry in the directory with voice-activated dialling, then that entry is marked . Switching between the normal directory and
 the directory with voiceactivated dialling (C 250 only). Open the directory. Press the directory key again to open the directory with voice-activated dialling.
 To return from the directory with voice-activated dialling to the normal directory, press the directory key h once more. 29 Using the directory and other lists
 Recording a voice pattern for an existing entry (C 250 only) Record your voice pattern in quiet surroundings.. Step 1: Open the directory with voice-activated
 dialling: Press the directory key twice. [_____] OK [_____] [_____] User 2
 [_____] OK Confirm. Select and confirm, e.

g. User 2. Step 2: Select entry for voice-activated dialling: Select an entry which has no recorded voice pattern.



You're reading an excerpt. [Click here to read official SIEMENS GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)
<http://yourpdfguides.com/dref/3955139>

Step 3: Begin recording: [] MENU [] [] Record
Word OK [] OK Press the display key to open the menu. Confirm.

The name appears in the display. Confirm the display prompt. The loudspeaker activates. You hear the ready tone (a short tone). Now speak the name. After the second prompt in the display you hear the ready tone again. Speak the name again. Your recording is stored automatically. Long press (back to idle status). i To change the user name, select the user as described on page 67. 30 Using the directory and other lists Recording a voice pattern for a new entry (C 250 only) Press the directory key twice. [] OK []

[] User 2 [] OK [] MENU
[] [] New Entry OK [] OK [] OK Confirm. Select and confirm, e.g. User 2.

Press the display key to open the menu. Confirm. Enter the number and confirm. Enter name and confirm (for text input see page 107). To record the voice pattern, continue as described in the previous section in 'Step 3: Begin recording'. N If your two recordings are too different from each other, you will be prompted to repeat them. N A message tells you if your speech pattern is too much like another user's. Clear this message by pressing a, return to the start of the recording procedure and repeat the recording. Using voice-activated dialling (C 250 only) Press the top half of the key and hold. The display prompts you to speak.

After you hear the ready tone, speak the name, e.g. Anna. If the name matches the recorded voice pattern, it is repeated. The telephone number is dialled.

31 Using the directory and other lists Phone announces the caller's name (C 250 only) When you receive an external call, you hear the ringer and the telephone announces the caller's name. Preconditions: Calling Line Identification is active (page 20) and you have recorded a voice pattern for the incoming number (page 30). Activating/deactivating the name announcement [] MENU []

[] Base Settings [] OK []

[] Additional Features [] OK []

[] Name Announcement [] OK Press the display key to open the menu.

Select the menu item and confirm. Select the menu item and confirm.

Select the menu item and confirm (= On). Playing or deleting voice patterns (C 250 only) You can play a particular user's voice pattern for an entry, or you can delete it. This does not affect the voice patterns of the other users. Open the directory with voice-activated dialling and select the entry (see Step 1 and Step 2, page 30). Now: [] MENU Press the display key to open the menu. Play the voice pattern: Select the menu item and confirm. The loudspeaker activates. Delete the voice pattern: Select the menu item and confirm. The after the entry disappears. Long press (back to idle status).

either ... [] [] Play Recording [] OK or ... []
[] Delete Word [] OK i Deleting a voice pattern for an entry does not

affect its number or name they are retained. The voice patterns of other users for the same entry are also unaffected. 32 Using the directory and other lists Viewing and editing an entry (C 250 only) Open the directory with voice-activated dialling, and select an entry (checked) (see Step 1 and Step 2, page 30).

You can now view and edit the name and number of the entry in the same way as you would in the directory without voice-activated dialling (page 25).

Deleting a single voice-activated dialling entry or the complete list (C 250 only) Open the directory with voice-activated dialling and select the entry (see Step 1 and Step 2 page 30). You can now delete a single entry or the complete directory with voice-activated dialling as described for the directory without voice-activated dialling (page 26). Last number redial list The last number redial list contains the ten last dialled numbers. If names have been stored for these numbers in the directory, then both the names and the numbers will be displayed. You can use the last number redial list to redial the telephone numbers.

Dialling telephone numbers from the last number redial list [] · Open the last number redial list. Select an entry and press the top half of the key. The telephone number is dialled. N To add or change the telephone number, press MENU and confirm i Use Number with OK. N To add a telephone number from the last number redial list to the directory (page 27), press MENU, Copy to Directory OK.

Deleting a single telephone number or the entire last number redial list [] · [] [] MENU Open the last number redial list. Select an entry and open the menu. Delete a single telephone number: Select the menu item and confirm. If there still entries on the list, press the key and hold (back to idle status). either ... [] [] Delete Entry

[] OK or ...

[] [] Delete List [] OK+ Delete the entire last number redial list: Select the menu item and confirm. 33 Using the directory and other lists Opening lists with the Message key You can use the Message key f to open the following lists: 1. Text message list (if several mailboxes are set up, they will all be listed), 2. Answering machine list (C 250 only), 3. Messages in the network mailbox (if your network provider supports this function and the network mailbox is configured for fast access, page 72), 4. Calls list. As soon as a new entry (a text message, a message on the built-in answering machine (C 250 only) and/or a call) arrives in one or more of the lists, the f key flashes and you hear an advisory tone. If you now press the flashing f key but you do not open any of the lists but instead close the menu, the f key continues to flash. If you press the flashing f key and open one of the lists, when you close the list the key will stop flashing even if one of the other lists still contains new entries. If there is at least one new entry, you can set the f key 'flashing' again, i.

e. reactivate it. This will let others, e.g. members of your family/your office colleagues, know that they have received new messages.

N If only one list has new entries, the first new entry on that list is displayed; if the The following lists are displayed when you press f: entries are in a personal mailbox (page 51), then the appropriate list is displayed.



**You're reading an excerpt. Click here to read official SIEMENS
GIGASET C250 user guide**
<http://yourpdfguides.com/dref/3955139>

N If several lists have new entries, those lists are offered for your selection. N If there are no new messages in any of the lists, then all the lists are offered for your selection. N If calls are stored in the network mailbox, you will see a message if the correct setting has been made (refer to the network mailbox operating instructions). Setting the Message key to 'flashing'/deactivating the Message key Precondition: There is still one new entry in one of the lists. Open the calls list. [] [] Set MWI-LED [] OK Select the menu item and confirm. Long press (back to idle status). The key only flashes until it is pressed again and a list or list entry is opened. 34 Using the directory and other lists Calls list and answering machine list (C 250 only) The numbers of the last 30 calls are saved in the calls list. The oldest entry is deleted when the calls list is full and new entries are added. Precondition: The caller's number has been identified (page 20). Depending on the setting, either all calls or only missed calls (default) are stored ('Set calls list', page 35). Depending on this setting, several calls from the same number are entered in the calls list as follows: N More than once when All Calls is set, N Once and only the last missed call when Missed Calls is set. Here is an example of how the calls list (Calls List:) appears in the display: Number of new entries in the list Calls List: 01+05 Number of old, read entries in the list You can use the answering machine list to listen to the messages that are on the answering machine on the Gigaset C 250 .

The date and time of arrival and caller's number of each message is displayed provided they are identified. Once you have listened to them, the new messages are added after the old messages in the answering machine list. Here is an example of how the answering machine list (Answering Mach.:) appears in the display: Answering Mach.: 01+05 Number of new entries/messages in the list Number of old, played entries/messages in the list Setting the calls list Open the calls list. [] [] Calls List: 01+02 [] OK

[] MENU [] [] Calls List Settings [] OK Select the menu item and confirm. Press the display key to open the menu. Select the menu item and confirm. The current selection is checked . Only calls which you could not take: Confirm.

All calls: Select the menu item and confirm. Long press (back to idle status). either ...

[] [] Missed Calls OK or ... [] [] All Calls [] OK 35 Using the directory and other lists Opening the calls list/answering machine list (C 250 only) New calls (calls list) and new messages (answering machine) are indicated by the f key flashing and by an advisory tone. Open the calls list.

either ... [] [] Calls List: 01+02 [] OK Open the calls list: Select the menu item and confirm. The entry received last is displayed. Select entry. Open the answering machine list: Select the menu item and confirm. The entry of the first new message to arrive is displayed. The loudspeaker activates. Message playback begins.

Scroll to the next or previous message. The entry of the message appears in the display. Message playback begins. or ... []

[] Answering Mach.: 01+02 [] OK i To delete an entry or a message , press MENU, Delete Entry OK . Calling back a caller Precondition: The caller's number has been identified (page 20). Open the calls list/answering machine list (C 250 only) and select an entry.

Now: Press the Talk key once (calls list) or twice (answering machine list, C 250only). The telephone number is entered in the last number redial list. 36 Using the directory and other lists Viewing an entry in the calls list/answering machine list (C 250 only), adding a number to the directory You can view the time when a call arrived and add the caller's number to your directory. Precondition: Calling Line Identification is activated. Open the calls list/answering machine list and select an entry.

Now: [] MENU Press the display key to open the menu. Copy telephone number to the directory: Select the menu item and confirm. Confirm the number. either ..

. [] [] Copy to Directory [] OK [] OK [] MENU [] [] Save Entry OK Enter name and open the menu. Confirm. The entry is stored. View the date and time of arrival: Select the menu item and confirm. View information whether new or old: Select the menu item and confirm. or ... [] [] Date and Time [] OK

or .

.. [] [] Status [] OK ... then Long press (back to idle status). 37 Using the directory and other lists The entry's status is displayed like this: 2 1234567890 V New OK First (new) call/First (new) message of a total of two (new) calls/messages The following status messages are used: New call Old call Calls received Answer Machine New Msg. Old Msg. The call is new in the list. The call is old in the list.

The call was taken (All Calls setting only, page 35). C 250 only: The answering machine answered the call but the caller did not leave a message (All Calls setting only, page 35). C 250 only: The message is new in the list. C 250 only: The message is old in the list, it has already been played. i Gigaset C 250:

When picking a telephone number from the answering machine list, message playback is interrupted when you press MENU.

Playback will resume when the telephone number has been stored in the directory. Deleting the calls list Open the calls list (page 36). Now:

[] MENU [] [] Delete List [] OK Press the display key to open the menu. Select the menu item and confirm. Caution: All old and new entries will be deleted.

Long press (back to idle status). Deleting old messages from the answering machine list is explained on page 63. Deleting a single entry from the calls list Open the calls list and select an entry (page 36). Now: [] MENU

[] [] Delete Entry OK Press the display key to open the menu.

Confirm. Long press (back to idle status).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955139)

[GIGASET C250 user guide](http://yourpdfguides.com/dref/3955139)

<http://yourpdfguides.com/dref/3955139>