



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C355. You'll find the answers to all your questions on the SIEMENS GIGASET C355 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SIEMENS GIGASET C355 User guide SIEMENS GIGASET C355 Operating instructions SIEMENS GIGASET C355 Instructions for use SIEMENS GIGASET C355 Instruction manual SIEMENS GIGASET C355

### Gigaset

<p><b>EN</b> Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p><b>DE</b> Sehr geehrte Kunden, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p><b>FR</b> Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p><b>IT</b> Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p><b>NL</b> Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), die onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p><b>ES</b> Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p><b>PT</b> Scares clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Qualquer declaração por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.</p> <p>Issued by Gigaset Communications GmbH Schillerstrasse 66, D-42699 Solingen Gigaset Communications GmbH is a trademark licensee of Siemens AG</p>	<p><b>DA</b> Kære Kunde, Gigaset Communications GmbH er retlig arvtager af Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p><b>FI</b> Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivomme teille paljon iloa Gigaset-laitteestanne.</p> <p><b>SV</b> Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p><b>NO</b> Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som i sin tur videreførte Gigaset-gjeførelsen i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningen er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p><b>EL</b> Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC που υπάρχουν στα εγχειρίδια χρήσης, θεωρούνται δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλό άνοιγμα με το νέο σας Gigaset.</p> <p><b>HR</b> Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će vam zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p><b>SL</b> Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC). Al naslednje dejavnosti znamsko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p> <p>© Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com</p>
---	--



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>

**Manual abstract:**

*@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chre Cliente, Cher Client, la socit Gigaset Communications GmbH succde en droit Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-mme les activits Gigaset de Siemens AG. Donc les ventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent tre comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrment avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH successore della Siemens Home and Office Communication Devices GmbH & Co. @@@@Le auguriamo tanta soddisfazione con il vostro Gigaset. @@@@Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.*

*Wij wensen u veel plezier met uw Gigaset. Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continu el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.*

*SCaros clientes, Gigaset Communications GmbH a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negcios Gigaset, da Siemens AG. Quaisquer declaraes por parte da Siemens AG ou da SHC encontradas nos manuais de utilizao devero, portanto, ser consideradas como declaraes da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.*

*DA Kre Kunde, Gigaset Communications GmbH er retlig efterflger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreftrte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forst som Gigaset Communications GmbHs forklaringer. Vi hber, du fr meget glde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset-liiketoimintaa. Kyttoppaissa mahdollisesti esiintyv Siemens AG:n tai SHC:n selosteet on tmn vuoksi ymmrrttv Gigaset Communications GmbH:n selosteina. Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kra kund, Gigaset Communications GmbH vertar rtigheterna frn Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla frklaringar frn Siemens AG eller SHC i anvandarhandboken gller drfr som frklaringar frn Gigaset Communications GmbH.*

*Vi nskar dig mycket nje med din Gigaset. Kjre kunde, Gigaset Communications GmbH er rettslig etterflger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreftrte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor forst som meddelelser fra Gigaset Communications GmbH. Vi hper du fr stor glede av din Gigaset-enhet. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co.*

*KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumaciti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG.*

*Vse izjave podjetja Siemens AG ali SHC v prirocnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH. Zelimo vam veliko koristov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved.*

*www.gigaset.com CS Vzen zkaznci, spolecnost Gigaset Communications GmbH je prvnm nstupcem spolecnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kter dle pejala segment produkt Gigaset spolecnosti Siemens AG. Jakkoli prohlsen spolecnosti Siemens AG nebo SHC, kter naleznete v uzivatelskch pruckch, je teba povazovat za prohlsen spolecnosti Gigaset Communications GmbH. Doufme, ze jste s produkty Gigaset spokojeni. Vzen zkaznk, Spolocnos Gigaset Communications GmbH je prvny nstupcom spolocnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktor zasa pokracovala v cinnosti divzie Gigaset spolocnosti Siemens AG. Z tohto dvodu je potrebn vsetky vyhlshenia spolocnosti Siemens AG alebo SHC, ktor sa nachdzaj v pouzvatelskch pruckch, chpa ako vyhlshenia spolocnosti Gigaset Communications GmbH. Verme, ze budete so zariadenm Gigaset spokojn.*

*Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rndul su, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmatii efectuate de Siemens AG sau SHC i incluse n ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperem ca produsele Gigaset s fie la nlinea dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Siemens AG.*

*, Siemens AG SHC, , Gigaset Communications GmbH. Gigaset. Tisztelt Vsr! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) trvnyes jogutdja a Gigaset Communications GmbH, amely a Siemens AG Gigaset zletgnak utdja. Ebb! kvetkezzen a Siemens AG vagy az SHC felhasznli kziknyveiben tallhat brmely kijelentst a Gigaset Communications GmbH kijelentsnek kell tekinteni.*



**[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)**  
<http://yourpdfguides.com/dref/4568835>

Remljk, megelgedssel hasznlja Gigaset kszlkt. PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobierc prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktra z kolei przejl segment produktw Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, ktre mona znale w instrukcjach obslugi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktw Gigaset.

Sayin Mterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini irtten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmi bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı mit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), , Gigaset Siemens AG. , Siemens AG SHC , Gigaset Communications GmbH. , Gigaset . TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability.

Rights of modifications reserved. www.gigaset.com s Siemens Aktiengesellschaft, issued by Siemens Communications Haidenauplatz 1 D-81667 Munich Siemens AG 2005 All rights reserved. Subject to availability. Rights of modification reserved. Siemens Aktiengesellschaft www.siemens.com/gigaset CORDLESS HOME COMMUNICATION Gigaset C355 Handset at a glance Handset at a glance 1 V V INT 11 INT INT INT Menu Menu 2 12 11 10 3 4 5 9 8 6 7 1 Display in idle status 2 Battery charge condition = e V U (empty to full) = flashes: battery nearly empty e V U flashes: battery charging 3 Control key (page 8) 4 Message key Opens calls and messages lists. Flashes: New message or new call.

5 End call key, On/Off key End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status) 6 Hash key Keypad lock on/off (press and hold, page 8) 7 Microphone 8 Recall key Enter recall (press and hold) 9 Star key Ringers on/off (press and hold in idle status), Enter dial pause (press and hold when dialling), Switch between upper/lower case letters and digits for text entry (page 46) 10 Talk key Answer a call, open last number redial list (press briefly), start dialling (press and hold) 11 Handsfree Key Switch between earpiece and handsfree mode; Lights up: handsfree activated; Flashes: incoming call 12 Call-by-call list key Open call-by-call list 1 Handset at a glance Base unit at a glance 1 2 3 7 4 5 Connecting the base station Please connect the mains unit first and then connect the phone jack as shown below, placing the cords in the cord recesses. 2 6 You can use the keys on the base unit to operate the built-in answering machine and register handsets to the base. 1 Registration/paging key Page handsets (press briefly, "Paging", page 32). Register handsets and DECT devices (press and hold, page 31). 2 On/Off key: Activate/deactivate answering machine.

Lights up: The answering machine is activated. Flashes: There is at least one new message. During message playback: 3 Delete the current message. 4 Go to the next (press once) or next-but-one (press twice) message. 5 Playback/Stop Key: Play back messages from the answering machine, or cancel playback (press briefly).

Play back new and old messages one after the other (press and hold). 6 Adjust volume during message: = quieter; = louder. While an incoming call is being indicated: Adjust ringer volume. 7 Go to the start of the message (press once) or to the previous message (press twice). 1 3 1 1 Underside of the base unit (partial view) 2 230 V mains unit 3 Phone jack with phone cord Please note: u The mains units must be plugged in at all times as the phone will not work without a mains connection. u If you buy a replacement phone cord in the shops make sure that the phone jack has the correct type of wiring. Correct phone jack wiring 3 2 1 4 5 6 1 2 3 4 5 6 unused unused a b unused unused Please note: u The answering machine cannot be operated from the base while it is being operated from a handset or recording a message. u If the On/Off key flashes although the answering machine is switched off, it means that there is still at least one new message that has not been played back yet. 2 Contents Contents Handset at a glance . .

. . . . . 1 Connecting the base station .

. . . . .

. . . 2 Safety precautions . . .

. . . . . 40 Dialling mode and recall (flash) . .

. . . 40 Setting pauses . . . . .

. . . . .

. . . . .

. . . 40 Switching temporarily to tone dialling (DTMF) . . . . .

. . . . 40 Appendix . . . . .

. . . . .

. . . . .

. . . 41 Care . . . . .

. . . . .

. . . . .

. . . . Contact with liquid .

. . . . .

. . . Questions and answers . . . . .

. . . . Service (Customer Care) .

. . . . .

. . . . Specifications . . . . .

. . . . .

. . . Default settingsm the loudspeaker 1. 1 2 dle in the base to charge up the batteries.

The handset may only be placed in the base provided for it. When the handset is in the base, it charges even if it is switched off. You will see the charge status in the display. If the handset has switched itself off because the batteries are flat and if it is then placed in the base, it will switch itself on automatically. If you have any questions or problems see page 41.

First battery charge and discharge Placing the handset in the base and registering it Place the handset in the charging cradle of the base unit with its

display facing forward. The handset registers automatically. Registration takes about 1 minute. While this is happening, Registering appears in the display and the name of the base, Base 1, flashes. The handset is given the lowest available internal number (16). When the handset has registered, this number appears in the display, e.g. INT 1. This means that the handset has been allocated the first internal number. If all internal numbers 16 have been assigned (six handsets are registered on a base), the number 6 is overwritten if that handset is in idle status.

Battery charging is indicated in the top right of the display by a flashing battery icon e, V or U. During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge status can only be displayed when the batteries are first fully charged and discharged through use.

To do this, leave the handset in the base without interruption until the battery icon stops flashing in the display (approx. 6h). Your handset need not be switched on for it to charge. Once the batteries are fully charged, remove the handset from the base and do not put it back again until the batteries are fully discharged. After the first battery charge and discharge you may replace your handset in its base after every call.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>

Note: Note: Automatic registration is not possible when the base on which you wish to register the handset is being used to make a call. A key press cancels automatic registration.

If automatic registration does not work the handset will have to be registered manually (page 31). The name of the handset can be changed (page 34). Please note: u Always repeat the charging and dis-charging procedure if you remove the batteries from the handset and insert them in again. u The batteries may warm up while they are charging. This is not dangerous.

7 Handset operation u After a while the charge capacity of the batteries will decrease for technical reasons. Handset operation Control key on the handset INT Menu Your telephone is now ready for use The answering machine is switched on with a pre-recorded announcement. Set the date and time (page 8) to ensure that incoming calls are logged with the correct time. 1 2 1 Display functions 2 Control key Activating/deactivating the handset a Press the end call key and hold. You hear the confirmation beep.

Activating/deactivating the keypad lock # Press the hash key and hold. You hear the confirmation beep. The icon appears in the display when the keypad lock is activated. The keypad lock deactivates automatically when you receive a call and activates again after the call. In this manual, the side of the control key that you must press in the given operating situation is shown in black (top, bottom, right, left). Example: t for "press the top of the control key". The control key has a number of different functions: When the handset is in the idle state s t Open the directory. Adjust the ringer melody volume of the handset (page 37). Scroll up/down line by line. Scroll up/down line by line.

Move the cursor left or right. Open the directory. Adjust loudspeaker volume for earpiece and handsfree mode. In lists t/s Note: In menus t/s t/s s t The handset displays an advisory message if you press a key by accident while the keypad lock is on. To deactivate the keypad lock, press the hash key # and hold. In an input field During an external call Setting the date and time Menu ~ Settings Date/Time ~ Enter the day, month and year with 6 digits and press OK.

Use q to move between the fields. Enter hours and minutes with 4 digits (e.g. S M 1 5 for 07:15) and press OK.

8 Handset operation Using display functions The current display functions are shown in the bottom display line in reversed highlights. u/v Launch left / right display function. You can use the display icon -- to delete text in input fields one character at a time, moving from right to left. Submenus The functions in the submenus are displayed as lists.

Accessing a function: Scroll to the function with the control key q and press OK. Or: Enter the number combination that is in front of the function in the menu tree (page 48). A short press on the end call key a returns you to the previous menu level / cancels the operation. Return to idle status You wish to return to idle status from anywhere in the menu: Press the end call key a and hold. Or: Press no key: After 2 minutes the display will return automatically to its idle status.

Changes which you have not confirmed/ stored by pressing OK will be rejected. For an example of the display in idle status, see page 1. Correcting wrong inputs u Navigate to the wrong input with the u Press -- to delete the character to control key if T is displayed. the left of the cursor. sor u Insert characters to the left of the curu When entering the time and date etc., Menu management Your telephone's functions are accessed in a menu that has a number of levels. edit the (flashing) character. Main menu (first menu level) To open the main menu, press Menu with the handset in idle status. Accessing a function control key and press OK. Or: Enter the number that is in front of the function in the menu tree (page 48).

The corresponding submenu (the next menu level) is opened. Scroll to the required function with the 9 Handset operation Operating information This section explains the meaning of certain symbols and typographical conventions that are used in this manual. Step-by-step instructions In these operating instructions, sequences of symbols are used to show you which steps you must carry out. This system is explained below using the example of "setting the ringer melody". The things you have to do are explained in the boxes. Menu Symbols ~ Menu Enter digits or letters. The display functions currently in the bottom display line are shown in reversed highlights. Press the corresponding side of the control key to launch the function. q Press the top or bottom of the control key, e.g. when scrolling. c / S / P etc. Press the matching key on the handset. External Calls / Internal Calls (example) Select one of the menu functions (External Calls or Internal Calls) from the list. With the handset in idle status, press Audio Settings Ringer Melody on the right of the control key to open the main menu. With the control key, select q Audio Settings and press on the right of the control key to confirm your selection with OK. With the control key, select q Ringer Melody and press on the right of the control key to confirm your selection with OK. Press the bottom of the control key Select External Calls / Internal Calls and press OK. repeatedly until External Calls or Internal Calls is selected. Press OK (control key right) to confirm your selection.

q Press the top or bottom of the control Press OK (control key right) to confirm your selection. The selected melody is indicated by a . a Press and hold (idle status). key to select a melody. Select melody (= on) and press OK. Press the end call key and hold until the handset returns to idle status. 10 Making calls Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. Or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling operation with the end call key a.

Caller ID When you get a call, the caller's number is shown in the display provided the following conditions are met: u Your network provider supports CLIP, CLI. CLI (Calling Line Identity): The caller's number is transmitted CLIP (Calling Line Identity Presentation): The caller's number is displayed u You have requested CLIP from your network provider. u The caller has requested CLI from his network provider. Note: Dialling with the directory (page 14) or last number redial list (page 16) saves repeated keying of phone numbers. You can assign a number from the directory to a key for speed dialling (page 15). Call display with CLIP/CLI If the caller's number is stored in your directory, you see his name. 1 1234567890 2 Menu 1 Ringer icon 2 Caller's number or name End call a Press the end call key.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568835)

[GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)

<http://yourpdfguides.com/dref/4568835>

Answering a call The handset indicates an incoming call in three ways: it rings, there is a display on the screen and the handsfree key d flashes. To accept an incoming call: Press the talk key c. Press the handsfree key d.

Press the control key Menu and select TAD Diversion to divert the call to the answering machine (page 27). If the handset is in the base and the Auto Answer function is activated (page 36), the handset will take a call automatically when you lift it out of the base. Instead of the number, you see: u External Call, if no number is transmitted. u Withheld, if the caller withholds his ID (page 13). u Unavailable, if the caller has not requested caller ID.

11 Making calls Handsfree talking With handsfree talking, instead of holding the handset to your ear you can put it down, e.g. on the table in front of you, to allow others to listen and speak to the caller. Muting You can deactivate the microphone in your handset during an external call. Muting the handset INT Press the control key.

Briefly press the end call key. Activating/deactivating handsfree Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Cancelling muting a Switching between earpiece and handsfree mode d Press the handsfree key. Switch handsfree on and off during a call and when playing back the answering machine. If you wish to place the handset in the base during a call: Press the handsfree key d and hold it while placing the handset in the base. If handsfree key d does not light up, press the key again. To find out how to adjust the volume, see page 36. 12 Network services Network services Network services are functions offered by your network provider and which you must specifically request from him. Contact your network provider if you have any problems.

Select On / Off and press OK to activate or deactivate call waiting. Functions during one call Initiate ringback You hear the busy tone. Menu Ringback a Press the end call key. Setting functions for the next call You have the following options: Withhold Number Withhold caller ID for the next call (CLIR). Menu Select Services Withhold Number ~ Enter a number. c Press the talk key. Consultation During a call: Menu External Call ~ Enter number and press OK. You have the following options: u Toggling: Use q to toggle between the parties. End call with active party: Menu End Active Call. Setting functions for all further calls When you have completed one of the following procedures, a code is sent.

When it has been acknowledged by the phone network, press the end call key a. You can set the following select services: Accept call waiting Menu Accept Call Waiting You have a choice between toggling the call or a conference call. Note: With CLIP, a waiting call is only indicated by a signal tone. Call diversion Menu Call transfer While consulting or toggling: Menu Call Transfer When Busy Select On / Off and press OK to activate or deactivate call diversion. ~ Enter the number and press OK.

Select Services For All Calls Call Divert All Calls / No Answer / Functions after one call Cancel ringback Menu Select Services Cancel Ringback Activating/deactivating call waiting (external call only): Menu Select Services For All Calls Call Waiting 13 Using the directory and lists Using the directory and lists The options are: u Directory, u Call-by-call list, u Last number redial list u SMS list, u Calls list, u Answering machine list. You can save a maximum of 100 entries in the directory and call-by-call list (the actual number depends on the size of the individual entries). You create the directory and call-by-call list for your individual handset. However you can send the list or individual entries to other handsets (page 15). l New Entry Change a multiple line input: Number: Enter number.

Name: Enter name. Save changes. Storing the number in the call-by-call list Selecting a directory/call-by-call list entry s/l Open directory or call-by-call list. You have the following options: u Use q to scroll to the entry until the required name is selected. u Enter the first character of the name, or scroll to the entry with q. Directory/call-by-call list In the directory you store numbers and matching names. With the handset in idle status, open the directory by pressing s. In the call-by-call list, you can store the prefixes of network providers (so-called "Call-by-call numbers"). Open the call-by-call list with the l key. s q (select entry; page 14) c Press the talk key.

The number is dialled. Dialling using the directory/call-by-call list Managing directory/call-by-call list entries You have selected an entry (page 14). Length of an entry Number: Name: max. 32 digits max. 16 characters Editing an entry Menu Note: You can assign a number from the directory to a key for speed dialling (page 15). ~ ~ Edit Entry Storing a number in the directory Edit the number if required, and press OK. Edit the name if required, and press OK. s Menu New Entry ~ Enter the number and press OK. ~ Enter the name and press OK. If your phone is connected to a PABX, refer to page 40.

14 Using the directory and lists Using other functions s The following functions can be selected with q: Use Number Edit or add a stored number. Then dial or use other functions with Menu. Birthday (directory only) Add, view, edit or delete a birthday for an existing entry. Delete Entry Delete a selected entry. VIP Entry (directory only) Mark a directory entry as VIP (Very Important Person) and assign it a particular ringer melody.

You will now be able to tell VIP calls from the ringer melody. This feature requires caller display (CLI) (page 11). Send Entry Send a single entry to another handset (page 15). Delete List Delete all entries in the directory/callby-call list. Send List Send the complete list to another handset (page 15).

Shortcut (directory only) Assign the current entry to a selected key for speed dialling. s (select entry; page 14) Menu Sending the directory/call-by-call list to another handset Requirements: must both be registered to the same base unit. u The other handset and the base unit can send and receive directory entries. s q (select entry; page 14) Menu Send Entry / Send List ~ Enter the internal number of the receiver handset and press OK. A successful transfer is confirmed by a message and the confirmation tone at the receiver handset. u The sending and receiving handsets Please note: u Entries with identical numbers are not overwritten in the receiver handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. Copying a displayed number to the directory You can copy numbers to the directory; they will be displayed in a list, e.



**You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide**  
<http://yourpdfguides.com/dref/4568835>

g. the calls list or last number redial list, in an SMS or during a call.

A number is displayed: Menu Copy to Directory Complete the entry (page 14). Message playback is interrupted during number copying from the answering machine list. Using speed dial keys hold. Press the required speed dial key and 15 Using the directory and lists Copying a number from the directory In many operating situations you can open the directory to copy a number, for example. Your handset need not be in idle status. Depending on the operating situation, open the directory with s or Menu Directory. q Select an entry (page 14). Last number redial list The last number redial list shows the last ten numbers dialled on the handset (max. 32 digits). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial c q c Press the key briefly. Select an entry. Press the talk key again. The number is dialled. Storing a birthday in the directory You can store a birthday for every number in the directory, and specify a time when you will receive a reminder call on the birthday.

s q (select an entry; page 14) Menu Birthday ~ Enter the date and press OK. ~ Enter the time and press OK. q Select Visual or the melody that will be used for the reminder on the birthday, and press OK. The entry will now have the icon next to it in the directory. Managing entries in the last number redial list c q Menu Press the key briefly.

Editing or deleting a birthday s If you have stored a birthday for the entry, you can call the following functions with Menu: q (select an entry; page 14) Menu Birthday Select an entry. Press the control key. The following functions can be selected with q: Use Number (page 15) Copy to Directory Copy an entry to the directory (page 15). Delete Entry (page 15) Delete List (page 15) Edit Birthday Edit settings (page 16). Delete Birthday Reminder call on a birthday A

birthday reminder call is signalled on the handset with the selected ring tone. OK Press the control key to end the reminder call or acknowledge a missed birthday. The corresponding directory entry is displayed. 16 Using the directory and lists Opening lists with the message key You can use the message key f to open the following lists: u SMS list u Answering machine list u Caller list An advisory tone sounds as soon as a new message arrives on a list. The message key f flashes. In idle status, an icon appears in the display for the new message: Icon New message.

... in answering machine list or network mailbox ... in calls list ..

. in SMS list Calls list Requirement: CLIP (page 11) The numbers of the last 30 incoming calls are stored. Depending on the Calls List Settings either All Calls or only Missed Calls are stored (page 17). Several calls from the same number are stored depending on the type of list: u All Calls stored more than once. u Missed Calls stored once (the last call).

The calls list is displayed as follows: Calls List: 01+02 Number of new entries + number of old, read entries The number of new entries is shown beneath the corresponding icon. When you press the flashing key f, you will see all the lists that contain new messages. If only one list contains new messages, it opens immediately. Key f goes out when a list opens and the menu is closed. If there are other new entries, you can set the message key flashing again (page 17), e.

g. to tell other users about the new entries. f Calls List: 01+02 q (select entry; page 14) Menu Calls List Settings Select Missed Calls / All Calls and press OK (= on). a Press and hold (idle status). The entries in the calls list are retained when you change the list type. Setting the list type for the calls list Answering machine list With the answering machine list you can listen to the messages on the answering machine. The answering machine list is displayed as follows:

Answ. Mach.: 01+02 Number of new messages + number of old, played back messages Note: If calls are stored in the network mailbox you will receive a message if the appropriate settings have been made (see the network mailbox instructions of your network provider). Setting the message key flashing Requirement: There is still at least one new entry in one of the lists.

f Open the calls list. Select Set MWI-LED and press OK. a Press and hold (idle status). Key f goes out when a list opens and the menu is closed. 17 Using the directory and lists f Calls List: / Answ. Mach.: 01+02 q Select an entry. The calls list shows the last received call. The answering machine list shows the first new message that has been received. The playback starts.

New messages are put behind the old messages when they have been played back. Opening the calls list /answering machine Deleting the calls list Caution! All old and new entries will be deleted. f Calls List: Menu Delete List a Press and hold (idle status). Note : Deleting old messages from the answering machine list: see page 27. List entry Example of a list entry: New Call 1234567890 28/08/04 01/02 17:53 Back U Menu u Status of the entry In the calls list New Call: new missed call.

Old Call: entry already read. Call recv.: the call was taken (only with list type All Calls). In the answering machine list Answer M: The answering machine took the call. A message was left (only with list type All Calls).

New Msg.: New message on the answering machine. Old Msg.: Already played back message on the answering machine. u Sequence number of the entry 01/02 means e.g.: First of a total of two entries. u Caller's number or name You can copy the caller's number to the directory (page 15). u Call date and time (if set, page 8). Pressing Menu gives you a number of option: Delete Entry The current entry is deleted.

18 Making cost-effective calls Making cost-effective calls Make your calls via a network provider who offers very low call charges (call-by-call), or have the call duration displayed on your handset after the call. You can store and manage several call-by-call numbers. Storing a preselection number Menu ~ OK Settings Base Preselection Preselection Number a Enter or edit a preselection number (call-by-call number). Press the control key. The entry is stored. Press and hold (idle status). Automatic network provider preselection You can specify a call-by-call number (preselection number) that is automatically placed before certain numbers from two lists when you dial. u The "with preselection" list contains the "rule": dialling codes or the first digits of dialling codes with which the preselection number will be used. u The "without preselection" list contains the "exception to the rule". Example: You have entered 08 for "with preselection".

Now all numbers that start with 08 will be dialled with preselection. If you want, say, 081 to be dialled without preselection, then enter 081 for "without preselection".



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>

Now when you dial, after you press the talk/handsfree key the first digits of the dialled number are compared with both lists : u The preselection number is not placed before the number if the dialled number matches no entry on either list one entry on the "without preselection" list u The preselection number will be used when the first digits of the dialled number match only one entry on the "with preselection" list. Saving/changing entries in the preselection lists Each of the two lists can hold 11 entries: u 5 entries with up to 6 digits u 6 entries with up to 2 digits Depending on the country, numbers may be prefixed in the "with preselection" list. This means that all national calls or calls to the mobile phone network will be automatically linked to the preselection number you have previously stored.

Menu Settings Base Preselection With Preselection / Without Preselection q Select an entry and press OK. ~ Enter or edit the first digits of the number. OK Press the control key. The entry is stored. a Press and hold (idle status).

Deactivating preselection temporarily c (press and hold) Menu Automatic Preselect off Deactivating preselection permanently Overwrite the preselection number (page 19). 19 SMS (Text Messages) SMS (Text Messages) Your phone comes supplied ready for you to start sending SMS (text messages) straight away. Please note: u If your phone is connected to a PABX, read page 24. u To receive text messages you must be registered with your service provider. Requirements: u Caller ID (CLI) must be activated for Writing/sending text messages Writing/sending text messages Menu your phone line. SMS in the fixed network (information about this can be obtained from your network provider). u You must be registered with your service provider to send and receive messages. Text messages are exchanged between SMS centres that are operated by service providers. The SMS centre through which you wish to send and receive messages must be entered in your device. You can receive text messages from any of the entered SMS centres provided you have registered with your service provider.

Your text messages are sent through the SMS centre that is entered as the active send centre (page 23). Only one SMS centre can be the active send centre at any one time. If no service centre is entered, the SMS menu has just one entry: Settings. Enter an SMS service centre (page 23). u Entering text, see page 46. u Writing with EATONI predictive text, see page 46. u Your network provider must support ~ Write your message. Menu Send Text Select Send Text and press OK. Menu Message Type: Text Message Select Message Type: Text Message and press OK. @@@@ Press the end call key twice briefly to return to the input screen.

@@The cursor is at the correct position. @@@@Menu Press the control key. @@Use text Edit the text of the stored message, then send it (page 20).

@@@@Press the control key to confirm the delete. The list is deleted.

@@Linked text messages are displayed as one message. If it is too long or is not transmitted in full, it is split into several messages. Text messages stay on the list even after they have been read, so you should regularly delete messages from the list. The display tells you if the message memory is full. @@@@Menu Read SMS Select Read SMS and press OK to read the message.

Scroll through the message with q. @@u Messages that could not be sent because of an error. @@ Open the incoming message list. Menu Press the control key. @@Menu Press the control key. @@Answer: Yes / Answer: No A Yes or No is appended to the message. Then send the message (page 20). Use text Edit the message, then send it (page 20). @@@@@@Menu Press the control key. @@@@@@The number is reverse highlighted.

Menu Press the control key. Now see page 15 to add the number to the directory. @@@@@@You can store the melody and use it as a ringer melody. u You can store a new picture and install it as a screen picture. @@@@@@A message can have several attachments (a picture and a melody). @@Menu View Content Select View Content and press OK. @@Menu SMS Settings Service Centres q Select an SMS centre (e.g. SMS Centre No. 1) and press OK.

@@SMS Enter the number of the SMS service and press OK. @@The CLIP of the number of the SMS centre is evaluated in your Gigaset. u Depending on your PABX, you may have to put the access code (outside line code) before the number of the SMS centre. If in doubt, test your PABX by sending two text messages to your own number, one with the access code and one without it. u When you send messages, your sender number may be sent without your extension number.

The recipient cannot reply to you directly in this case. Text messages can only be sent and received through ISDN exchanges with the MSN number assigned to your base. u You can only receive a text message SMS Troubleshooting Error codes when sending If a text message cannot be sent for a long period of time, it is moved to the incoming messages list with the Status Error XX. E0 Permanent restriction of Caller ID is activated (CLIR) or Caller ID has not been enabled. FE Error occurred during message transfer.

FD Error while connecting to the SMS centre, see Self Help. Self help with errors The following table lists error situations and possible causes, and provides hints for troubleshooting. You cannot send messages. 1. The Caller ID service (CLIP) has not been requested. Ask your service provider to activate this service for you. Activating/deactivating the SMS function When you deactivate the SMS function you will not be able to receive SMS messages as text messages and your phone will no longer send SMS messages. Settings which you have made for sending and receiving text messages (the numbers of SMS centres) and any entries in the incoming message list and the draft message list will be retained even after the function is deactivated. Menu 5 4 0 2 L S OK Deactivate SMS function. Or: 1 OK Activate SMS function (factory setting).

2. Message transmission was interrupted (e.g. by an incoming phone call). Re-send the message. 3. Service not supported by network provider. 4. No number or an invalid number is entered for the SMS centre activated as the send centre. Enter phone number (page 23).

You receive a message whose text is incomplete. 1. Your phone's memory is full. Delete old messages (page 22). 2.

The service provider has not yet sent the rest of the message. You have stopped receiving messages. Call redirect (diversion) is activated with All Calls, or call redirect is activated with All Calls for the network mailbox. Change the call redirect setting. 24 SMS (Text Messages) The message is played back.

1. The "display telephone number" service has not been set. Ask your service provider to activate this function (chargeable). 2. There is no co-operation agreement between mobile phone operators and fixed network SMS providers. Consult your fixed network SMS provider.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>



3. Your phone is logged with your SMS provider as being incompatible with the fixed network SMS, i.e. you are no longer registered with that provider.

Have the phone (re-)registered for SMS reception. Messages are only received during the day. 1. Your phone is stored in the database of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider. Have the phone (re-)registered for SMS reception (see above). You cannot use the SMS functions on your handset. Another handset that is registered to the same base is using the SMS functions. Wait until no other handset is using the SMS functions.

25 Answering machine operation Answering machine operation You can operate the answering machine built into the base with the handset, your base's keypad (page 2) or remotely (another telephone/mobile phone). Press the control key to end the recording. After recording, the announcement is played back for you to check. OK Please note: u Recording ends automatically when Operating the answering machine with the handset If you receive a prompt or message while operating the answering machine, the handset's loudspeaker will activate automatically. Switch the loudspeaker off with the handsfree button d.

the max. recording time of 170 seconds is reached or if there is a break in speaking of more than 2 seconds. @@@@ @Icon appears in the display. Button lights up on the base. The telephone is supplied with a prerecorded announcement.

@@@@@ @a Press and hold (idle status). @ @ You hear the ready tone (a short tone). Now speak your announcement (not less than 3 sec. long). Cancel recording with a or Back. Press OK to start recording again. @@@@ @Key flashes on the base. f Press the message key. Answ. Mach.

: 01+02 Select if appropriate and press OK. Playback begins with the first new message. Deleting an individual old message While playback is paused: ~ Press the control key. Picking up a call from the answering machine You can take a call while the answering machine is recording the call or is being operated remotely: c / d Press the talk or handsfree key. Recording stops and you can speak to the caller. If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. Key f on the handset flashes. You can take the call even if it is not indicated on the handset.

Playing old messages See Answering Machine List on page 17. Pausing and managing playback During message playback: 2 Pause playback. Press 2 again to resume t Go to the beginning of the current message. 2x To the previous message. s To the next message. 2xs To the next message but one. The answering machine returns to idle status if there is a pause of more than one minute.

Diverting an external call to the answering machine You can divert an incoming call to the answering machine even if it is switched off. There must be space available in the answering machine's memory. The handset indicates an incoming call: Menu Press the control key. Select TAD Diversion and press OK. The answering machine answers the call immediately.

The set time for the ring delay (page 28) is ignored. Copying the number of a message to the directory See "Copying a displayed number to the directory", page 15. 27 Answering machine operation Activating/deactivating call screening While a message is recording, you can listen to it on the loudspeakers in the base and in the registered Gigaset C35 handsets. Permanently activating/deactivating call screening Menu a Press and hold (idle status). Call screening on Base and Handset can be activated simultaneously. Voice Mail Call Screening Handset / Base (= on) When you check your answering machine remotely you will know after around 15 seconds that there are no new messages (otherwise it would have answered your call). There will be no call charges if you hang up now. Menu Voice Mail Ring Delay q Immediately / 10 sec / 20 sec / 30 sec / Auto select an option and press OK (= on). a Press and hold (idle status). Please note: You can set your phone so that the first ring of any ring tone is suppressed (page 37).

This means that the time selected for the ring delay is the time it takes for the caller before the answering machine answers the call. Deactivating call screening for the current recording a Press the end call key. Setting the recording time You can set the maximum recording time for a message. The options are: 30 sec, 60 sec, 120 sec or Maximum. Menu Voice Mail Message Length q Select a recording time and press OK (= on). a Press and hold (idle status).

Setting up the answering machine The answering machine is supplied set up ready to use. You can make individual settings from the handset. Ring delay/charge saving function for remote operation You can set when the answering machine will take a call. The options are: Immediately, 10 sec, 20 sec or 30 sec and the charge saving setting Auto.

With Auto the ring delay is as follows: u If no new messages are recorded yet, the answering machine will answer a call after 20 seconds. u If new messages are already recorded, it will answer a call after 10 seconds. Resetting fast access on the answering machine When supplied, the built-in answering machine is preset for fast access. If you have set the Network Mailbox for fast access (page 30), then you can reset this setting. Menu Voice Mail Set Key 1 Select Answer Machine / Network Mailbox and press OK.

a Press and hold (idle status). 28 Answering machine operation When you have selected the Network Mailbox or the answering machine, press key 1 and hold. This connects you directly. The setting for fast access applies to all registered handsets. B 3 0 A Previous Pause playback.

Press again to resume. Go to the next message. Press several times to go to the next messages. Delete current message. B E H 0 clear Operating the answering machine while away from home (remote operation) You can check and activate your answering machine from any other telephone (e.g. hotel, pay phone etc.). Digit codes for operation: 3 F 9 Start Stop/Resume Next D G : Requirements: u You have set a system PIN different ; from 0000 (page 38). u The phone which you are using to remote operate the answering machine must have touch-tone dialling (DTMF), i.

e. you hear different tones as you dial. Alternatively you can use a tone dialler (available from your stockist). Answering machine voice commands You can control message playback by using the voice commands "BACK" and "FORWARD". You can also delete individual messages during playback with the voice command "DELETE". Before each voice command, press the 9 key and speak after the ready tone. When deleting a message, you are prompted to repeat the command. Repeat "DELETE" without pressing 9 first. Calling your answering machine and playing messages Dial your own number.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>

While listening to your own announcement: Press 9 and enter your system PIN.

The answering machine will tell you whether you have any new messages. The messages are played back. You can now operate the answering machine with the keypad. ~ 9~ Activating the answering machine Operating the answering machine with the keypad The answering machine is operated with the following keys: A Go to the start of the current message. Press several times to go to the previous messages.

about a minute. You will hear "please enter PIN". ~ Enter your system PIN. Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back. The answering machine cannot be deactivated remotely. Call your number and let it ring for 29 Using the network mailbox Using the network mailbox The network mailbox is the answering machine of your network provider . You cannot use the network mailbox unless you have ordered it from your network provider. Calling the network mailbox 1 d Press and hold. This connects you directly to the network mailbox. Press the handsfree key d if required. You will hear the network mailbox message out loud. Specifying the network mailbox for fast access With fast access, you can dial either the network mailbox or your built-in answering machine directly. The built-in answering machine is preset for fast access.

You can specify the network mailbox instead. Ask your network provider about this. Viewing a message from the network mailbox When a message arrives for you, you receive a call from the network mailbox. The number of the network mailbox will appear in the display if you have ordered caller ID. If you accept the call, the new messages are played back. If you do not accept the call, the number of the network mailbox will be stored in the list of missed calls and the message key flashes (page 16). Specifying the network mailbox for fast access and enter the number of the network mailbox Menu Select Network Mailbox and press OK ( = on). ~ Enter the number of the network mailbox and press OK. The entry is stored. a Press and hold (idle status).

This setting is now valid for all registered handsets. Voice Mail Set Key 1 30 Using several handsets Using several handsets Registering handsets You can register up to six handsets on your base unit. Manually registering the Gigaset C35 to Gigaset C355 You must activate manual registration of the handset at both the handset and the base station. After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. The registration process is cancelled after 60 seconds. If the handset has not registered within this time, repeat the process. Automatic registration Gigaset C35 to Gigaset C355 Important: The handset must not already be registered to any base unit.

Registering the handset to the Gigaset C355 base is automatic. Place the handset in the charging cradle of the base unit with its display facing forward. Automatic registration takes around one minute. While this is happening, Registering appears in the display and the name of the base, Base 1, flashes. The handset is given the lowest available internal number (16). When the handset has registered, this number appears in the display, e.g. INT 1. This means that the handset has been allocated the first internal number. If all internal numbers 16 have been assigned (six handsets are registered on a base), the number 6 is overwritten if that handset is in idle status.

Settings Handset Register Handset ~ Enter the system PIN of the base (the default is 0000) and press OK. You will see, e.g. Registering Base 1 flashing in the display. Menu On the handset On the base Press the registration/paging key on the base (page 2) and hold for about 3 seconds.. Registering other handsets Other Gigaset handsets and handsets of other GAP-compatible products are registered as follows. Note: Automatic registration is not possible when the base on which you wish to register the handset is being used to make a call. A key press cancels automatic registration. The name of the handset can be changed (page 34).

On the handset Start to register the handset as On the base described in its operating instructions. Press the registration/paging key on the base (page 2) and hold for about 3 seconds. 31 Using several handsets De-registering handsets From any registered Gigaset C35 handset you can de-register any other registered handset. INT Open list of internal users. The handset which you are using is highlighted by <

s Select the handset you wish to de-register. Menu Press the control key. s De-register Handset select and press OK. ~ Enter the current system PIN. OK Press the control key.

Calling all handsets ("group call") INT P Open list of internal users. Press the star key. All handsets are called. Press the end call key. End call a Transferring a call to another handset You can transfer an external call to another handset. INT Open list of internal users. The external caller hears the on hold melody. s Select a handset or Call All handsets and press OK. When the internal number answers: Announce the outside call if you wish. a Press the end call key.

The call is transferred. The call will come back automatically if the internal number does not answer or is busy. Looking for a handset ("paging") You can look for your handset with the help of the base. Briefly press the registration/paging key on the base (page 2). All handsets will ring together ("paging") even if their ringers are switched off. Internal consultation calls While talking to an outside party, you can call an internal user to consult with him or her. INT

Open list of internal users. The external caller hears the on hold melody. s Select the required handset and press OK. End paging /c Briefly press the registration/ paging key on the base (page 2) or press the talk key on the handset.

Making internal calls Internal calls to other handsets registered on the same base are free. Ending a consultation call Menu Calling a specific handset INT sc Or: ~ Open list of internal users. Select a handset and press the talk key. Enter the number of the handset. Press the control key.

s Select Back. You are reconnected with the external caller. 32 Using several handsets Accepting/rejecting call waiting If you receive an external call while conducting an internal call, you will hear the call waiting tone (a short beep). The caller's number will appear in the display if Calling Line Identification is enabled. Internal barge-in The line is busy with an external call.

You see a message to this effect on your display, and you want to barge in on the external call. c Press and hold the talk key. You are linked into the call. Everyone hears a signal tone. End internal call, accept external call: Press the control key. Select Accept Call Waiting and press OK.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4568835)

[GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)

<http://yourpdfguides.com/dref/4568835>

The internal call is ended. You are connected to the external caller. Menu s Ending barge-in a Press the end call key. Everyone hears a signal tone.

If the first internal user presses his end call key a, the other handset that has barged in and the outside caller remain connected. Rejecting an external call Menu Press the control key. Select Reject Call Waiting and press OK. The call waiting tone is turned off. You remain connected with the internal party. The ring tone can still be heard on other registered handsets. s Changing the name of a handset Handsets are automatically given the names "INT 1", "INT 2" etc. when they are registered. You can change these names. The name can be up to 10 characters long.

The changed name is displayed in the list of every handset. INT Open list of internal users. s Select handset. Menu Press the control key. s Select Change Handset.

~ Enter the name. OK Press the control key. Barging-in to an external call You are conducting an external call. An internal party can 'barge in' to this call and take part in the conversation. All the parties are made aware of the 'barge-in' by a signal tone.

Requirement: The Listening in function is activated. Activating/deactivating internal bargein Menu Settings Base Additional Features Listening in a Press and hold (idle status). 33 Using several handsets Changing a handset's internal number A handset is automatically allocated the lowest available number when it is registered. If all of the numbers have been allocated, then number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (16). INT Open list of internal users. s Select handset. Menu Press the control key. s Select Edit Handset Number. ~ Enter a number.

OK Press the control key. a Press and hold (idle status). You will hear the error tone if an internal number has been allocated twice. Repeat the process with an available number. Note: The connection to which the room monitor is diverted must not be blocked by an activated answering machine. Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby. You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.

If you answer an incoming call this will interrupt the room monitor. The active room monitor function considerably reduces the operating time of the handset. Place the handset in the base if necessary. This ensures that the battery does not discharge. Using a handset as a room monitor With this function, a previously stored internal or external number is called when a set noise level in the room is reached.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base). During the call, all keys are locked except the end call key.

The room monitor function remains active after you end the call. It must be activated again if the handset has been switched off. When the room monitor function is active, incoming calls to the handset are indicated without a ring tone and only appear on the display. The display and keys are not illuminated and advisory tones are also turned off. 34 Additional Features Room Monitor Call Internal s Select an internal handset or Call All handsets (if several handsets are registered and you wish all handsets to be called) and press OK. The function is now activated. An internal handset will be called. Or: Menu Additional Features Room Monitor Call External ~ Enter the number of an external phone and press OK. The function is now activated. An external number will be called.

Menu Activating the room monitor and entering the number to be called Setting the sensitivity Menu Additional Features Room Monitor Level s Choose between Low and High and press OK. Using several handsets Deactivating the room monitor Menu Press the control key. Select Room Monitor off and press OK. The function is deactivated. s Deactivating the room monitor remotely Important: The telephone must support touch tone dialling. Take the call from the room monitor and press keys 9 ;. The room monitor function will deactivate after the call ends. There will be no further room monitor calls. 35 Handset settings Handset settings Your handset is preconfigured, but you can change the settings to suit your individual requirements. Activating/deactivating Auto talk When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key c.

Menu Settings Handset Select Auto Answer and press OK (= on). a Press and hold (idle status). Changing the display language You can view the display texts in different languages. Menu Settings Handset Language The current language is indicated by . q Select a language and press OK. a Press and hold (idle status). If you accidentally choose a language you do not understand: Menu 5 1 1 Press keys one after the other. q Select the correct language and press OK. Adjusting the loudspeaker volume You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is set. You are conducting an external call. t Press the control key. q Adjust the volume and press OK. If t is assigned a different function, e.g. toggling (page 13): Menu Volume Select Volume and press OK. q Adjust the volume and press OK.

Setting/changing the screen picture You can display a screen picture when the handset is in idle status. This will replace the idle status display.

It may conceal the date, time and name. The picture is not displayed in certain situations, e.g. during a call or when the handset is de-registered. Menu Settings Screen Picture The current setting is indicated by . You have the following options: No Screen Picture No picture is displayed. Standard Picture The default picture is displayed. Download Picture A picture that you may have downloaded or stored from an SMS (page 23) is displayed. 36 Handset settings Changing ringer tones u Volume: Activating/deactivating the ringer You can turn off the ringer on your handset before you take a call or while the phone is in the idle state. The ringer cannot be re-activated while an external call is in progress.

You can choose between five volumes (15; e.g. volume 2 = ^) and the "crescendo" ring (6; volume increases with each ring = ). u Melody: You can select a melody from the list of pre-loaded ringer melodies, or you can download a melody or install one by SMS (page 23). The first three melodies are the "classical" ring tones.

You can also set different melodies for the following functions: u External Calls: For external calls u Internal Calls: For internal calls To find out how to set ring tones for the base, see page 39.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C355 user guide](http://yourpdfguides.com/dref/4568835)  
<http://yourpdfguides.com/dref/4568835>