




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C475. You'll find the answers to all your questions on the SIEMENS GIGASET C475 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET C475**  
**User guide SIEMENS GIGASET C475**  
**Operating instructions SIEMENS GIGASET C475**  
**Instructions for use SIEMENS GIGASET C475**  
**Instruction manual SIEMENS GIGASET C475**

**SIEMENS**



**Gigaset S880 - S885**

**Gigaset**

Issued by:  
Gigaset Communications GmbH  
Schillerhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark license of Siemens AG  
© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.  
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>

**Manual abstract:**

Rights of modifications reserved. @@ Play back new and old messages (press and hold). @@@@6 Delete current message. 7 Adjust volume during message playback: = quieter; = louder. While an external call is being signalled: adjust ringer tone volume. Gigaset S885 base station Please note: u If the answering machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station. u If the LED flashes although the answering machine is switched off, it means that there is still at least one new message that has not been played back yet. 7 Gigaset S880 base station 1 6 5 2 3 4 1 Registration/paging key Press briefly: search for handsets "paging", see page 25. Press and hold: register handsets and WDCT devices, see page 24. 2

On/Off key: activate/deactivate answering machine.

LED lights up: answering machine is activated. LED flashes: at least one new message is present. Registration/paging key: Press briefly: search for handsets "paging", see page 25. @@.

1 The base station at a glance . . . . 2 Safety precautions . . . . .

. . . . . 5 Gigaset S880/S885 More than just a telephone . . . .

. 7 First steps . . . .

. 7 Pack contents . . . . .

. 7 Installing the base station . . . . .

. 7 Setting up the handset for use . . . . . 8 Using several handsets . .

24 Registering handsets . . . . .

. . . . . Deregistering handsets .

. Locating a handset ("paging") . . . .

. . Making internal calls . . . .

. Listening in to an external call . . . . . Changing the name of a handset . . .

. Changing a handset's internal number . . . .

. . . . . Using a handset as a room monitor . . . . .

. . . . . Changing the display language . . . . . Setting the display .

. . . . . Setting the screen picture .

. . . . . Setting the display backlight . . . . .

. . Activating/deactivating auto answer . . . . .

. . Changing the handsfree/ earpiece volume . . . . .

. . . . . Changing ringer tones .

. Activating/deactivating advisory tones . . . . .

Setting the alarm clock . . . . .

. . Restoring the handset to the factory settings . . . . .

Protecting against unauthorised access . . . . .



.....  
.....  
.....

. Setting up the answering machine . . Resetting fast access for the answering machine using key 1 . . . . . Operating when on the move (remote control) . .

.....  
.....

..... 34 37 38 38 39 Connecting the base station to PABX . . . . .

.....  
.....

. 40 Dialling modes and recall . . . . .

..... 40 Setting pauses . . . . .

.....

..... 40 Switching temporarily to touch tone dialling (DTMF) . . . . .

.....

..... 40 Appendix . . . . .

.....  
.....

.. 41 Care . . . . .

.....

.....

... Contact with liquid . . . . .

.....

..... Questions and answers . . . . .

..... Service (Customer Care) . . . . .

.....

... 41 41 41 42 Notes on the user guide . . . . .

..... 43 Example of a menu input . . . . .

..... 43 Example of multiple line input . . . . .

. 44 Writing and editing text . . . . .

.....

.. 44 Accessories . . . . .

..... 46 Wall-mounting the base station . . . . .

.....

.....

..... 47 Index . . . . .

.....  
.....

... @ Explain their contents and the potential hazards associated with using the telephone to your children.

\$ Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle. Only use the recommended, rechargeable batteries (page 42), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.

Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 41). Do not use your phone in environments with a potential explosion hazard (e.g. paint shops). If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

5 Safety precautions All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Please note: Not all of the functions described in this user guide are available in all countries. 6 Gigaset S880/S885 More than just a telephone Gigaset S880/S885 More than just a telephone Your phone, which has a clearly laid out colour display (65k colours), doesn't just offer you the option of saving up to 150 phone numbers (page 19) it can do much more besides: u You can select frequently used phone numbers at the press of a single key (page 19). u You can designate important people as VIPs so you can identify important calls from the ringer tone (page 19).



[You're reading an excerpt. Click here to read official SIEMENS  
GIGASET C475 user guide  
http://yourpdfguides.com/dref/4569166](http://yourpdfguides.com/dref/4569166)

u You can view missed calls on your phone (page 22). Enjoy using your new telephone! Installing the base station The base station is designed for use in closed, dry rooms with a temperature range of +5 C to +45 C.

Set up the base station at a central point in your apartment or house. You can find instructions on how to mount the base station on the wall at the end of this user guide. Please note: u Never expose the telephone to heat sources, direct sunlight or other electrical appliances. u Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Range and reception strength Range: u Outdoors: up to 300 m u Indoors: up to 50 m First steps Pack contents u one Gigaset S880/S885 base station u u u u u Reception strength: The display shows the quality of the transmission power between the base station and handset: u Good to poor: i u No reception: \ flashes with mains adapter, one Gigaset S88H handset, one phone cord, two batteries, one battery cover, one belt clip, one user guide. 7 First steps Connecting the base station First connect the power supply unit Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! and then the phone jack as shown below and place the cables in the cable recesses. Gigaset S880 2 Inserting the batteries Warning: Use only the rechargeable batteries recommended by Gigaset Communications GmbH \* (page 42). Never use a conventional (nonrechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode.

The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. 2 \* Gigaset Communications GmbH is a licensee of the Siemens trademark. 1 Gigaset S885 1 round. The polarity is indicated in/on the battery compartment. 1 Mains adapter 230 V 2 Phone jack with phone cord Insert the batteries the right way Pile the charge capacity of the batteries will decrease for technical reasons. 08.03.17 INT 07:15 Your answering machine is set with a standard announcement. Your phone is now ready for use. If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 41) or contact our customer service department (Customer Care, please see the warranty card).

10 Operating the handset Operating the handset Activating/deactivating the handset a In idle status, press and hold the end call key (confirmation tone). v u Open the submenu or confirm the selection. Go back one menu level or cancel. In input fields You can use the control key to move the cursor up t, down s, right v or left u. Activating/deactivating the keypad lock # Press and hold the hash key.

You will hear the confirmation tone. The icon appears in the display when the keypad lock is activated. The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished. During an external call s u t Open the directory.

Initiate internal consultation call and mute. Adjust the loudspeaker volume for earpiece and handsfree mode. Display keys The function of the display keys changes depending on the particular operating situation. Example: INT Control key 1 2 In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g. v for "press right on the control key". The control key has a number of different functions: 1 Current display key functions are shown in the bottom display line. 2 Display keys When the handset is in idle status s v u t Open the directory. Open the main menu. Open the list of handsets.

Call up the menu for setting the handset's call volume (page 30), ringer tones (page 30) and advisory tones (page 31). In the main menu, in submenus and lists t/s Scroll up/down line by line. The most important display icons are: Open the main menu. Options Open a context-dependent menu. W Delete key: deletes one character at a time from right to left. Go back one menu level or cancel operation. Copy number into directory. Y Divert external call to answering machine (S885 only). Open the last number n enter the number. You can cancel the dialling operation with the end call key a.

You are shown the duration of the call while the call is in progress. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d. You can accept the call by: Pressing the talk key c. Pressing the handsfree key d. Gigaset S880: Press the display key Y to divert the call to the answering machine (page 37).

If the handset is in the charging cradle and the Auto Answer function is activated (page 29), the handset will take a call automatically when you lift it out of the cradle. If the ringer tone is intrusive, press the Silence display key. You can take the call as long as it is displayed on the screen. Gigaset S885: Press the display key Accept. Please note: Dialling using the directory, l (page 1, page 19) or the calls and last number redial list (page 22/page 21) saves you from having to re-enter numbers.

Ending a call a Press the end call key. Calling Line Identification When you receive a call, the caller's number is displayed on the screen if the following conditions are met: u Your network provider supports CLIP CLI (Calling Line Identification): the caller's number is transmitted. CLIP (Calling Line Identification Presentation): the caller's number is displayed. u You have arranged CLIP with your network provider. u The caller has arranged CLI with the network provider. 16 Making calls Call display with CLIP/CLI If the number of the caller is saved in your directory, you will see their name, and if you have assigned a CLIP picture to that caller, this will also be displayed. Activating/deactivating handsfree mode Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. 1234567890 Accept Silence Gigaset S880 1 Switching between earpiece and handsfree mode 2 d Press the handsfree key. During a call and when listening to the answering machine (Gigaset S885 only), activate or deactivate handsfree.

If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key d while placing the handset in the base station. If the handsfree key d does not light up, press the key again. For how to adjust the loudspeaker volume, see page 30. Or 1234567890 Gigaset S885 1 2 Y Silence 1 Ringer tone icon 2 Number or name of caller Muting You can deactivate the microphone in your handset during an external call.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>

The other party hears hold music. u Press the control key on the left to mute the handset. " Press the display key to reactivate the microphone. You can turn the hold music on and off (page 33). The following is displayed in place of the number: u External, if no number is transmitted. u Unavailable, if the caller has not arranged Calling Line Identification.

Handsfree talking In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call. 17 Using the network mailbox Using the network mailbox The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have requested it from your network provider. Calling the network mailbox Press and hold.

You are connected straight to the network mailbox. Press handsfree key d if required. You will hear the network mailbox announcement. d Configuring fast access for the network mailbox With fast access, you can dial the network mailbox or the integrated answering machine (Gigaset S885 only) directly. Gigaset S880: Fast access is set for the network mailbox.

You only need to enter the number of the network mailbox. Gigaset S885: The integrated answering machine is set for fast access. Instead of using this, you can specify the network mailbox, such as the T-NetBox provided by T-Com. Ask your network provider about this. Viewing the network mailbox report When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (page 21). v Voice Mail Set Key 1 Network Mailb. Select and press OK (= on).

~ Enter the number for the network mailbox. Save Configuring fast access for the network mailbox and entering the network mailbox number Press the display key. a Press and hold (idle status). The setting for fast access applies to all Gigaset S88H handsets. 18 Using the directory and lists Using the directory and lists The options are: u Directory u Last number redial list u Call history u Answering machine list (Gigaset S885 only) You can save a total of 150 entries in the directory. You create the directory for your own individual handset. You can also send lists/ entries to other handsets (page 20). Order of directory entries The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Selecting entries in the directory Directory In the directory you can store numbers and corresponding names. With the handset in idle status, open the directory by pressing the s key. s Open the directory. You have the following options: u Use s to scroll through the entries until the required name is selected. u Enter the first character of the name, or scroll to the entry with s if required.

Length of entries Number: Name: max. 32 digits max. 16 characters Dialling with the directory s c s (select entry). Press the talk key. The number is dialled. Please note: For quick access to a number from the directory (quick dial), you can assign the number to a key. Managing directory s s (select entry). Saving a number in the directory s New Entry Change multiple line input: Number Enter the number. Name Enter name. You can enter Chinese characters in this field, see page 44.

Quick Dial: Select key for quick dial. Save the changes. Viewing entries View Press the display key. The entry is displayed. Back with OK. Editing entries View Edit Press the display keys one after the other. Carry out changes and save. 19 Using the directory and lists Using other functions Options Press the display key. The following functions can be selected with q: Display Number To edit or add to a saved number, or to save it as a new entry, press after the number is displayed. Edit Entry Edit selected entry.

Delete Entry Delete selected entry. VIP Entry (directory only) Mark a directory entry as a VIP (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone. Precondition: Calling Line Identification (page 16). Copy Entry Send a single entry to a handset (page 20).

Delete List Delete all entries in the directory Copy List Send complete list to a handset (page 20). Available Memory Display the available entries in the directory. Please follow this sequence: 1. Enter the IP access number. 2.

Insert "P" by pressing and holding the e key if necessary. 3. Enter IP number and password, end with #. End with OK, then enter name, such as "IP" Note: The entry method may differ when using different IP Cards. VIP numbers can be entered directly. Setting the shortcut key MENU Scroll touShortcut Scroll u to select a number (2-9), for example: Shortcut: 2 OK Using the shortcut key By pressing and holding the shortcut key, the relevant IP or VIP number will be dialled. (For example: press and hold key 2, the IP number will be dialled, then dial the long distance number) Sending the directory to another handset Preconditions: u The sending and receiving handsets must both be registered to the same base station. u The other handset and the base station can send and receive directory entries. s Using quick dial keys Press and hold the required quick dial key (page 19). s (select entry) Options (open menu) Copy Entry / Copy List to Internal s IP Dialling You can dial an IP number directly by press the IP key and select the IP number.

Storing the IP number Press the IP key New Entry OK Select the internal number of the receiving handset and press OK. You can transfer several individual entries one after the other by responding Yes to the Copy next entry? prompt. A successful transfer is confirmed by a message and confirmation tone on the receiving handset. 20 Using the directory and lists Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone When a name is displayed, you can display the corresponding phone number by pressing the display key View. rings or if the memory of the receiving handset is full. Managing entries in the last number redial list Press the key briefly. Select entry. Options Open menu. The following functions can be selected with q: Display Number (as in the directory, page 20) Copy to Directory Copy an entry to the directory (page 19).

Delete Entry (as in the directory, page 20) Delete List (as in the directory, page 20) c s Copying a displayed number to the directory Numbers displayed in a list, e.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>



g. the call history or the last number redial list, or during a call can be copied to the directory. A number is displayed: Options Copy to Directory Complete the entry, see page 19. Gigaset S885: The message playback is interrupted during the number transfer from the answering machine list. Copying a number from the directory There are many operating situations in which you can open the directory, e.g. to copy a number. Your handset need not be in idle status. Depending on the operating situation, open the directory with s or or Directory.

q Select an entry (page 19). Opening lists with the message key You can use the message key f to open the following list selection: u Answering machine list (Gigaset S885 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox (page 18). u Call history An advisory tone sounds as soon as a new message arrives in a list. The f key flashes (it goes off when the key is pressed). In idle status, the display shows an icon for the new message: Icon New message... ..

in the answering machine list (Gigaset S885 only) or on the network mailbox ... in the call history Last number redial list The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the directory, then the appropriate name will be displayed. Manual last number redial c s c Press the key briefly. Select entry. Press the talk key again. The number is dialled.

The number of new entries is shown beneath the corresponding icon. 21 Using the directory and lists List selection If you press the message key f, only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are identified in bold: Messages & Calls Calls List: Mailbox (4) (2) List entry New messages are displayed at the top. Example of list entries: All Calls Susi Sorglos 07/11/29 Louise Miller 07.11.

29 11:15 12:20 Delete Options " OK. OK Select a list with q. To open, press v or If only one list contains entries, no list selection is offered and the relevant list is displayed immediately. u List type (in header) u Status of entry Bold: new entry u Number or name of caller Call history Precondition: Calling Line Identification (CLIP, page 16) Depending on the type of list set, the call history contains u accepted calls ( ) u missed calls u calls recorded by the answering machine (, Gigaset S885 only) Depending on the type of list set, all numbers of the last 30 incoming calls are saved or just the missed calls are saved. Setting the call history type v Base Calls List Type Missed Calls / All Calls Select and press OK ( = on).

a Press and hold (idle status). The calls list entries are retained when you change the list type. You can add the caller's number to the directory (page 21). u Date and time of call (if set, page 10) u Type of entry: accepted calls ( ) missed calls calls recorded by the answering machine (, Gigaset S885 only) Pressing the display key Delete deletes the marked entry. After pressing the display key Options you can select more functions with q: Copy to Directory Copying a displayed number to the directory. Delete List Delete complete list. When you quit the call history, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold. Answering machine list (Gigaset S885 only) You can use the answering machine list to listen to the messages that are on the answering machine.

22 Using the directory and lists Automatic network provider preselection (preselection) You can specify a preselection number which is automatically placed in front of numbers when you dial them. u The "with preselection" list contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used. u The "without preselection" list contains the "exception to the rule". Example: You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection. If, for example, you want 081 to still be dialled without preselection, enter 081 for "without preselection". When dialling, the first digits of the selected numbers are compared with both lists after the talk/handsfree key is pressed: u The preselection number is not prefixed if the dialled number does not match any entries in the two lists matches an entry in the "without preselection" list u The preselection number is prefixed if the first digits of the dialled number match with only one entry in the list "with preselection". Saving preselection numbers v Base Preselection Preselect No. ~ Enter or change the preselection number. Save Press the display key.

a Press and hold (idle status). Save or change entries in the preselection lists Each of the two lists can contain 20 entries, each with 6 digits. Numbers may be prefixed according to the country in the "with preselection" list. This means e.g. that all national calls or calls to the mobile network are automatically linked to the preselection number you have saved previously. v Base Preselection With Preselect / Without Presel. s Select entry. Edit Press the display key. ~ Enter or edit first digits of number.

Save Press the display key. a Press and hold (idle status). Permanently deactivating preselection Delete the preselection number (page 23). 23 Using several handsets Using several handsets Registering handsets You can register up to four handsets to your base station. Manual registration of Gigaset S88H to Gigaset S880/S885 You must activate manual registration of the handset on both the handset and the base station. Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.

Automatic registration of Gigaset S88H to Gigaset S880/S885 Precondition: The handset must not already be registered to a base station. Registering the handset to the base station occurs automatically. Place the handset in the base station with its display facing forward. Registration can take up to 5 minutes.

While this is happening, Registr.Procedure appears in the display and the name of the base station flashes. When the handset has registered, its screen displays its internal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (14). If all internal numbers 14 have been assigned, number 4 is overwritten, provided the handset with the internal number 4 is in idle status. On the handset v ~ Handset Register H/Set Enter the system PIN of the base station (the default is 0000) and press OK. Base 1 flashes in the display. On the base station Within 60 sec. press and hold the registration/paging key on the base station (page 2) (approx.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>



3 sec.). Registering other handsets You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows. On the handset Start to register the handset as described in its user guide. Please note: Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.

Each key press interrupts the automatic registration. If automatic registration does not work, you will have to register the handset manually. You can change the name of the handset (page 27). On the base station Press and hold the registration/paging key on the base station (page 2) (approx. 3 sec.). 24 Using several handsets Deregistering handsets You can deregister any other registered handset from any registered Gigaset S88H handset. u Open list of internal parties. The handset you are currently using is indicated by <. s Select the internal party you wish to deregister.

Options Open menu. De-reg. H/Set No. Select and press OK. ~ Enter the current system PIN and press OK. Yes Press the display key. Calling all handsets ("group call") u \* Initiate internal call. Press the star key. All handsets are called. Ending a call a Press the end call key.

Transferring a call to another handset You can transfer an external call to another handset (connect). u Open the list of handsets. The external participant hears hold music if activated (see page 33). s Select a handset or Call All and press OK. When the internal participant answers: If necessary announce the external call.

a Press the end call key. The external call is transferred to the other handset. If the internal participant does not answer or the line is busy, press the display key End to return to the external call. When transferring a call you can also press the end call key a before the internal participant answers. Then, if the internal participant does not answer or the line is busy, the call will automatically return to you (the display will show Recall).

Locating a handset ("paging") You can locate your handset using the base station. Briefly press the registration/paging key on the base station (page 2).

@@Enter the number of the handset. Initiate internal call. Select handset. Press the talk key. @@You are conducting an external call: u Open the list of handsets. The external participant hears hold music if activated (see page 33). s Select handset and press OK. You are connected with the internal participant.

Either: End Press the display key. You are reconnected with the external participant. Or: Conference Press the display key. @@The call waiting tone is turned off. You remain connected with the internal participant. @@You are conducting an external call. @@@@Your screen will display information to that effect. You want to listen in to the external call. c Press and hold the talk key. You are linked into the call.

All participants hear a signal tone. @@@@The internal call is ended. You are connected to the external participant. Accept Ending listening in a Press the end call key. All participants hear a signal tone.

If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. 26 Using several handsets Changing the name of a handset The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters.

The changed name is displayed in every handset's list. u Open list of handsets. Your own handset is indicated by <. s Select handset. Edit Press the display key. ~ Enter name. Save Press the display key. Using a handset as a room monitor If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. @@@@3 minutes (depending on the base station). @@The handset's speaker is muted.

@@@@You can change the internal number of all registered handsets (14). u Open list of handsets. Your own handset is indicated by <.

Options Open menu. Edit H/Set No. Select and press OK. The list of handsets is displayed. s The current number flashes. Select a handset. ~ Enter the new internal number (14).

The handset's old number is overwritten. Save Press the display key to save the input. a Press and hold (idle status). @@@@For example, test its sensitivity. @@@@If necessary, place the handset in the charging cradle.

This ensures that the batteries do not run down. @@The microphone must be directed towards the baby. @@Call to: Press the display key Edit and enter destination number. External number: Select number from the directory or enter directly. Only the last 4 digits are displayed.

@@Store number with Save. Level: Set noise level sensitivity (Low or High). @@ Accept the call from the room monitor and press keys 9 ;. The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. @@@@Edit Press the display key. X Delete existing number. @@@@v Handset Language The current language is indicated by .

@@Delete Press the display key. Edit Press the display key. @@ Save the changes. a Press and hold (idle status). If you accidentally choose a language you do not understand: v54 Press keys in sequence. s Select the correct language and press OK. 28 Setting the handset Setting the display You have a choice of four colour schemes and several different contrasts. v Display Colour Scheme Select and press OK. s Select a colour scheme and press OK (= current colour). a Press briefly.

Contrast Select and press OK. r Select contrast. Save Press the display key. a Press and hold (idle status). Setting the display backlight Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight.

If the base station is turned on, the display is permanently dimmed. v Display Backlight The current setting is displayed. Change multiple line input: In Charger Select On or Off. Without Charger Select On or Off. Please note: With the On setting, the standby time of the handset can be significantly reduced. Save Setting the screen picture You can display a screen picture (digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name. The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered. If the screen picture has been activated, the menu item Screen Picture is marked with . v Display Screen Picture The current setting is displayed. Change multiple line input: Activation: Select On (screen picture is displayed) or Off (no screen picture). Selection: Change screen picture if necessary (see below).

Save changes: (page 44). If the screen picture conceals the display, briefly press a to show the idle display with time and date. a Press the display key. Press and hold (idle status).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569166)

[GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)

<http://yourpdfguides.com/dref/4569166>

Activating/deactivating auto answer If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key c. v Handset Auto Answer Select and press OK (= on). a Press and hold (idle status). 29 Setting the handset Changing the handsfree/earpiece volume You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. t Handset Volume r Set the earpiece volume. s Scroll to the Speaker: line.

r Set the handsfree volume. Save Press display key if necessary to save the setting permanently. Setting the volume during a call: t Press the control key. r Select volume. Save Press display key if necessary to save the setting permanently. The setting will automatically be saved after approx. 3 seconds, if not then press the display key Save. If t is assigned to another function Options Open menu. Volume Select and press OK. Configure setting (see above).

You can set different ringer tones for the following functions: u Ext. Calls: for external calls u Internal Calls: for internal calls u All: the same ringer tone for all functions Settings for individual functions Set the volume and melody depending on the type of signalling required. t Ringer Settings q Select setting, e.g. Ext. Calls and press OK. r Set volume (16). s Scroll to the next line. r Select melody. Save Press the display key to save the setting.

Same ringer tone for all functions t Ringer Settings All Set volume and ringer tone (see "Settings for individual functions"). Save Press the display key to confirm the prompt. a Press and hold (idle status). Please note: You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 14). Please note: You can also set the call volume, the ringer tones and the advisory tones via the menu (see page 14). Activating/deactivating the ringer tone Changing ringer tones u Volume: You can choose between five volumes (15; e.g. volume 2 = ^) and the "crescendo" ring (6; volume increases with each ring = ). u Ringer tones: You can select various ringer tones. You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call.

The ringer tone cannot be reactivated while an external call is in progress. Deactivating the ringer tone permanently \* Press and hold the star key. The icon appears in the display. 30 Setting the handset Reactivating the ringer tone \* Press and hold the star key. Deactivating the ringer tone for the current call Silence Press the display key.

Activating/deactivating the alert tone In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a short tone ("Beep") instead of the ringer tone. @@A call will now be signalled by one short alert tone. appears in the display. Confirm.

: Select On or Off. Battery: Select On, Off or In Call. @@ Save changes: (page 44). @@@@Time: Enter the wake-up time in 4-digit format. Melody: Select melody. Volume: Set the volume (16). Save changes: (page 44). You will see the icon. @@The wake-up call sounds for 60 seconds. is shown in the display.

@@@OFF Press the display key. The wake-up call is deactivated. Or Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. @@@@This will not affect entries in the directory, call history, or the handset's registration to the base station. v Yes Changing the system PIN You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only by you. Gigaset S885: Setting a system PIN facilitates remote operation of the answering machine (page 39). v Base System PIN ~ Enter the current system PIN and press OK. ~ Enter new system PIN. For security reasons, the PIN is shown as four stars (\*\*\*\*).

s~ Jump to the next line, re-enter new system PIN and press OK. a Press and hold (idle status). Handset Reset Handset Press the display key. Press and hold (idle status). a 32 Setting the base station Resetting the system PIN If you have forgotten your system PIN you can reset the base station to the original code 0000: Disconnect the power cord from the base station.

Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while. The base has now been reset and the system PIN 0000 set. Activating/deactivating music on hold v Base Music on hold Press OK to activate or deactivate music on hold (= on). Restoring the base station to the factory settings When the settings are restored u handsets are still registered, u the system PIN is not reset.

v ~ Yes Please note: All handsets are deregistered and must be reregistered. Changing ringer tones u Volume: Base Base Reset Enter the system PIN and press OK. You can choose between five volumes and the "crescendo" ring, see page 30. Select "0" to deactivate the base station ringer tone. u Ringer tones: You can set a ringer tone melody for external calls, see page 30. v Base Ringer Settings For how to adjust the settings, see page 30. Press the display key. Cancel the restoring process by pressing a or the display key No. a Press and hold (idle status) 33 Operating the answering machine of the Gigaset S885 base station Operating the answering machine of the Gigaset S885 base station You can operate the answering machine that is integrated into the base station using the keys on the base station (see page 2), via the handset or by remote control (other phone/mobile phone). You can only record your own announcement messages using the handset.

The phone is supplied with pre-recorded announcements for answer and record mode and for announce only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used. Recording a personal announcement/ announce only v Voice Mail Announcements Record Announce / Record Anc Only OK Press the display key to start the recording. You hear the ready tone (short tone). Now speak your announcement (at least 3 secs.). End Press the display key to end the recording. Cancel the recording with a or ". Restart the recording with OK. After recording, the announcement is played back for you to check.

You can rerecord the announcement with New. Announcement mode You can use the answering machine in two different modes. u In Ans. & Record mode, the caller hears the announcement and can then leave a message. u In Announce Only mode, the caller hears your announcement but cannot leave a message. Operation via the handset The handset loudspeaker activates automatically if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key d.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>

Please note: u Recording ends automatically if the Activating/deactivating the answering machine v Voice Mail Ans Machine (= on) When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set (page 10), an appropriate announcement is made. The icon appears in the display.

maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds. u If you cancel the recording, the prerecorded announcement will be used again. u If the answering machine's memory is full, it will switch to Announce Only mode. Delete old messages and the answering machine will automatically switch back to Ans. & Record mode. Repeat recording if required. 34 Operating the answering machine of the Gigaset S885 base station Playing back announcements v Voice Mail Announcements Play Announce / Play Anc Only If you have not recorded a personal announcement, the relevant pre-recorded announcement is played. Record a new announcement while playing back announcement: New Press the display key. u If the answering machine's memory is full, it will switch to Announce Only mode. Delete old messages and the answering machine will automatically switch back to Ans.

& Record mode. Repeat recording if required. Delete old messages. The answering machine automatically switches back to the set mode once deletion is complete. You can then reselect the required recording mode. Setting "Answer & Record" or "Announce Only" by toggling You can use the Ans Mode Time setting to change over the announcement mode for a specific period. Example: Ans. & Record mode is set. If you activate Ans Mode Time and set a period

(e.g.

18:00 to 08:00) the answering machine switches to Announce Only mode for this period. Outside this period (08:01 to 17:59), Ans. & Record mode is active.

v Voice Mail Announcements Set Ans. Mode Ans Mode Time (= on) Change multiple line input: From: Enter hours/minutes for the start of the period in 4-digit format.

Until: Enter hours/minutes for the end of the period in 4-digit format. Activation: Select On or Off. Save changes with Save. If the messages memory is full and Activation: On has been selected, saving is interrupted and you will receive an instruction to delete old messages. Delete old messages and repeat the setting.

As soon as you change the announcement mode (page 35), the Ans Mode Time function is automatically deactivated. Deleting announcements/announce only Del Anc Only Yes Press the display key to confirm the prompt. a Press and hold (idle status). Once you have deleted your announcement, the relevant pre-recorded announcement will be used again. Voice Mail Announcements Del Announce / v Selecting announcement mode You can choose between Ans. & Record and Announce Only. v Voice Mail Announcements Set Ans. Mode Ans. & Record / Announce Only (= on) a Press and hold (idle status). The selected mode is saved even after the answering machine is deactivated.

If the memory for messages is full in Ans. & Record mode, the answering machine will switch to the Announce Only mode and you will receive an instruction to delete old messages. 35 Operating the answering machine of the Gigaset S885 base station Playing back messages The date and time of each message is logged (provided this has been set, page 10) and displayed during the playback. If Calling Line Identification is activated, the caller's number or name is displayed. If the caller's number is saved in the directory, their name is displayed. s or 3 Skip to the next message. Press twice to skip to the next but one message. If playback is interrupted for over a minute, the answering machine returns to idle status. Marking a message as "new" A previously played back "old" message is displayed as a "new" message again. During message playback: \* Press the star key.

An announcement informs you of the message's new status. Or: Options Playing back new messages New messages that have not yet been heard are indicated by the icon in the display and by the f key flashing on the handset. f Press the message key. Ans M.: Select and press OK.

An announcement informs you if there are new or old messages. If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains. If the message has been saved with the date and time you will hear an appropriate announcement before playback begins. Open menu.

Mark as New Select and press OK. Playback of the current message is cancelled. Playback of next message starts, if applicable. The f key on the handset flashes. Copying the telephone number of a message to the directory See "Copying a displayed number to the directory", page 21. Playing back old messages You can listen to old messages if there are no more new messages. Begin playback as described under "Listening to new messages". After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old". Deleting messages You can either delete all old messages together or individually.

Deleting all old messages During playback or pause: Options Press the display key. Del All Old Msgs Select and press OK. Yes Press the display key to confirm the prompt. Stopping and controlling playback During message playback: 2 Pause playback. Press 2 again to resume. t or Return to the start of the current message. Press twice to go back to the previous message. Deleting individual old messages During playback or pause: Delete Press the display key.

36 Operating the answering machine of the Gigaset S885 base station Picking up a call from the answering machine You can pick up a call while the answering machine is recording or is being operated via remote operation: c / Accept Press the talk or display key. Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The f key on the handset flashes. You can accept the call even if it is not signalled on the handset. Diverting an external call to the answering machine You can divert an incoming external call to the answering machine even if it is deactivated. Precondition: Sufficient memory space is available on the answering machine.

An external call is signalled on the handset: Y Press the display key. The answering machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 38) is ignored. Two Way Record Select and press OK. The two-way recording is indicated on the display by an advisory text and is added to the answering machine list as a new message.

End Press the display key to stop the two-way recording. The maximum recording time depends on the memory available on the answering machine.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>

If the memory is full you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message. If the answering machine was in Ans. & Record mode, it will switch to the Announce Only mode. You will receive an instruction to delete old messages. Delete old messages. The answering machine automatically switches back to the set mode once deletion is complete. Activating/deactivating call screening During recording of a message you can screen a call via the loudspeaker of registered handsets. Activating/deactivating two-way recording You can record an external call with the answering machine.

Inform the caller that the call is being recorded. Options Open menu. Permanently activating/deactivating call screening v Voice Mail Call Screening Handset (= on) a Press and hold (idle status). You can switch off the Call Screening function on the handset during the recording. Switching off call screening for the current recording Silence Press the display key. 37 Operating the answering machine of the Gigaset S885 base station Setting up the answering machine The answering machine has already been preset at the factory. Make individual settings using the handset. Setting the recording quality Set the quality you require for your recordings. The options are: Standard, High, Excellent. If the quality is higher, the maximum recording time is reduced. v Voice Mail Record Quality r Select the recording quality. Save Press the display key. Call acceptance/charge saving function for remote operation You can set when you want the answering machine to accept a call. The options are: 0 sec., after 10 sec., 18 sec. or 30 sec. and the cost-saving setting Automatic. In Automatic mode, the following applies for call acceptance: u If there are no new messages, the answering machine accepts a call after 18 seconds. u If new messages are present, the answering machine accepts a call after 10 seconds. When operating remotely you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up now. v Voice Mail Ring Delay r Select 0 sec. / 10 sec. / 18 sec. / 30 sec. / Automatic. Save Press the display key. a Press and hold (idle status).

Changing the language for voice prompt and pre-recorded announcement v L 5 502 Enter digits and press OK to set Chinese. 2 OK to set English. Resetting fast access for the answering machine using key 1 The integrated answering machine has already been preset for fast access at the factory. However, if you have set the network mailbox for fast access (page 18), you can reset this setting. v Voice Mail Set Key 1 Answer Machine / Network Mailb. Select and press OK. a Press and hold (idle status). After you have selected the network mailbox or the answering machine, press and hold key . You will be connected directly. The setting for fast access applies to all Gigaset C47H handsets.

Setting the recording time You can set the maximum recording time of a message. The options are: 1, 2, 3 mins or Maximum. v Voice Mail Message Length r Select recording time. Save Press the display key. 38 Operating the answering machine of the Gigaset S885 base station Operating when on the move (remote control) You can check and activate your answering machine from any other telephone (hotel, pay phone etc.). Preconditions: u You have set a system PIN other than 0000 (page 32). u The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys.

Alternatively, you can use a code transmitter (available from your mobile phone retailer). Calling the answering machine and playing back messages Dial your own number. When you hear your announcement, press 9 and enter the system PIN. You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad. The following keys are used for operation: A To return to the start of the current message. Press twice to go back to the previous message. B Stop playback. Press again to resume.

3 Go to the next message. : Mark message as "new". 0 Delete current message. ~ 9~ 39 Connecting the base station to PABX Connecting the base station to PABX The following settings are only necessary when your PABX requires them; see the PABX user guide. Setting pauses Changing pause after line seizure You can change the length of pause that is inserted between pressing the talk key c and sending the number. v Open menu. 550 L Press keys. ~ Enter a digit for the length of the pause (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.

) and press OK. Dialling modes and recall The current setting is indicated by . Changing the dialling mode The following dialling modes can be selected: u Touch tone dialling (DTMF) u Dial pulsing (DP) v Base Add. Features Dialling Mode s Select dialling mode (= on) and press OK. a Press and hold (idle status).

Changing the pause after the recall key You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX). v Open menu. 550 2 Press keys. ~ Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press OK. Setting recall Your phone is preset at the factory for operation on the main connection (recall 250 ms).

For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX. v Base Add. Features Recall s Select recall and press OK (= set value). Possible values are: 80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms, 800 ms. a Press and hold (idle status). Switching temporarily to touch tone dialling (DTMF) If your PABX still operates with dial pulsing (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call. Precondition: You are conducting a call or have already dialled an external number.

\* Press the star key. After the call is ended, dial pulsing is automatically activated again. 40 Appendix Appendix Care Wipe the base station, charging cradle and the handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth. This can cause a build up of static. The keys of a handset do not respond when pressed. The keypad lock is activated. Press and hold the hash key # (page 11). "Base station x" flashes on the display. 1.

The handset is outside the range of the base station. Move the handset closer to the base station. Contact with liquid ! 2. The handset has been deregistered. Register the handset (page 24).

3. The base station is not turned on. Check the base station's mains adapter (page 8). Base Search flashes in the display. No base station turned on or in range.

Move the handset closer to the base station.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569166)

[GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)

<http://yourpdfguides.com/dref/4569166>



Check the base station's mains adapter (page 8). If the handset has come into contact with liquid: 1. Switch the handset off and remove the batteries immediately. 2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4.

Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. Handset does not ring. The ringer tone is switched off. Activate the ringer tone (page 30). You cannot hear a ringer/dialling tone from the fixed network. The phone cord supplied has not been used or has been replaced by a new cord with the wrong jack connections. Please always use the phone cord supplied or ensure that the jack connections are correct when purchasing from a retailer (page 8). Questions and answers If you have any questions about using your phone, visit us at [www.gigaset.com](http://www.gigaset.com).

The table below contains a list of common problems and possible solutions. The display is blank. 1. The handset is not turned on. Press and hold the end call key a. Error tone sounds after system PIN prompt. You have entered the wrong system PIN. Reset the system PIN to 0000 (page 33). Forgetting the system PIN.

Reset the system PIN to 0000 (page 33). The other party cannot hear you. You have pressed the u (INT) key. The handset is "muted". Activate the microphone again (page 17). 2. The battery is flat. Charge or replace the batteries (page 8). 41 Appendix The number of the caller is not displayed despite CLIP. Calling Line Identification is not enabled.

The caller should ask the network provider to release Calling Line Identification (CLI). You hear an error tone when keying an input (a descending tone sequence). Action has failed/invalid input. Repeat the operation. Watch the display and refer to the user guide if necessary. You cannot listen to messages on the network mailbox. Your phone system is set for dial pulsing. Set your phone system to touch tone dialling. Gigaset S885 only: No time is specified for a message in the call history. We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life: u Sanyo Twicell 650 u Sanyo Twicell 700 u Panasonic 700 mAh "for WDCT" u GP 700mAh u Yuasa AAA Phone 700 u Varta Phone Power AAA 700mAh u GP 850 mAh u Sanyo NiMH 800 u Yuasa AAA 800 The device is supplied with two recommended batteries. Handset operating times/charging times The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used.

@@@1. You have entered the wrong PIN. Enter the system PIN again. 2.

The system PIN is still set to 0000. Change the system PIN (page 32). @@Delete old messages. Play back new messages and delete. Service (Customer Care) Hotline: 4006 706 007 4 5 7 8 Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.

2 V Capacity: 600/1200 mAh 42 5 7 9 11 Notes on the user guide At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: [www.gigaset.com/cn](http://www.gigaset.com/cn) Notes on the user guide This section explains the meaning of certain typographical conventions that are used in this user guide. Example of a menu input The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes. v Base station power consumption In standby mode: Gigaset S880: approx. 1.2 watt Gigaset S885: approx.

1.6 watt During a call: Gigaset S880: approx. 1 watt Gigaset S885: approx. 1.5 watt General specifications WDCT standard No. @@ Select the line Settings using the control key q. @@The Settings submenu is displayed. @@ Press v or press the display key OK to confirm the selection. @@Press v or press the display key OK to confirm the selection. Select contrast and press the display key Save.

Environmental +5 C to +45 C; conditions in oper- 20% to 75% humidity ation Dialling mode DTMF (touch tone dialling)/DP (dial pulsing) r Press on the right or left of the control Press the display key Save to confirm the selection. 43 key to set the contrast. Notes on the user guide Press and hold the end call key until the handset returns to idle status. a Press and hold (idle status). Save the changes.

Press the display key Save. Then press and hold the a key. The handset switches to idle status. Example of multiple line input In many situations you can change settings or enter data in several lines of a display. In this user guide icons are used to guide you step by step through multiple line input.

This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes. You will see the following display (example): Date/Time Date: [08.03.17] Time: 11:11 Writing and editing text The following rules apply when writing text: u Control the cursor with u Characters are inserted on the left of the cursor. u Press the star key \* to show the table of special characters. Select the required character, press the display key Insert to insert the character at the cursor position. u The first letter of the name of directory entries is automatically capitalised, followed by lower case letters. Writing names Save Press the relevant key several times to enter letters/characters.

Standard characters Date: Enter year, month and day in 6-digit format. The second line is marked with [ ] to show it is active. Enter the date using the digit keys. 1x 1) 2x 3x 4x 5x 6x 7x 8x 9x 10x Time: Enter hours/minutes in 4-digit format. Press the s key. The fourth line is marked with [ ] to show it is active. Enter the date using the digit keys. 2 3 4 5 L M N O Q a d g j m p t w . I b e h k n q u x , c f i l o r v y ? 2 3 4 5 6 s 8 z ! 7 9 0 1) Space When you press and hold a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

44 Notes on the user guide Setting the text input mode Whether you can enter upper case letters, lower case letters, digits or Chinese characters, depends on the input mode. If you have set your phone to the Chinese language, then the output mode is Chinese, otherwise it is "Abc" (1st letter upper case, all others lower case).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C475 user guide](http://yourpdfguides.com/dref/4569166)  
<http://yourpdfguides.com/dref/4569166>