




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C47H. You'll find the answers to all your questions on the SIEMENS GIGASET C47H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET C47H
User guide SIEMENS GIGASET C47H
Operating instructions SIEMENS GIGASET C47H
Instructions for use SIEMENS GIGASET C47H
Instruction manual SIEMENS GIGASET C47H

SIEMENS



Gigaset C47H

Gigaset

Issued by:
Gigaset Communications GmbH
Schlierhorst 66, D-48395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG
© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>

Manual abstract:

Rights of modifications reserved. @@ 1 Safety precautions . .

.
.

3 Gigaset C47H More than just a telephone 5 First steps

.

.

5 Pack contents

.

. 5 Setting up the charging cradle

. 5 Setting up the handset for use

. 5 Setting the handset

. 16 Quick access to functions

. Changing the display language

. Setting the display

.

. Setting the screen picture

. Setting the display backlight

.

. Activating/deactivating auto answer

.

. Changing the handsfree/ earpiece volume

.

. Changing ringer tones

.

. Activating/deactivating advisory tones

.

.

. Setting the alarm clock

.

. Restoring the handset to the factory settings

.

.

. Care

.

.

.

Contact with liquid

.

. Questions and answers

. Service (Customer Care)

.

. Authorisation

.

. Guarantee Certificate United Kingdom

.

.

. Guarantee Certificate Ireland

.

.

. Specifications

.

.....	@@..
.....	
. 8	Control key
.....	
.....	8 Display keys
.....	
.....	9 Reverting to idle status
.....	
.. 9	Menu guidance
.....	
.....	10 Correcting incorrect entries
.....	
.....	10 Appendix
.....	
.....	20 ECO DECT
.....	
....	10 Making calls
.....	
.....	
. 11	Making an external call
..	Ending a call
.....	
.....	
..	Accepting a call
.....	
....	Handsfree talking
.....	
.....	Muting
.....	
.....	Making an internal call
.....	
. 11 11 11 11 11 12	Using the directory and lists
.....	
.....	
.....	12 Directory/call-by-call list
.....	
.. 12	Last number redial list
.....	
.....	14 Opening lists with the message key
.....	
.....	
.. 14	Notes on the user guide
....	25 Example of a menu input
.....	
....	25 Example of multiple line input
25	Writing and editing text
.....	
.. 26	Accessories
.....	
.....	26 Index
.....	
.....	
.....	
27	Using a handset as a room monitor
.....	

@ Explain their contents and the potential hazards associated with using the telephone to your children. \$ Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle. Only use the recommended, rechargeable batteries (page 24), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the base station or charging cradle in bathrooms or shower rooms.

The base station and charging cradle are not splashproof (page 20). Do not use your phone in environments with a potential explosion hazard (e.g. paint shops). If you give your Gigaset to someone else, make sure you also give them the user guide. Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services. 3 Safety precautions All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. Please note: Not all of the functions described in this manual are available in all countries. 4 Gigaset C47H More than just a telephone Gigaset C47H More than just a telephone Your phone, which has a clearly laid out colour display (65K colours), doesn't just offer you the option of sending and receiving SMS messages via the fixed network and of saving up to 150 phone numbers (page 12) it can do much more besides: u You can select frequently used phone numbers at the press of a single key (page 12). u You can designate important people as VIPs so you can recognise important calls from the ringer tone (page 13). u You can view missed calls on your phone (page 14).

Enjoy using your new telephone! Setting up the charging cradle The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 C to +45 C. Please note: u Never expose the handset to the following influences: heat sources, direct sunlight, other electrical appliances. u Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Range and reception strength Range: u Outdoors: up to 300 m u Indoors: up to 50 m Reception strength: The display shows the quality of the transmission power between the base station and handset: u Good to poor: i u No reception: l flashes First steps Pack contents u one Gigaset C47H handset, u one charging cradle with mains u u u Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Instructions on how to connect the charging cradle and mount it on the wall (if required) can be found at the end of this user guide.

*adapter, two batteries, one battery cover, one belt clip, one user guide. 5 First steps Inserting the batteries Warning: Use only the rechargeable batteries recommended by Gigaset Communications GmbH * (page 24). Never use a conventional (nonrechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. * Gigaset Communications GmbH is a trademark licensee of Siemens AG. Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches. round. The polarity is indicated in/on the battery compartment. Insert the batteries the right way Opening the battery cover Place your fingertip in the cavity on the casing and pull the battery cover upwards.*

Closing the battery cover First, align the notches on the side of Registration Before you can use your Gigaset C47H you must register it to a base station.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3952841)

[GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)

<http://yourpdfguides.com/dref/3952841>

The actual registration procedure will depend on the type of base station. the battery cover with the protrusions on the inside of the housing. Then press the cover until it clicks into place. Automatic registration of Gigaset C47H to Gigaset C470/C475 Precondition: The handset must not yet have been registered to a base station. The handset is automatically registered to the Gigaset C470/C475 base station. Place the handset in the base station with its display facing forward. Registration can take up to 5 minutes. During this process, Registr. Procedure appears in the display and the name of the base station flashes. When the handset has registered, its screen displays its inter- Attaching the belt clip There are notches for attaching the belt clip on the side of the handset at the same height as the display. 6 First steps nal number, e.g. INT 2 for internal number 2. The handset is assigned the lowest available internal number (16). If all internal numbers 16 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status. Headset socket You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150. A compatibility list of tested headsets can be found on the Internet at www.plantronics.com/productfinder. Please note: Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call. Each key press interrupts the automatic registration. If automatic registration does not work, you will have to register the handset manually. Charging batteries Automatic registration of Gigaset C47H If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries. You must activate manual registration of the handset on both the handset and the base station. Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1.

If not, repeat the procedure. cradle into a mains power socket. Place the handset in the cradle with the display facing forward. To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the flashing battery icon e in the top right of the display indicates that the batteries are being charged. During handset operation, the battery icon indicates the charge status of the batteries (page 1). Plug the mains adapter of the charging Initial charging and discharging of batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. To do this, leave the handset in the charging cradle without interruption for seven hours. Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged. On the handset v Handset Registerchanges that you have not confirmed or saved by pressing OK, Yes, Save, Send or Save Entry OK will be lost.

An example of the display in idle status is shown on page 1. 9 ECO DECT Menu guidance Your telephone's functions are accessed using a menu that has a number of levels. Other types of illustrations: c / Q / * etc. Press the matching key on the handset. ~ Enter digits or letters.

Main menu (first menu level) to open the main menu. The main menu functions are shown in the display as a list with colour icons and names. To access a function, i.e. to open the corresponding submenu (next menu level): Navigate to the function using the control key q. Press the OK display key. Press v with the handset in idle status You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 25. Correcting incorrect entries You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then: u press X to delete the character to the left of the cursor, u insert characters to the left of the cursor, u overwrite the character (flashing) when entering the time and date etc. Submenus The functions in the submenus are displayed as lists. To access a function: Scroll to the function with the control key q and press OK. Briefly press the end call key a once to return to the previous menu level/cancel the operation. ECO DECT ECO DECT reduces power consumption by using an energy efficient power supply. Your handset also reduces the transmission power depending on the distance to the base station. Illustration in the user guide The operating steps are shown in abbreviated form.

Example The illustration: v Date/Time means: v Press the key to display the main menu. Use the control key q to scroll through submenu Settings and press OK. Date/Time Scroll to the function with the control key q and press OK. 10 Making calls Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. Or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. Handsfree talking In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Please note: Switching between earpiece and handsfree mode d Press the handsfree key. Activate/deactivate handsfree during a call. If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key d while placing the handset in the base station.

If the handsfree key d does not light up, press the key again. For how to adjust the handsfree volume see page 18. Dialling using the directory, call-by-call list (page 1, page 12) or last number redial list (page 14) saves time re-entering numbers and network provider access codes ("call-by-call numbers"). Ending a call a Press the end call key. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d.

You can accept the call by: Pressing the talk key c. Pressing the handsfree key d. If the handset is in the charging cradle and the Auto Answer function is activated (page 17), the handset will take a call automatically when you lift it out of the cradle. If the ringer tone is intrusive, press the Silence display key. You can take the call as long as it is displayed on the screen. Muting You can deactivate the microphone in your handset during an external call. The other party hears hold music. u Press the control key on the left to mute the handset.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>

" Press the display key to reactivate the microphone. 11 Using the directory and lists Making an internal call Internal calls to other handsets registered on the same base station are free.

Length of entries Number: Name: max. 32 digits max. 16 characters Calling a specific handset u ~ Or: u s c u * Initiate internal call. Enter the number of the handset. Initiate internal call. Select handset. Press the talk key. Initiate internal call. Press the star key. All handsets are called.

Press the end call key. Please note: For quick access to a number from the directory (quick dial), you can assign the number to a key. Calling all handsets ("group call") Ending a call a s New Entry Change multiple line input: Number Enter the number. Name Enter name. Quick Dial: Select key for quick dial. Save the changes. C New Entry Change multiple line input: Number Enter the number. Name Enter name. Storing a number in the directory Storing a number in the call-by-call list Using the directory and lists You can save a total of 150 entries in the directory and call-by-call list. You create the directory and call-by-call list for your own individual handset.

You can also send lists/entries to other handsets (page 13). Order of directory entries The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Directory/call-by-call list In the directory you can store numbers and corresponding names.

With the handset in idle status, open the directory by pressing the s key. In the call-by-call list, you can store network provider prefixes ("call-by-call numbers"). Open the call-by-call list in idle status by pressing the C key. 12 Using the directory and lists Selecting entries in the directory and call-by-call list s/C Open the directory or call-by-call list. You have the following options: u Use s to scroll through the entries until the required name is selected. u Enter the first character of the name (in the directory: first character of the surname or of the first name if only the first name has been entered), or scroll to the entry using s. Dialling with the directory/call-by-call list s/C c s (select entry) Press the talk key. The number is dialled. Managing entries in the directory/call-by-call lists s/C View s (select entry) Delete Entry Delete selected entry. VIP Entry (directory only) Mark a directory entry as a VIP (Very Important Person) and assign a specific ringer tone to it.

You can then recognise important calls from the ringer tone. Precondition: Calling Line Identification. Copy Entry Send a single entry to a handset (page 13). Delete List Delete all entries in the directory/call-by-call list. Copy List Send complete list to a handset (page 13).

Available Memory Display the available entries in the directory and call-by-call list (page 12). Using quick dial keys key (page 12). Viewing entries Press the display key. The entry is displayed. Back with OK.

Press and hold the required quick dial Sending the directory/call-by-call list to another handset Preconditions: must both be registered on the same base station. u The other handset and the base station can send and receive directory entries. s / C s (select entry) Options (open menu) Copy Entry / Copy List to Internal s Select the internal number of the receiving handset and press OK. You can transfer several individual entries one after the other by responding Yes to the Copy next entry? prompt. 13 u The sending and receiving handsets Editing entries View Edit Press the display keys one after the other. Carry out changes and save. s / C s (select entry) Options (open menu) The following functions can be selected with q: Display Number To edit or add to a saved number, or to save it as a new entry, press after the number is displayed. Edit Entry Edit selected entry. Using other functions Using the directory and lists A successful transfer is confirmed by a message and confirmation tone on the receiving handset. Last number redial list The last number redial list contains the twenty numbers last dialled with the handset (max.

32 digits). If a number is in the directory or the call-by-call list, then the appropriate name will be displayed. Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. Manual last number redial c s c Press the key briefly. Select entry. Press the talk key again. The number is dialled. When a name is displayed, you can display the corresponding phone number by pressing the display key View. Copying a displayed number to the directory You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS (depending on the base station) or during a call to the directory. If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line. A number is displayed: Options Copy to Directory Complete the entry, see page 12. While the number is being transferred from the answer machine list (depending on the base station), the message playback is interrupted.

Managing entries in the last number redial list Press the key briefly. Select entry. Options Open menu. The following functions can be selected with q: Display Number (as in the directory, page 13) Copy to Directory Copy entry to directory (page 12). Delete Entry (as in the directory, page 13) Delete List (as in the directory, page 13) c s Copying a number from the directory There are many operating situations in which you can open the directory, e.

g. to copy a number. Your handset need not be in idle status. Depending on the operating situation, open the directory with s or or Directory. q Select an entry (page 13). Opening lists with the message key An advisory tone sounds as soon as a new message arrives in a list. The message key f flashes (it goes off when the key is pressed). In idle status, the display shows an icon for the new message. If you press the message key f, you access the lists that contain new messages. 14 Using a handset as a room monitor Using a handset as a room monitor If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached.

You can save an internal or external number in your handset as the destination number. The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3952841)

[GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)

<http://yourpdfguides.com/dref/3952841>

The handset's speaker is muted. When the room monitor is activated, incoming calls to the handset are indicated without a ringer tone and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off. If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function remains activated. If you deactivate then reactivate the handset, the room monitor mode remains activated.

v Room Monitor Change multiple line input: Room M.: Select On to activate. Call to: Press the display key Edit and enter the destination number. External number: Select number from the directory or enter directly. Only the last 4 digits are displayed.

Internal number: INT s (Select handset or Call All if all registered handsets are to be called) OK. Store number with Save. Level: Set noise level sensitivity (Low or High). Save the changes. Activating the room monitor and entering the destination number Warning! You should always check the operation of the room monitor before use.

For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number. @@If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down. @@The microphone must be directed towards the baby. @@Edit Press the display key. X Delete existing external number. @@@@Delete Press the display key. Edit Press the display key. @@ Save the changes.

@@ Accept the call from the room monitor and press keys 9 ;. The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. @@@@SMS Notific. @@Withhold No. Withhold phone number identification for next call. @@@@v Handset Language The current language is indicated by . @@You can change the function assigned.

@@The list of possible key assignments is opened. The following can be selected: INT Internal calls (see page 12). @@@@v Display Colour Scheme Select and press OK. s Select a colour scheme and press OK (= current colour). a Press briefly.

Contrast Select and press OK. r Select contrast. Save Press the display key. @@View Press the display key. @@If the base station is turned on, the display is permanently dimmed.

v Display Backlight The current setting is displayed. Change multiple line input: In Charger Select On or Off. @@This will replace the idle status display. It may conceal the date, time and name. The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered.

@@v Display Screen Picture The current setting is displayed. @@Selection: Change screen picture if necessary (see below). Save changes: (page 26).

@@Save a Press the display key. Press and hold (idle status). Activating/deactivating auto answer If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key. v Handset Auto Answer Select and press OK (= on). a Press and hold (idle status). 17 Setting the handset Changing the handsfree/ earpiece volume You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. In idle status: t Handset Volume r Set the earpiece volume. s Scroll to the Speaker: line. r Set the handsfree volume. Save Press display key if necessary to save the setting.

Setting the volume during a call: t Press the control key. r Set the volume. The setting will automatically be saved after approx. 3 seconds, if not then press the display key Save. If t is assigned to another function, e.

g. toggling: Options Open menu. Volume Select and press OK. Configure setting (see above). u All: the same ringer tone for all functions Settings for individual functions Set the volume and melody depending on the type of signalling required.

You can activate the time control for external calls to regulate the volume of a call (e.g. quieter at night-time than in daytime). In idle status: t Ringer Settings q Select setting, e.g. Ext. Calls and press OK. r Set volume (16). s Scroll to the next line. r Select melody.

Save Press the display key to save the setting. Same ringer tone for all functions In idle status: t Ringer Settings All Set volume and ringer tone (see "Settings for individual functions"). Save Press the display key to confirm the prompt. a Press and hold (idle status). Please note: You can also set the call volume, ringer tones and advisory tones using the menu. Please note: Changing ringer tones u Volume: You can also set the call volume, ringer tones and advisory tones using the menu. Activating/deactivating the ringer tone You can deactivate the ringer tone on your handset before you accept a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress. You can choose between five volumes (15; e.g.

volume 2 = ^) and the "crescendo" ring (6; volume increases with each ring = %). u Ringer tones: You can select various ringer tones. You can set different ringer tones for the following functions: u Ext. Calls: for external calls u Internal Calls: for internal calls 18 Setting the handset Deactivating the ringer tone permanently * Press and hold the star key. The icon appears in the display.

Re-activating the ringer tone * Press and hold the star key. Deactivating the ringer tone for the current call Silence Press the display key.

Activating/deactivating the alert tone In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a short tone ("Beep") instead of the ringer tone. * Press and hold the star key and within 3 seconds: Beep Press the display key.

A call will now be signalled by one short alert tone. You will now see in the display. charged. In idle status: t Advisory Tones Change multiple line input: Key Tones: Select On or Off. Confirm.: Select On or Off. Battery: Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call. Save changes: (page 26). You cannot deactivate the confirmation tone for placing the handset in the base station.

u Battery tone: the batteries need to be Please note: You can also set the call volume, ringer tones and advisory tones using the menu. Activating/deactivating advisory tones Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other: u Key click: every key press is confirmed. u Advisory tones: Confirmation tone (ascending tone sequence): at the end of an entry/setting and when an SMS (depending on the base station) or a new entry arrives in the call history Error tone (descending tone sequence): when you make an incorrect entry Menu end tone: when scrolling at the end of a menu Setting the alarm clock Precondition: The date and time have already been set (page 8).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3952841)

[GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)

<http://yourpdfguides.com/dref/3952841>

v Change multiple line input: Activation: Select On or Off. Time: Enter the wake-up time in 4-digit format. Melody: Select melody. Volume: Set the volume (16). Save changes: (page 26). You will see the icon.

A wake-up call with selected ringer tone (page 18) is signalled on the handset. 19 Activating/deactivating the alarm clock and setting the wake-up time Appendix The wake-up call sounds for 60 seconds. is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off. During a call, the wake-up call is signalled by a short tone.

Appendix Care set with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth. This can cause a build up of static. Wipe the charging cradle and the hand- Deactivating the wake-up call/ repeating after a pause (snooze mode) Precondition: A wake-up call is sounding. OFF Press the display key.

The wake-up call is deactivated. or Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely. Contact with liquid ! Restoring the handset to the factory settings You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists (depending on base station) and the handset's registration to the base station as well as the content of My stuff are retained. v Handset Reset Handset Yes Press the display key. a Press and hold (idle status). If the handset has come into contact with liquid: 1. Turn the handset off and remove the batteries immediately.

2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.). 4. Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. 20 Appendix Questions and answers If you have any questions about using your handset, visit us at any time at www.gigaset.com.

com/customercare. The table below contains a list of common problems and possible solutions. The display is blank. 1. The handset is not turned on. Press and hold the end call key a. Service (Customer Care) We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere. www.gigaset.com/customercare It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide. For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on: UK helpdesk: 0 84 53 67 08 12. Ireland 18 50 77 72 77. Please have your proof of purchase ready when calling with regard to guarantee/ warranty claims. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. 2. The batteries are almost flat. Charge or replace the batteries (page 6). The keys of a handset do not respond when pressed.

The keypad lock is activated. Press and hold the hash key # (page 8). "Base station x" flashes on the display. 1. The handset is outside the range of the base station. Move the handset closer to the base station. 2. The handset has been deregistered. Register the handset (page 6). 3.

The base station is not turned on. Check the base station mains adapter. Base Search flashes in the display. No base station is switched on or within range. Move the handset closer to the base station.

Check the base station mains adapter. Handset does not ring. The ringer tone is switched off. Activate the ringer tone (page 18). The other party cannot hear you.

You have pressed the u (INT) key. The handset is "muted". Activate the microphone again (page 11). You hear an error tone when keying an input (a descending tone sequence). Action has failed/invalid input. Repeat the operation. Watch the display and refer to the user guide if necessary. 21 Appendix Authorisation This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question. Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs. Guarantee Certificate United Kingdom Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. u This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides. 22 extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads).

User guides and any software supplied on a separate data medium shall be excluded from the Guarantee. u The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. u Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. u This Guarantee shall apply to new devices purchased in the European Union.

For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications GmbH, Schlavenhorst 66, D-46395 Bocholt, Germany. u Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. u The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. u Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>

@@To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide. u This Guarantee shall not apply to or Appendix Guarantee Certificate Ireland Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. u This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if: u The device is opened (this is classed as third party intervention) u Repairs or other work done by persons not authorised by Gigaset Communications. u Components on the printed circuit board are manipulated u The software is manipulated u Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.

) u Devices fitted with accessories not authorised by Gigaset Communications u This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. u The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. u Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications. u This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications GmbH, Schlavenhorst 66, D-46395 Bocholt, Germany. u Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. u The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee. u Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. @@@@500 Standby time (hours) Talktime (hours) Operating time with 1.5 hrs of calls per day (hours) Charging time, base station (hours) Charging time, charging cradle (hours) 180 9 80 700 300 12 115 900 320 16 150 1100 395 19 180 4 5 7 8 5 7 9 11 At the time of going to print, batteries up to 900 mAh were available and had been tested in the system.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: www.gigaset.com/customer-care 24 Notes on the user guide Notes on the user guide This section explains the meaning of certain typographical conventions that are used in this user guide. a Press and hold the end call key until the handset returns to idle status. Press and hold (idle status).

Example of a menu input The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes. Example of multiple line input In many situations you can change settings or enter data in several lines of a display. In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes. You will see the following display (example):
Date/Time Date: [15.11.07] Time: 11:11 on the right of the control key (v) to open the main menu.

Use the q control key to select the Settings line. Press v or press the display key OK to confirm the Settings function. The Settings submenu is displayed. Press on the bottom of control key q repeatedly until the Display menu function is selected. Press v or press the display key OK to confirm the selection. Contrast Select and press OK. With the handset in idle status, press v Display Save Date: Enter day, month and year in 6-digit format. The second line is marked with [] to show it is active. Enter the date using the digit keys. Time: Enter hours/minutes in 4-digit format.

Press on the bottom of control key q repeatedly until the Contrast menu function is selected. Press v or press the display key OK to confirm the selection. Select contrast and press the display key Save. r Press the s key. Press on the right or left of the control Press the display key Save to confirm the selection. key to set the contrast. The fourth line is marked with [] to show it is active. Enter the date using the digit keys. 25 Accessories Save the changes. Press the display key Save.

Then press and hold the a key. The handset switches to idle status. you release the key, the highlighted character is inserted into the input field. Setting upper/lower case or digits Press the hash key # briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key # before entering the letter. The display briefly shows whether upper case, lower case or digits is selected. Writing and editing text The following rules apply when writing a text: u Control the cursor with u v t s. u Characters are inserted on the left of the cursor. u Press the star key * to show the table of special characters. u The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

You can call up the table of special characters when writing an SMS using the * key. Select the required character and insert it with Insert. Accessories All accessories and batteries are available from your phone retailer. Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>

Writing an SMS/name Press the relevant key several times to enter letters/characters. Standard characters 1x 2x 2) 3x 4x 5x 6x 7x 8x 9x 10x 2 3 4 5 L M N O
Q 1) a d g j m p t w . b e h k n q u x , l c f i l o r v y ? 2 3 4 5 6 s 8 z ! 7 9 0 1) Space 2) Line break When you press and hold a key, the characters of that key
appear in the display and are highlighted one after the other. When 26 Index Index A Accessories . .

.....
.....
..... 26 Activating advisory tones . .

.....
..... 19 call acceptance .
.....
.....
17 handset
.....
.....
.. 8 keypad lock

.....
. 8 room monitor
.....
..... 15 Advisory tones . .

.....
.....
. 19 Alarm clock
.....

..... 19 Alert tone
.....
.....
..... 19 Assigning a key ...

.....
..... 16 Assigning numerical keys .
.....
..... 16 Authorisation.

.....
... 22 Automatic call acceptance . .
.....
..... 11, 17 Changing display language

.....
16 earpiece volume
.....
..... 18 handsfree volume

..... 18 ringer tone ...
.....
.....
..... 18 Charge status display

..... 1 Confirmation tone. .
.....
.....
... 19 Control key

.....
.. 1, 8 Correcting incorrect entries ...
.....
10 Customer Care

..... 21 D Deactivating advisory tones . .
.....
.....
... 19 call acceptance

..... 17 handset .

 8 keypad lock

 8 room monitor .

 16 Delete key

 9 Deleting characters ...

 . 10 Destination number (room monitor) . 15 Dialling call-by-call list ...

 13 directory

 ... 13 with quick dial

 13 Dialling pause entering .

 1 Directory

 . 12 copying number from text 14 managing entries ..

 .. 13 opening ...

 ... 9 order of entries

 ... 12 saving entry ..

 12 sending entry/list to handset
 13 using to enter numbers
 14 Display backlight .

 17 changing display language .

 . 16 contrast. ...

 17 in idle status ...

 9 memory (directory/call-by-call) 13 screensaver .

 .. 17 setting ...

 17 wrong language ..

.....
.. 16 Display keys

.....
1, 9 assigning.
.....

16 B Base station connecting and installing 5 range .

.....
.....
.....
... 5 Battery charging.

.....
.....
..... 1 display

.....
.....
... 1 fitting. .
.....

.....
.. 6 icon ...
.....

..... 1 recommended batteries ...

.....
.. 24 tone. ...
.....

.....
19 Beep, see Advisory tones C Call accepting

.....
.....
11 ending

.....
.. 11 external

.....
... 11 internal ...
.....

..... 12 Call acceptance

.....
.. 17 Call duration

.....
11 Call-by-call list

.....
..... 12 key. .

.....
.....
..... 1 Call-by-call numbers.

..... 12 Calling external ..

.....
.....
..... 11 Care of the telephone .

.....
 . 20 27 Index E Earpiece mode . . .

 11 Earpiece volume .

 18 ECO DECT

 10 Eco mode

 10 Editing destination number

 15 End call key .

 1, 11 Ending, call

 .. 11 Ending, see deactivate Entry selecting (menu)

 . 25 selecting from directory
 13 Error tone

 . 19 Example menu input

 25 multiple line input .

 .. 25 I Icon alarm clock

 19 display

 .. 9 for new messages

 14 keypad lock

 8 ringer tone .

 .. 19 Idle status (display)

 .. 9 Idle status, returning to
 9 Incorrect input (correction) .

 10 Installation, base station

 5 Internal call

 .. 12 making calls

 12 K Key 1 (fast access).

.....	1 Keypad lock
.....	8 Keys assigning directory entry
.....	12 call-by-call list ..
.....	1 control key
.....	1, 8 delete key ...
.....	9 display keys ...
.....	1, 9 end call key
.....	1, 11 fast access
.....	1 handsfree key
.....	1 hash key ...
.....	1, 8 message key
.....	1 on/off key
.....	1 quick dial.
.....	12, 13 recall key
.....	1 star key
.....	1 talk key.
.....	1, 11 G Group call
.....	12 Guarantee Certificate
.....	22 H Handset activating/deactivating ...
.....	8 advisory tones ..
.....	19 contact with liquid
.....	20 display backlight ...
.....	17 display language
.....	16 earpiece volume ...

.....	
.. 18 handsfree volume	
.....	
. 18 idle status	
.....	
..... 9 list	
.....	
.....	
.....	
.. 9 muting	
.....	
.....	
.... 11 registering	
.....	
.... 6 restoring to factory settings.	
.....	
. 20 screensaver	
.....	
..... 17 setting .	
.....	
.....	
.....	
. 16 setting up	
.....	
.....	
.. 5 signal strength	
.....	
..... 5 using room monitor .	
.....	
.....	
. 15 Handset operating time in room monitor mode	
.....	
. 15 Handsfree key	
.....	
.....	
1 Handsfree talking	
.....	
..... 11 Handsfree volume	
.....	
.....	
. 18 Hash key	
.....	
.....	
.. 1, 8 Headset socket ...	
.....	
.....	
. 7 Hearing aids	
.....	
.....	
. 3 Hold music	
.....	
.....	
. 11 28 L Language, display	
.....	
..... 16 Last number redial	
.....	
.....	
14 Liquid	
.....	
.....	

	20	List call-by-call list
		
		
	12	handsets
		
	9	Lock activating/deactivating keypad lock	.. 8 Index M Mains adapter ..
		
		
	3	Making calls accepting a call
		
		11 external	..
		
		11 internal	..
		
		
		
	12	Manual last number redial 14 Medical appliances.
		
		
	3	Memory directory/call-by-call
		
		13 Menu end tone	..
		
		
		19 menu guidance	..
		
		
		10 menu input	..
		
		
	25	opening
		
		
	9	Message key opening lists
		
		14 Messages key
		
		
		1 Microphone
		
		
		1 Multiple line input	..
		
		
	25	Muting the handset	..
		
		
		11 R Range	..
		
		
		
	5	Recall key
		
		
		1 Registering (handset)	..
		
		
		6 Ringer tone changing	..
		
		
		

. 18 setting melody

 .. 18 setting volume

 .. 18 Room monitor.

 15 S Screensaver

 17 Searching in directory

 13 Sending directory entry to handset
 13 Sensitivity (room monitor)

 15 Service

 21 Setting date

 8 melody

 18 screensaver

 17 time



[You're reading an excerpt. Click here to read official SIEMENS GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>

.....	.. 8 Setting up handset...
.....
.....
.... 5 Signal strength
.....
.. 5 Snooze mode
.....
20 Sound, see Ringer tone Specifications
..... 24 Star key ..
.....
.....
.....
. 1 N Network provider (numbers list)	12 Number as destination for room monitor ... 15 copying from directory .
..... 14 copying to directory .
.....
.....
. 14 entering with directory
.....
. 14 saving in the directory
.. 12 Numbers list network provider
..... 12 T Talk key
.....
.....
. 1, 11 Troubleshooting
.....
.. 21 O On/Off key
.....
.... 1 Order in directory
.....
12 V VIP (directory entry)
.....	... Volume earpiece
.....
... earpiece volume
.....
..... handset handsfree volume
..... loudspeaker.
.....
.....	.. ringer tone
.....
.....	setting
.....
.....
. 13 18 18 18 18 18 18 P Pack contents
.....
.....
5 Q Questions and answers
.....	.. 21 Quick dial
.....

.....
.. 12 W Warning tone, see Advisory tones Writing, editing text.....

..... 26 29.



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET C47H user guide](http://yourpdfguides.com/dref/3952841)
<http://yourpdfguides.com/dref/3952841>