



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET C610A. You'll find the answers to all your questions on the SIEMENS GIGASET C610A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual SIEMENS GIGASET C610A User guide SIEMENS GIGASET C610A Operating instructions SIEMENS GIGASET C610A Instructions for use SIEMENS GIGASET C610A Instruction manual SIEMENS GIGASET C610A

Gigaset C610-C610A, QUG, Grossbritannien, A31008-M2325-L-101-1-7643



**Quick Start Guide**  
GIGASET HELPLINE: 0845 34 396 12

### Pack contents



- one Gigaset C610A base
- one mains adapter
- one Gigaset C610H handset
- one phone cord
- two batteries
- one battery cover
- one fast clip
- one user guide plus one quick start guide

If you have purchased a model with multiple handsets the package should contain two batteries, a battery cover, a belt clip and a charging cable with mains adapter for each additional handset.

### Connecting the base station



First connect the mains adapter. Then connect the telephone jack and insert the cable into the cable ducts.

**Please note:**

- The mains adapter must always be connected as the phone will not operate without a mains connection.
- Only use the mains adapter and phone cord supplied. Pin connections on telephone cables can vary.
- The LED display should light up at the base station. If not, please ensure the power leads fully inserted.

**Connecting the charging cradle (if included)**

- Connect the flat plug from the mains adapter.
- Plug the mains adapter into the plug socket.

If you need to disconnect the plug from the charging cradle, press the release button and disconnect the plug.

### Final check list

To ensure your product is set up correctly please check the following:

- Have you used phone cord supplied?
- Have you fully inserted the power cable into the base station?
- Have you inserted batteries correctly?
- Have you charged the batteries for 10 hours?
- Have you set up Date/Time?

**PLEASE NOTE:**

For a dial tone press the call button for approx. 2 seconds; short press opens redial list.

Message indication key on handset will flash to indicate one or all of the following events:

- missed calls (if caller ID is enabled for your line numbers will be shown)
- new message on the answering machine (also indicated by flashing message counter on base station)
- new text message (SMS received)

If you have problems setting up or operating this product please call:  
GIGASET HELPLINE  
0845 34 396 12

### Preparing the handset



Insert the batteries, the right way round. The polarity is indicated on the battery compartment.

First insert the battery cover at the top. Then press the cover until it clicks into place.

If you need to open the battery cover for instance to replace the batteries, place your finger on the cavity on the casing and pull the battery cover upwards.

**Initial charging and discharging of the batteries**

The correct charge level can only be displayed if the batteries are first fully charged and discharged.

Place the handset in the base charging cradle for 10 hours.

Then remove the handset from the base charging cradle and do not use it until the batteries are fully discharged.

### Setting the date and time



Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

Press the key below on the screen display to open the input field.

The Date/Time submenu is shown on the display.

The active input position flashes. Enter day, month and year as an 8 digit number via the keypad, e.g. 20100315 for 15.03.2010.

Press the right or left control key to change the input position and/or race an entry.

Press down on the control key to switch to the time input field.

Enter the hours and minutes as four digit numbers via the keypad, e.g. 0715 for 07:15 am. Change the input position with the control key if necessary.

### Setting the date and time



Press the key below on the display screen to confirm your entry.

The display shows Saved. You will hear a confirmation tone and the handset will automatically return to idle status.

**Display in idle status**

- Reception signal between the base and handset:
  - good: poor: **||||**
  - no reception: **||||**
- Green for Mode activated
- Q.L.D. answering machine is activated
- Battery charge status:
  - full: **||||** (empty socket)
  - charging: **||||** (empty socket)
- IMEI: Internal name of the handset

If Eco Mode is activated the @ icon is displayed in the top left base display. "ECO DIRECT" of user manual.

### Frequently asked questions

Q: There is no dial tone.  
A: Press call button for 2 seconds long press to obtain dial tone. A short press opens the redial list.

Q: The line is ringing / not clear.  
A: Have you used the new line cable provided? Please do not use an old cable.

Q: Message indicator flashing on handset and I cannot retrieve my message.  
A: Message indicator will flash to indicate missed call as well as new message or text message. Please check it is not indicating a new missed call or text message.

Q: The caller ID is not functioning.  
A: Have you subscribed to this service (CLIP) from your provider?

Q: Can I record my own announcement on the answer machine.  
A: Yes. Please refer to Chapter "Operating the answer machine of the Gigaset C610A base station" of your user manual (p. 47).

Q: The display is not clear.  
A: The display is protected by a basic film, please make sure you have removed the protective film.

Q: The handset is not registered.  
A: If your handset is not registered, please refer to Chapter "Registering handsets" of your user manual (p. 55) to instructions how to register handsets manually.

For more QUESTIONS AND ANSWERS please refer to chapter "Service (Customer Care)" of user manual (p. 69).



You're reading an excerpt. [Click here to read official SIEMENS GIGASET C610A user guide](http://yourpdfguides.com/dref/4570149)

**Manual abstract:**

Final check list To ensure your product is set up correctly please check the following u u u u Have you used phone cord supplied Have you fully inserted the power cable into base station Have you inserted batteries correctly Have you charged the batteries for 10 hours Have you set up Date/Time 1 1 2 1 ? ? ? ?

@@u Only use the mains adapter and phone cord supplied. Pin connections on telephone cables can vary. u The LED display should light up at the base station. If not, please ensure the power lead is fully inserted. 8 7 6 For a dial tone press the call button c for approx. 2 seconds. Short press opens redial list. Message Indication Key f on handset will flash to indicate one or all of the following events: u missed calls (if caller ID is enabled for your line numbers will be shown) u new messages on the answering machine (also indicated by flashing message counter on base station) u new Text messages (SMS) received If you have problems setting up or operation this product please call Connecting the charging cradle (if included) 1 one Gigaset C610A base 2 one mains adapter 3 one Gigaset C610H handset 4 one phone cord 5 two batteries 6 one battery cover 7 one belt clip 8 one user guide plus one quick start guide Connect the flat plug from the mains adapter 1. @@2a. @@Subject to availability.

Rights of modification reserved. www.gigaset.com A31008-M2325-L101-1-7643 3 Preparing the handset Insert the batteries the right way round. @@A: Press call button for 2 seconds (long press) to obtain dial tone.

A short press opens the redial list. Q: The line is crackling / not clear. A: Have you used the new line cable provided? Please do not use an old cable.

@@@@ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.

g. 4 Q 2Q for 14/10/2011. @@Please check it is not indicating a new missed call or text message. Q: The caller ID is not functioning. A: Have you subscribed to this service (CLIP) from your provider? Q: Can I record my own announcement on the answer machine. A: Yes. @@of your user manual (p. 47). Saved The display shows Saved. @@A: The display is protected by a plastic film, please make sure you have removed the protective film.

Q: The handset is not registered. @@of your user manual (p. @@QM 5 for 07:15 am. Change the input position with the control key if necessary. ? good to poor: i ? @@y y { (empty to full) ? y flashes red: batteries almost empty ? xy x{ (charging) u INT 1: Internal name of the handset If Eco Mode+ is activated, the icon is displayed in the top left (see chapter ?ECO DECT? @@of user manual (p. 69). .



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4570149)

[GIGASET C610A user guide](http://yourpdfguides.com/dref/4570149)

<http://yourpdfguides.com/dref/4570149>