




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET DA210. You'll find the answers to all your questions on the SIEMENS GIGASET DA210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET DA210**  
**User guide SIEMENS GIGASET DA210**  
**Operating instructions SIEMENS GIGASET DA210**  
**Instructions for use SIEMENS GIGASET DA210**  
**Instruction manual SIEMENS GIGASET DA210**

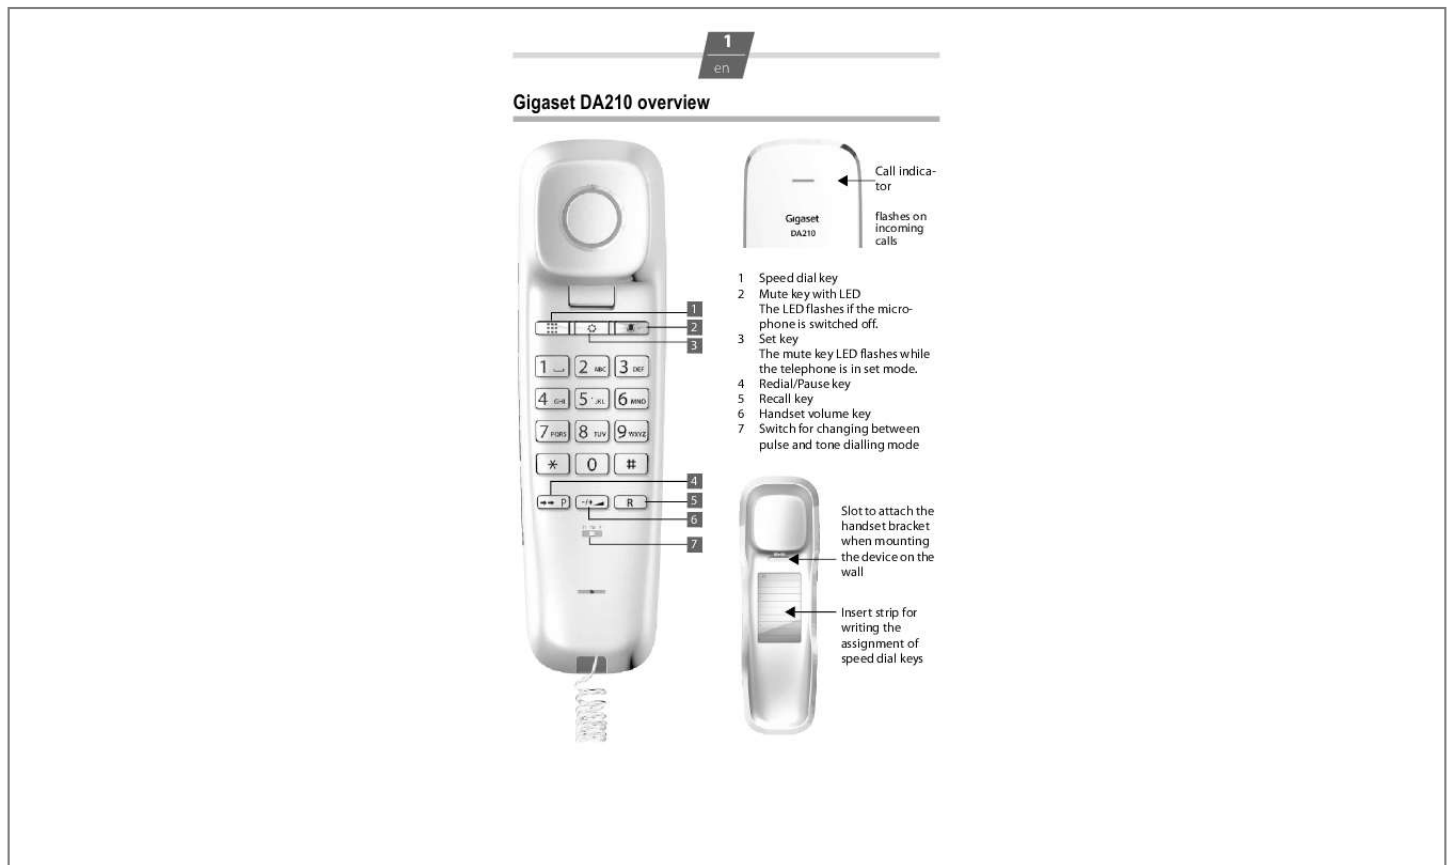

[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA210 user guide](http://yourpdfguides.com/dref/4569643)  
<http://yourpdfguides.com/dref/4569643>

**Manual abstract:**

fm / 20.01.2012 1 en Gigaset DA210 overview Call indicator flashes on incoming calls 1 2 1 2 3 3 4 5 6 7 Speed dial key Mute key with LED The LED flashes if the microphone is switched off. Set key The mute key LED flashes while the telephone is in set mode. Redial/Pause key Recall key Handset volume key Switch for changing between pulse and tone dialling mode 4 5 6 7 Slot to attach the handset bracket when mounting the device on the wall Insert strip for writing the assignment of speed dial keys Gigaset DA210 / IM1 en/ A30054-M6527-R101-7-6Z19 / DA210\_en.fm / 20.01.2012 2 en Connecting the telephone

1 Connect your telephone to the main phone socket using the supplied telephone cable. @@@@ Hang the telephone on the projecting screw heads. @@ Only connect the connecting lead to the intended socket.

u Only connect approved accessories. @@u For your safety and protection, the telephone may not be used in the bath or shower rooms (wet locations). The telephone is not splash proof. u Never expose the telephone to sources of heat, direct sunlight or other electrical devices. u Protect your telephone from moisture, dust, corrosive liquids and vapours.

Gigaset DA210 / IM1 en/ A30054-M6527-R101-7-6Z19 / DA210\_en.fm / 20.01.2012 3 en u Never open up the telephone yourself. u Do not touch the plug contact with pointed or metallic objects.  
u Do not carry the telephone by the leads. u If you give your telephone to someone else, make sure you also give them the operating manual. cI Lift the handset, press the last number redial key. Speed dialling You can save 10 numbers for speed dial on the number keys (0-9) (each with max. 21 digits). Saving number Setting up the telephone for use Recommended installation of telephone: u Do not expose the telephone to direct sunlight or other sources of heat. u Operate at temperatures of between +5°C and +40°C. @@radio telephones, radio paging equipment or TV sets. Otherwise, telephone communication could be impaired. @@@@feet).

K J ~ Q ... O K Press the set key. Press the speed dial key. Define the speed dial number. Enter the number for the speed dial. @@O Lift the handset, press the speed dial key. @@If the number entered is longer than 21 digits, the saved number is deleted. Notes on saving and deleting speed dial numbers £ Dialling and saving numbers Dialling a number c~ Lift the handset, dial the number.

Dialling pauses One or more dialling pauses can be entered using I (not at 1st digit). Pauses are transferred to the memory and are necessary for certain extension systems (e.g.: 0 I 2368). u Dialling a dialling pause within the first 5 digits: The entire number saved is dialled, including the 2-second dialling pause.

Last number redial The last number dialled is automatically saved. Gigaset DA210 / IM1 en/ A30054-M6527-R101-7-6Z19 / DA210\_en.fm / 20.01.2012 4 en u Dialling a dialling pause after the first 5 digits: The portion of the number saved after the pause is only dialled after pressing the I key.

Operation on a PABX Special functions/Recall key During an external call, you can make an enquiry or forward the call. To do this, press the recall key H. The subsequent procedure depends on your PABX. To set the recall key, the telephone's flash time must be set consistent with your PABX. @@F Press the handset volume control key. @@@@C Press the mute key. @@@@c K Lift the handset, press the set key. # Press the hash key. Q ..

. O Press one of the number keys. (0: Ringer off until handset is next lifted). @@@@After the connection is established: \* Press the star key. @@call divert, call back on busy, three-party conference etc.). @@@@The dialling tone is audible but the telephone will not dial: The connection is OK. Is the dialling mode set correctly? The other party cannot hear you: Mute activated? Regular pulse noises can be heard during a call: The connection is receiving metering pulses from the exchange, which the telephone cannot interpret. Contact your network operator. Recall key In public telephone systems, the recall key is required to use certain additional services; e.

g. for "Call back on busy". You may need to adjust the flash time of your telephone to the needs of the public telephone system. @@That is why we actively take steps to create a better world. @@@@Do not use solvents or microfibre cloths.

@@2 Pat all parts dry. @@3 Do not switch on the device again until it is completely dry. Gigaset DA210 / IM1 en/ A30054-M6527-R101-7-6Z19 / DA210\_en.fm / 20.01.

2012 6 en Environmental management system Gigaset Communications GmbH is certified according to the international standards ISO 14001 and ISO 9001. ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH. ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH. Authorisation This device is intended for analogue phone lines in the UK and on the Irish network. Country-specific requirements have been taken into consideration. @@@@It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. Gigaset DA210 / IM1 multilingual / A30054-M6527-R101-7-6Z19 / DA210\_IM1\_impressum.fm / 20.01.

2012 1 DE Gigaset DA210 / IM1 multilingual / A30054-M6527-R101-7-6Z19 / DA210\_IM1\_impressum.fm / 20.01.2012 2 DE Issued by Gigaset Communications GmbH Frankenstrasse 2a, D-46395 Bocholt © Gigaset Communications GmbH 2012 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com A30054-M6527-R101-7-6Z19 .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA210 user guide](http://yourpdfguides.com/dref/4569643)  
<http://yourpdfguides.com/dref/4569643>