




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET DA310. You'll find the answers to all your questions on the SIEMENS GIGASET DA310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET DA310
User guide SIEMENS GIGASET DA310
Operating instructions SIEMENS GIGASET DA310
Instructions for use SIEMENS GIGASET DA310
Instruction manual SIEMENS GIGASET DA310

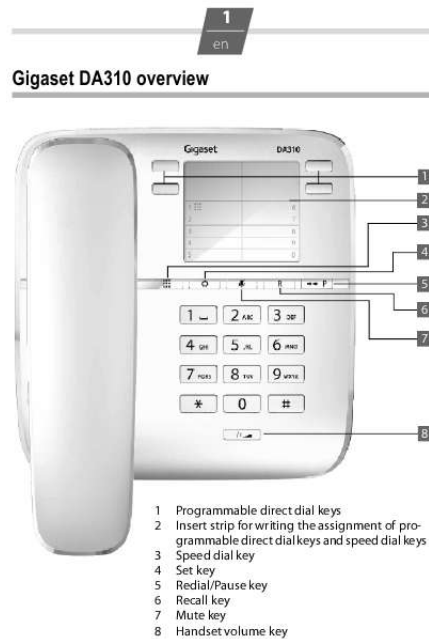

[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA310 user guide](http://yourpdfguides.com/dref/4569654)
<http://yourpdfguides.com/dref/4569654>

Manual abstract:

fm / 03.08.2011 1 en Gigaset DA310 overview 1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8 Programmable direct dial keys Insert strip for writing the assignment of programmable direct dial keys and speed dial keys Speed dial key Set key Redial/Pause key Recall key Mute key Handset volume key Gigaset DA310 /IM-MEA en / A30054-M6528-A601-1-UZ19 / DA310_en.fm / 03.08.2011 2 en Connecting the telephone ☒ Connect the telephone connector (1) to the main phone socket using the supplied telephone cable and, if necessary, one of the telephone adapters provided. Guide the cable through the cable 2 channel of the handset cradle: upwards for operating 5 the phone on the table (2); downwards when mounting the phone on the wall (3). @@@@ Hang the telephone on the projecting screw heads. @@u Only connect the connecting lead to the intended socket. u Only connect approved accessories. u Lay the connecting lead where it will not cause accidents. @@The telephone is not splash proof. u Never expose the telephone to sources of heat, direct sunlight or other electrical devices. u Protect your telephone from moisture, dust, corrosive liquids and vapours. u Never open up the telephone yourself. u Do not touch the plug contact with pointed or metallic objects. u Do not carry the telephone by the leads. u If you give your telephone to someone else, make sure you also give them the operating manual. Dialling and saving numbers Dialling a number c~ Lift the handset, dial the number. Last number redial The last number dialled is automatically saved. cI Lift the handset, press the last number redial key. Speed dialling You can save 4 numbers on the programmable direct dial keys B and 10 numbers for speed dial on the number keys (0-9) (each with max. 21 digits). Setting up the telephone for use Recommended installation of telephone: u Do not expose the telephone to direct sunlight or other sources of heat. u Operate at temperatures of between +5°C and +40°C. u Maintain a distance of at least one metre between the telephone and radio equipment, e.g. radio telephones, radio paging equipment or TV sets. Otherwise, telephone communication could be impaired. @@@@feet). Saving number K Press the set key. either ... via direct dial key B Press the programmable direct dial key. or ... via speed dial J Press the speed dial key. Q .. O Define the speed dial number. @@@@O Lift the handset, press the speed dial key. Press the speed dial number key. C Press the mute key. To reactivate microphone: Press the mute key again or press any other key. Setting the ringer You can set the ringer melody and volume or turn it off. c K Lift the handset, press the set key. # Press the hash key. Q ... O Press one of the number keys, see Table. (0: Ringer off until handset is next lifted). K Press the set key. Volume Melody 1 Melody 2 Melody 3 * and # are saved regardless of the set dialling mode but are only dialled with tone dialling mode (page 4). If the number entered is longer than 21 digits, the saved number is deleted. Notes on saving and deleting programmable direct dial keys and speed dial numbers £ Dialling pauses One or more dialling pauses can be entered using I (not at 1st digit). Pauses are transferred to the memory and are necessary for certain extension systems (e.g.: 0 I 2368). @@@@To do this, press the recall key H. The subsequent procedure depends on your PABX. @@@@F Press the handset volume control key. @@@@Do not use solvents or microfibre cloths. @@@@After the connection is established: * Press the star key. @@2 Pat all parts dry. @@3 Do not switch on the device again until it is completely dry. @@@@call divert, call back on busy, three-party conference etc.). @@You can save the entire key combination, including the number of a fixed call divert destination, to your programmable direct dial keys or speed dial keys just like a normal number. Questions and answers You lift the handset but you hear no dialling tone: Is the connecting lead correctly plugged into the telephone and the telephone socket? The dialling tone is audible but the telephone will not dial: The connection is OK. Is the dialling mode set correctly? The other party cannot hear you: Mute activated? Regular pulse noises can be heard during a call: The connection is receiving metering pulses from the exchange, which the telephone cannot interpret. Contact your network operator. Recall key In public telephone systems, the recall key is required to use certain additional services; e.g. for "Call back on busy". @@@@The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, is evaluated early on, during product and process design. Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com. subject to European Directive 2002/ 96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. @@Country-specific requirements have been taken into consideration. @@@@ISO 9001 (Quality): Certified since 17/02/1994 by TÜV Süd Management Service GmbH. Contacts If you should encounter any problems when operating the telephone connected to a communication system with analogue network access, please contact the network operator responsible or your dealer. Disposal All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is Gigaset DA210 - DA310/ /03.

06.2011 8 fr Gigaset DA310 / IM-MEA / A30054-M6528-A601-1-UZ19 / DA310_IM-MEA_impresum.fm / 21.07.2011 1 DE Issued by Gigaset Communications GmbH Frankenstrasse 2a, D-46395 Bocholt © Gigaset Communications GmbH 2011 All rights reserved. Subject to availability. Rights of modification reserved. www.gigaset.com A30054-M6528-A601-1-UZ19 .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA310 user guide](http://yourpdfguides.com/dref/4569654)
<http://yourpdfguides.com/dref/4569654>