



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET DA610. You'll find the answers to all your questions on the SIEMENS GIGASET DA610 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET DA610
User guide SIEMENS GIGASET DA610
Operating instructions SIEMENS GIGASET DA610
Instructions for use SIEMENS GIGASET DA610
Instruction manual SIEMENS GIGASET DA610

Overview Gigaset DA610



Display and keys

- 1 Display (→ page 4)
- 2 Control key (→ page 5)
- 3 Speed dial key
- 4 Set key
- 5 Redial/pause key
- 6 Recall key
- 7 Mute key
- 8 Star key, selecting/deselecting the ring tone (press and hold)
- 9 Hash key, selecting/deselecting the key lock (press and hold)

10 Hands-free key

- 11 Keys for setting the volume of the handset, speaker and ring tone
- 12 Microphone for hands-free use

LED

- ▶ Hands-free key
- ▶ flashes on incoming call
- ▶ lights up when the call is transferred to the speaker

en fr fa ar

1



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA610 user guide](http://yourpdfguides.com/dref/4569700)
<http://yourpdfguides.com/dref/4569700>

Manual abstract:

You may need a phone adapter depending on your country. This is provided in most cases. Power is supplied over the telephone line. @@Lift the handset again. @@In case of a power cut (e.g. @@Phonebook entries and speed dialling destinations are stored indefinitely. The device is designed to be used as a single-line system (on the main extension or a telephone system). It cannot be operated as a second phone on a line splitter. Operation on a PBX: The private branch exchange (PBX) must supply the phone with continuous DC voltage, even when ringing.

If this is not the case, the phone may switch off briefly when ringing. As a result, saved information may be lost. Refer to the operating manual for your PBX for information in this regard or contact the manufacturer. 2 1110-01 en fr fa ar Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / DA610IVZ.fn / 23.

04.2012 Table of contents Overview Gigaset DA610

.

. Connecting the telephone

.

. Safety precautions

.

.

Setting up the telephone for use

. . . Operating the telephone

.

. . . Display

.

.

.

.

Control key

.

.

.

.

. . . Writing and editing names and numbers

.

. . Text input

.

.

.

. Making a call

.

.

.

.

. Incoming calls

.

.

.

.

.. Using open listening / hands-free ...

.....
.....

..... Settings during a call ..

.....
.....
.....

. 1 2 4 4 4 4 5 5 5 6 6 7 Other settings

.....
.....

. 12 Standard characters

.....

12 Appendix

.....
.....

... 13 Care ..

.....
.....
.....
.....

..... 13 Contact with liquid ...

.....
.....
.....

. 13 Questions and answers

.....
.....
.....

. 13 Environment

.....
.....
.....

..... 13 Disposal

.....
.....
.....

..... 13 Contacts

.....
.....
.....

operating the telephone, always observe the following precautions: u Only use the jacks and leads supplied. u Only connect the connecting lead to the intended socket.

u Only connect the approved accessories u Lay the connecting lead where it will not cause accidents. u Position the telephone on a non-slip surface. u For your safety and protection, the telephone may not be used in the bath or shower rooms (wet locations). The telephone is not splash proof. u Never expose the telephone to sources of heat, direct sunlight or other electrical devices.

u Protect your telephone from moisture, dust, corrosive liquids and vapours. u Never open up the telephone yourself. u Do not touch the plug contact with pointed or metallic objects. u Do not carry the telephone by the leads. u If you give your Gigaset DA610 to someone else, make sure you also give them the operating manual. Your Gigaset DA610 has a permanent memory, so you may want to delete any stored numbers before passing it on. Operating the telephone The keypad and the display are available to operate your Gigaset DA610. All usage possibilities are described in the handbook. Note Some of your telephone's functions may only be available without restriction if they are supported by your and the caller's network provider, e. g.

functions for which information on the caller's telephone number is required. @@date and time. @@@@u Operate at temperatures of between + 5° C and + 40° C. @@radio telephones, radio paging equipment or TV sets. Otherwise telephone communication could be impaired. u Do not install the telephone in dusty rooms as this can limit the service life of the telephone. u Furniture lacquer and polish can be adversely affected by contact with parts of the unit (e.g. feet). 01--28 Symbol bar: status, date and time Display of call duration, numbers, names, phonebook and list entries, settings Display symbols 01 Number of an entry in the phonebook or a call list or of a speed dial key o Setting mode activated f Flashes for a new entry in the call list if the caller's number transmission (CLIP) is active (page 11) g Phonebook open i Key lock activated x Ringer switched off Mute mode activated l Flashes on incoming VIP call Is indicated if at least one entry with activated VIP mode is present in the phonebook (page 7).

£ m £ Display language On delivery the display language is set to English. Other languages are available and you can change the language if you wish (page 8). £ 4 1110-01 en fr fa ar Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / telephony.fm / 23.04.

2012 Control key You activate the functions and navigate the menus using the control key. The functions offered depend on the operating situation.

Telephoning In addition to the handset, you can also call using the speaker (handsfree function). In the following instructions, the symbol c also always stands for @. T t s u W V U t s In standby: Y Open the call list Z Open phonebook Making a call Entering the telephone number using the keypad In lists: Scrolls one entry upwards/downwards.

Hold down: Scrolls the list fast upwards/downwards. While editing time setting: Moves forwards/backwards one position. In menus and lists: Exits the menu or list. While editing names and numbers: Deletes the character to the left of the cursor. Hold down: Deletes the line. If the entry is empty: Exits the editing mode.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569700)

[GIGASET DA610 user guide](http://yourpdfguides.com/dref/4569700)

<http://yourpdfguides.com/dref/4569700>

Phone number entered: Dials the phone number. In lists: Opens the context menu. While editing entries: Saves the edits. c~ Lift the handset, dial the number.

Instead of lifting the handset: @ Press the hands-free key to make a call via the speaker. You can switch over at any time during the conversation. Dialling from the phonebook v If you have already saved numbers in your phonebook (page 7), you can make a call directly from the phonebook. Open the phonebook using the control key s. Searching for an entry q Select an entry. Z or £ Writing and editing names and numbers ~ Text input Enter text using the keypad.

Multiple letters and numbers are assigned to each key between and O and Q, * and #. You enter a specific character by pressing the corresponding key several times. You will find a table of applicable characters in the Appendix page 12. ~ c or Enter letters (page 5).

The first entry starting with this letter is displayed. £ Dialling numbers Lift the handset. Open the context menu. Select DIAL ENTRY and confirm with [. The call is initiated via the speaker.

To make the call using the handset, simply lift the handset. £ [q Moving the cursor t s To move the cursor to the left/right in the text, press the control key upwards/downwards. Deleting/correcting characters X Press the left-hand side u of the control key. The character to the left of the cursor is deleted. Press and hold down to delete the whole line.

Note You can also first lift the handset before opening the phonebook. en fr fa ar 1110-01 5 Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / telephony.fm / 23.04.2012 Dialling from the call list The call list contains the numbers of the last 50 incoming calls. Requirement: Telephone number display is possible for incoming calls (page 11). @@@@Open the call list using the control key t. @@@@0 I 2368). @@@@Changing the melody Q ..

. @@The first entry in the list is displayed. t Select NEW ENTRY and confirm with [. ~ Enter number and confirm with [. ~ Enter name and confirm with [. The entry is saved and shown in the display. * Press the star key to turn the entry into a VIP entry. @@@@You can also allocate VIP mode to a number. @@@@The phonebook entry number is also visible (01..

. 50). If there is at least date and a 4-digit time. Use the q control key to move one position forwards/backwards. K Save your settings and exit the setting mode. The date setting format is according to the one currently set. @@@@5 Press the key code for setting the date format. for DD/MM e.g. 31/12 2 for MM. DD e.g. 12.31 3 for DD.MM e.g. @@@@The currently set ringer is played. @@@@4 Select the desired value using the number keys. @@@@There are three adjustable levels. K O Activate setting mode for the handset volume.

@@If you lift the handset, you will hear the currently set ring tone. Q ... O Select the required ring tone. @@@@The length of the pulses may differ from network to network. @@@@K Activate setting mode. O # Press the key code for mute setting. @@@@If you lift the handset, you will hear the VIP ringer at the currently set volume. Increase or decrease the volume for the ringer.

Emergency calls There are two emergency numbers stored in the telephone by default (110, 112). You can store an additional emergency number with up to 32 digits. These emergency numbers can also be selected when the key lock is switched on. Q ..

. 4 Select the desired value using the number keys. K Press the set key or [to save your settings and exit the setting mode. Selecting an emergency number with activated key lock c Lift the handset. is displayed.

~ Enter the emergency number. Saving the emergency number Changing the VIP ring tone Activate setting mode for the VIP ring tone. If you lift the handset, you will hear the currently set VIP ring tone. Select the required ring tone. Press the set key or [to save your settings and exit the setting mode. KM* Q ... O K KN3 Switching the ringer off If you do not wish to be disturbed, you can switch off the ringer. The following three settings are available: all tones off, VIP only on, all tones on.

* Hold down the key to switch all ring tones off. or Activate setting mode for the emergency number. If an emergency number is already set, it is displayed. Hold down the u key to clear the number. Q ... O / * / # / H / I Enter the emergency number. Direct calling (baby call) When direct calling is activated, the stored number (max. 32 digits) is dialled by pressing any key (except for the key sequence K N 2).

Press the key sequence to switch the ringer off for normal callers but leave it on for VIP contacts. Pressing the key sequence again will switch off the ringer for all callers. Once the ring tone has been switched off, the x symbol appears in the display. Switching the ringer back on * Hold down the key to switch all ring tones on. K*K Activating direct calling KN2 K Q .

.. O / * / # / H / I Activate setting mode for direct calling. Enter the direct calling number. Press the set key or [to activate direct calling and exit the setting mode.

Deactivating direct calling Security settings Locking the telephone You can secure your telephone against unauthorised access by using the key lock. When the key lock is activated, all keys are locked, with the exception of the # key and the stored emergency number (see below). KN2 X K Activate setting mode for direct calling. Hold down the u key to clear the direct call number. Press the set key or [to deactivate direct calling and exit the setting mode. Blocking numbers You can block phone calls to specific dialling codes (e.g. chargeable codes), max. 3 numbers with 5 digits each. K 2 Activate setting mode for blocking numbers.

If a dialling code is already set, it is displayed. Hold down the u key to clear the entry. Q ... O Enter the dialling code to be blocked (max. 5 digits). To edit the next dialling code: v Confirm with [and continue. To save the settings: K Save your settings and exit the setting mode. Note: The names of persons, whose numbers are stored in the phonebook with the area code defined here, are no longer displayed.

Change the appropriate phonebook entries, where necessary. Activating the key lock When the telephone is on standby, press and hold down the lock key. Once the key lock has been switched on, the i symbol and the KEYS LOCKED message appear in the display. If the handset is lifted, the key lock is indicated by . # Deactivating the key lock # Hold down the lock key.

10 1110-01 en fr fa ar Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / telephony.fm / 23.04.2012 Network services Public telephone systems offer you – in some cases only on request – a range of helpful, additional services (e. g. call forwarding, callback when busy, withheld number, etc.). These services can be selected using specified key combinations, of which your network provider will notify you. Changing the dialling mode/flash time The telephone supports the following dialling modes: u Tone dialling u Pulse dialling Depending on your PABX, you may need to change your phone's dialling mode or the flash time.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569700)

[GIGASET DA610 user guide](http://yourpdfguides.com/dref/4569700)

<http://yourpdfguides.com/dref/4569700>

@@@ You can transfer this number to the phonebook and edit it (page 7). @@@ After the connection is established: * Press the star key. @@ for "callback when busy". @K Activate setting mode. O 5 Press the key code for setting the flash interval. Q .

.. @@@ You can enter two area codes. K 4 Activate setting mode for the area code. The default number is displayed. Q ... O / * / # Enter the new area code (max. 5 digits).

To edit the second area code: v Confirm with [and continue. @@ You can save up to three prefixes in your telephone. @@ You can adjust the time of the dialling pause if necessary (page 12). K Q Activate setting mode for the dialling prefix. The current setting of the first dialling prefix is displayed.

Q ... O, *, #, H Enter the dialling prefix (1 to 3 digits) and confirm with [. Enter the next prefix and confirm with [.

u Hold down the control key X to delete the current dialling prefix. K Save your settings and exit the setting mode. £ Operation on a PABX Special functions/Recall key During an external call, you can make an enquiry or forward the call. To do this, press the recall key H. The subsequent procedure depends on your PABX. To set the recall key, the telephone's flash time must be set consistently with your PABX. Please refer to the operating instructions for your PABX. en fr fa ar 1110-01 11 Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / telephony.fm / 23.04.

2012 Other settings In addition to the options described in section Adjusting the telephone (page 8), you can perform further settings in setting mode (e.g. reset the factory settings). These are summarised in the following table. Default settings are displayed in bold. If there is no bold value for a setting, the presetting is country-dependent. K Press the set key and 1. ~ Enter the key sequence for the setting. v Confirm with [to save the setting and stay in setting mode. Standard characters The following characters can be entered using the keypad: £ or K Key sequence 02 0 1 2 25 0 53 0 1 2 70 0 1 83 0 1 2 Press the set key to save the setting and exit the setting mode.

Value Description 91 98 #0 0 1 0 1 2 0 1 0 1 0 1 #1 #2 1s Sets the length of the pause that 3s can be inserted with the pause key. 6s Restores all settings to default (factory settings). Deactivate Flash interval for the LED (hands500 ms/500 ms free key) on incoming call. 30 ms/70 ms Deactivate Use only the FSK checksum for verActivate ifying the received CLIP information (FSK = Frequency Shift Keying). Deactivate Withholds the first ringer.

@@ 1.5 : 1 Sets the pulse ratio for pulse dial2:1 ling. 23 - 54 Hz Defines the frequency for call 15 - 75 Hz detection. Frequency not evaluated Ringer Start signal for CLIP recognition. @@@@ Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static. Disposal All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority or your refuse collection service. Contact with liquid ! If the device comes into contact with liquid: 1 Allow the liquid to drain from the device. 2 Pat all parts dry. Place the device (the keypad facing down) in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).

3 Do not switch on the device again until it is completely dry. When it has fully dried out, you will normally be able to use it again. @@@@ Is the dialling mode set correctly? The other party cannot hear you: Mute activated? Regular pulse noises can be heard during a call: The connection is receiving metering pulses from the exchange, which the telephone cannot interpret. Contact your network operator. Authorisation (not for SEA and India) This device is intended for analogue phone lines outside the European Economic Area (with the exception of Switzerland) depending on national type approval. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs Environment Our environmental statement We at Gigaset Communications GmbH are aware of our social responsibility.

That is why we actively take steps to create a better world. In all areas of our business – from product planning and production to sales and waste of disposal – following our environmental conscience in everything we do is of utmost importance to us. Learn more about our earth-friendly products and processes online at www.gigaset.com.

Environmental management system Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001. ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH. ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH. en fr fa ar 1110-01 13 Gigaset DA610 / en / A30350-M212-A601-1-UZ19 / DA610SIX.fm / 23.

04.2012 Index A Authorisation

.....

.....

.....

.....

.....

.....

13 M Music on hold

.....

.....

.....

.....

..... Mute .

.....

.....

.....

.....

.....

.....
.....

.....
.. *Mute behaviour* ..

.....
.....

.....
.....
.....

..... *Mute key*

.....
.....
.....

.....
.....
.....

..... *9 7 9 1 B Baby call*

.....
.....
.....

.....
.....
.....

... *10 Blocking numbers*

.....
.....
.....

.....
.....
.....

... *10 N Network services*

.....
.....
.....

..... *11 O Open listening* .

.....
.....

.....
.....
.....

..... *6 C Call list* ..

.....
.....
.....

.....
.....
.....

.....
8 Dialling from

.....
.....
.....
.....
.....

... *6 Saving numbers*

.....
.....
.....
.....

... *8 Caller display*

.....
.....
.....
.....
.....

... *11 Changing the dialling mode* ..

.....
.....
.....

..... *11 CLI, CLIP* ..

.....
.....
.....
.....

..... *11 Connectors* ..

.....
.....
.....
.....

..... *2 Contact with liquid*

.....
.....
.....
.....

.....
.....
13 Control key

.....
.....

.....
.....
.....

.....
... 5 P Phonebook Dialling from. .

.....
.....

.....
.....
.....
.....

..... 5 Saving numbers

.....
.....
.....

.....
.....
.....

..... 7 R Recall key.

.....
.....
.....
.....

.....
.....



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA610 user guide](http://yourpdfguides.com/dref/4569700)
<http://yourpdfguides.com/dref/4569700>

..
.....
.. 1, 11 Redial list

.....
.....
.....
.....

.....
.....
.....
6 Redial/pause key

.....
.....
.....
.....

.....
.. 1 Restore factory settings

.....
.....

.....
.....
.....

..... 12 Ringer

.....
.....
.....
.....

.....
.....
.....
..... 7 Setting

.....
.....
.....
.....

.....
.....
.....
..... 9 Switching off

.....
.....
.....
.....

.....
.....
.....
.. 10 Ringer settings

.....
.....
.....
.....

.....
.. 9 Ringer volume

.....

.....

.....

.....

.....

.....

..... 7 D Date and time

.....

.....

.....

.....

.....

.....

.....

9 Date format

.....

.....

.....

.....

.....

.....

..... 9 Dialling code

.....

.....

.....

.....

.....

.....

.....

.. 11 Dialling prefixes

.....

.....

.....

.....

.... 11 Dialling, telephone number.

.....

.....

.....

.....

.....

..... 5 Direct calling

.....

.....

.....

.....

.....

.....

.....

. 10 Display

.....

.....

.....

.....

.....
..... *Speed dial key.*

.....
.....
.....
.....

.....
.....
.....

... *Speed dial number Dialing*

.....
.....
.....
.....

.....
.....
.....

. *Storing*

.....
.....
.....
.....

.....
.....
.....

.... *Star key.*

.....
.....
.....
.....

.....
.....
.....

4 7 1 7 7 1 6 8 1 E Emergency calls

.....
.....
.....
.....

.. *10 Entering characters.* ..

.....
.....

.....
.....
.....

..... *.5, 12 Environment.*

.....
.....
.....
.....

.....
.....
.....

.... *13 F Flash time*

.....
.....
.....

.....
.....
.....
.. 11 Function code

.....
.....
.....

.....
.....
.....
. 12 H Handset volume. ...

.....
.....
.....

..... 9 Hands-free .
.....
.....

.....
.....
.....

..... 6 Hands-free key ...
.....
.....

.....
.....
.....

. 1 Hash key

.....
.....
.....

. 1 T Telephone Changing the language

.....
.....

... 8 Installing ...
.....

.....

.....
.....
.....

..... *4 Locking.*

.....
.....
.....

.....
.....
.....
.....

..... *10 Setting the date/time*

.....
.....
.....

.....
.....
.....

9 Text entry

.....
.....
.....
.....

.....
.....

..... *5 Time format* .

.....
.....
.....
.....

.....
.....

9 K Key lock

.....
.....
.....
.....

..... *1, 10 Keys* ..

.....
.....
.....
.....
.....

..... *1 V VIP mode*

.....
.....
.....



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET DA610 user guide
http://yourpdfguides.com/dref/4569700](http://yourpdfguides.com/dref/4569700)