



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET DA710. You'll find the answers to all your questions on the SIEMENS GIGASET DA710 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET DA710**  
**User guide SIEMENS GIGASET DA710**  
**Operating instructions SIEMENS GIGASET DA710**  
**Instructions for use SIEMENS GIGASET DA710**  
**Instruction manual SIEMENS GIGASET DA710**

## Overview Gigaset DA710



### Display and keys

- 1 Adjustable display (Changing the language → page 11)
- 2 Control key for the display functions
- 3 Shift key
- 4 Menu key
- 5 Redial/pause key
- 6 Recall key
- 7 Mute key
- 8 Direct dial key
- 9 Insert strip for writing the assignment of direct dial keys
- 10 Star key, selecting/deselecting the ring tone (press and hold)
- 11 Hash key, selecting/deselecting the key lock (press and hold)
- 12 Hands-free/headset key

- 13 Keys for setting the volume of the handset, headset, speaker and ring tone
- 14 Microphone for hands-free

### LED

- Hands-free/headset key
- ▶ flashes on incoming call
  - ▶ lights up when the call is transferred to the speaker or headset
  - ▶ flashes when you hang up the handset, either if a new call or a new message has been received (settings → page 11)

de en fr nl

1



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA710 user guide](http://yourpdfguides.com/dref/4569724)  
<http://yourpdfguides.com/dref/4569724>

**Manual abstract:**

You may need a phone adapter depending on your country. @@@@Lift out the handset bracket (6) with a screwdriver and clip it into the handset cradle (7). Hang the telephone on the projecting screw heads. First use 1 Lift the handset for 5 seconds and place it back in the cradle. 2 Lift the handset again. You will hear the free tone and the device is now ready to be used. The phone is connected to the power source via the phone line. In case of a power cut (e.g. if the PABX is switched off at night), the above mentioned steps need to be repeated.

2 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / DA710IVZ.fm / 25.11.2011 Table of contents Overview Gigaset DA710 . .

.....  
.....

... 1 Connecting the telephone .....

.....  
.....

. 2 Safety precautions .....

.....  
.....

. 4 Setting up the telephone for use ...

.....

4 Operating the telephone .....

.....  
.....

. 4 Display .....

.....  
.....  
.....

... Control key ...

.....  
.....  
.....  
.....

. Writing and editing text .....

.....  
.....  
.....

..... Menu .....

.....  
.....  
.....

..... Phonebook, call list and redial list .

.....  
.....  
.....

..... Menu tree .....

.....  
.....  
.....  
.....

..... Making a call .

.....  
.....

.....  
.....  
.....

*Incoming calls* .....

.....  
.....  
.....

.....  
.....

*Using open listening / hands-free / headset* .....

.....

*Settings during a call* .....

.....  
.....  
.....

*4 5 5 5 6 7 8 8 9 Operation on a PABX* .....

.....  
.....  
.....

*14 Special functions/Recall key* .....

.....  
.....  
.....

*14 Changing the dialling mode/flash time* .....

.....  
.....

*14 Setting dialling prefixes* .....

.....  
.....  
.....

*14 Appendix* .....

.....  
.....  
.....  
.....

*15 Other settings* .....

.....  
.....  
.....

.....  
.....

*15 Predefined key combinations* .....

.....  
.....

*15 Standard characters* .....

.....  
.....

*16 Care* .....

.....  
.....  
.....

... 16 Contact with liquid ..

.....  
.....  
.....

..... 16 Questions and answers ...

.....  
.....  
.....

.. 16 Protecting our environment .....

.....  
.....  
.....

... 16 Contacts .....

.....  
.....  
.....

... 16 Disposal .....

.....  
.....  
.....

... 16 Authorisation ..

.....  
.....

..... 16 Telephoning ..

.....  
.....  
.....

7 Index .....

.....  
.....  
.....

..... 17 Using the phonebook, lists and direct dial keys ...

.....  
.....  
.....

... 9 Phonebook ...

.....  
.....  
.....  
.....  
.....

. 9 Call list (CLIP) .....

.....  
.....  
.....  
.....

. 10 Last number redial list ...

.....  
.....  
.....

.. 10 Direct dial keys .....

.....  
.....  
.....  
.....

..... 10 Adjusting the telephone .....

.....  
.....

.... 11 Basic settings .....

.....  
.....  
.....  
.....

..... 11 Setting the volume .

.....  
.....  
.....

... 11 Setting the ringer ...

.....  
.....  
.....  
.....

..... 11 Security settings .

.....  
.....  
.....

..... 12 Locking the telephone .....

.....  
.....  
.....  
.....

.. 12 Emergency calls .....

.....  
.....

.....  
.....  
.... 12 Direct calling (baby call) .  
.....  
.....

.....  
.....  
... 13 Blocking numbers . .  
.....

.....  
.....  
..... 13 Network services . .

.....  
.....  
.... 13 Caller display (CLIP) . . . . .

.....  
.....  
.....

... 13 Call Divert . . . . .  
.....  
.....

.....  
.....  
. 13 Other network services . . . . .

.....  
.....  
..... 13 Recall key . . . . .

.....  
.....  
.....

.... 14 Setting up of dialling code .  
.....  
.....

. 14 de en fr nl 1110-01 3 Gigaset DA710 / en / A30350-M213-R101-1-7W19 / using.fm / 25.11.2011 Safety precautions When installing, connecting and operating the telephone, always observe the following precautions: u Only use the jacks and leads supplied. u Only connect the connecting lead to the intended socket. @@@@u Other headsets may only function to a limited extent or not at all. @@@@u Lay the connecting lead where it will not cause accidents. u Position the telephone on a non-slip surface. u For your safety and protection, the telephone may not be used in the bath or shower rooms (wet locations). The telephone is not splash proof. u Never expose the telephone to sources of heat, direct sunlight or other electrical devices. u Protect your telephone from moisture, dust, corrosive liquids and vapours. u Never open up the telephone yourself. u Do not touch the plug contact with pointed or metallic objects.

u Do not carry the telephone by the leads. u If you give your Gigaset DA710 to someone else, make sure you also give them the operating manual. Your Gigaset DA710 has a permanent memory, so you may want to delete any stored numbers before passing it on. Operating the telephone The keypad and the display are available to operate your Gigaset DA710. In addition, the display menu together with the control key provides access to the configuration and use of the many functions of the telephone. All usage possibilities are described in the handbook. Note Some of your telephone's functions may only be available without restriction if they are supported by your and the caller's network provider, e. g. functions for which information on the caller's telephone number is

required. This applies for the following functions, for example: u Displaying the number of an incoming call ( page 8) u Indicating a caller with VIP melody ( page 8) u Call list ( page 10) u Call forwarding and other network services ( page 13) £ £ £ £ Display In stand-by mode, the time, date and calendar week are displayed.

You can set the date and time and the format in which it is displayed ( page 11). Symbols on the display also provide information regarding the status of your telephone. £ 14:00 23.08.2011 CW34 nlm Toolbar Time (24h format) Date / Calendar week Setting up the telephone for use Recommended installation of telephone: u Do not expose the telephone to direct sunlight or other sources of heat.

u Operate at temperatures of between + 5° C and + 40° C. u Maintain a distance of at least one metre between the telephone and radio equipment, e.g. radio telephones, radio paging equipment or TV sets. Otherwise telephone communication could be impaired.

u Do not install the telephone in dusty rooms as this can limit the service life of the telephone. u Furniture lacquer and polish can be adversely affected by contact with parts of the unit (e.g. feet). Display symbols Flashes for a new call in the call list if the caller's number transmission (CLIP) is active ( page 13) Z Phonebook open h Shift key pressed i Key lock activated k Ring tone switched off l Flashes on incoming VIP call Is indicated if at least one entry with activated VIP mode is present in the phonebook ( page 9). m Mute mode activated n Headset connected f £ £ 4 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / using.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET DA710 user guide](#)

<http://yourpdfguides.com/dref/4569724>

fm / 25.11.2011 Control key The telephone's functions are activated and the menu is navigated using the control key. The functions offered depend on the operating situation.

Menu The functions of your telephone are offered to you via a menu that consists of several levels. Press the M key to open the menu. The menu functions and submenu functions where necessary are displayed in list form. Scroll with the control key q to the required function and press the right-hand side of the control key v, (I) to confirm your selection. Press u (X) in order to return to the previous menu level. Press the M key to return to the start menu. T t s W V □ □ □ □ U t s In standby: Y Open the call list Z Open phonebook u v In menus and lists: Scrolls one entry upwards/downwards. Hold down: Scrolls the list fast upwards/downwards. While editing names and numbers: Moves the cursor to the left/right. Hold down: Moves the cursor fast to the left/right.

While pressing the direct dial key: Displays long phone numbers completely. In menus, lists and with direct dial keys: Exits the menu, list or direct dial key. While changing settings: Terminates the action without changing the setting. While editing names and numbers: Deletes the character to the left of the cursor. Hold down: Deletes the line.

If the entry is empty: Exits the editing mode. Phone number entered or direct dial key pressed: Dials the phone number. In menus and lists: Opens the submenu/context menu. While editing entries/changing settings: Saves the edits or activates the selected settings. Note To exit the menu without saving any previous entries simply lift and then hang up the handset.

After a short time the display will then once again show the standby mode. Description of the menu selection steps The steps to select a menu function are set out in these operating instructions as follows: M ☿ Phone setup ☿ Lanal the number, lift the handset. Lift the handset, dial the number. or c~ Instead of lifting the handset: A Press the hands-free/headset key to make a call via the speaker or the connected headset. You can switch over at any time during the conversation. Making a correction when entering the telephone number (only possible if the handset is in its cradle): X Press the control key u to delete a digit entered in error to the left of the cursor. Dialling numbers q Select the number or name. c Lift the handset. or Y ☿ Open the call list using the control key t. q q Select the entry and open context menu with [.

Select Call back and initiate the call using the speaker with [. Lift the handset to make the call using the handset. Note You can also first lift the handset before opening the call list. Dialling from the phonebook If you have already saved numbers in your phonebook ( can make a call directly from the phonebook. M Phonebook or Searching an entry q Select an entry. Hold down the top or bottom of the key to scroll fast in the list. or Z ☿ £ page 9), you Last number redial The last five numbers dialled are automatically saved (each a max. of 32 digits). Open the phonebook using the control key s. Dialling the last saved number: Ic or Press the redial key, lift the handset.

Lift the handset, press the redial key. cI Dialling one of the last five numbers saved: ~ c Enter letters ( page 5). The first entry starting with this letter is displayed. £ M ☿ Redial or I Press the redial key. Dialling numbers Lift the handset.

Open context menu. Sele) cautions A The telephone is operated using the hands-free/headset key in the same way as for the hands-free function (see above). Once the headset is connected this is indicated in the display with the n symbol. £ £ 8 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / telephony.fm / 25.

11.2011 Settings during a call The settings described below can also be changed in the menu ( page 11). or £ M ☿ Phonebook Searching an entry Setting the handset/headset volume There are three adjustable levels. E / D Set the volume using the volume up/volume down keys. The set volume is shown in the display. q or Select an entry. Hold down the the top or botton of the key to scroll fast in the list. Enter letters ( page 5). The first entry starting with this letter is displayed. Setting the speaker There are seven adjustable levels.

E / D Set the volume using the volume up/volume down keys. The set volume is shown in the display. ~ £ Mute You can switch off the microphone or handset and microphone during a call according to the setting of the mute function ( page 11): C Press the mute key to switch the mute function on or off. During muting of the microphone, a melody can be played. Once the telephone has been muted this is indicated in the display with the m symbol. Note If you press \*, the entry is set as a VIP entry or the setting is deleted. £ Ringer and volume Whilst the telephone is ringing, the volume and ringer can be changed. E / D Set the ringer volume with the volume up/volume down keys (5 levels, 0=silent). Q ..

O Select ringer with the numeric keys (10 different). M Phonebook The first list entry is displayed. t Select New entry and confirm with [. ~ Enter number and confirm with [. ~ Enter name and confirm with [.

Saving numbers ☿ The notice Save to PBK? appears in the display. @@q Select VIP mode (On / Off) and confirm with [. Using the phonebook, lists and direct dial keys The following options are available on your telephone for storing your contacts and the incoming and outgoing calls: u Phonebook with max. 100 entries u Call list with the last 50 incoming calls u Redial list with the last 5 outgoing calls u Direct dial keys for storing 16 important numbers B/L B Or: save to a direct dial key Press the desired direct dial key. The notice Saved appears in the display.

Note You can save an entry first in the phonebook and then to a direct dial key. Delete entry / Delete all M ☿ Phonebook Phonebook Your Gigaset DA710 contains a phonebook in which you can save up to 100 entries, each with a maximum of 32 digits for numbers and 16 characters for names. You can make a call ( page 7), add new entries and manage and modify entries ( page 9) using the Phonebook. You can manually enter numbers and names or transfer them from the call list ( page 10). You can also allocate VIP mode to a number. The Z symbol is indicated in the display if the phonebook has been opened. In addition, the phonebook entry number is also indicated in the display (01.. 99, 00 is displayed for 100). £ £ £ The first list entry is displayed.

q Select the entry and open context menu with [. q Select Delete entry or Delete all and confirm with [. [ Press the control key to confirm the action. Edit entry M ☿ Phonebook The first list entry is displayed. q Select the entry and open context menu with [. q Select Edit entry and confirm with [. ~ Change number and confirm with [. ~ Change name and confirm with [.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA710 user guide](http://yourpdfguides.com/dref/4569724)

<http://yourpdfguides.com/dref/4569724>



The notice Save to PBK? @@q Select VIP mode (On / Off) and confirm with [. @@@@Up to 50 calls are saved.

If the number is the same, only the last incoming call is saved. @@@@Select the entry and open context menu with [. Select Save number and confirm with [. Change number (if required) and confirm with [. Enter name and confirm with [.

While editing numbers and names, move the cursor with q. @@@@The notice Saved appears in the display. Open the last number redial list. Select the entry and open context menu with [. Select Delete entry or Delete all and confirm with [.

@@Select the entry and open context menu with [. Select Save number and confirm with [. Change number (if required) and confirm with [. Enter name and confirm with [. While editing numbers and names, move the cursor with q. Y q q ~ ~ @@q Select VIP mode (On / Off) and confirm with [. @@@@Use the shift key L to access the keys' second storage area. The display symbol h indicates that the shift function is active. @@They can also be used as function keys e. g.

for call forwarding. @@@@Empty is displayed when the storage is empty. If the key is already assigned you will see the saved number. @@Select the entry and open context menu with [. Select Delete entry or Delete all and confirm with [. @@@@Select Delete entry or Delete all and confirm with [.

@@@@@@@@The time is updated by incoming calls with telephone number displays. @@~ Enter 4-digit time (HHMM). @@For example: 31.

@@Select the required time format and confirm with [.

@@@Micro&Spk. Off: The telephone is completely muted. @@@@Note The melodies are played over the speaker if you lift the handset before commencing with the settings. Set LED on hands-free/headset key You can specify when the telephone LED should flash (key A). M Phone setup Speaker LED ç ç de en fr nl 1110-01 11 Gigaset DA710 / en / A30350-M213-R101-1-7W19 / telephony.

fm / 25.11.2011 You can also change both settings directly using the keys while the telephone is ringing ( page 9). M Audio setup Ring tones ~ ç £ ç Security settings Locking the telephone You can secure your telephone against unauthorised access by using the Key lock and PIN entry, in order to lift the Key lock.

Note If you have changed the telephone PIN you must always enter the PIN after selecting the Security menu entry.

D / E Set the volume for the ringer currently selected. [ Press the control key to save the setting. Note The ring melody can only sound when the ring pulse arrives from the telephone network. The length of the pulses may differ from network to network. It is therefore possible that some ring tones for selection may seem clipped. If this is the case please select another ring tone. Select the required ringer. Q ...

O Ringer 1 - 10 L Q ... L 5 Ringer 11 - 16 Setting up the Key lock When the Key lock is activated, all keys are locked, with the exception of the menu key, the hands-free/headset key and the stored emergency numbers ( page 12). £ Setting the VIP Melody You can set one of the ringers as VIP Melody. When you have assigned a number from the phonebook VIP mode status ( page 9), an incoming call from this number will be indicated with the VIP Melody ring tone. M Audio setup VIP Melody ~ ç ç £ Activating the Key lock \$ When the telephone is on stand-by, press and hold down the lock key. or D / E Set the volume for the ringer currently selected. [ Press the control key to save the setting. Setting the ring mode If you do not wish to be disturbed, you can switch off the telephone's ringer.

The three following optional settings are available: All tones off, VIP only (see above), All tones on (default setting). M Audio setup Ringer mode Select the required ringer. Q ...

O Ringer 1 - 10 L Q ... L 5 Ringer 11 - 16 M ç Security ç Key lock Deactivating the Key lock \$ Hold down the lock key. or M Press the menu key.

Q ... O If the preset PIN (0000) is changed, enter a 4-digit PIN and confirm with [. Once the key lock has been switched on, this is indicated with the i symbol in the display. + Hold the key down to switch the ring tone off and back on. Once the ring tone has been switched off, this is indicated with the k symbol in the display. q [ ç Select the required setting and confirm with [. Press the control key to save the setting. ç Changing the PIN The default setting for the Key lock PIN is 0000.

You should change this PIN in the interests of security. M Security Change PIN Switching the ring tone off using the key Q...O Enter a new 4-digit PIN and confirm with [. Repeat the entry and re-confirm with [. ç ç Emergency calls There are two emergency numbers stored in the telephone as a default setting (110, 112). You can store an additional emergency number with a max. of 28 digits. These emergency numbers can also be selected when the Key lock is switched on.

Selecting an emergency number Lift the handset. Enter the emergency number. Emergency is indicated in the display. c ~ Saving the emergency number M ç Security ç Emergency Q...

.O Enter the emergency number and confirm with [. 12 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / telephony.fm / 25.11.

2011 Direct calling (baby call) When direct calling is activated, the stored number is dialled by pressing any key after lifting the handset (except for the keys A, D and E). Activating call forwarding M CLASS Call Divert Activating direct calling M ç Security ç Direct call Q...O Enter the direct calling number and confirm with [. Direct calling is activated and indicated in the display. Deactivating direct calling M ~ Select Activate and confirm with [. The conditions for call forwarding are displayed. @@The key combination for initiating call forwarding is displayed. ~ Enter target number and confirm with [.

The call forwarding for the selected condition is activated. @@Enter PIN ( page 12) and confirm with [. Confirm the question Disable direct?

@@chargeable codes), max. 3 numbers with 5 digits each. @@@@The conditions for call forwarding are displayed. @@@@g. call forwarding, callback when busy, withheld number, etc.). @@@@Prerequisite: The network provider supports the following service features and the number transfer is not withheld by the caller: u CLI (Calling Line Identification): The caller's number is transferred. u CLIP (Calling Line Identification Presentation): The caller's number is displayed.

You can transfer this number to the phonebook and edit it ( page 9). If you have saved the local dialling code ( page 14), a call with the same dialling code is automatically only displayed as the number without the dialling code. Enter key combination for the network service and confirm with [. Use the shift key L in the position, in which you are required to enter data. For example: Call forwarding when busy is activated with \*67\* <number> #.

You are required to enter data for <number>. Use the following key combination for the configuration: q Select required network service.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA710 user guide](http://yourpdfguides.com/dref/4569724)  
<http://yourpdfguides.com/dref/4569724>

H Press recall key. Q ..

O, +, \$ € +LM\*L# CW Signal £ £ Call Divert ☐☐☐☐ Call forwarding can be set up for three different conditions: All Calls (CFU, Call Forwarding Unconditional) No Answer (CFNR, Call Forwarding No Reply) When Busy (CFB, Call Forwarding Busy) Select Activate / Deactivate and confirm with [. The signalling of an incoming call by call waiting is activated or deactivated. If the call waiting function is available from your network provider and you activate it, an incoming call is signalled during the conversation ( page 8). M CLASS CW Signal £ q € de en fr nl 1110-01 13 Gigaset DA710 / en / A30350-M213-R101-1-7W19 / telephony.fm / 25.11.2011 Withheld number (anonymous call) If you activate the withheld number function, your number will not be displayed for the person you are calling. M CLASS Withhold number Operation on a PABX Special functions/Recall key During an external call, you can make an enquiry or forward the call. To do this, press the recall key H. The subsequent procedure depends on your PABX.

To set the recall key, the telephone's flash time must be set consistently with your PABX. Please refer to the operating instructions for your PABX. Select Activate / Deactivate and confirm with [. The withheld number function is activated or deactivated. q € € Hotline The network service Hotline allows a special number to be selected simply by lifting the handset, e.g. in case of emergency. This function is not available if it is not supported by your network provider. M CLASS Hotline Select Activate / Deactivate and confirm with [. The network service Hotline is activated or deactivated.

q € € Changing the dialling mode/flash time The telephone supports the following dialling modes: u Tone dialling u Pulse dialling Depending on your PABX, you may need to change your phone's dialling mode or the flash time. (Default setting: Tone dialling) Call back when busy If you make a call but the person you are calling is already on the line, you can arrange an automatic callback as soon as the connection is free. M CLASS Call back q Select Activate / Deactivate and confirm with [. The callback is activated or deactivated. Automatic callback € € Changing the dialling mode M € Phone setup € Dial mode q Select Tone or Pulse and confirm with [.

Changing the flash time You can change the flash time if the dialling mode is set to tone dialling (see above) (default setting 90 ms). M Phone setup Flash time Select Activate / Deactivate and confirm with [. The automatic callback is activated or deactivated. If your network provider supports automatic callback and you activate this function, the number of the caller who called you last while your line was busy will be dialled automatically. M CLASS Auto recall q € q € € Select flash time, the following values are available: 90, 120, 270, 375, 600 ms and confirm with [.

Temporary switch to tone dialling in "Pulse" position To use functions that require tone dialling (e.g. remote control of answering machine), you can set the telephone to tone dialling for the duration of the call. After the connection is established: \* Press the star key. After the connection is terminated, the setting reverts to pulse dialling. Network mailbox If you use a network mailbox, the telephone display shows new incoming messages. The request for the mailbox can be started via the menu. You can also set the LED so that it lights up to indicate incoming messages ( page 11). M CLASS Phonemail £ € € The network service number is selected. Setting dialling prefixes If your phone is connected to a PABX, you may have to use a dialling prefix to make external calls.

You can save up to three prefixes in your telephone. If a dialling prefix is recognised during dialling, a dialling pause will automatically be applied. You can adjust the time of the dialling pause if necessary ( page 15). M Phone setup PABX code Recall key In public telephone systems the recall key (flash) is required for the use of various additional services; e.g. for "callback when busy". If necessary, the flash time on your telephone must be adjusted to the requirements of the telephone system ( page 14). Setting up of dialling code £ If necessary you can change the default setting for the area code for your connection which is saved in the telephone. The number saved here is then used to display only the number of the person calling without area code in the call lists, provided that they have the same area code. M Phone setup Area code £ € € € The default number is displayed.

Q...O Enter the new area code (max. 6 digits) and confirm with [.

The current setting is displayed. Q...

O Enter the dialling prefix (1 to 3 digits) and confirm with [. Use the control key to switch between the dialling prefixes: t s Press the control key up/downwards in order to jump left/ right 14 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / appendix.fm / 25.11.2011 Appendix Other settings In addition to the options described in section Adjusting the telephone ( page 11), you can perform further settings with the help of Feature codes (e.g. reset the factory settings). These are summarised in the following table. Default settings are displayed in bold. @@M Press the menu key and 1.

@@@M@Function Activate call forwarding for all calls (CFU) Deactivate call forwarding for all calls Activate call forwarding when no reply (CFNR) Deactivate call forwarding when no reply Activate call forwarding when busy (CFB) Deactivate call forwarding when busy Activate signalling for call waiting (CW) Deactivate signalling for call waiting Activate hotline Deactivate hotline Key combination \*21\*<number># #21# \*61\*<number># #61# \*67\*<number># #67# \*43# #43# \*53\*<number># #53# 25 Restores all settings to the factory settings Deletes the contents of all programmable direct dial keys Deletes all dialling codes Restores all network service codes Deletes all stored numbers (not phonebook) Time display off 24 hour format Sets the time format 50 12 hour format Deactivate 500 ms/500 ms 30 ms/70 ms Deactivate Activate Interval for the LED (hands-free/ headset key) on incoming call Eliminates click tone at the beginning or end of ringer. If network transmits only a very short ringer impuls, the click tone can be prevented by deactivating (setting 0) the setting. Withholds the first ringer. With this setting, it is possible to determine, if an incoming call comes from a VIP number, and to select a VIP ring tone instead of the normal ring tone. 57 <number> 70 This will be replaced by the phone number, which has been specified for the corresponding function in the menu CLASS ( page 13). £ 83 0 1 2 Deactivate Activate Automatic 88 B 1-9 0 1 0 1 2 3 4 0 1 Settings 1-11 Sets the contrast of the display.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET DA710 user guide](http://yourpdfguides.com/dref/4569724)  
<http://yourpdfguides.com/dref/4569724>

1 = minimum contrast 5 = default setting Setting 10: Direct dial key 1 11 = maximum contrast Setting 11: Direct dial key 2 1,5 : 1 2:1 85 / 85 ms 85 / 110 ms 85 / 140 ms 110 / 110 ms 70 / 70 ms Activate Deactivate Sets the pulse ratio for pulse dialling Sets signal time/signal pause for tone dialling 91 92 #2 Updates time automatically according to CLIP information de en fr nl 1110-01 15 Gigaset DA710 / en / A30350-M213-R101-1-7W19 / appendix.fm / 25.11.2011 Standard characters The following characters can be entered using the keypad: Protecting our environment Our environmental statement We at Gigaset

Communications GmbH are aware of our social responsibility.

That is why we actively take steps to create a better world. @@@@(\ 2 3 4 5 6 s 8 z ! @@@@ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH. ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH. Contacts If you should encounter any problems when operating the telephone connected to a communication system with analogue network access, please contact the network operator responsible or your dealer. Disposal All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/E. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. The mode for text entry is changed by repeatedly pressing the shift key L.

Change between capitals (ABC), lower case (abc) and digits (123). The mode is briefly indicated on the lower right of the display when switching. By selecting the (123) mode, you can enter digits directly by pressing the respective key once. Care Wipe the unit with a damp cloth or an antistatic cloth. Do not use solvents or microfibre cloths. Never use a dry cloth; this can cause static. Contact with liquid ! If the device comes into contact with liquid: 1 Allow the liquid to drain from the device. 2 Pat all parts dry. Place the device (the keypad facing down) in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).

3 Do not switch on the device again until it is completely dry. When it has fully dried out, you will normally be able to use it again. In rare cases, contact with chemical substances can cause changes to the telephone's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances. Authorisation This device is intended for analogue phone lines in the UK. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs) Questions and answers

You lift the handset, but don't hear the free tone: Lift the handset for 5 seconds, put it back in the cradle and lift it again.

You lift the handset but you hear no dialling tone: Is the connecting lead correctly plugged into the telephone and the telephone socket? The dialling tone is audible but the telephone will not dial: The connection is OK. Is the dialling mode set correctly? The other party cannot hear you: Mute activated? Regular pulse noises can be heard during a call: The connection is receiving metering pulses from the exchange, which the telephone cannot interpret. Contact your network operator. 16 1110-01 de en fr nl Gigaset DA710 / en / A30350-M213-R101-1-7W19 / DA710SIX.fm / 25.

11.2011 Index A Answering machine . . . .

.....

.....

.....

.....

.....

. . . . 15 Authorisation . . . . .

.....

.....

.....

.....

.....

.....

. . . . . 17 M Menu. .

.....

.....

.....

.....

.....

.....

.....

.....

. Menu key . . . . .

.....

.....

.....

.....

.....

.....

.....

*Menu tree* .....

.....

.....

.....

.....

.....

.....

..... *Mute* ..

.....

.....

.....

.....

.....

.....

.....

.....

*Mute key* .....

.....

.....

.....

.....

.....

.....

.....

*5 1 6 9 1 B Baby call* .....

.....

.....

.....

.....

.....

.....

..... *13 Blocking dialling codes* ..

.....

.....

.....

.....

..... *14 Blocking numbers* ..

.....

.....

.....

.....

.....

.....

..... *14 N Network mailbox* .....

.....

.....

.....

.....

.....

.....

..... *15 Network services* .....

.....

.....  
.....  
.....

.....  
.....  
*14 Key combinations* .....

.....  
.....  
.....

.. *14 C Call forwarding* .....

.....  
.....  
.....

.....  
.....  
.....

..... *14 Call list* .....

.....  
.....  
.....

.....  
.....  
.....

..... *10 Dialling* .....

.....  
.....  
.....

.....  
.....  
.....

..... *7 Saving numbers* .....

.....  
.....  
.....

... *10 Callback Automatic* ..

.....  
.....

.....  
.....  
.....

..... *15 When busy* ..

.....  
.....  
.....

.....  
.....  
.....

.....

*.. 15 Caller display .....*

.....  
.....  
.....

.....  
.....  
.....

*..... 14 Changing the dialling mode ...*

.....  
.....  
.....  
.....

*..... 15 Changing the PIN ...*

.....  
.....  
.....

.....  
.....  
.....

*..... 13 CLI, CLIP ...*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 14 Contact with liquid ...*

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 16 Control key. ...*

.....  
.....  
.....

.....  
.....  
.....

*.... 5 O Open listening .*

.....  
.....  
.....

.....  
.....  
.....

*..... 8 P Phonebook ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

..... *9 Dialling* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... *7 Editing* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... *9 Saving numbers* .....

.....  
.....  
.....

.....  
.....  
.....

..... *9 Pulse dialling* .....

.....  
.....  
.....  
.....

..... *15 R Recall key.*

.....  
.....

.....  
.....  
.....  
.....

..... *1, 15 Redial list* .....

.....  
.....

.....  
.....  
.....  
.....

..... *10 Dialling* ..

.....  
.....  
.....

.....  
.....

.....  
.....  
..... 7 Saving numbers .....

.....  
.....  
.....

.....  
.....  
..... 10 Redial/pause key .....

.....  
.....  
.....

.....  
.....  
..... 1 Restore factory settings .....

.....  
.....  
.....

16 Ringer .....

.....  
.....  
.....

.. 9 Setting .....

.....  
.....  
..... 12 Switching off .

.....  
.....  
.....

.....  
.....  
..... 13 D Date and time .....

.....  
.....  
.....

.....  
..... 12 Dialling Number using the direct dial key.





[You're reading an excerpt. Click here to read official SIEMENS  
GIGASET DA710 user guide  
http://yourpdfguides.com/dref/4569724](http://yourpdfguides.com/dref/4569724)

.....  
.....

.....  
.....  
*... 8 Telephone number ...*

.....  
.....  
.....

*..... 7 Dialling code .....*

.....  
.....  
.....

.....  
.....  
.....

*15 Dialling prefixes .....*

.....  
.....  
.....

.....  
.....  
.....

*.. 15 Direct calling .....*

.....  
.....  
.....

.....  
.....  
.....

*.. 13 Direct dial key ...*

.....  
.....  
.....

.....  
.....  
.....

*..... 1, 11 Display functions .*

.....  
.....  
.....

.....  
.....  
.....

*. 5 Display symbols .....*

.....  
.....  
.....

.....  
.....  
.....

*..... 4 S Safety precautions .....*

.....  
.....  
.....  
.....

*..... 4 Saving Number .....*

.....  
.....

.....  
.....  
.....  
.....

*..... 9 Setting the volume .....*

.....  
.....

.....  
.....  
.....

*..... 12 Handset .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 8 Headset .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 8 Speaker .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 8 Shift key .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 1 E Emergency calls .....*

.....

.....  
.....  
.....

.....  
... 13 Entering characters. .

.....  
.....

.....  
.....  
.....  
.....

5, 16 F Flash time .....

.....  
.....  
.....

.....  
.....  
.....

..... 15 Function code. .

.....  
.....  
.....  
.....

.....  
.....  
.....

.. 16 T Telephone Changing the language .....

.....  
.....  
.....  
.....

... 12 Installing .....

.....  
.....  
.....

.....  
.....  
.....

..... 4 Locking.

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 13 Setting the date/time .....

.....  
.....  
.....  
.....

..... 12 Text entry.

.....  
.....

.....

.....

.....

.....

.....

..... 5 Tone dialling ..

.....

.....

.....

.....

.....

.....

.....

... 15 H Hands-free .....

.....

.....

.....

.....

.....

.....

.....

. 8 Hands-free/headset key .....

.....

.....

.....

.....

.....

. 1 Headset .....

.....

.....

.....

.....

.....

.....

.....

.. 8 K Key lock ...

.....

.....

.....

.....

.....

.....

.....

1, 13 Keys .....

.....

.....

.....

.....

.....

.....

.....

.... 1 V VIP melody .

.....

.....  
.....  
.....  
.....

.....  
.....  
*13 W Withheld number* .....

.....  
.....  
.....  
.....

..... *14 L Language* .....

.....  
.....  
.....

.....  
.....  
.....  
.....

... *12 Last number redial* .....

.....  
.....  
.....

.....  
.....  
.....

... *7 LED* .....

.....  
.....  
.....  
.....

.....  
.....  
.....

... .1, 12 de en fr nl 1110-01 17 Gigaset DA710 / en / A30350-M213-R101-1-7W19 / Cover\_back.fm / 25.11.2011 Issued by Gigaset Communications GmbH  
Frankenstrasse 2a, D-46395 Bocholt © Gigaset Communications GmbH 2011 All rights reserved. Subject to availability.

*Rights of modification reserved. www.gigaset.com A30350-M213-R101-1-7W19 18 1110-01 de en fr nl .*



**You're reading an excerpt. Click here to read official SIEMENS  
GIGASET DA710 user guide  
<http://yourpdfguides.com/dref/4569724>**