



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET E310. You'll find the answers to all your questions on the SIEMENS GIGASET E310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET E310**  
**User guide SIEMENS GIGASET E310**  
**Operating instructions SIEMENS GIGASET E310**  
**Instructions for use SIEMENS GIGASET E310**  
**Instruction manual SIEMENS GIGASET E310**



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

**Manual abstract:**

2 On/off key: switch answering machine on and off. Lights up: answering machine is activated. Flashes: message is being played back or recorded. 3 Volume keys: (? @@While phone is ringing: adjust ringer melody volume. @@Flashes: at least one new message is present. Flashes very quickly: memory is full. During message playback: 5 Skip to the start of the current message (press once) or go to the previous message (press twice). 6 Go to the next message. 7 Delete current message. Please note If the answering machine is being operated from a handset or if it is recording a message, it cannot be operated from the base at the same time.

Overview of Gigaset E310 base Registration/paging key Press briefly: search for handsets ("paging" page 42). Press and hold: register handsets and DECT devices ( page 41). Version 5, 03.04.2011 2 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / Symbols\_Keys. fm / 04.04.2012 Icons and keys Icons and keys Display icons The display depends on the phone's settings and operating status. Signal strength ( page 40) or Eco Mode+ icon ( page 40) Keypad locked ( page 20) Ringer melody switched off ( page 48) Answering machine activated (E310A only) Batteries are charged ( page 17) Charge status of the batteries ( page 17) U INT 1 23.04.

@@@Menu Confirm selection or save entry. OK ? @@ Delete key: delete one character at a time from right to left. Go back one menu level or cancel operation. @@The control key has a number of different functions: When the handset is in idle status v Open the main menu. s Open the directory. Open the list of handsets. u t Call up the menu for setting the handset's call volume. In menus and in lists q Scroll up/down a line at a time. In input fields u / v Use the control key to move the cursor to the left u or right v. During an external call v Mute the microphone.

s Open the directory. u Initiate an internal consultation call. t Adjust the loudspeaker volume for earpiece and speaker mode. Version 5, 03.04.2011 5 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / E310\_E310AIVZ.fm / 04.04.2012 Contents Contents Overview of handset . .

.....

.....

.....

.....

.....

. . . 1 Overview of Gigaset E310A base . .

.....

.....

.....

. 2 Overview of Gigaset E310 base . . . .

.....

.....

.....

. 2 Icons and keys . . . .

.....

.....

.....

.....

. . Display icons . . . . .

.....

.....

.....

.....

.....

.....

. . . Main menu icons . . . . .

.....

.....

.....

.....

Display keys . . . . .

.....

.....

.....

.....

.....

.....

. *Control key* . . . . .

.....

.....

.....

.....

.....

.....

... *First steps* . . . . .

.....

.....

.....

.....

.....

.. *Checking the package contents* ...

.....

.....

.....

... *Setting up the base and charger (if included)* ..

.....

.....

. *Connecting the base* . . . . .

.....

.....

.....

.....

... *Connecting the charger (if included)* ..

.....

.....

.....

*Setting up the handset for use* . . . . .

.....

.....

.....

... *Changing the display language* ...

.....

.....

.....

.....

*Setting the date/time* . . . . .

.....

.....

.....

.....

..... *Using the phone* . . . . .

.....

.....

.....

.....

..... *Menu guidance* .

.....

.....

.....

.....

.....  
.....  
..... Keys on the keypad .....

.....  
.....  
.....  
..... Correcting incorrect entries .  
.....  
.....

.....  
..... Activating/deactivating the handset .  
.....  
.....

.....  
..... Activating/deactivating the keypad lock .....

..... 3 3 4 4 5 Safety precautions .....

.....  
.....  
..... 9 10 10 10 11 11 12 14 15 19 19 20 20 20 20 What would you like to do next? .....

.....  
..... 18 Understanding the operating steps .  
.....

..... 21 Menu tree .  
.....

.....  
..... 23 Making calls ..

.....  
.....  
.....  
.....  
..... Making external calls and ending calls .....

.....  
..... Accepting a call .....

..... Calling Line Identification ...

.....  
.....  
.....  
.....

.... Notes on phone number display (CLIP) .....

.....  
.....

..... Speaker mode operation ..

.....  
.....  
.....  
.....

..... Muting .....

.....  
.....  
.....

.....  
.....  
.....  
.....

. 26 26 26 26 27 27 28 Version 5, 03.04.2011 6 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / E310\_E310AIVZ.fm / 04.04.2012 Contents  
Using the directory and lists .....

.....  
.....  
.....

..... Directory ..

.....  
.....  
.....

.....  
.....  
.....  
.....

. Redial list .....

.....  
.....  
.....

.....  
.....  
.....

.... Answering machine list (Gigaset E310A only) .....

.. Network mailbox list ...

.....  
.....

.....  
.....  
.....

.... Calls list .....

.....  
.....  
.....  
.....

	.....
	.....
	..... <i>Opening lists</i> .....
	.....
	.....
	.....
	.....
	..... <i>Operating the answering machine</i> .....
	.....
	.....
	.....
	..... <i>Switching the answering machine on/off</i> .....
	.....
	.....
	..... <i>Recording a personal announcement</i> .....
	.....
	.....
	.....
	..... <i>Playing back messages</i> .....
	.....
	.....
	.....
	..... <i>Accepting a call from the answering machine</i> .....
	.....
	.....
	..... <i>Activating/deactivating call screening</i> .....
	.....
	.....
	..... <i>Setting up the answering machine</i> .....
	.....
	.....
	..... <i>Operating when on the move (remote operation)</i> .....
	.....
	..... 28 28 30 31 31 31 32 34 34 35 37 37 37 38 <i>Automatic network provider preselection</i> ..
	.....
	.....
	..... <i>32 Using the network mailbox</i> .....
	.....
	.....
	.....
	..... <i>39 Accepting a new message from the network mailbox</i> .....
	.....
	.....
	..... <i>39 Playing back messages</i> .....
	.....
	.....
	.....
	..... <i>39 ECO DECT</i> .....
	.....
	.....
	.....



.. *Setting the display backlight* .....

.....

.....

.....

..... *Auto answer* .....

.....

.....

.....

.....

.....

.....

. *Changing the speaker/earpiece volume* .....

.....

..... *Setting the sound of the earpiece* .

.....

.....

.....

..... *Changing ringers* .

.....

.....

.....

.....

.....

.....

.... *Advisory/warning tones* .....

.....

.....

.....

.....

... *cause damage to the hearing of people with good hearing and is only intended for people with a hearing impairment ( page 47). Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.*



**[You're reading an excerpt. Click here to read official SIEMENS](#)**

**[GIGASET E310 user guide](#)**

**<http://yourpdfguides.com/dref/4569782>**



The handset may cause interference in analogue hearing aids. If you require assistance, please contact your hearing aid supplier. Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof.

Do not use your phone in environments with a potential explosion hazard (e.g., paint shops). ? If you give your phone to a third party, make sure you also give them the user manual. Remove faulty bases from use or have them repaired by our Service team, as these could interfere with other wireless services.

Version 5, 03.04.2011 u Not all of the functions described in this user guide are available in all countries. u The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls.

Please note 9 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 First steps First steps Checking the package contents u One Gigaset E310/E310A base u One power adapter u One Gigaset handset u Two batteries u One battery cover u One phone cord u One user guide If you have purchased a model with multiple handsets, the package should contain two batteries, a battery cover and a charger with power adapter for each additional handset. Setting up the base and charger (if included) The base and charger are designed for use in dry rooms in a temperature range of +5C to +45C. Set up the base at a central point in the building on a level, nonslip surface or mount the base (Gigaset E310 only) and charger on the wall ( page 62). Please note Pay attention to the range of the base. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated ( page 40). The phone's feet setting languages appears and the current language (e.

g., English) is selected. 421 ? English ? U OK Press down on the control key s ... Francais ? U OK ... until the language you wish to use is displayed e.g. , French. Press the key below OK to select this language. ? Version 5, 03.04.2011 Francais ? U The selection is marked with ?.

OK Press and hold the end call key a to return to idle status. 14 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 First steps Setting the date/time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. Please note Depending on your network provider, the date and time may be displayed automatically. ? Menu Press the key below Menu on the display screen to open the main menu. Press down on the control key ... Settings U ... until the menu entry Settings appears on the screen. ? OK Press the key below OK on the display screen.

Date/Time The menu entry Date/Time appears on the screen. ? Version 5, 03.04.2011 U OK Press the key below OK on the display screen. 15 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 First steps Date 01.04.11 T ? OK The input field opens.

The active line is marked [...]. Enter the day, month and year as a 6-digit number via the keypad e.

g., Q1Q411 for 1 April 2011. To correct errors: Press on the left or right edge of the control key to change the position of the cursor. ? T OK Press the key below OK on the display screen to confirm your entry. Enter the hours and minutes as four-digit numbers via the keypad e.

g., QM15 for 7.15 a.m. If necessary, use the control key to swap between fields. Press the key below OK on the display screen to confirm your entry. The display shows Saved. You will hear a confirmation tone. Time 07:15 T ? OK Saved Version 5, 03.04.

2011 Press and hold the end call key a to return to idle status. 16 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 First steps Please note If your phone receives the date and time during calling line display (e.g., via your network provider, a router or PABXs), you can specify whether this data should be copied to your phone: Press the following keys in sequence: v P#Q5#MI You will see the following display and the current setting will flash: 973 SET: [0] Press one of the following keys to determine when the date should be copied across: Q Never Or 1 Once, in case the date/time is not set on your phone Or 2 Always Your selection is displayed (e.g., 2 for Always): 973 SET: [2] Press the display key OK. Display in idle status Once the phone is registered and the time set, the idle status is shown as in this example.

Screen display U u Reception between the base and the INT 1 handset: 23.04. 10:53 ? Good to poor: ? Menu ? No reception: u Activating the answering machine: ? Your answering machine is set with a pre-recorded announcement u Battery charge status: ? U Batteries charged to over 66% ? V Batteries charged to between 34% and 66% ? e Batteries charged to between 11% and 33% ? = Batteries charged below 11% ? = Flashes: battery almost empty (less than 10 minutes of talktime) ? = e V U Charging 17 Version 5, 03.04.2011 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 What would you like to do next? If Eco Mode+ ( page 40) is activated, the icon is displayed in the top left corner of the display. Your phone is now ready for use. If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and answers" page 55) or contact our Customer Care team ( page 52).

What would you like to do next? Now that you have successfully set up your Gigaset, you can immediately start calling ? or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions. Operating the phone Changing the ringers and volume on the handset Changing the ringers and volume on the base (Gigaset E310A only) Changing the call volume on the handset Setting the sound of the earpiece Activating Eco Mode / Eco Mode+ Transferring an old directory to a new handset Registering other handsets Recording an announcement for the answering machine (Gigaset E310A only) Setting big dial font Version 5, 03.04.2011 Storing numbers in the directory g page 19 g page 47 g page 49 g page 46 g page 47 g page 40 g page 30 g page 41 g page 34 g page 45 g page 28 18 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.fm / 04.04.2012 Using the phone Using the phone Menu guidance Your telephone's functions are accessed via a menu consisting of several levels (menu overview page 23). When the handset is in idle status, press the display key Menu to open the main menu. The functions in the main menu are shown by means of an icon and the function's name.

Settings Selecting a function: U ? OK You can scroll between functions using the control key q. The relevant function is shown in the display. Press the display key OK to select the displayed function. This opens the corresponding submenu and the first entry is displayed. If you press the display key ?, left on the control key u or briefly press the end call key a, the display returns to idle status.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

Main menu (first menu level) Submenus The functions in the submenu are indicated by name. Version 5, 03.04.2011 Handset Selecting a function: You can scroll between functions using U ? OK the control key q. The relevant function is shown in the display.

Press the display key OK to select the displayed function. This opens the corresponding submenu and the first entry is displayed. If you press the display key ? left on the control key u or briefly press the end call key a, the display will return to the previous menu level. Any settings you have not confirmed by pressing OK will be discarded. 19 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / starting.

fm / 04.04.2012 Using the phone Returning to idle status From any point in the menu: Press and hold the end call key a or Do not press any key: after 2 minutes, the display will automatically revert to idle status. INT 1 U 23.04.

? 10:53 Menu Keys on the keypad c/Q/P etc. Press the corresponding key on the handset. ~ Enter digits or letters. Correcting incorrect entries You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then: u Use the display key to delete the character to the left of the cursor u Insert characters at the cursor position u Overwrite the highlighted (flashing) character e.g., when entering time and date Activating/deactivating the handset a In idle status, press and hold the end call key (confirmation tone). If you place a deactivated handset in the base or charger, it will automatically be activated after a specific period of time (approx. 30 seconds). Activating/deactivating the keypad lock The keypad lock prevents any inadvertent use of the phone.

# In idle status, press and hold the hash key (confirmation tone). The keypad lock is activated or deactivated. If it is activated, the icon appears in the display. If the keypad lock is activated, a corresponding message is displayed when you press a key. The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished. 20 Version 5, 03.04.2011 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / explanation.fm / 04.04.2012 Understanding the operating steps Understanding the operating steps An example of a procedure is as follows: Menu q Settings OK q Handset OK q Auto Answer OK (? = on) This means you should proceed as follows: Please note Scroll upwards if you wish to select one of the last entries in a menu level with numerous entries. ? Menu Menu : Press the key below Menu on the display screen to open the main menu. q: Press up or down on the control key until .. Settings U Settings: ... the menu entry Settings appears on the screen.

? OK OK : Press the key below OK on the display screen to open the submenu. q: Press up or down on the control key until ... Version 5, 03.04.2011 21 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / explanation.fm / 04.04.2012 Understanding the operating steps Handset Handset: .

.. the menu entry Handset appears on the screen. ? U OK OK : Press the key below OK on the display screen to open the submenu. q: Press up or down on the control key until ... Auto Answer Auto Answer: ...

the menu entry Auto Answer appears on the screen. OK : Press the key below OK on the display screen to switch the function on or off (= on). The change is effective immediately and does not need to be confirmed. Press the key below ? on the display screen to jump back to the previous menu level or Press and hold the end call key a to return to idle status. ? U OK ? Auto Answer? U OK Version 5, 03.04.2011 22 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / menuetree.fm / 04.04.2012 Menu tree Menu tree If you press the Menu display key in idle status, a list appears with menu entries.

You can scroll through the list by pressing q. Alarm Clock Audio Settings Voice Mail Settings Some of these menu entries contain submenus. The page numbers refer to the relevant description in the user guide. Alarm Clock Activation Wake-up time Audio Settings Handset Volume Earpiece Speaker Handset Sound Low High Ringer Volume Ringer Melody page 47 External Calls Internal Calls Alarm Clock Advis.Tones Battery Low page 48 page 48 page 48 page 48 page 48 page 41 page 41 page 46 page 46 page 47 page 47 Version 5, 03.04.2011 23 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / menuetree.fm / 04.04.2012 Menu tree Voice Mail Play Messages Net Mailbox \*\* Answ.

Mach. \*\* Answ. Mach. \* Call Screening \* page 34 Handset Base Announcements \* Rec announce Play announce Del announce Message Length \* Maximum 1 Minute 2 Minutes 3 Minutes Ring Delay \* Immediately 10 sec 18 sec 30 sec Auto Netw. Mailbox Set Key 1 \* page 39 Answ. Mach. Net Mailbox page 35 page 40 page 37 page 37 page 34 page 35 page 35 page 38 page 38 page 38 page 38 page 37 page 37 page 37 page 37 page 39 page 35 \* Base with answering machine only \*\* Only base with answering machine and number of network mailbox entered Version 5, 03.04.2011 24 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / menuetree.fm / 04.04.2012 Menu tree Settings Date/Time Handset page 15 Language Big Dial Font Contrast Backlight page 45 page 45 page 46 In Charger Out of Char. Auto Answer Register HS De-register HS Reset Handset page 46 page 41 page 42 page 49 Ringer Volume Ringer Melody Call list type Missed Calls All Calls System PIN Base Reset Additional page 50 page 50 Repeater Eco Mode+ Eco Mode Listening in Preselection page 43 Presel. Number With Preselect Without Presel page 33 page 33 page 33 page 49 page 40 page 40 page 49 page 49 page 31 page 46 page 46 Base Audio Settings (E310A only) Version 5, 03.04.2011 25 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.2012 Making calls Making calls When the display backlight is switched off, pressing any key will activate the backlight. The relevant key function is performed.

If the ringer is intrusive, press Menu Silent OK You can accept the call as long as it is displayed on the screen. Calling Line Identification When you receive a call, the caller's number is displayed on the screen if the following prerequisites are met. u Your network provider supports CLIP, CLI. ? CLI (Calling Line Identification): the caller's number is transmitted. ? CLIP (Calling Line Identification Presentation): the caller's number is displayed. u You have requested CLIP from your network provider. u The caller has requested CLI from the network provider. Making external calls and ending calls External calls are calls using the public telephone network. Enter the phone number ~ and press the talk key c. The number is dialled.

You can also first press and hold the talk key c (dial tone) and then enter the number. Press and hold the hash key # to enter a dialling pause. During the call, you can access the menu for adjusting the earpiece volume with t and adjust the volume using q.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569782)

[GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)

<http://yourpdfguides.com/dref/4569782>

Ending a call/cancelling dialling: Press the end call key a or place the handset in the base or charger. Call display When you receive a call, the phone number is shown in the display. If the number of the caller is stored in your directory, the display is replaced by the corresponding directory entry. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk/speaker key d. Press the talk/speaker key c to accept the call. If the handset is in the base and the Auto Answer function is activated ( page 46), the handset will accept a call automatically when you lift it out of the base. 26 123456789 Menu The following is displayed instead of the number: u External call, if no number is transmitted.

Version 5, 03.04.2011 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.

2012 Making calls u Withheld, if the caller has suppressed Calling Line Identification. u Unavailable, if the caller has not requested Calling Line Identification. If the caller number is still not displayed: Check the CLIP (phone number display) settings of your PABX and activate this function if necessary. In the user manual for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number identification", "caller ID" etc.).

If necessary, contact the device manufacturer. If this does not resolve the problem, it is possible that your network provider does not provide the CLIP service for this number. Have you requested the phone number display service from your network provider? Check whether your provider supports phone number display (CLIP) and that the function has been activated for you. If necessary, contact your provider. Additional information on this subject can be found on the Gigaset website at: [www.gigaset.com/service](http://www.gigaset.com/service) Notes on phone number display (CLIP) By default, the number of the caller is shown in the display of your Gigaset telephone. You do not have to make any other settings on your Gigaset telephone. However, if the caller's number is not displayed, this can be due to the following: u You have not requested CLIP from your network provider u Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information. Is your telephone connected via a PABX/gateway? You can establish this by checking for an additional device connected between your telephone and home connection, e.

g., a PABX, gateway etc. In most cases, simply resetting this device will remedy the situation: Briefly disconnect the PABX power plug. Re-insert the plug and wait for the device to restart. Version 5, 03.04.2011 Speaker mode operation In speaker mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation. Please note Inform your caller before you use speaker mode so that they know a third party may be listening. 27 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.

fm / 04.04.2012 Using the directory and lists Activating/deactivating speaker mode Switching between earpiece and speaker mode d Press the speaker key. During a call and when listening to the answering machine (Gigaset E310A only), activate or deactivate speaker mode. If you wish to place the handset in the charger during a call: Press and hold the speaker key d while placing the handset in the charger and for a further 2 seconds.

Otherwise, the call is cancelled. For instructions on adjusting the loudspeaker volume, see page 46. Using the directory and lists The telephone offers a directory, redial list, answering machine list, network mailbox list and calls list. You can save up to 120 entries in the directory. You can create a personalised directory for your own individual handset.

You can copy all of the entries or individual entries to other handsets ( page 30). It is also possible to copy entries from old handsets providing they are registered to your (new) base. Directory You can store numbers and the associated names in the directory. With the handset in idle status, open the directory by pressing the s control key. Length of an entry Number: max. 32 digits Name: max. 16 characters Muting You can deactivate your handset's microphone during a call. Press the right-hand control key v during the call to activate/deactivate the function. Saving the first number in the directory s New Entry? OK ~ (Enter number) OK ~ (Enter name) OK Storing further numbers in the directory Version 5, 03.04.

2011 s Menu New Entry OK ~ (Enter number) OK ~ (Enter name) OK 28 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.2012 Using the directory and lists Please note u Refer to the character set chart to see how to enter names ( page 60). u Press and hold the hash key # to enter a dialling pause. Managing directory entries Select an entry. The following functions can be selected with Menu q: New Entry Save new phone number. Show Number Display the phone number. Show Name Display the name. Edit Entry Edit selected entry.

Use Number Edit or add to a stored number. Then dial or select other functions using Menu. Delete Entry Delete selected entry. Send Entry Send an individual entry to another handset ( page 30). Delete List Delete all directory entries.

Send List Send the complete directory to another handset. Shortcut For creating shortcuts by assigning the current entry to a key, see the following section. Order of directory entries The directory entries are sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows: 1 Space 2 Digits (0?9) 3 Letters (alphabetical) 4 Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Selecting a directory entry s Open the directory. You have the following options: u Use q to scroll through the entries until the required name is selected. u Enter the first character of the name, if necessary scroll to the entry with the q key. Dialling with the directory Select an entry. c Version 5, 03.04.2011 29 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.

2012 Using the directory and lists Using shortcuts You can assign directory entries to the keys 2 to 0: s q (Select entry) Menu Shortcut ~ (Press the key to which you want to assign the entry) To dial, press and hold the required shortcut key. Menu q Copy to Dir. OK Complete the entry ( page 28). The message playback is interrupted while numbers are copied from the answering machine list (Gigaset E310A only). Redial list The redial list contains the ten numbers last dialled with the handset. If one of the numbers is in the directory, the corresponding name will be displayed. Transferring the directory to another handset You can transfer directory entries from other handsets to your new handset ? even entries from old handsets.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4569782)

[GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)

<http://yourpdfguides.com/dref/4569782>

*Prerequisites: u The sending and receiving handsets must both be registered to the same base. u The other handset and the base can send and receive directory entries. s q (Select entry) Menu q Send Entry/Send List OK q (Select the internal number of the receiving handset) OK A message appears on the display to confirm a successful transfer.*

*You will hear the confirmation tone. Dialling from the redial list c q c Press the talk key. Select an entry. Press the talk key. The number is dialled. Managing entries in the redial list Press the talk key. Select an entry. Menu Press the display key. The following functions can be selected with q: Use Number Edit or add to the number. Then dial or select other functions from the Menu.*

*Copy to Dir. Copy an entry to the directory. Delete Entry Delete selected entry. Delete List Delete all entries. c q Adding a displayed number to the directory Version 5, 03.04.2011 You can copy numbers displayed in a list, e.g., the calls list or redial list, to the directory. A number is displayed.*

*30 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.2012 Using the directory and lists Answering machine list (Gigaset E310A only) The answering machine list contains all the calls recorded by the answering machine. You can use the list to listen to messages on the answering machine ( page 35). Setting the call list type Menu q Settings OK q Base OK q Call list type OK a q Missed Calls /All Calls OK (?= selected) Network mailbox list You can use this list to listen to messages on the network mailbox ( page 39). Calls list Prerequisite: CLIP ( page 27) Depending on the type of list set, the calls list contains: u All calls ? Accepted calls ? Unanswered calls ? Calls recorded by the answering machine (Gigaset E310A only) u Missed calls ? Unanswered calls ? Calls not recorded by the answering machine (Gigaset E310A only) Press and hold (idle status). The calls list entries are retained when you change the list type. Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved. Opening the calls list ? q CallsList The calls list is displayed as follows: CallsList 01+02 Number of new entries + number of old, read entries.*

*OK Press the display key to open the list. The last incoming call is displayed. The display will alternate between the following (example): 12345678 23.04.10:53 Number or name of caller Date/time of call Version 5, 03.*

*04.2011 If necessary, use q to select another entry. The following functions can be selected with Menu q: Delete Entry Delete current entry. 31 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.*

*04.2012 Automatic network provider preselection Copy to Dir. Copy an entry to the directory. Date/Time Display date and time of call (if set, page 15). Status New Call: New missed call. Old Call: Entry already read. Delete List Caution! All old and new entries will be deleted. After exiting the calls lists, all viewed entries are assigned the status "old". Automatic network provider preselection You can store a call-by-call number (preselection number), which is automatically placed in front of numbers when you dial them. If, for example, you wish to make international calls via special network providers, you can save the relevant dialling code here.*

*In the With Preselect list, specify the dialling codes or the first digits of the dialling codes that you wish to assign to the preselection number. In the Without Presel list, enter the exceptions to the With Preselect list. Examples: Presel. Number With Preselect Without Presel 0999 08 081 084 ? q CallsList 01+02 OK q (Select entry) c Calling back a caller from the calls list Opening lists When you press , the list selection opens. You can scroll through the available lists by pressing q. Only the lists containing messages and the network mailbox list are displayed. An advisory tone sounds as soon as a new message appears in a list. The message New messages appears in the display. Please note If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been set (depending on your network provider). All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999.*

*Phone number 07112345678 08912345678 08412345678 Dialed number 07112345678 0999 08912345678 08412345678 Version 5, 03.04.2011 32 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / telephony.fm / 04.04.*

*2012 Automatic network provider preselection Storing preselection numbers Menu q Settings OK q Base OK q Preselection OK q Presel. Number OK Temporarily cancelling preselection c (press and hold) Menu q Preselect off OK ~ Dial number a ~ (Enter or edit preselection number) OK Press and hold (idle status). Permanently deactivating preselection Delete the preselection number with and press OK. Saving or editing entries in preselection lists Each of the two lists can contain 11 entries with 4 digits. Depending on the country, numbers may be preset in the "With Preselect" list.*

*This means e.g., that all national calls or calls to the mobile network are automatically linked to the preselection number you have saved previously. Menu q Settings OK q Base OK q Preselection OK q With Preselect / Without Presel OK q (Select entry) OK ~ (Enter or edit first digits of number) OK a Press and hold (idle status). Version 5, 03.04.2011 33 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / answering\_m.fm / 04.04.2012 Operating the answering machine Operating the answering machine You can operate the (integrated) answering machine u Via the handset or u Via the keys on the base You will find information on operating the answering machine via the keys on the base on page 2.*

*The following sections describe operation via the handset. Recording a personal announcement Menu q Voice Mail OK q Announcements OK q Rec announce OK Strt recording? OK Switching the answering machine on/off Menu q Voice Mail OK q Answ. Mach. OK (? = on) When the answering machine is switched on, the remaining memory time is announced. The icon appears in the display. The on/off key lights up on the base. The answering machine uses a prerecorded announcement. However, you can also record a personal announcement of your own. Please note If the memory is full the answering machine switches itself off automatically. It switches itself on again automatically when you delete old messages.*

*You will hear a short tone. Now say your announcement (at least 3 seconds). @@ Cancel the recording with a or ?. Restart the recording with OK. OK Press the display key to end the recording.*

*After recording, the announcement is played back for you to check. Please note u Your recording is ended automatically: ? If the maximum message length of 170 seconds is reached or ? If there is a pause lasting for longer than 2 seconds. u If you cancel the recording, the pre-recorded announcement is used.*



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

@@@Mach. OK u Start message playback via the answering machine list: ? q VoiceMail (see also page 32) Version 5, 03.04.2011 open the list. @ you do not have to select it via the menu. @Menu q Voice Mail OK q Set Key 1 OK q Answ. Mach. OK The setting for fast access applies to all registered handsets. @The loudspeaker on the handset switches on automatically. To switch it off, press the speaker key d. @During message playback: 2 Stop playback. @s or Go to the start of the next I message.

L During the info block announcement: Skip info block. @Playback stops. Select the relevant function using q: Dial Number Dial the number. Continue Continue message playback. Handset Volume Set the speaker or earpiece volume. Copy to Dir. Copy the caller's number to the directory. @Recording stops and you can speak to the caller. @The messages are now played back. You can now operate the answering machine using the keypad. @During message playback: Skip to the start of the current message. B Stop playback. Press again to resume. 3 Go to the next message. 0 Delete current message.

@You can choose: Maximum, 1 Minute, 2 Minutes or 3 Minutes. @When you hear your announcement, press 9 and enter the system PIN. You are informed whether any new messages have been recorded. @More information is available from your provider. @Menu q Voice Mail OK q Netw.

Mailbox OK ~ Enter the network mailbox number and press OK. Netw.MBX 00+\*\* 00: The number of new messages is only displayed correctly if your network provider transmits this information. \*\*: The number of old messages is not available. OK Press the display key to Accepting a new message from the network mailbox When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the calls list ( page 31). Version 5, 03.04.

2011 call the network mailbox. u Fast access to the network mailbox: To access the network mailbox, simply press and hold the 1 key ? you do not have to select it via the menu. Gigaset E310: The network mailbox is preconfigured for fast access. 39 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / ECO DECT Gigaset E310A: The integrated answering machine is preconfigured for fast access. You can switch to the network mailbox. Menu q Voice Mail OK q Set Key 1 OK q Net Mailbox OK (?= selected) The setting for fast access applies to all handsets. Eco Mode reduces the range of the base by approx. 50%. It is always better to use Eco Mode when a reduced range is sufficient.

Switching off radiation Eco Mode+ When you activate Eco Mode+, the radiation (DECT transmission power) of base and handset is switched off automatically and only turns on when calls are made. This is also true when multiple handsets are used, provided the handsets support Eco Mode+. Eco Mode/Eco Mode+ can be activated/deactivated independently of one another and can also be used with multiple handsets. The handset need not be placed in the base. Activating/deactivating Eco Mode / Eco Mode+ Menu q Settings OK q Base OK q Additional OK q Eco Mode / Eco Mode+ OK (= on) Status displays Display icon Reception strength: ? Good to poor ? No reception Eco Mode+ enabled (displays instead of the reception strength icon when in idle status) ECO DECT You are helping to protect the environment with your Gigaset.

Reducing energy consumption Your telephone has a power-saving adapter plug and uses <0.4 W when in idle status and when the batteries are not being charged. Reducing radiation The radiation from your telephone is reduced automatically: u Handset: The closer the handset is to the base, the lower the radiation. u Base: The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base. You can reduce the radiation from the handset and the base even more by using Eco Mode: Eco Mode Reduces the radiation of the base and handset by 80% ? whether you are making a call or not.

40 Version 5, 03.04.2011 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Using the handset as an alarm clock Please note u When using Eco Mode+ you can ensure that the range of the base is sufficient by pressing the talk key c. You hear the ring tone if the base can be reached. u When Eco Mode+ is enabled: ? Call setup is delayed by approx. 2 seconds. ? Handset standby time is reduced by approx. 50%. u Registering handsets that do not support Eco Mode+ causes the mode to be deactivated on the base and all other handsets.

u Activating Eco Mode reduces the range of the base. u Eco Mode / Eco Mode+ and repeater support ( page 49) cancel each other out, i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+. Setting the wake-up time Menu q Alarm Clock OK q Wake-up time OK ~ (Enter wake-up time) OK If the alarm clock is activated, you will see the l icon in the display and the wake-up time after it. INT 1 112:00 10:53 ? Menu When the alarm clock rings? Press any key to deactivate the alarm clock for 24 hours. If you do not press any key, the alarm clock switches off after one minute. U Using multiple handsets

Registering handsets You can register up to four handsets on the base. Using the handset as an alarm clock Activating/deactivating the alarm clock Prerequisite: The time is set ( page 15). Menu q Alarm Clock OK q Activation OK (? = activated) After you activate the alarm clock, the menu for setting the wake-up time opens automatically.

Version 5, 03.04.2011 Registering a Gigaset handset manually to the Gigaset E310/ E310A You must register the handset manually on both the handset (1) and the base (2). Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e. g., INT 1. 41 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Using multiple handsets The registration process is cancelled after 60 seconds. @ Briefly press the registration/paging key on the base ( page 2).

@Prerequisite: The Listening in function must be activated. Activating/deactivating the function: Menu q Settings OK q Base OK q Listening in OK (? = on) Listening in to the call: Press and hold the talk key c on the handset. All participants hear a signal tone. This handset displays the Conference message and it is not possible to dial another number from this handset. Ending listening in: Press the end call key a on the handset; all participants hear a signal tone. If the first internal participant presses the end call key a, the handset that has "listened in" remains connected to the external participant. Making internal calls Internal calls are free calls between handsets that are registered with the same base. Calling a specific handset u ~ Or: u s c Initiate internal call.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

Enter the number of the handset. Initiate internal call.

Select handset. Press the talk key. Calling all handsets ("group call") u Or: u P Or: u Call all c Press and hold. Initiate internal call. Press the star key. Initiate internal call. Select Press the talk key. Ending a call a Press the end call key. Accepting an internal call Your telephone rings and the internal number of the caller appears in the display (e.g.

INT 2). Press the talk key c, to take the call. Version 5, 03.04.2011 43 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.

fm / Using multiple handsets Ending a call Press the end call key a. Call waiting Many Telecommunication providers in Australia and New Zealand offer a Call waiting service on your Home Phone Line. Please speak to your service provider to check if your Home Phone line is activated for this service (charges may apply). The most common providers instructions for Call waiting are as follows. Please note These processes depend on the network provider and are subject to change.

Australia: Telstra: To answer an incoming call when you're already on a call, or to switch between calls: Press the Recall key Q and listen for the dial tone, then press 2. To hang up on one call and return to the other: Press the Recall key Q on your phone and listen for the dial tone, then press 1. To reject an incoming call when you are already on a call: Push the Recall key Q on your phone and listen for the dial tone, then press Q again. For more information please contact Telstra. Optus: You are on the phone and hear the beeps. Transferring a call to another handset/internal consultation You are in conversation with an external participant. u Open the list of handsets. The external participant hears the music on hold. s Select a handset or Call All and press OK. When an internal participant answers: If necessary, announce the external call.

Either a Press the end call key. The external call is transferred to the other handset. or ? Press the display key. You are reconnected with the external participant. When transferring a call, you can also press the end call key a before the internal participant answers. If the internal participant does not answer or the line is busy, the call will automatically return to you. Please note This equipment may not provide for the effective handover of a call to another device connected to the same line. Version 5, 03.04.2011 44 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.

fm / Setting the handset To put the first caller on hold and talk to the new caller (the caller on hold will hear nothing): Press the Recall key Q on your phone. To return to the first caller: Press the Recall key Q and put the new caller on hold. You can alternate between the calls in this way. Or Hang up the first call. The phone will ring again with the second caller.

This means that you will not be able to go back to the first caller. For more information please contact Optus. New Zealand: Telecom NZ: You are on the phone and hear four beeps. To talk to the second caller: Press the Recall key Q on your phone. To return to the first caller: Press the Recall key Q again and you will be able to continue your original conversation.

For more information please contact Telecom NZ. Press the end call key a to end the internal call. Press the talk key c to accept the external call. Setting the handset You can change the settings on your handset to suit your individual requirements. Changing the display language You can view the display texts in different languages. Menu q Settings OK q Handset OK q Language OK q (Select language) OK The current language is indicated by a ?. If you accidentally choose a language you do not understand: Menu 421 q (Select language) OK (?= selected) Setting big dial font You can improve the legibility of the digits when you dial. Bigger digits are displayed. Menu q Settings OK q Handset OK q Big Dial Font OK (?= on) Accepting a waiting call If you receive an external call while conducting an internal call, you will hear the call waiting tone (short beep). The caller's number will appear in the display if phone number identification is enabled.

Version 5, 03.04.2011 45 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Setting the handset Changing the display contrast You can set the display contrast to 9 levels. Menu q Settings OK q Handset OK q Contrast OK q (Set contrast) OK Please note If the backlight is turned on outside the charger, the standby time for the handset is considerably reduced! Auto answer When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key c. Menu q Settings OK q Handset OK q Auto Answer OK (?= on) Setting the display backlight Depending on whether or not the handset is in the charger, you can activate or deactivate the backlight (?= on). Menu q Settings OK q Handset OK q Backlight OK q In Charger/Out of Char. OK (?= on) If the display backlight In Charger is activated, the display is permanently dimmed, when the handset is in the charger. If the display backlight Out of Charger is activated, the handset will switch the display brightness in two stages to 10% of the maximum brightness when the handset is not in the charger. When the display backlight is switched off, pressing any key will activate the backlight and perform the relevant key function.

Version 5, 03.04.2011 Changing the speaker/ earpiece volume You can set the volume for speaker mode and earpiece mode to five different levels. In idle status: t Handset Volume OK q Earpiece/Speaker OK q OK Set the volume 1?5. Press the display key to save the setting.

During a conversation via the earpiece or in speaker mode: t Press the control key to open the menu for setting the volume. Set the earpiece or speaker volume 1?5 by pressing q. The setting 1?5 will automatically be saved after approximately 3 seconds or press the display key OK. 46 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Setting the handset Please note You can also set the call volume via the menu ( page 23).

Please note You can also set the sound of the earpiece via the menu ( page 23). Extra loud setting During a conversation, the earpiece volume can also be set to Extra Loud: t Do not hold the handset close to the ear when doing so. If Extra Loud is set, Extra Loud! is shown on the display. After pressing the display key ? or at the end of the call, the volume will automatically drop to the previously set level. Warning u This setting can cause damage to the hearing of people with good hearing and is only intended for people with a hearing impairment. u It may amplify interference noise in the phone line. Changing ringers u Volume: Five volume levels (1?5) and Crescendo (volume increases with each ring) can be set. u Melody: List of pre-loaded ringer melodies.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

The first three melodies are the "classical" ringer melodies. You can also set different ringer melodies for the following functions: u External Calls u Internal Calls u Alarm Clock For information on how to set the ringers for the base, see page 49.

Setting the ringer volume The ringer volume is the same for all types of ring. In idle status: t q Ringer Volume OK q OK Setting the sound of the earpiece Adjust the sound of the earpiece to suit your requirements. u Low: Default setting u High: Treble emphasis setting In idle status: t Handset Sound OK q Low/High OK (?= selected) Set the volume. Press the display key to save the setting. Please note You can also adjust the ringer volume via the menu ( page 23). Version 5, 03.04.2011 47 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Setting the handset Setting the ringer melody Set different ringer melodies for external calls, internal calls and the alarm clock. In idle status: t q Ringer Melody OK q External Calls/Internal Calls/ Alarm Clock OK q Select melody and press OK (?= selected).

Advisory/warning tones Your handset uses advisory tones to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other: u Advis.Tones ? Key click: Every key press is confirmed. ? Confirmation tone (rising tone sequence): At the end of an entry/setting, when the handset is placed in the base and on arrival of a new entry in the answering machine list or the call list. ? Error tone (descending tone sequence): When you make an incorrect entry.

? Menu end tone: When scrolling at the end of a menu. u Battery Low The battery needs charging. The menu end tone when scrolling at the end of a menu cannot be deactivated. Please note You can also set the ringer melodies via the menu ( page 23). Activating/deactivating the ringer You can: u Permanently deactivate the ringer in idle status or when receiving a call u Deactivate the ringer for the current call only The ringer cannot be re-activated while a call is in progress.

Permanently deactivating the ringer P Press and hold the star key. The icon appears in the display. Reactivating the ringer Press and hold the star P key. Version 5, 03.04.2011 Deactivating the ringer for the current call Menu Silent OK Activating/deactivating advisory tones Menu q Audio Settings OK q Advis.Tones OK (?= on) Activating/deactivating the battery low beep Menu q Audio Settings OK q Battery Low OK (?= on) 48 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Setting the base Restoring the handset default settings You can reset any individual settings and changes that you have made. This will not affect entries in the directory, calls list, date and time or the handset's registration to the base. Menu q Settings OK q Handset OK q Reset Handset OK Reset? OK Cancel the reset with a.

Repeater support You can increase the range and signal strength of the base using a repeater. You will need to activate repeater mode. This will terminate any calls that are in progress at the time. Menu q Settings OK q Base OK q Additional OK q Repeater OK (= activated) After activating or deactivating the repeater, switch your handset off and on again ( page 20). Please note u Eco Mode / Eco Mode+ ( page 40) and repeater support cancel each other out, i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+. u The default encrypted transmission setting is deactivated when repeater mode is activated.

Setting the base The base settings are made via registered handset. Changing the ringers for the Gigaset E310A base u Volume: Five volume levels (1?5), "Off" (volume = 0) and Crescendo (volume increases with each ring) can be set.

u Melody: List of pre-loaded ringer melodies. The first three melodies are the "classical" ring tones. Menu q Settings OK q Base OK q Audio Settings OK q Ringer Volume/ Ringer Melody OK q (Select volume/melody) OK (?= selected) Protecting against unauthorised access Protect the system settings of the base with a system PIN known only to you. You will need to enter the system PIN when, for example, registering/de-registering a handset to/from the base. Version 5, 03.

04.2011 49 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Setting the base Changing the system PIN You can change the base's 4-digit default system PIN ("0000") to a 4digit PIN known only to yourself. Gigaset E310A: Setting a system PIN enables remote operation of the answering machine ( page 38). Menu q Settings OK q Base OK q System PIN OK PIN: (Enter current system PIN) OK New PIN: (Enter new system PIN) OK Resetting the base via the menu When resetting via the menu u Handsets are still registered u The system PIN is not reset.

Menu q Settings OK q Base OK q Base Reset OK Resetting the base using the button on the base When resetting the base using the button on the base u All handsets are de-registered and u The system PIN is reset to the original code 0000 Proceed as follows: Remove the mains cable from the base. Hold down the registration/paging key on the base ( page 2) while reconnecting the power cable to the base. Hold the key down for at least 5 seconds. Please note All handsets are de-registered and must be re-registered. All settings are reset to the default settings. Resetting the system PIN If you have forgotten your system PIN, you can reset the PIN to the original code 0000 using the button on the base. This will also reset other settings; see the section entitled "Resetting the base to the default settings". Resetting the base to the default settings When restoring default settings: u Individual settings are reset u All lists are deleted u Eco Mode and Eco Mode+ are deactivated. The date and time are retained. Please note The answering machine is ready for use approx.

15 seconds after the base has been connected or reset. Version 5, 03.04.2011 50 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / T-NetBox-registration.fm / Operating the base on the PABX Operating the base on the PABX The following settings are only necessary if your PABX requires them; see the PABX user manual. Setting recall Menu P#Q5#12 Enter digits for recall: Q = 80 ms; 1 = 100 ms; 2 = 120 ms; I = 400 ms; 4 = 250 ms; 5 = 300 ms; L = 600 ms; M = 800 ms OK. Changing the pause after line seizure You can set the length of the pause inserted between pressing the talk key c and transmitting the phone number. Menu P#Q5#10 Enter digit for the current pause length: 1 = 1 second 2 = 3 seconds I = 7 seconds OK. Changing the pause after recall key Menu P#Q5#14 Enter digit for the current pause length: 1 = 800 ms; 2 = 1600 ms; I = 3200 ms OK. Version 5, 03.

04.2011 51 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / appendix.fm / 04.04.2012 Customer service & product warranty ? Australia and New Zealand Customer service & product warranty ? Australia and New Zealand IMPORTANT Please retain your sales receipt as proof of the date of purchase.



You're reading an excerpt. [Click here to read official SIEMENS GIGASET E310 user guide](http://yourpdfguides.com/dref/4569782)  
<http://yourpdfguides.com/dref/4569782>

*Customer Service* If you require assistance in operating this product please contact us AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at [www.gigaset.com/au](http://www.gigaset.com/au) NZ: 0800 780 878 or by e-mail at the Customer Care section of our website at [www.gigaset.com/au](http://www.gigaset.com/au) If you are trying to access a Network Service and require assistance specifically related to the network service or would like to subscribe to the service, contact your service provider.

*Product Warranty* Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Subject to the conditions stated in this Product Warranty Section, this product, excluding battery and accessory devices, is guaranteed against any defect in materials or workmanship under conditions of normal use for a period of 24 months from date of purchase (Product Warranty). The benefits conferred by this warranty are in addition to other warranties and remedies that are implied under the Australian Trade Practices Act and similar Country, State and Territory laws (Statutory Rights). For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand Legislation. Version 5, 03.04.2011 52 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / appendix.fm / 04.

04.2012 Customer service & product warranty ? Australia and New Zealand Subject to your Statutory Rights, the goods will not be eligible for service under this warranty if: 1Proof of purchase cannot be provided; 2The defect was caused by an accident, misuse, abuse, improper installation or operation, vermin infestation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Gigaset; or 3The product has been damaged by lightning or a mains power surge. 4The Phone was not imported into Australia by Gigaset Communications GmbH. To obtain service during the terms of this warranty and/or to claim warranty call the Information Line on AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at [www.gigaset.com/au](http://www.gigaset.com/au) NZ: 0800 780 878 If it is necessary to have the product serviced, the customer service representative will inform you of the product return process. If it is necessary to have the product serviced under warranty in both Australia and New Zealand you will need to return the product to your place of purchase. If this is not possible please call the relevant Technical Support line listed in this document whereby the customer service representative will inform you of the product return process. Except as explicitly stated in this document, all other expenses with regard to claiming Product Warranty shall be borne by you. Please ensure that: 1You provide proof of purchase; 2Your product is suitably packaged; and 3You have included all components from the original purchase.

In Australia and New Zealand the product will be serviced within ten business days after the defective product is received by the authorised agent. Any and all warranty services referred to under this Product Warranty will be provided In Australia by CommsPlus Distribution, Unit 3a, 100 Station Street, Nunawading, Victoria, 3131 Phone: 1300 780 878, and in New Zealand by Atlas Gentech (NZ) Limited, 76 Carbine Road, Mt Wellington, Auckland 1741 Phone: 0800 780 878. Version 5, 03.04.2011 53 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / appendix.

fm / 04.04.2012 Customer service & product warranty ? Australia and New Zealand Subject to your Statutory Rights: 1Any claim under this warranty is limited to the cost of repair or replacement of the product; and 2If the goods are found to be in sound working order by the authorised service centre, you may be charged a fee for service and for any other direct costs associated with having the product delivered for service. Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Gigaset Communications GmbH local registered N Number and Telepermit markings. Please have your proof of purchase ready when calling.

**IMPORTANT NOTICE** Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent upon local power, is available for emergency use. Version 5, 03.04.2011 54 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / appendix.fm / 04.04.2012 Customer service & product warranty ? Australia and New Zealand Questions and answers If you have any questions about the use of your phone, you can contact us at [www.gigaset.com/service](http://www.gigaset.com/service) for assistance 24/7.

In addition, the following table provides troubleshooting assistance. The display is blank. 1. The handset is not activated. Press and hold the end call key a. 2. The battery is empty. Charge or replace the battery ( page 13). "Base" flashes in the display. 1. The handset is outside the range of the base. Move the handset closer to the base. 2. The range of the base is reduced because Eco Mode mode is activated. Deactivate Eco Mode ( page 40) or reduce the distance between the handset and base. 3. The base is not activated. Check the base power adapter ( page 11). "Put into base" or "Register HS" flashes in the display. The handset has not been registered with the base or has been deregistered.

Place the handset in the base (automatic registration, may take up to 5 minutes) or register the handset manually ( page 41). The handset does not ring. The ringer melody is deactivated. Activate the ringer melody ( page 48). You cannot hear a ringer/dialling tone from the fixed line. The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections. Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer ( page 60). The connection always terminates after approx. 30 seconds. Repeater activated/deactivated ( page 49).

Activate/deactivate the handset ( page 20). When you try to activate Eco Mode+, "Not possible!" appears in the display. A handset is registered to the base that does not support Eco Mode+. Error tone sounds after system PIN prompt. You have entered the wrong system PIN. Reset the system PIN to 0000 ( page 50). Forgotten system PIN. Reset the system PIN to 0000 ( page 50). Version 5, 03.04.

2011 55 Gigaset E310/E310A / Australia / A31008-M2301-C401-1-7619 / appendix.fm / 04.04.2012 Customer service & product warranty ? Australia and New Zealand The number of the caller is not displayed although CLIP has been set. Calling Line Identification is not enabled. The caller should ask the network provider to enable Calling Line Identification (CLI). Refer to the notes on calling line display ( page 27).



**You're reading an excerpt. Click here to read official SIEMENS GIGASET E310 user guide**  
<http://yourpdfguides.com/dref/4569782>