




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET E49H. You'll find the answers to all your questions on the SIEMENS GIGASET E49H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET E49H**  
**User guide SIEMENS GIGASET E49H**  
**Operating instructions SIEMENS GIGASET E49H**  
**Instructions for use SIEMENS GIGASET E49H**  
**Instruction manual SIEMENS GIGASET E49H**

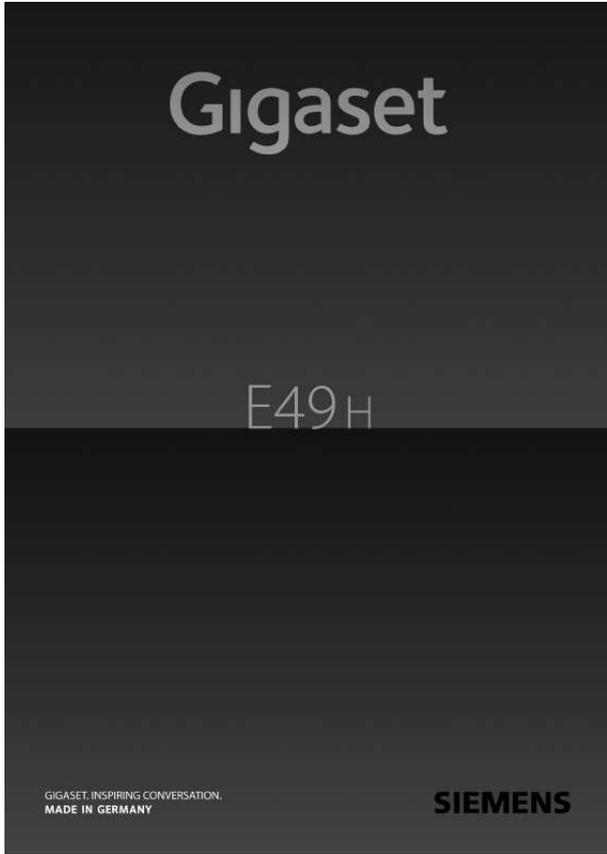

Gigaset

E49H

GIGASET. INSPIRING CONVERSATION.  
MADE IN GERMANY

**SIEMENS**



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E49H user guide](http://yourpdfguides.com/dref/3956031)  
<http://yourpdfguides.com/dref/3956031>

### Manual abstract:

@@Making internal calls . 24 Opening lists with the message key . Using a handset as a room monitor . Read the safety precautions and the user guide before use. @@Only use the supplied charging cradle with the mains adapter. @@The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e. Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids. Do not install the base station or charging cradle in bathrooms or shower rooms. Do not use your phone in environments with a potential explosion hazard (e. @@@@@@@@@@ Place the charging cradle on a level, non-slip surface or mount it on the wall ç page 37. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. the range is reduced when eco mode is activated (ç page 26).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. U Never expose the telephone to the influence of heat sources, direct sunlight or U Protect your Gigaset from moisture, dust, corrosive liquids and vapours. If you need to disconnect the plug from the charging cradle, press the release button 1 and disconnect the plug 2. Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Angle and push it onto the casing, bottom first a. Then press the cover b until it clicks into place. ✕ Insert the lock ring or belt clip into ✕ In the case of the lock ring, pay attention to the arrow markings. Turn the lock ring or belt clip clockwise to the end stop. When the markings on the ring and cover are aligned, the lock ring is closed. If you need to re-open the battery cover, for instance to replace the batteries, proceed as follows: ✕ Turn the lock ring or belt clip anticlockwise to the end stop (approx. 20°) and remove. To remove the lock ring, place your thumb and index finger on the two notches on the lock ring.

A small coin) into the cavity at the top of the battery cover and twist until the cover opens. ✕ Press the bottom of the control key until Handset is highlighted by the bar. Press the display key §OK§ to open the submenu. ✕ Press the bottom of the control key until Register H/Set is highlighted by the ✕ Press the display key §OK§ to open the submenu. ✕ Within 60 seconds, press and hold the registration/paging key on the base sta- Following successful registration, the internal number of the handset is displayed, e. The correct charge status can only be displayed once the battery is first fully charged and discharged. Charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged. U After the first battery charge and discharge, you may place your handset in U Always repeat the charging and discharging procedure if you remove the U The battery may warm up during charging. This is not dangerous. Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. ✕ If you have not yet set the date and Enter day, month and year as a 6-digit number via the keypad, e. ✕ Press the bottom of the control key To scroll down to enter the time. ✕ Enter the hours and minutes as a 4digit number via the keypad, e. Play screen to save the settings. Once the phone is registered and the time set, the idle display is shown as in this example.

If Eco Mode + (ç page 26) is not activated, the top left of the display shows the strength of the radio contact between the base station and the handset: u Good to poor: Ð i Ñ Ò u No reception: ! flashes Your phone is now ready for use! After removing the rubber cover, you can connect a headset to the underside of your telephone with the 2. After using the headset, always replace the rubber cover What would you like to do next? Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects. If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" ç page 14. Eco Mode / Eco Mode + Setting the ringer and volume Setting the handset volume Switching pulse/tone (DTMF) dialing Calling line identification (number identification or CallerID) Transferring directory entries from existing Gigaset handsets to the new handset(s) If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and Answers" ç page 32) or contact our customer service department (Customer Care ç page 32).

Using the phone Using the phone control key In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. The control key has a number of different functions: Call up the menu for setting the handset's call volume (ç page 30), ringers (ç page 30) and advisory tones (ç page 31). Go back one menu level or cancel. You can use the control key to move the cursor up t, down s, right v or left u. During an external call Using the phone 1 Current display key functions are shown in the bottom display line. W Delete key: delete one character at a time from right to left. Î Go back one menu level or cancel operation. @@@@A Using the phone To access a function, i. e. @@@@A With the phone in idle status, press and hold the end call key (confirmation tone) to switch off the handset.

Press and hold the end call key again to switch the handset on. The keypad lock prevents any inadvertent use of the phone. # Press and hold the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone. When the keypad lock is activated you will see the Ø icon in the display and a message when you press a key. The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished. Using the phone ✕ Press the bottom of the control key Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut). example: v 5 2 2 for "Set ringer for external calls". With the telephone in idle status, press v (open main menu): Making an external call External calls are calls using the public telephone network (PSTN).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E49H user guide](http://yourpdfguides.com/dref/3956031)  
<http://yourpdfguides.com/dref/3956031>

~c Enter the number and press the talk key. Or: c~ Press and hold the talk key c until Dialling is displayed, then enter the number. You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. Accepting a call and Calling line identification (Russian AON or CallerID) The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d. If necessary, press the display key \$AOH\$ to display the number or name of the caller. Calling line identification is based on either so-called Russian AON or a CallerID function that is standardised for digital PBX (for example, CLIP FSK is number identification coupled with data transfer to the caller using frequency modulation technology or CLIP DTMF, dual-tone multi-frequency modulation). You should request the CLIP service (also known as Digital AON) from your network provider, if your provider supports it. This phone model supports Calling Line Identification using both Russian AON and CallerID functions (CLIP FSK and CLIP DTMF). For correct line identification, you should set your handset to the type of Calling Line Identification used. ~ If you have no CLIP, enter the number of digits (1-9) transmitted and press \$OK. the factory setting is 7 digits. Please ask your provider if you wish to know how many digits of the caller's number are transmitted and identified by the Russian AON. Dialling using the directory, the call-by-call list (€ page 1/ € page 22) or the calls and last number redial list (€ page 24/€ page 24) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers"). ✕ For temporary activation of tone dialling (for example, to dial an extension or listen to voice mail messages), press the \* button after a connection has been made with pulse dialling. When the call is ended, the phone will automatically reset to pulse dialling. ✕ Activation of tone dialling instead of pulse dialling if your provider supports tone dialling. Making calls If the number of the caller is saved in your directory, you will see their name, and if you have assigned a caller picture to tl entries one after the other by responding \$Yes\$ to the Copy next entry? U Entries with identical numbers are not Rings or if the memory of the receiving handset is full. The calls list or the last number redial list, or during a call can be copied to the directory. If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

@@@@Your handset need not be in idle status. @@The f key flashes (it goes off when the key is pressed). In idle status, the display shows an icon for the new message. @@@@ 32 digits). @@@@ @@@@ @@@@ You will hear the network mailbox announcement. With fast access, you can dial the network mailbox directly. fast access is set for the network mailbox. You only need to enter the number of the network mailbox. @@@@If you accept the call, the new messages are played back. @@You are helping to protect the environment with your Gigaset. @@During a call, the wake-up call is only signalled by a short tone. @@Or \$Snooze\$ Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. @@@@ @@@@ @@@@ For further information, please refer to your base user guide. @@@@ @@@@ @@@@ the handset's speaker is muted. @@@@ @@@@ Ifcent; Ringer Settings € All ✕ Set volume and ringer (see "Settings for individual functions"). @@You can also change this setting via the menu (€ page 18). You can also change this setting via the menu (€ page 18). @@@@ You can choose between five volumes (1 5; e. You can set different ringers for the following functions: u Ext. @@@@ A call will now be signalled by one short alert tone. Incoming calls and other messages are indicated by a vibration. @@@@ You can also change this setting via the menu (€ page 18). You can also change this setting via the menu (€ page 18). You can reset individual settings and changes that you have made. This will not affect entries in the directory, call-by-call list or calls list, nor the handset's registration to the base station. Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/ deactivated independently of each other: u Key tones: every key press is confirmed. U Acknowledge tones: Confirmation tone (ascending tone sequence): at the end of an entry/setting and when a new entry arrives in the calls list Error tone (descending tone sequence): when you make an incorrect entry We offer you support that is fast and tailored to your specific needs! Our Online Support on the Internet can be reached any time from anywhere. Com/customer care It provides you with 24/7 support for all our products.

it also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download. You will also find frequently asked questions and answers in the appendix of this user guide. For fast and dependable assistance with any repairs or guarantee/warranty claims, contact our Service Centre. Russia 8 (495) 2281312 Please have your proof of purchase ready when calling. @@If you have any questions about the use of your phone, visit us at any time at www. The table below contains a list of common problems and possible solutions. Move the handset closer to the base station. Handset has not been registered with the base station or has been deregistered. The other caller cannot hear you. @@@@ @@@@ We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www. We, Gigaset Communications GmbH, carry social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. @@@@ @@@@ Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E49H user guide](http://yourpdfguides.com/dref/3956031)  
<http://yourpdfguides.com/dref/3956031>

*If the handset has come into contact with liquid: 1. Switch off the handset and remove the battery pack immediately. 2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc. Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. 2 V Capacity: 600 - 1200 mAh We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life: u GP 700 mAh u Yuasa Phone 700 mAh u Yuasa AAA 800mAh u Peacebay 650 mAh The device is supplied with two recommended batteries.*

*The following rules apply when writing text: u Control the cursor with u v t s. U Characters are inserted next to the cursor. U Press the star key \* to display the table of special characters. Select the required character and press the display key §Insert§ to insert the character at the cursor position. U The first letter of the name of directory entries is automatically capitalised, followed by lower case letters. Press the relevant key several times to enter letters/characters. The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times and apply when the display lighting is switched off ). 5 hrs of calls per day (hours) Charging time (hours) 180 9 80 700 250 12 115 900 1100 320 16 150 395 19 180 When you press and hold a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.*

*Press the hash key # briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key # before entering the letter. You can see briefly in the display whether upper case, lower case or digits is selected. You can order Gigaset products from your specialist retailer. only use original accessories.*

*This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with. 23 using to enter numbers. Lock activating/deactivating keypad lock . Number as destination for room monitor . .*



[You're reading an excerpt. Click here to read official SIEMENS GIGASET E49H user guide](http://yourpdfguides.com/dref/3956031)  
<http://yourpdfguides.com/dref/3956031>