



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET REPEATER. You'll find the answers to all your questions on the SIEMENS GIGASET REPEATER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET REPEATER**  
**User guide SIEMENS GIGASET REPEATER**  
**Operating instructions SIEMENS GIGASET REPEATER**  
**Instructions for use SIEMENS GIGASET REPEATER**  
**Instruction manual SIEMENS GIGASET REPEATER**

A vertical rectangular image showing the cover of a Gigaset Repeater user manual. The cover is dark grey with the word 'Gigaset' in a large, light grey font at the top and 'Repeater' in a smaller, light grey font below it. At the bottom, there is a small line of text: 'GIGASET. INSPIRING CONVERSATION.'

Gigaset

Repeater

GIGASET. INSPIRING CONVERSATION.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET REPEATER user guide](http://yourpdfguides.com/dref/3954788)  
<http://yourpdfguides.com/dref/3954788>

**Manual abstract:**

Explain their contents to your children, and the potential hazards associated with using the device. Only use the power supply unit supplied, as indicated on the underside of the device. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e. PC), as these can interfere with operation. Do not install the device in a bathroom or shower. Do not use the device in environments with a potential explosion hazard, e. If you give your Gigaset Repeater to someone else, make sure you also give them the manual. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product. @@Never use a dry cloth (causes static charge). @@@@If a Gigaset Repeater is already in use, it must be switched on and positioned next to the base station before registration can commence.

The power lead supplied is plugged into the socket on the Gigaset Repeater's rear side. Using the specified measurements, drill the necessary holes in the wall to mount the device using the screws and plugs supplied. The different operating modes are indicated on the front of the Repeater unit by means of two LED's (for an explanation, see page 17). Please refer to the user guide for your phone to check whether your base station is suitable for operating the repeater and how to prepare it for registering the repeater. Carry out the following steps: Switch off the Gigaset Repeater (disconnect the power plug).

Place the base station in Repeater registration mode in the same way as you would to manually register a handset. Ensure that other base stations close to the Gigaset Repeater are not in registration mode during this process. After a short while the LED stays on permanently indicating that registration is complete and that the unit is ready for operation. In this case, repeat the procedure. You can reregister the Gigaset Repeater at any time, for example if initial registration was unsuccessful, or if the Gigaset Repeater is to be registered at another base station for the first time. Before registering the Gigaset Repeater once again (e. Switch off the unit (disconnect the power plug) Switch on for 1 to 5 seconds and switch it off again Switch on for 25 to 35 seconds and switch it off again. The Gigaset Repeater is now ready to be registered again as described above. This is signalled by the LED which flashes continually once the power plug is reconnected. Once you have registered your Gigaset Repeater you can install it wherever you would like to extend the reception range of your handsets.

However, you must ensure that there is a power point at the place of installation and that the left LED remains on constantly after the device has been switched on. If the left LED flashes, the Gigaset Repeater is too far away from the base station or reception is being hindered by thick walls or metal objects for example (e. When looking for a suitable installation site, a useful guide is a handset which requires a good connection with the base station at the Gigaset

Repeater installation site. @@There are two green LEDs on the centre front of the housing. @@@@ switch on again. If the left LED on the unit is flashing slowly, switch it off again. @@@@The relevant number is to be found in the accompanying user guide. @@@@Components on the printed circuit board are manipulated The software is manipulated Defects or damage caused by dropping, breaking, lightning or ingress of moisture. ) Devices fitted with accessories not authorised by Gigaset Communications @@User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee. @@@@ for Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited , Quatro House , Lyon Way , Camberley , Surrey , GU16 7ER.

@@@@ to invoke this Guarantee , please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide. As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. @@@@If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 199.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET REPEATER user guide](http://yourpdfguides.com/dref/3954788)  
<http://yourpdfguides.com/dref/3954788>