



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET S455. You'll find the answers to all your questions on the SIEMENS GIGASET S455 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET S455 User guide SIEMENS GIGASET S455 Operating instructions SIEMENS GIGASET S455 Instructions for use SIEMENS GIGASET S455 Instruction manual SIEMENS GIGASET S455

Gigaset

<p>EN Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.</p> <p>DE Sehr geehrte Kundin, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Etwasige Erklärungen der Siemens AG oder der SHC über Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p> <p>FR Chère Cliente, Cher Client, la Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc, les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.</p> <p>IT Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p> <p>NL Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitleggen of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.</p> <p>ES Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.</p> <p>PT Scares clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenha bons momentos com o seu Gigaset.</p> <p>Issued by Gigaset Communications GmbH Schillerstrasse 66, D-42699 Solingen Gigaset Communications GmbH is a trademark licensee of Siemens AG</p>	<p>DA Kære Kunde, Gigaset Communications GmbH er retlig efterfølger af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbH forklaringer. Vi håber, du får meget glæde af din Gigaset.</p> <p>FI Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset liiketoimintaa. Käyttöoppaissa mahdollisesti esitetyt Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivotamme teille paljon iloa Gigaset-laitteestanne.</p> <p>SV Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.</p> <p>NO Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videregirte Gigaset-geopningen i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningen er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.</p> <p>EL Αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC που υπάρχουν στα εγχειρίδια, καταρτίζονται από την Gigaset Communications GmbH. Σας ευχόμαστε καλή διασκέδαση με τη μονάδα της Gigaset.</p> <p>HR Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da će vam zadovoljstvom koristiti svoj Gigaset uređaj.</p> <p>SL Spoštovani kupci! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo treba veljati kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.</p> <p>© Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com</p>
--	---



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)
<http://yourpdfguides.com/dref/3955344>

Manual abstract:

@@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chre Cliente, Cher Client, la socit Gigaset Communications GmbH succde en droit Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-mme les activits Gigaset de Siemens AG. Donc les ventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent tre comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrment avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attivit della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.

Le auguriamo tanta soddisfazione con il vostro Gigaset. Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.

Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continu el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset. SCaros clientes, Gigaset Communications GmbH a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), que, por sua vez, deu continuidade ao sector de negcios Gigaset, da Siemens AG. Quaisquer declaraes por parte da Siemens AG ou da SHC encontradas nos manuais de utilizao devero, portanto, ser consideradas como declaraes da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset. DA Kre Kunde, Gigaset Communications GmbH er retlig efterflger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreftrte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forsts som Gigaset Communications GmbHs forklaringer. Vi hber, du fr meget glde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatkoii puolestaan Siemens AG:n Gigaset-liiketoimintaa. Kyttoppaissa mahdollisesti esiintyyt Siemens AG:n tai SHC:n selosteet on tmn vuoksi ymmrretyt Gigaset Communications GmbH:n selosteina.

Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kra kund, Gigaset Communications GmbH vertar rttigheterna frn Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla frklaringar frn Siemens AG eller SHC i anvndarhandboken gller drfr som frklaringar frn Gigaset Communications GmbH. Vi nskar dig mycket nje med din Gigaset. Kjre kunde, Gigaset Communications GmbH er rettslig etterflger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreftrte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor forst som meddelelser fra Gigaset Communications GmbH. Vi hper du fr stor glede av din Gigaset-enhet. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumaciti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v prirocnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.

Zelimo vam veliko uzitkov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com CS Vzen zkaznci, spolecnost Gigaset Communications GmbH je prvnm nstupcem spolecnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kter dle pejala segment produkt Gigaset spolecnosti Siemens AG. Jakkoli prohlšen spolecnosti Siemens AG nebo SHC, kter naleznete v uzivatelskch pruckch, je teba povazovat za prohlšen spolecnosti Gigaset Communications GmbH. Doufme, ze jste s produkty Gigaset spokojeni.

Vzen zkaznk, Spolocnos Gigaset Communications GmbH je prvny nstupcom spolecnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktor zasa pokracovala v cinnosti divzie Gigaset spolecnosti Siemens AG. Z tohto dvodu je potrebn vsetky vyhlšenja spolecnosti Siemens AG alebo SHC, ktor sa nachdzaj v pouzvatelskch pruckch, chpa ako vyhlšenja spolecnosti Gigaset Communications GmbH. Verme, ze budete so zariadenm Gigaset spokojn. Stimata client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rndul su, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmatii efectuate de Siemens AG sau SHC i incluse n ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperm ca produsele Gigaset s fie la nlinea dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG.

Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET S455 user guide](#)

<http://yourpdfguides.com/dref/3955344>

KG (SHC), Siemens AG. , Siemens AG SHC, , Gigaset Communications GmbH.

Gigaset. Tisztelt Vsr! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) trvnyes jogutdja a Gigaset Communications GmbH, amely a Siemens AG Gigaset zletgnak utdja. Ebb! kvetkezen a Siemens AG vagy az SHC felhasznli kziknyveiben tallhat brmely kijelentst a Gigaset Communications GmbH kijelentsnek kell tekinteni. Remljk, megelgedssel hasznlja Gigaset kszlkt.

PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobierc prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktra z kolei przejl segment produktw Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, ktre mona znale w instrukcjach obslugi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktw Gigaset. Sayin Mterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini yrten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmi bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanizi mit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) , , Gigaset Siemens AG.

, Siemens AG SHC , Gigaset Communications GmbH. , Gigaset . TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved. www.gigaset.com s Issued by Siemens Home and Office Communication Devices GmbH & Co. KG Schlavenhorst 66 D-46395 Bocholt Siemens Home and Office Communication Devices GmbH & Co. KG 2005 All rights reserved.

Subject to availability. Rights of modification reserved. www.siemens.com/gigaset Gigaset S455 Handset at a glance Handset at a glance 17 16 INT 1 V 2 1 10.

05.05 INT 09:45 SMS 3 15 14 13 12 4 5 8 11 10 9 1 Display in idle status 2 Charge status of the batteries = e V U (flat to full) = flashes: batteries almost flat e V U flashes: batteries charging 3 Display keys (page 13) 6 7 4 Message key Access to calls and message lists; Flashes: new message or new call. 5 End call key, On/Off key End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status) 6 Hash key Key lock on/off (press and hold in idle status), Toggle between upper/lower case and digits 7 Call-by-call list key Open call-by-call list 8 Connection socket for headset 9 Microphone 10 Recall key - Confer (Flash) - Insert a dialling pause (press and hold) 11 Star key Ringtones on/off (press and hold), Open table of special characters 12 Key 1 Select answering machine/network mailbox (press and hold) 13 Talk key Answer a call, open last number redial list (press briefly), start dialling (press and hold) 14 Handsfree key Switch between earpiece and handsfree mode; Lights up: handsfree activated; Flashes: incoming call 15 Control key (page 14) 16 Answering machine symbol Answering machine switched on. Flashes: answering machine is recording a message or is being operated by another caller. 17 Signal strength i (high to low) \ flashes: no reception Siemens Gigaset contact numbers: For personal advice on our range of products call: Premium Hotline UK: 09069 5004 30 (0.

75/min) You can talk to qualified technicians who will guide you expertly through product infomation and installlation. For repairs or guarantee/warranty claims, please contact: 08453 6708 12 (local call cost charge) Please have your proof of purchase ready when calling. Service Centre UK: 1 Base station at a glance Base station at a glance 3 4 5 2 1 6 7 During message playback: 3 Skip back to beginning of message (press once) or to previous message (press twice). 4 Play/stop key: Play back new messages from the answering machine or cancel the playback (press briefly). Play back new and old messages (press and hold). 5 Skip to next message (press once) or next message but one (press twice). 6 Delete current message. 7 Adjust volume during message playback: = quieter; = louder. While an external call is being signalled: adjust ringtone volume. You can use the keys on the base station to operate the integrated answering machine and register the handset to the base station.

1 Registration/paging key Press briefly: search for handsets "Paging", see page 38. Register handsets and DECT devices (press and hold), see page 37. 2 On/Off key: activate/deactivate answering machine. Lights up: answering machine is activated. Flashes: at least one new message. Please remember: u If the answering machine is being oper- ated from a handset or if it is recording a message, it cannot be operated from the base station. u If the On/Off key flashes although the answering machine is switched off, it me. . . .

.
.
. Activating/deactivating advisory tones

.
.
. Setting the alarm clock .

.
.
. Restoring the handset default settings

.
.
. Protecting against unauthorised access

.
.
. Changing ringtones

.
.
. Activating/deactivating the wait melody

.
.
. Repeater support

.
.
. Restoring default settings to base station

.
.
. 42 42 42 42 43 43 43 44 44 45 45 Notes on the operating instructions

..... 52 Symbols used

.....
.... Example: menu input .

..... Example: multiple line input ...

..... Writing and editing a text message . . 52 52 53 54 Accessories ...

.....
.....
..... 56 Index

.....
.....
. 58 Base station settings

..... 46 46 46 46 46 47 Connecting the base station to the PABX

.....
.. 48 Dialling modes and flash time ...

... 48 Setting pauses ...

..... 48 Switching temporarily to tone dialling (DTMF)

.....
.... 48 Appendix .

.....
.....
..... 49 Care ...

.....
.... Contact with liquid

.....
... Questions and answers ..

..... Service (Customer Care) .

..... Specifications .

.....
.....
..... Guarantee Certificate United Kingdom ..

49 49 49 50 51 51 4 Safety precautions Safety precautions Caution: Read the safety precautions and the user guide before use. Explain their contents to your children, and the potential hazards associated with using the telephone. \$ Only use the mains adapter supplied, as indicated on the underside of the base station. Fit only the approved, rechargeable batteries! Never use conventional (nonrechargeable) batteries as this could damage your health and cause injury. Use the batteries as directed in this user guide (page 51).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955344)

[GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)

<http://yourpdfguides.com/dref/3955344>

The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. The handset may cause an unpleasant humming noise in hearing aids. Do not install the base station in bathrooms or shower rooms. The handset and base station are not splash proof (page 49). Do not use the phone in environments with a potential explosion hazard, e.g. auto paint shops.

If you give your Gigaset to someone else, make sure you also give them the user guide. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local council refuse centre or the dealer you purchased the product from. Please note: Not all of the functions described in this user guide are available in all countries. 5 Gigaset S455 more than just a telephone Gigaset S455 more than just a telephone Your phone not only enables you to send and receive text messages over the fixed network and store up to 150 telephone numbers (page 17) it can do a whole lot more: u You can designate important people as VIPs so you can tell important calls from the ringtone (page 17). u You can store anniversaries (page 19) in your phone and it will remind you of them in advance. u Select frequently used phone numbers at the press of a single key (page 17).

u View missed calls on your phone (page 20). Have fun using your new telephone! Please note: u Never expose the telephone to heat sources, direct sunlight, other electrical appliances. u Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Range and reception strength Range: u Up to 300 m in the open u Up to 50 m in buildings Reception strength: The display shows the quality of the radio contact between the base station and handset: u Good to poor: i u No reception: \ flashes Connecting the base station First Steps Pack contents u u u u u u u First connect the mains adapter and then the phone jack as shown below and place the cables in the cable recesses. one Gigaset S455 base station, one Gigaset S45 handset, one mains adapter, one phone cord, two batteries, one battery cover, one belt clip, one user guide.

2 1 3 Installing the base station The base is designed for use in closed, dry rooms with a temperature range of +5 C to +45 C. Set up the base station at a central point in the apartment or house. 1 1 Underside of the base station (detailed view) 2 Mains adapter 230 V 3 Phone jack with phone cord 6 First Steps Please note: u The mains adapter must be always Closing the battery cover connected, as the phone will not operate without mains connection. u If you buy a replacement phone cord from a store, ensure that the phone jack is connected correctly. Correct phone jack assignment 3 2 1 4 5 6 1 2 3 4 5 6 unused unused a b unused unused First align the notches on the side of the battery cover with the lugs on the inside of the casing.

Then press the cover so that it clicks into place. Setting up the handset for use Inserting the batteries Attaching the belt clip Caution: Use only the rechargeable batteries recommended by Siemens (page 51). Never use conventional (non-rechargeable) batteries or other battery types as this may cause significant damage to health and property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. There are notches for attaching the belt clip on the side of the handset at the same height as the display. Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches. ity (see diagram). The polarity is indicated in/on the battery compartment. Fit the batteries with the correct polar- 7 First Steps Opening the battery cover If fitted, remove belt clip.

Insert a fingernail into the headset To charge the batteries, leave the handset in the base station. Please note: If the handset has switched itself off because the batteries are flat and is then placed in the base station, it will switch itself on automatically. Only place the handset in the base or charging cradle that is intended for it. socket cavity and pull the battery cover upwards. For questions and problems see page 49. Placing the handset in the base station and registering display facing upwards. The handset registers automatically. Registration takes around 1 minute. During this time Registr.Procedure appears in the display and the name of the base station flashes, e.

g. Base 1. The handset will be assigned the lowest unassigned internal number (16). This will appear in the display when registration is complete, e.g. INT 1. This means that the number 1 has been assigned. If the internal numbers 16 are already assigned to other units, the number 6 is overwritten. Place the handset in the base with its Headset socket You can connect the following types of headset (with jack connector): HAMA Plantronics M40, MX100 and MX150. Initial charging and discharging of batteries If the handset is activated, the flashing battery icon e in the top right of the display indicates that the batteries are being charged.

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge level can only be displayed if the batteries are first fully charged and discharged. To do this, leave the handset in the base or charging cradle continuously for ten hours. Your handset need not be switched on for it to charge. Afterwards, remove the handset from the base station and do not put it back again until the batteries are fully discharged. Please note: Automatic registration is only possible while no-one is making calls using the base station. Each key press interrupts the automatic registration. If automatic registration does not work the handset will have to be registered manually (page 37). You can change the name of the handset (page 40). 8 First Steps Setting the date and time After the first battery charge and discharge you may replace your handset in its base after every call.

Please note: Please remember: charging procedure if you remove the batteries from the handset and reinsert them. u The batteries may warm up as they are charging. This is not dangerous. u After a time the charge capacity of the batteries will decrease for technical reasons.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)
<http://yourpdfguides.com/dref/3955344>

Your answering machine is set with a standard announcement. Set the date and the time, for example to ensure the correct time of incoming calls is recorded. u Always repeat the charging and dis- time, press the display key Time to open the input field. To change the time, open the input field via: v Date/Time Change multiple line input: Date: Enter day, month and year in 6-digit format. Time: Enter hours and minutes with 4 digits, e.g. Q M I 5 for 07:15 a.m. Save Press the display key. If you have not yet set the date and Display in idle status Once the phone is registered and the time set, the idle display looks as shown here (example). If the device has an answering machine the answering machine icon is also shown in the header. V INT 1 10.05.05 INT 07:15 SMS Your phone is now ready for use. 9 Menu tree Menu tree Instead of scrolling to locate a menu function, you can select a menu function faster by opening the menu and keying in the digit combination ("shortcut"). Example: v 5 2 11 for "Set ringtone for external calls". With the telephone in idle status, press v (open main menu): SMS 1 1-1 1-2 1-3 You have activated an SMS mailbox (general or private) without a PIN New SMS Incoming 0 Outgoing 0 (page 23) (page 25) (page 24) You have activated an SMS mailbox with a PIN or 2-3 mailboxes 1-1 Mailbox 1-1-1 1-1-2 1-1-3 1-2 to 1-4 Mailbox 1 Mailbox 2 Mailbox 3 1-2-1 to 1-4-1 1-2-2 to 1-4-2 1-2-3 to 1-4-3 1-6 Settings 1-6-1 1-6-2 1-6-3 1-6-4 2 2-3 2-6 Sel. Services Withhold No. All Calls (page 16) 2-6-1 2-6-3 2-7 3 4 4-3 Ringback Off Alarm Clock Room Monitor Add. Features (page 41) (page 16) Call Divert Call Waiting (page 16) (page 16) New SMS Incoming 0 Outgoing 0 New SMS (page 23) (page 25) (page 24) (page 23) Incoming 0 (page 25) Outgoing 0 (page 24) Service Centres SMS Mailboxes Notify Number Notify Type (page 28) (page 26) (page 26) (page 26) 10 Menu tree 5 5-1 5-2 Settings Date/Time Audio Settings 5-2-1 5-2-2 5-3 Display 5-3-1 5-3-2 5-3-3 5-3-4 5-4 Handset 5-4-1 5-4-2 5-4-3 5-4-4 5-4-5 5-5 Base 5-5-1 5-5-2 5-5-3 5-5-4 5-5-5 5-5-6 5-5-7 5-6 Voice Mail 5-6-1 5-6-2 5-6-3 5-6-4 5-6-5 5-6-6 5-6-7 Ringer Settings Advisory Tones Screen Picture Colour Scheme Contrast Backlight Language Auto Answer Register H/Set Select Base Reset Handset Ringer Settings Music on hold System PIN Base Reset Add. Features Preselection Calls List Type Set Key 1 Ans Machine Call Screening Announcements Message Length Record Quality Ring Delay (page 43) (page 44) (page 42) (page 42) (page 42) (page 42) (page 43) (page 37) (page 38) (page 45) (page 46) (page 46) (page 46) (page 47) (page 39, page 46, page 48) (page 21) (page 20) (page 34) (page 30) (page 33) (page 30) (page 34) (page 34) (page 33) 11 Making calls Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. Or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. If the ringtone is intrusive, press the display key Silence.

You can take the call as long as it is displayed on the screen. Calling Line Identification When you receive a call, the caller's number is displayed on the screen if the following conditions are met: u Your network provider supports CLIP, CLI. CLI (Calling Line Identification): number of the caller is transmitted. CLIP (Calling Line Identification Presentation): number of the caller is indicated. u You have arranged CLIP with your network provider. u The caller has arranged CLI with the network provider. Please note: Dialling using the directory, call-by-call list (page 1, page 17) or calls list (page 20) saves time re-entering numbers and network provider prefixes ("call-by-call numbers"). Call display with CLIP/CLI If the number of the caller is stored in your directory, you will see their name. 1 2 Ending a call a Press the end call key. 1234567890 Y Answering a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d.

You can accept the call by: Pressing the talk key c. Pressing the handsfree key d. Pressing the display key Y to divert the call to the answering machine (page 32). If the handset is in the base and the Auto Answer function is activated (page 43), the handset will take a call automatically when you lift it out of the base.

Silence 1 Ring symbol 2 Number or name of caller The following is displayed in place of the number: u External, if no number is transmitted. u Withheld, if the caller has withheld Calling Line Identification (page 16). u Unavailable, if the caller has not arranged Calling Line Identification. 12 Operating the handset Handsfree operation In handsfree mode, instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

Operating the handset Activating/deactivating the handset a Press and hold the end call key. You will hear the confirmation beep. Activating/deactivating handsfree Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Activating/deactivating the keypad lock d Press the handsfree key. During a call and when listening to the answering machine, switch handsfree on or off. If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key d while placing the handset in the base station. If handsfree key d does not light up, press the key again. For how to adjust the volume, see page 43. Switching between earpiece and handsfree mode # Press and hold the hash key.

You will hear the confirmation beep. The icon appears in the display when the keypad lock is activated. The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished. Control key Muting You can deactivate the microphone in your handset during an external call.

The other party hears a wait melody. u Press the control key on the left to mute the handset. " Press the display key to reactivate the microphone. You can switch the wait melody on and off (page 46). In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black, e.

g. v for "press right on the control key". The control key has a number of different functions: When the handset is in idle status s v u t Open the directory. Open main menu. Open list of handsets.

Set the ringtones on the handset (page 43). In the main menu and in input fields You can use the control key to move the cursor up t, down s, right v or left u.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955344)

[GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)

<http://yourpdfguides.com/dref/3955344>

13 Operating the handset t/s v u s u t In lists and submenus Scroll up/down line by line. Open submenu or confirm selection. Go back one menu level, or cancel.

Open the directory. Initiate an internal consultation call. Adjust loudspeaker volume for earpiece and handsfree mode. Returning to idle status You can revert to idle status from anywhere in the menu as follows: Press and hold the end call key a. Or: Do not press any key: after 2 minutes the display will automatically revert to idle status. Changes that you have not confirmed or saved by pressing OK, Yes, Save, Send or Save Entry OK will be lost. An example of the display in idle status is shown on page 1. During an external call Display keys The function of the display keys changes depending on the particular operating situation. Example: Menu guidance Your telephone's functions are accessed using a menu that has a number of levels. Main menu (first menu level) INT SMS 1 2 1 The display keys' current functions are shown in the bottom display line.

2 Display keys to open the main menu. The main menu functions are shown in the display as a list with icon and name. To access a function, i.e. open the corresponding submenu (next menu level): Navigate to the function using the control key q. Press the display key OK. Press v with the handset in idle status The most important display symbols are: Menu Open the main menu. Options Open a context-dependent menu. W Delete key: deletes one character at a time from right to left. Go back one menu level or cancel operation.

Copy number into directory. Y Divert external call to answering machine. Open the last number redial list. 14 Submenus The functions in the submenus are displayed as lists. To access a function: Scroll to the function with the control key q and press OK.

Or: Enter the corresponding digit combination (page 10). Pressing briefly on the end call key a returns you to the previous menu level / cancels the operation.

Operating the handset Correcting incorrect entries You can correct incorrect characters in the text by navigating to the incorrect entry using the control key.

You can then: u press X to delete the character to the left of the cursor, u insert characters to the left of the cursor, u overwrite the character (flashing) when entering the time and date etc. You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 52.

15 Network services Network services Network services are functions that your network provider makes available to you. You have to request these services from your network provider. If you require assistance, please contact your network provider. v All Calls Call Waiting Status: Activating/deactivating. Send

Press the display key. Activating/deactivating call waiting Functions during a call Initiating callback You hear the busy tone. Options Ringback a Press the

end call key. Setting functions for the next call Withhold No. Withhold Calling Line Identification for the next call (CLIR). v Withhold No.

~ Enter number. c Press talk key. Consultation During a call: Ext.Call Press the display key. ~ Enter number. You have the following options: u Toggling:

Use q to toggle between the participants. u End call with both participants: Press the end call key a. Setting functions for all subsequent calls If you have completed one of the following procedures, a code is sent. After confirmation from the telephone network, press the end call key a. You can set the following features: v All Calls Call Divert Change multiple line input: When: All Calls / No Answer / When Busy dialling.

Call No.: Press the display key Edit. Enter number to which call is to be diverted, and press Save Entry OK. Accepting a waiting call Press the display key.

You have the option of toggling or holding a conference call.

Accept General call diversion Please note: Without CLIP a waiting call is only announced with a beep. Accept call waiting Options Accept waiting call

Functions after a call Cancelling callback v Ringback Off Status: Activating/deactivating call diversion. Press the display key Send. 16 Using the directory

and lists Using the directory and lists The options are: u Directory, u Call-by-Call list, u Last number redial list, u SMS list, u Calls list, u Answering machine list. You can store a maximum of 150 entries in the directory and call-by-call list (the actual number depends on the size of the individual entries).

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 18). Annivers.: Enter

anniversary if required (page 19). Speed Dial: Select key for speed dial. Save changes. C New Entry Change multiple line input: Number : Enter number.

Name : Enter name. Storing a number in the call-by-call list Selecting entries in the directory and call-by-call list Directory/call-by-call list In the directory, you can store numbers and the associated names. With the handset in idle status, open the directory by pressing the s key.

In the call-by-call list, you can store prefixes of network providers (so-called "callby-call numbers"). Open the call-by-call list in idle status by pressing the C key. s / C Open directory or call-by-call list. You have the following options: u Use s to scroll through the entries until the required name is selected. u Enter

the first character of the name, or scroll to the entry with s if required. Dialling with the directory/ call-by-call list Length of entries Number: Name: max. 32 digits max. 16 characters s / C s (select entry) c Press the talk key. The number is dialled. Please note: Managing entries in the directory/ call-by-call lists s/C

View For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

s (select entry) Viewing an entry Press the display key. The entry is displayed. Back with OK. s New Entry Change multiple line input: Number : Enter number. Name : Enter name.

Storing a number in the directory Editing entries View Edit Press display keys one after the other. Carry out changes and save. 17 Using the directory and

lists s / C s (select entry) Options (open menu) The following functions can be selected with q: Display Number Edit or add to a stored number. Then dial or call up further functions by pressing Options. Edit Entry Edit selected entry.

Delete Entry Delete selected entry. VIP Entry (directory only) Mark a directory entry as VIP (Very Important Person) and assign it a particular ringtone. You can then identify VIP calls by their ringtones. Requirement: Calling Line Identification (page 12). Copy Entry Send a single entry to a handset (page 18).

Delete List Delete all entries in the directory/callby-call list. Copy List Send complete list to a handset (page 18).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955344)

[GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)

<http://yourpdfguides.com/dref/3955344>

Available Memory Display the available entries in the directory and call-by-call list (page 17). Using other functions send and receive directory entries. s / C s (select entry) Options (open menu) Copy Entry / Copy List ~ Enter the internal number of the receiver handset.

You see Copying entry. Yes / No Press the display key. A successful transfer is confirmed by a message and confirmation tone on the receiver handset. u The other handset and base station can Please remember: u Entries with identical numbers are not overwritten on the receiver handset. u The transfer is cancelled if the phone rings or if the memory of the receiver handset is full. Adding a displayed number to the directory Numbers that appear in a list, e.g. the calls list or the last number redial list, in a text message or displayed during a call can be added to the directory. A number is displayed: Options Copy to Directory Complete the entry, see page 17. While the number is being transferred from the answering machine list, the message playback is interrupted.

Using quick dial keys key (page 17). Press and hold the required quick dial Sending the directory/call-by-call list to another handset Requirements: u The sending and receiving handsets Copying a number from the directory There are many operating situations in which you can open the directory, e.g. to copy a number. Your handset need not be in idle status.

Depending on the operating situation, open the directory with s or or Menu Directory . q Select an entry (page 17). must both be registered to the same base station. 18 Using the directory and lists Storing anniversaries in the directory You can store an anniversary for every number in the directory and specify a time when you will receive a reminder call on the anniversary. s s (Select entry; page 17) View Edit Press display keys one after the other.

s Scroll to the Annivers.: line. Edit Press the display key. Change multiple line input: Date: Enter the day/month in 4-digit format. Time: Enter the hour/minute for the reminder call in 4-digit format. Prompt: Select the type of signal for the reminder and press OK. Save changes (page 53). Last number redial list The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial c s c Press the key briefly. Select entry. Press the talk key again. The number is dialled. When displaying a name, you can have the respective phone number displayed by using the display key View. Managing entries in the last number redial list Press the key briefly. Select entry. Options Open menu. The following functions can be selected with q: Display Number (as in the directory, page 18) Copy to Directory Copy an entry to the directory (page 18). Delete Entry (as in the directory, page 18) Delete List (as in the directory, page 18) c s Please note: Reminder calls require a time stamp.

If you select a visual signal, then a time stamp is not required and is automatically set to 00.00. Deleting anniversaries s s View Edit s (Select entry; page 17) Press display keys one after the other. Scroll to the Annivers.: line.

Press display keys one after the other. Edit Delete Save Reminder call on an anniversary A reminder call is signalled on the handset using the selected ring tone. Silence Press the display key to stop the reminder call. 19 Using the directory and lists Opening lists with the message key You can use the message key f to open the following lists: u SMS list If several mailboxes are set up (page 26), several lists are displayed. u Answering machine list u Network mailbox If your network provider supports this function and the network mailbox is configured for fast access (page 36).

u Calls list An advisory tone sounds as soon as a new entry appears on a list. The f key flashes (it goes off when the key is pressed). In idle status, the displays shows an icon for the new message. Icon machine () The numbers of the last 30 incoming calls are stored. Multiple missed calls from the same number are only stored once (the last call). v Base Calls List Type Missed Calls / All Calls Select and press OK (= on). a Press and hold (idle status). The entries in the calls list are retained when you change the list type. u accepted calls () u missed calls u calls recorded by the answering Setting list type for calls list New message..

. ... in answering machine list or network mailbox ... in calls list ...

in SMS list List entry New messages are at the top. Example of list entries: All Calls Susi Sorglos 29/08/05 Louise Miller 29/08/05 11:15 12:20 The number of new entries is shown beneath the corresponding icon. Only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are shown first and identified in bold. The number of new or old messages contained are each shown in brackets.

Select the list with q. To open, press OK. ***** Delete Options u List type (in header) u Status of entry Bold: new entry u Number or name of caller SMS incoming message list All received SMS messages are saved in the incoming message list, see page 25. Calls list Requirement: Calling Line Identification (CLIP, page 12) Depending on the type of list set, the calls list contains 20 You can add the number of the caller to the directory (page 18). u Date and time of call (if set, page 9) u Type of entry: accepted calls () missed calls calls recorded by the answering machine () Making cost-effective calls Pressing the display key Delete deletes the marked entry.

After pressing the display key Options you can select more functions with q: Copy to Directory Add a number to the directory. Delete List Delete complete list. When you leave the calls list all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold. Automatic network provider code (preselection) You can specify a call-by-call number (preselection number), which is automatically placed in front of numbers according to two lists. u The list "with preselection" contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used. u The list "without preselection" contains the "exception to the rule". Example: You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection.

However, if you require, for example, that 081 is still dialled without preselection, enter 081 for "without preselection". When dialling, after pressing the talk/handsfree key the first digits of the dialled number are compared with both lists: u The preselection number is not inserted in front if the dialled number matches no entry in either list matches an entry in the list "without preselection" u The preselection number is inserted in front if the first digits of the dialled number match with only one entry in the list "with preselection".



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955344)

[GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)

<http://yourpdfguides.com/dref/3955344>

v Base Preselection Preselect No. ~ Enter or edit preselection number (call-by-call number). Save changes (page 53). a Press and hold (idle status). Answering machine list You can use the answering machine list to listen to the messages that are on the answering machine. Making cost-effective calls Sign up with a network provider who offers particularly low-cost call rates (callby-call). You can manage the numbers in the call-by-call list. Linking call-by-call numbers with one number You can insert the dialling code of a network provider in front of the number ("linking").

C Open call-by-call list. s Select entry (call-by-call number). Options Press the display key. Display Number Select and press OK. ~ Enter number or select number from the directory (page 18).

c Press talk key. Both numbers are dialled. Storing preselection numbers 21 Making cost-effective calls Saving/editing entries in the preselection lists Each of the two lists can contain 20 entries, each with 6 digits. Numbers may be prefixed according to the country in the "with preselection" list. This means, for example, that all national calls or calls into the mobile phone network will automatically be linked to the preselection number which you have previously stored.

v Base Preselection With Preselect / Without Presel. s Select entry. Edit Press the display key. ~ Enter or edit first digits of number. Save changes (page 53). a Press and hold (idle status). Temporarily cancelling preselection c (press and hold) Options Aut Preselect off Permanently deactivating preselection Delete the preselection number (page 21). 22 SMS (text messages) SMS (text messages) Your unit is supplied ready for you to send text messages immediately. Please remember: u Each incoming SMS is signalled by a Requirements: u Calling Line Identification (page 12) is enabled for your phone connection. the fixed network (information on this can be obtained from your network provider).

u You are registered with your service provider to send and receive text messages. Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre in the unit through which you wish to send and receive. You can receive SMS from every SMS centre that is entered if you have registered with your service provider. Your SMS is sent through the SMS centre that is entered as the send centre (page 28). Only one SMS centre can be the send centre at any one time. If no SMS Service Centre is entered, the SMS menu only consists of the entry Settings . Enter an SMS Service Centre (page 28). u Entering text, see page 54. u Writing using the predictive text tool EATONI, see page 54.

u Your network provider supports SMS in single ring (ringtone as for external calls). If you accept such an SMS "call" on the first ring, the SMS will be lost. To prevent this ringing, suppress the first ringtone for all external calls (page 44). u If your phone is connected to a PABX, please read page 28. u To receive text messages you must be registered with your service provider.

Writing/sending an SMS v Mailbox 2 Select mailbox if necessary and press OK. ~ Enter mailbox PIN if necessary and press OK. New SMS Select and press OK. ~ Write an SMS. Options Press the display key.

Send Select and press OK. SMS Select and press OK. s/C/~ Select number with area code (even if you are in that area) from the directory or call-by-call list or enter it directly. For SMS to an SMS mailbox: put the mailbox ID at the end of the number. Options Press the display key. Send Select. The SMS is sent.

Writing an SMS Sending an SMS Rules u An SMS can be up to 612 characters long. u If there are more than 160 characters or a lot of image data, the text message is sent as a linked SMS (up to 4 messages with 153 characters each). 23 SMS (text messages) Read Please note: If you are interrupted by an external call while writing an SMS, the text is automatically saved in the outgoing message list.

If the memory is full, or if the SMS function on the base is being used by another handset, this cancels the operation. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later. Or: Options Press the display key. The entry will be displayed. Scroll line by line using q. Open menu. Delete Entry Press OK. The SMS is deleted. Writing/editing an SMS Setting input language Options You are writing an SMS (page 23). Press the display key. Select Language Select and press OK. s Select input language and press OK. a Press the end call key briefly to return to the text panel.

The input language setting only applies to the current SMS.

message list. Open menu. You have the following options: New SMS Write and then send a new SMS (page 23) or save. Edit Edit the text of the saved SMS and then send (page 23). Character Set Text is shown in the selected character set.

Options You are reading an SMS in the outgoing Outgoing message list In the outgoing message list, you can save, edit later and send an SMS. Deleting outgoing message list then: Open the outgoing message list and Options Saving an SMS in the outgoing message list Press the display key. Save Entry Select and press OK. Options Delete all a You are writing an SMS (page 23). Opening the outgoing message list Open menu. Select, press OK and confirm with Yes. The list is cleared. Press and hold (idle status). Receiving an SMS All received text messages are saved in the incoming message list. Linked text messages are displayed as one message.

If this is too long or has not transferred completely, it will be split into individual messages. Since an SMS remains in the list even after it has been read, you should regularly delete SMS messages from the list. The display tells you if the message memory is full. Deleting text messages you no longer require (page 25). v (Mailbox, mailbox PIN) Outgoing (3) The first list entry is displayed, e.g.: 1234567890 21.09.05 09:45 Reading or deleting individual SMS then: q 24 Open the outgoing message list and Select SMS. SMS (text messages) Incoming message list The incoming message list contains: u all received text messages, starting with the most recent.

u messages that could not be sent on account of an error. New text messages are signalled on all Gigaset S45 handsets by the icon in the display, the flashing message key f and an advisory tone. Open the incoming message list. Options To continue, see "Deleting outgoing message list", page 24. Open menu. Replying to or forwarding text messages Options Press the display key. You have the following options: Reply Write and send a reply SMS directly (page 23). Edit Edit the text in the SMS and then send it (page 23). Attachments (e.g. pictures, melodies) are not sent. Read the SMS (page 25): Opening the incoming message list with the f key f Press.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S45 user guide](http://yourpdfguides.com/dref/3955344)

Select mailbox if necessary and enter mailbox PIN. The incoming message list is displayed as follows (example): SMS: (2) 1 2 1 bold: number of new entries not bold: number of read entries 2 name of mailbox, here: general mailbox Open list with OK. Forwarding an SMS Options An entry in the list is displayed e.g as follows: 1234567890 21.09.05 09:45 Opening the incoming message list via the SMS menu v (Mailbox, mailbox PIN) Incoming (2) Press the display key. Forward Select and press OK. To continue see page 23.

Attachments are forwarded. If a service provider does not permit the forwarding of attachments: Select Edit to forward the SMS without attachments. Confirm the prompt New SMS will not contain picture/melody. Continue? with Yes. You are reading an SMS (page 25): Adding a number to the directory Adding the sender's number Reading or deleting individual SMS messages deleting individual SMS", page 24. A new message which you have read acquires the status Old. Open the incoming message list. Continue as described at "Reading or Open incoming message list and select Options entry (page 25). Press the display key. Continue see page 18.

Please note: You can create a special directory for text messages within your main directory by putting a star (*) before the names. An attached mail box identifier is added to the directory. Deleting incoming message list All new and old SMS in the list are deleted. 25 SMS (text messages) Copying/selecting numbers from an SMS text telephone number. The digits are reverse-highlighted.

Press the display key. Continue see page 18. Or: c Press the talk key to dial the number. If you wish to use the number to send an SMS: Save the number with the area code (dialling code) in the directory. Read SMS (page 25) and scroll to the v Settings Notify Number ~ Enter the number to which the SMS is to be sent.

Save Press the display key. a Press and hold (idle status). Storing the notification number Caution: Do not enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping. Changing the character set Options Read the SMS (page 25): v Settings Notify Type Change multiple line input if necessary: Missed Calls: Set On if you want SMS notification. Ans Machine: Set On if you want SMS notification. Save changes (page 53). Setting the notification type Press the display key. Character Set Text is shown in the selected character set. SMS mailboxes The General Mailbox is the default setting.

Anyone can access this mailbox and it cannot be protected by a PIN. You can also set up three personal mailboxes and protect these with a PIN. Each mailbox is identified by a name and a "Mailbox ID" (a kind of extension number). Notification by SMS You can be notified by SMS about missed calls or new messages on the answering machine. Requirement: For missed calls, the caller's number (CLI) must have been transmitted. Notification is sent to your mobile phone or another phone with SMS functionality. You only need to set the phone number to which notification should be sent (notification number) and the notification type. Please note: u If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0"). u You can only use personal mailboxes if your service provider supports such a function.

You can tell that this is supported by the fact that a star (*) is added to the number of a (preset) SMS centre. 26 SMS (text messages) u If you have forgotten your mailbox PIN, you can reset it by restoring the base station's factory settings. This will delete all messages from all mailboxes. Setting up and changing a personal mailbox v Settings SMS Mailboxes s Select a mail box, e.g.

Mailbox 2, and press OK. Change multiple line input: On/Off: Activate or deactivate mailbox. ID: Select mailbox ID (09). You can only select the available numbers. Protection: Activate/deactivate PIN protection.

PIN Enter 4-digit PIN, if necessary. Save changes (page 53). Active mailboxes are marked with in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key f. v Settings SMS Mailboxes s (Select mailbox) Edit Press the display key. ~ Enter new name. Save Press the display key. a Press and hold (idle status). Changing the name of a mailbox Setting up a personal mailbox Changing a mailbox's PIN and ID v Settings SMS Mailboxes s (Select mailbox) ~ Enter mailbox PIN if necessary und press OK. Set ID:, Protection: and PIN (page 27).

Sending a text message to a personal mailbox To send a text message to a personal mailbox, the sender must know your ID and enter it after your number. You can send your SMS contact an SMS via your personal mailbox. Your SMS contact will receive your SMS number with current ID and can save it in their directory. @@Confirm message with Yes if necessary. @@@@In doubt, test your PABX e.g. @@@@In this case the recipient cannot reply to you directly. @@v Settings Service Centres s Select SMS centre (e.g. Service Centr.

1) and press OK. @@SMS: Press the display key Edit. @@@@The settings which you have made for sending and receiving SMS (e.g. @@v Open menu. 5502L Enter the digits. Q OK Deactivate the SMS function. @@FE Error occurred during SMS transfer. @@1. The "display call number" service is not activated.

@@@@@1. @@Ask your service provider to enable this service. 2. Text message transmission has been interrupted (e.g. by a call). Re-send the text message. 3. Feature is not supported by network provider. .

4. @@@@1. Your phone memory is full. Delete old messages (page 25). 2. The provider has not yet sent the rest of the message. You have stopped receiving messages. 1. You have changed the ID of your mailbox. @@You have not activated your mailbox.

Activate your mailbox (page 27). 3. @@Change your call diversion. 29 Operating the answering machine Operating the answering machine You can operate the answering machine which is integrated in the base station via the handset, via the keypad of the base station (page 2) or via remote operation (other phone/mobile phone). You can also listen to messages via remote operation using voice commands (page 35).

Announcement mode You can use the answering machine in two different modes. u In Ans. & Record mode, the caller hears the announcement and can then leave a message. u In Announce Only mode, the caller hears your announcement but cannot leave a message. v Voice Mail Announcements Record Announce / Record Anc Only OK Press the display key to start the recording.

You hear the ready tone (short tone). Now speak your announcement (at least 3 secs.). End Press the display key to end the recording. Cancel the recording with a or ".



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)
<http://yourpdfguides.com/dref/3955344>

Restart the recording with OK. After recording, the announcement is played back for you to check. You can rerecord the announcement with New. Recording a personal announcement/ announce only Please note: u Recording ends automatically if the Operation via the handset The handset loudspeaker activates automatically if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key d.

maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds. u If you cancel the recording, the prerecorded announcement is then used. u The recording is cancelled if the answering machine memory is full. Delete old messages and repeat recording if required.

Switching answering machine on/off (= on) After switching on, the remaining memory time is announced. If the time has not yet been set (page 9), an appropriate announcement is then made. The icon is displayed on the screen. The phone is supplied with a pre-recorded announcement for the answer and record mode or announce only mode. If a personal announcement has not been recorded, the corresponding pre-recorded announcement is used. v Voice Mail Ans Machine Playing back announcements v Voice Mail Announcements Play Announce / Play Anc Only If no personal announcement has been recorded, the corresponding pre-recorded announcement is played.

Record a new announcement while playing back announcement: New Press the display key. The recording is cancelled if the answering machine memory is full. Delete old messages and repeat recording if required. 30 Operating the answering machine Deleting announcements v Del Anc Only Press the display key to confirm the prompt. a Press and hold (idle status).

After deletion, the corresponding prerecorded announcement is then used. Yes Voice Mail Announcements Del Announce / Selecting announcement mode You can choose between Ans. & Record and Announce Only. v Voice Mail Announcements Set Ans. Mode Ans.

& Record / Announce Only (= on) a Press and hold (idle status). The selected mode is saved even after the answering machine is deactivated. If in Ans. & Record mode the memory for messages is full the selection is interrupted and you will receive an instruction to delete old messages. Delete old messages. The answering machine automatically switches back to the set mode once deletion is complete or else you can reselect the required recording mode. From: Enter hours/minutes for the start of the period in 4-digit format. Until: Enter hours/minutes for the end of the period in 4-digit format. Activation: Select On or Off. Save changes with Save.

If the memory for messages is full and Activation: On has been selected, saving is interrupted and you will receive an instruction to delete old messages.

Delete old messages and repeat the setting. As soon as you change the announcement mode (page 31), the function Ans Mode Time is automatically deactivated. Change multiple line input: Playing back messages The date and time of each message is logged (provided this has been set, page 9) and displayed during the playback. If Calling Line Identification is activated, then the caller's number is displayed. If the caller's number is stored in the directory, the respective name is displayed. Playing back new messages New messages that have not yet been heard are indicated by the icon in the display and by the f key flashing on the handset. f Press the message key. Ans M.: Select and press OK.

An announcement informs you if there are new messages or just old ones or no messages. If there are new messages playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains. 31 Setting 'answer and record' or 'announce only' by toggling You can use the Ans Mode Time setting to change over the announcement mode for a specific period. Example: The Ans. & Record mode is set. If you activate Ans Mode Time and set a period (e.g. 18.00 to 8.

00 h) the answering machine switches to Announce Only mode for this period. Outside this period (08.01 to 17.59), the Ans. & Record is active. v Voice Mail Announcements Set Ans. Mode Ans Mode Time (= on) Operating the answering machine If the message concerned has been saved with the date and time you will hear an appropriate announcement before playback begins. Deleting messages You can delete old messages either all together or individually. Playing back old messages You can listen to old messages if there are no more new messages. Start the playback as described under "Listening to new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old". Deleting all old messages During playback or pause: Options Press the display key. Del All Old Msgs Select and press OK. Yes Press the display key to confirm the prompt. Stopping and controlling playback During message playback: 2 Pause playback. Press 2 again to resume t or 1 To previous message. s or 1 To next message. After an interruption of over one minute, the answering machine returns to idle status. Deleting individual old messages During playback or pause: Delete Press the display key.

Picking up a call from the answering machine You can pick up a call while the answering machine is recording it or being operated via remote operation: c / Accept Press the talk or display key. Recording stops and you can speak to the caller. If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The f key on the handset flashes. You can accept the call even if it is not signalled on the handset.

Marking a message as "new" A previously played back "old" message is displayed as a "new" message again. During message playback: * Press the star key. An announcement informs you of the message's new status. Or: Options Open menu. Mark as New Select and press OK.

Playback of the current message is cancelled. Playback of next message starts, if applicable. The f key on the handset flashes. Diverting an external call to the answering machine You can divert an incoming external call to the answering machine even if it is switched off. Requirement: sufficient storage space is available on the answering machine. An external call is signalled on the handset: Y Press the display key. Adding the telephone number of a message to the directory See also "Adding a displayed number to the directory", page 18. 32 Operating the answering machine The answering machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 33) is ignored. Switching off listen in for the current recording a Press the end call key.

Activating/deactivating two-way recording You can record an external call with the answering machine.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S455 user guide](http://yourpdfguides.com/dref/3955344)
<http://yourpdfguides.com/dref/3955344>