



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET S68H. You'll find the answers to all your questions on the SIEMENS GIGASET S68H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET S68H**  
**User guide SIEMENS GIGASET S68H**  
**Operating instructions SIEMENS GIGASET S68H**  
**Instructions for use SIEMENS GIGASET S68H**  
**Instruction manual SIEMENS GIGASET S68H**

**SIEMENS**



**Gigaset S68H**

**Gigaset**

Issued by:  
Gigaset Communications GmbH  
Schlierhorst 64, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG  
© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.  
www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)  
<http://yourpdfguides.com/dref/3955548>

**Manual abstract:**

*Rights of modifications reserved. @@@@ . . . . . 1 Safety precautions . .*

. . . . .  
. . . . .

*3 Gigaset S68H More than just a telephone . . . . . 5 First steps . . . . .*

. . . . .

. . . . .

*5 Pack contents . . . . .*

. . . . .

*. . . . . 5 Installing the base station and charging cradle . . . . .*

. . . . .

. . . . .

*. . . . . 5 Setting up the handset for use . . . . .*

*. 6 Operating the handset . . . . .*

*9 Control key . . . . .*

. . . . .

. . . . .

*. . 9 Display keys . . . . .*

. . . . .

. . . . .

*. . . 9 Reverting to idle status . . . . .*

*. . . . . 10 Menu guidance . . . . .*

. . . . .

. . . . .

*. . 10 Correcting incorrect entries . . . . .*

*11 Changing the handsfree/ earpiece volume . . . . .*

. . . . .

*. . 20 Changing ringer tones . . . . .*

*. . . . . 20 My stuff . . . . .*

. . . . .

. . . . .

. . . . .

*. . . 22 Activating/deactivating advisory tones . . . . .*

. . . . .

*. . 23 Setting the alarm clock . . . . .*

. . . . .

*. . . . . 23 Setting an appointment (calendar) . . 24 Displaying missed appointments and anniversaries . . . . .*

. . . . .

. . . . .

*. . . 25 Using Bluetooth devices . . . . .*

*. . . . . 25 Setting your own area code . . . . .*

*. . . . . 27 Restoring the handset to the factory settings . . . . .*

. . . . .

. . . . .

*. . . . . 27 Appendix . . . . .*

. . . . .

*. . . 28 Care . . . . .*

. . . . .

. . . . .

*Contact with liquid . . . . .*

. . . . .

*. . . . . Questions and answers . . . . .*

.....	Service (Customer Care) ...
.....	.....
.....	... Authorisation ...
.....	.....
.....	Specifications ...
.....	.....
.....	.....
.....	28 28 28 29 30 30 ECO DECT ...
.....	.....
.....	.....
.....	11 Making calls ...
.....	.....
.....	.. 11 Making an external call .....
.....	... Ending a call ..
.....	.....
.....	.....
.....	... Accepting a call .....
.....	.....
.....	.....
.....	Handsfree talking .....
.....	.....
.....	..... Muting .....
.....	.....
.....	.....
.....	.....
.....	Making internal calls .....
.....	... 11 11 11 12 12 12 Notes on the user guide ..
.....	... 31 Example of a menu input .
.....	... 31 Example of multiple line input .
.....	.....
.....	... 31 Writing and editing text .....
.....	.....
.....	. 32 Additional functions via the PC interface .....
.....	.....
.....	.. 33 Accessories .....
.....	.....
.....	... 33 Index .
.....	.....
.....	.....
.....	. 34 Using the directory and lists ... 12 Directory/call-by-call list .
.....	.....
.....	... 12 Last number redial list .....
.....	.....
.....	..... 16 Opening lists with the message key ...
.....	.....
.....	.....
.....	..... 17 Using a handset as a room monitor ...
.....	.....
.....	.. 17 Handset settings ...
.....	.....
.....	..... 18 Shortcuts for functions and numbers .....
.....	.....
.....	.....
.....	... Changing the display language ..
.....	... Setting the display .....
.....	.....
.....	..... Setting the screensaver ..
.....	.....

. . . . . Setting the display backlight .  
. . . . . Activating/deactivating auto answer . . . . .

. . . . .

. . . . .

. @@ Explain their contents and the potential hazards associated with using the telephone to your children. \$ Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle. Only use the recommended, rechargeable batteries (page 30), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from. The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.

Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 28). Do not use your phone in environments with a potential explosion hazard (e.g. paint shops). If you give your Gigaset to someone else, make sure you also give them the user guide. Please take defective base stations out of operation or have them repaired by our Service, as they could interfere with other radio services. 3 Safety precautions All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health.

They are a precondition for the re-use and recycling of used electrical and electronic equipment. For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from. Please note: Not all of the functions described in this manual are available in all countries. 4 Gigaset S68H More than just a telephone Gigaset S68H More than just a telephone Your phone, which has a clearly laid out colour display (65K colours), doesn't just offer you the option of saving up to 250 phone numbers and e-mail addresses (page 12) it can do much more besides: u You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 18).

u You can designate important people as VIPs so you can tell important calls from the ringer tone (page 13). u You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display. Precondition: Calling Line Identification u You can save appointments (page 24) and anniversaries (page 15) in your phone and it will remind you of them in advance. u You can use Bluetooth™ for wireless communication with other devices that also use this technology (see page 25).

Bluetooth™ can be used for headsets (page 7) exchanging directory entries with your mobile phone (page 15) downloading photos (.bmp) to visualise the caller (page 33) exchanging directories with Outlook using Gigaset QuickSync (page 33) Enjoy using your new telephone! First steps Pack contents u one Gigaset S68H handset, u one charging cradle with mains u u u adapter, two batteries, one battery cover, one belt clip, one user guide. Installing the base station and charging cradle The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 C to +45 C. Please note: u Never expose the handset to the following influences: heat sources, direct sunlight, other electrical appliances. u Protect your Gigaset from moisture, dust, corrosive liquids and vapours. Range and reception strength Range: u Outdoors: up to 300 m u Indoors: up to 50 m Reception strength: The display shows the quality of the radio contact between the base station and handset: u Good to poor: i u No reception: \ flashes 5 First steps Setting up the handset for use The display is protected by a plastic film. Please remove the protective film! Instructions on how to connect the charging cradle and mount it on the wall (if required) can be found at the end of this user guide.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955548)

[GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)

<http://yourpdfguides.com/dref/3955548>

Then press the cover until it clicks into place. Inserting the batteries Warning: Attaching the belt clip There are notches for attaching the belt clip on the side of the handset at the same height as the display. Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

Use only the rechargeable batteries recommended by Gigaset Communications GmbH \* (page 30). Never use a conventional (nonrechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. \* Gigaset Communications GmbH is a trademark licensee of Siemens AG. Insert the batteries the right way round (see figure). The polarity is indicated in/on the battery compartment. Opening the battery cover If fitted, remove the belt clip. Place your fingertip in the cavity on the casing and pull the battery cover upwards. Closing the battery cover First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.

6 First steps Registration Before you can use your Gigaset S68H you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station. Manual registration Gigaset S68H If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries. You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number appears in the display, e.g. INT 1. If it does not appear, repeat the procedure.

Automatic registration of Gigaset S68H to Gigaset S680/S685 Precondition: The handset must not yet have been registered to a base station. The handset is automatically registered to the Gigaset S680/S685 base station. Place the handset in the base station with its display facing forward. Registration can take up to 5 minutes. During this process, Regstr.Procedure appears in the display and the name of the base station flashes, e.g. Base 1. When the handset has registered, its screen displays its internal number, e.g.

INT 2 for internal number 2. The handset is assigned the lowest available internal number (16). If all internal numbers 16 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status. On the handset v Handset Register H/Set s Select base station, e.g. Base 1 and press OK. ~ Enter the system PIN of the base station (the default is 0000) and press OK. You will, for example, see Base 1 flashing in the display. On the base station Within 60 sec. press and hold the registration/paging key on the base station (approx.

3 sec.). Please note: Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call. Each key press (teup, down, right, left) which you have to press in the different operating situations is marked in black, e.g.

v for "press right on the control key". The control key has a number of different functions: 1 2 1 Current display key functions are shown in the bottom display line. 2 Display keys When the handset is in idle status s v u t Open the directory. Open the main menu. Open the list of handsets.

Call up the menu for setting the handset's call volume (page 20), ringer tones (page 20) and advisory tones (page 23). The most important display icons are: } Left display key, as long as it has not been assigned a function (page 18). Open the main menu. Options Open a context-dependent menu. W Delete key: deletes one character at a time from right to left. Go back one menu level or cancel operation. 9 Operating the handset OE Y Fetch e-mail address from the directory. Copy number into directory. On base stations with integrated answer machines: divert external call to answer machine. Open the last number redial list.

Submenus The functions in the submenus are displayed as lists. To access a function: Scroll to the function with the control key q and press OK. Briefly press the end call key a once to return to the previous menu level / cancel the operation. Reverting to idle status You can revert to idle status from anywhere in the menu as follows: Press and hold the end call key a. Or: Do not press any key: after 2 minutes the display will automatically revert to idle status. Changes that you have not confirmed or saved by pressing OK, Yes, Save, Send or Save Entry OK will be lost. An example of the display in idle status is shown on page 1. Illustration in the user guide The operating steps are shown in abbreviated form. Example The illustration: v Date/Time means: v Press the key to display the main menu. Use the control key q to scroll through submenu Settings and press OK.

Date/Time Scroll to the function with the control key q and press OK. Menu guidance Your telephone's functions are accessed using a menu that has a number of levels. Other types of illustrations: c / Q / \* etc. Press the matching key on the handset. ~ Enter digits or letters.

Main menu (first menu level) to open the main menu. The main menu functions are shown in the display with colour icons and names. To access a function, i.e. to open the corresponding submenu (next menu level): Navigate to the function using the control key q.

The name of the function is displayed in the display header. Press the OK display key. Press v with the handset in idle status You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 31. 10 ECO DECT Correcting incorrect entries You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then: u press X to delete the character to the left of the cursor u insert characters to the left of the cursor u overwrite the character (flashing) when entering the time and date etc. Continuing a call on a Bluetooth headset

Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 25). Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset. For further details on your headset, see the user guide issued with it. ECO DECT ECO DECT reduces power consumption by using an energy efficient power supply. Your handset also reduces the radio range depending on the distance to the base station.

Ending a call a Press the end call key. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key d. You can accept the call by: Pressing the talk key c.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)  
<http://yourpdfguides.com/dref/3955548>

Pressing the handsfree key *d*. If the handset is in the charging cradle and the Auto Answer function is activated (page 20), the handset will take a call automatically when you lift it out of the cradle. If the ringer tone is intrusive, press the Silence display key. You can take the call as long as it is displayed on the screen. Making calls Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. Or: c~ Press and hold the talk key *c* and then enter the number.

You can cancel the dialling operation with the end call key *a*. You are shown the duration of the call while the call is in progress. Answering a call on a Bluetooth headset Precondition: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (see page 25). Only press the talk key on the headset when the headset itself rings (this may take up to 5 seconds). For further details on your headset, see the user guide issued with it.

Please note: Dialling using the directory, call-by-call list (page 1, page 12) or last number redial list (page 16) saves time re-entering numbers and network provider access codes ("call-by-call numbers"). 11 Using the directory and lists Handsfree talking In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you, to allow others to participate in the call. Calling a specific handset *u* ~ Or: *u s c u* \* Initiate internal call. Enter the number of the handset. Initiate internal call.

Select handset. Press the talk key. Initiate internal call. Press the star key. All handsets are called. Press the end call key. Activating/deactivating handsfree mode Activating while dialling ~d Enter the number and press the handsfree key. You should inform your caller before you use the handsfree function so that they know someone else is listening. Calling all handsets ("group call") Ending a call a Switching between earpiece and handsfree mode *d* Press the handsfree key. Activate/deactivate handsfree during a call.

If you wish to place the handset in the charging cradle during a call: Press and hold the handsfree key *d* while placing the handset in the base station. If the handsfree key *d* does not light up, press the key again. For how to adjust the handsfree volume see page 20. Using the directory and lists You can save a total of 250 entries in the directory and call-by-call list. You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 14). Directory/call-by-call list Please note: For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key. Muting You can deactivate the microphone in your handset during an external call. The other party hears hold music. *u* Press the control key on the left to mute the handset.

" Press the display key to reactivate the microphone. Directory In the directory you can save *u* Up to three numbers and associated first names and surnames, *u* VIP designation and VIP ringer tone (optional), *u* E-mail address (optional), *u* CLIP pictures (optional), *u* Anniversaries with reminder. With the handset in idle status, open the directory by pressing the *s* key. Making internal calls Internal calls to other handsets registered on the same base station are free. 12 Using the directory and lists Length of the entries (directory) 3 numbers: each max.

32 digits First name and surname: each max. 16 characters E-mail address: max. 60 characters Save changes: (page 32). *C* New Entry Change multiple line input: Name: Enter name. Number: Enter number.

Saving a number in the call-by-call list Call-by-call list The call-by-call list is used to store the access codes for network providers ("Call-by-call numbers"). Open the call-by-call list in idle status by pressing the *C* key. Order of directory/call-by-call list entries Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname. The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname.

These entries will then move to the beginning of the directory. Length of entries Number: Name: max. 32 digits max. 16 characters *s* New Entry Change multiple line input: First Name / Surname: Enter a name in at least one of the fields. Phone (Home) / Phone (Office) / Phone (Mobile) Enter a number in at least one of the fields. E-mail Enter e-mail address. Annivers.: Select On or Off. With setting On: Enter Anniversary (Date) and Annivers. (Time) (page 15) and select reminder type: Annivers.

(Signal). Caller Picture If required, select a picture to be displayed when the caller calls (page 22). Precondition: Calling Line Identification (CLIP). Saving a number in the directory Selecting entries in the directory and call-by-call list *s* / *C* Open the directory or call-by-call list. You have the following options: *u* Use *s* to scroll through the entries until the required name is selected.

*u* Enter the first character of the name (in the directory: first character of the surname or of the first name if only the first name has been entered), or scroll to the entry using *s*. Please note: Please visit our website at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care) to find out if your handset supports this feature. 13 Using the directory and lists Dialling with the directory/call-by-call list *v* / *C* *s* (select entry) *c* Press the talk key.

The number is dialled. Managing entries in the directory/call-by-call lists *s* / *C* View Delete all entries in the directory/call-by-call list. Copy List Send complete list to a handset (page 14). Available Memory Display the available entries in the directory and call-by-call list (page 12). *s* (select entry) Using quick dial keys key (page 18). Viewing entries Press the display key. The entry is displayed. Back with OK. Press and hold the required quick dial Sending the directory/call-by-call list to another handset Preconditions: must both be registered on the same base station. *u* The other handset and the base station can send and receive directory entries.

*s* / *C* *s* (select entry) Options (open menu) Copy Entry / Copy List to Internal *s* Select the internal number of the receiving handset and press OK. You can transfer several individual entries one after the other by responding Yes to the Copy next entry? prompt. A successful transfer is confirmed by a message and confirmation tone on the receiving handset. You can also send the complete directory via data transfer, without opening the directory: Editing entries View Edit Press display keys one after the other.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)  
<http://yourpdfguides.com/dref/3955548>

Carry out changes and save. u The sending and receiving handsets s / C s (select entry) Options (open menu) The following functions can be selected with q: Display Number To edit or add to a saved number, or to save it as a new entry, press after the number is displayed. Edit Entry Edit selected entry. Delete Entry Delete selected entry. VIP Entry (directory only) Mark a directory entry as a VIP (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

Precondition: Calling Line Identification. Copy Entry Send a single entry to a handset (page 14). Delete List 14 Using other functions Please note: v Data Transfer Directory Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. Using the directory and lists Transferring the directory as a vCard with Bluetooth In Bluetooth mode (see page 25) you can transfer directory entries in vCard format, e.

g. to exchange entries with your mobile. s s (select entry) Options (Open menu) Copy Entry / Copy List vCard via Bluetooth The list of "Known Devices" (see page 26) is displayed. s Select device and press OK. A number is displayed: Options Copy to Directory Complete the entry, see page 13. While the number is being transferred from the answer machine list (depending on the base station), the message playback is interrupted. Copying a number or e-mail address from the directory In many operating situations, you can open the directory to copy a number or email address, for example. Your handset need not be in idle status. Depending on the operating situation, open the directory with s or or Directory. q Select an entry (page 13). Receiving a vCard with Bluetooth If a device from the "Known Devices" list (see page 26) sends a vCard to your handset, this occurs automatically and you are informed about it via the display. If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device: ~ Enter the PIN for the sending Bluetooth device and press OK. Saving an anniversary in the directory For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: Annivers.: Off). Anniversaries are automatically recorded in the calendar (page 24).

s s (select entry; page 13) View Edit Press display keys one after the other. s Scroll to the Annivers.: line. v Select On. Change multiple line input: Anniversary (Date) Enter day/month/year in 8-digit format. Annivers. (Time) Enter the hour/minute for the reminder call in 4-digit format. Annivers. (Signal) Select the type of signal for the reminder. Save changes: (page 32).

The transferred vCard is available as a directory entry. Copying a displayed number to the directory You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS (depending on the base station) or during a call to the directory. If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

15 Using the directory and lists Deactivating anniversaries s s v Save View Edit s (select entry; page 13) Manual last number redial c s c Press the key briefly. Select entry. Press the talk key again. The number is dialled. When a name is displayed, you can display the corresponding phone number by pressing the View display key.

Press the display keys one after the other. Scroll to the Annivers.: line. Select Off. Press the display key. Reminder call on an anniversary A reminder call is signalled on the handset using the selected ringer tone. You now have the following options: SMS Write an SMS OFF Press the display key to acknowledge and end the reminder call. Managing entries in the last number redial list Press the key briefly. Select entry. Options Open menu.

The following functions can be selected with q: Copy to Directory Copy an entry to the directory (page 12). Automatic Redial The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated. Called party answers: press the Talk key c. The function is ended. Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts. Display Number (as in the directory, page 14) Delete Entry (as in the directory, page 14) Delete List (as in the directory, page 14) c s Viewing missed anniversaries In idle status, you are reminded of an elapsed and unacknowledged anniversary by the one-off display of Appoint..

View appointment: Appoint. Press the display key. You now have the following options: SMS Write an SMS (depending on base station). Delete Delete reminder. After deleting, press the display key " or Go Back: Back in idle status, Appoint.

is no longer displayed. You can also view missed anniversaries afterwards (see page 25). Last number redial list The last number redial list contains the 20 numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory or in the call-by-call list, the corresponding name will be displayed.

16 Using a handset as a room monitor Opening lists with the message key An advisory tone sounds as soon as a new message arrives in a list. The message key f flashes (it goes off when the key is pressed). In idle status, the display shows an icon for the new message. If you press the message key f, you access the lists that contain new messages. Caution! You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number. When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.

Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby. The connection to which the room monitor is diverted must not be blocked by an activated answer machine. Using a handset as a room monitor If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated without a ringer tone and are only shown on the screen.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)  
<http://yourpdfguides.com/dref/3955548>

The display and keypad are not illuminated and advisory tones are also turned off. If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function remains activated. @@@@Only the last 4 digits are displayed. @@Level: Set noise level sensitivity (Low or High). @@X or Delete Delete existing number. @@ Press the J display key or press and hold the digit key. The list of possible key assignments is opened. @@The directory or call-by-call list is opened. Select an entry and press OK.

@@@@@Calendar Open calendar/enter new appointment. Bluetooth Assign the Bluetooth menu to a key. More Features... @@@@ Accept the call from the room monitor and press keys 9 ;. The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g.

@@@@The right display key has a function pre-selected by default. You can change the function assigned. @@Depending on the key assignment: u Numbers are dialled directly. @v Display Colour Scheme Select and press OK. s Select a colour scheme and press OK (= current colour). a Press briefly. Contrast Select and press OK. r Select contrast. Save Press the display key. @@The list of possible key assignments is opened.

@@@@This will replace the idle status display. It may conceal the date, time and name. The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

@v Display Screen Saver The current setting is displayed. @@Selection: If required, change the screensaver (see below). Save changes: (page 32). @@ Press the display key. The list of possible key assignments is displayed.

@v Handset Language The current language is indicated by . s Select a language and press OK. a Press and hold (idle status). If you accidentally choose a language you do not understand: v N 4 Press keys in sequence. s Select the correct language and press OK. 19 Handset settings Changing the screensaver v Display Screen Saver s Scroll to the Selection line. View Press the display key. The active screensaver is displayed. s Select screensaver and press Changing the handsfree/earpiece volume You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. In idle status: t Handset Volume r Set the earpiece volume.

s Scroll to the Handsfree Volume line. r Set the handsfree volume. Save Press display key if necessary to save the setting. Setting the volume during a call: t Press the control key. r Set the volume. The setting will automatically be saved after approx. 3 seconds or press the display key Save. If t is assigned to another function, e.g. toggling: Options Open menu.

Volume Select and press OK. Configure setting (see above). Save changes: (page 32). Setting the display backlight Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

v Display Backlight The current setting is displayed. Change multiple line input: In Charger Select On or Off. Without Charger Select On or Off. With the On setting, the standby time of the handset can be significantly reduced. Save Change.

Please note: a Press the display key. Press and hold (idle status). Please note: You can also set the call volume, ringer tones and advisory tones using the menu. Activating/deactivating auto answer If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key c. v Handset Auto Answer Select and press OK (= on). a Press and hold (idle status). Changing ringer tones u Volume: You can choose between five volumes (15; e.g. volume 2 = ^) and the "crescendo" ring (6; volume increases with each ring = ). u Ringer tones: You can select various ringer tones, melodies or any sound from My stuff (page 22).

20 Handset settings You can set different ringer tones for the following functions: u Ext. Calls: for external calls u Internal Calls: for internal calls u Appointments: for set appointments (page 24) u All: the same ringer tone for all functions Activating/deactivating the ringer tone You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress. Settings for individual functions Set the volume and melody depending on the type of signalling required. In idle status: t Ringer Settings q Select setting, e.g. Ext. Calls and press OK. r Set volume (16). s Scroll to the next line.

r Select melody. Save Press the display key to save the setting. In idle status, you can also open the menu Ringer Settings by pressing t briefly. Deactivating the ringer tone permanently \* Press and hold the star key. The icon appears in the display.

Re-activating the ringer tone \* Press and hold the star key. Deactivating the ringer tone for the current call Silence Press the display key.

Activating/deactivating the alert tone In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a short tone ("Beep") instead of the ringer tone. \* Press and hold the star key and within 3 seconds: Beep Press the display key.

A call will now be signalled by one short alert tone. You will now see in the display. Same ringer tone for all functions In idle status: t Ringer Settings All Set volume and ringer tone (see "Settings for individual functions"). Save Press the display key to confirm the prompt. a Press and hold (idle status). Please note: You can also set the call volume, ringer tones and advisory tones using the menu. 21 Handset settings My stuff My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types: Icon Sound Ringer tones Picture (CLIP picture, screensaver) Format Standard BMP (128 x 128 or 128 x 64 pixels) If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with .

Delete the picture with Delete. Sounds: Setting the volume During playback: Volume Press the display key. r Set volume. Save Press the display key. Renaming/deleting a picture You have selected an entry. Options Open menu. If a picture cannot be deleted ( ), these options are not available. Depending on the situation, you can select the following functions: Delete Entry The selected entry is deleted. Delete List All entries in the list that can be deleted are deleted. Rename Change the name (max.

16 characters) and press Save.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955548)

[GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)

<http://yourpdfguides.com/dref/3955548>



The entry is saved with the new name. The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset. You can listen to the available sounds and view the pictures.

You can download pictures from a PC (see page 33). If there is not enough memory available, you must first delete one or more pictures. The pre-configured pictures are labelled with . You cannot rename or delete them. v Screensavers / Caller Pictures / Sounds (select entry) Play / View Press the display key.

Sounds are played back or pictures are displayed. Press the q key to switch between entries. End / " Press the display key. Playback of the sound or the display of the picture ends. While you are playing back sounds, you can also interrupt playback with the u key. a Press and hold (idle status). 22 Playing back sounds/viewing CLIP pictures Checking memory You can check how much memory is available for screensavers and CLIP pictures. v Capacity " Back: press the display key. Handset settings Activating/deactivating advisory tones Your handset uses "advisory tones" to tell you about different activities and statuses.

The following advisory tones can be activated/deactivated independently of each other: u Key click: Every key press is confirmed.

u Acknowledge tones: Confirmation tone (ascending tone sequence): at the end of an entry/ setting and when an SMS (depending on the base station) or a new entry arrives in the call history Error tone (descending tone sequence): when you make an incorrect entry Menu end tone: when scrolling at the end of a menu

u Battery tone: The batteries need to be charged. In idle status: t Advisory Tones Change multiple line input: Key Tones: Select On or Off. Confirm.: Select On or Off. Battery: Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call. Save changes: (page 32).

You cannot deactivate the confirmation tone for placing the handset in the base station. Setting the alarm clock Precondition: The date and time have already been set (page 8). v Change multiple line input: Activation: Select On or Off.

Time: Enter the wake-up time in 4-digit format. Occurance: Select Daily or Monday-Friday. Volume: Set the volume (1-6). Melody: Select melody. Save changes: (page 32).

You will see the icon. A wake-up call with selected ringer tone (page 20) is signalled on the handset. The wake-up call sounds for 60 seconds. is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone. Activating/deactivating the alarm clock and setting the wake-up time Deactivating the wake-up call/ repeating after a pause (snooze mode) Precondition: A wake-up call is sounding. OFF Press the display key. The wake-up call is deactivated. or Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely. Please note: You can also set the call volume, ringer tones and advisory tones using the menu. 23 Handset settings Setting an appointment (calendar) You can have your handset remind you of up to 30 appointments (volume and melody, see page 20). 60 seconds.

The entered text, date and time are displayed. During a call, the appointment reminder is signalled by a short tone. v r/q Select the day in the graphical calendar and press OK. (Days on which appointments have already been saved are highlighted in black in the calendar.) q Select appointment for the day. Options Open menu Back with ". You have the following options: View Entry View selected appointment. Open the Options menu for editing, deleting and activating/deactivating. Edit Entry Edit selected appointment. Delete Entry Delete selected appointment.

Activate / Deactivate Activate/deactivate the selected appointment. Delete List Delete all appointments. Managing appointments Saving an appointment Precondition: The date and time have already been set (page 8). v r/q Select the day in the graphical calendar and press OK. (Days on which appointments have already been saved are highlighted in black.

) The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment. <New Entry> Select and press OK. Change multiple line input: Appoint.: Select On or Off.

Date: Enter day/month/year in 8-digit format. Time: Enter hours/minutes in 4-digit format. Notes: Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed. Save Press the display key. a Press and hold (idle status). The appointment is marked with in the appointments list. The list of appointments is sorted by date.

An appointment reminder is signalled with the selected ringer tone (page 20). The appointment reminder sounds for 24 Deactivating or accepting an appointment reminder Precondition: An appointment reminder is sounding. OFF Press the display key to deactivate the appointment reminder. Or: SMS Press the display key to answer the appointment reminder with an SMS (depending on base station). Handset settings Displaying missed appointments and anniversaries Missed appointments/anniversaries (page 15) are displayed in the Missed Alarms list if: u You do not accept an appointment/ anniversary. u The appointment/anniversary was signalled during a phone call. u The handset is deactivated at the time of the appointment/anniversary. u Automatic redial was activated at the time of an appointment/anniversary (page 16). The most recent entry is at the head of the list. If there is a new appointment/anniversary in the list, the display shows Appoint.

. Pressing the display key will also open the Missed Alarms list. To open the list from the menu: v Missed Alarms Select appointment/anniversary. Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name.

The date and time will also be given. Delete Delete appointment. SMS Write an SMS a Press and hold (idle status). If 10 entries are already saved in the list, the next appointment reminder will delete the oldest entry. Using Bluetooth devices Your Gigaset S68H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset. You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (page 33). In order to transfer phone numbers via Bluetooth connections, it is essential that area codes (international and local area codes) are saved on the phone (see page 27).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955548)

[GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)

<http://yourpdfguides.com/dref/3955548>

You will find a description of how to operate your Bluetooth devices in the user guides for these devices. Please note: You can only operate headsets on your handset that have the headset profile. It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset and one is transferred to the headset, and when a number is dialled from the handset. Activating/deactivating Bluetooth mode v Data Transfer Bluetooth Activation Press OK to activate or deactivate Bluetooth mode (= activated). In idle status, the icon on the handset shows that Bluetooth mode is activated: INT 1 V 25 Handset settings Registering Bluetooth devices The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Editing the list of known (trusted) devices Open list v Data Transfer Bluetooth Known Devices A corresponding icon appears next to each device name in the list displayed: Icon Meaning Bluetooth headset Bluetooth data device Please note: If you register a headset, any headset that is already registered will be overwritten. If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please deactivate this connection before you start the registration process to the Gigaset. v Data Transfer Bluetooth Search Headset / Search Data Device The search can take up to 30 seconds. Once the device has been found, its name will be shown on the display. Options Press the display key. Trust Device Select and press OK. ~ Enter the PIN for the Bluetooth device you want to register and press OK. The device is saved in the list of known devices.

Open list s (select entry) Options Press the display key. View Entry Select and press OK. Device name and address are displayed. Back with OK. Open list s (select entry) Options Press the display key.

Delete Entry Select and press OK. a Back: press and hold key. Viewing entries Deregistering a Bluetooth device Cancelling/repeating current search To cancel search: Cancel Press the display key. Repeat search if necessary: Options Select and press OK. Repeat Search Select and press OK.

Please note: If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device". Open list s (select entry) Options Press the display key. Rename Select and press OK. ~ Change name Save Press the display key a Back: Press and hold key. Changing the name of a Bluetooth device

26 Handset settings Rejecting/accepting an unregistered Bluetooth device If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding). u Reject Go Back Press the display key. u Accept ~ Enter the PIN for the Bluetooth device you want to accept and press OK. If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices: Yes Press the display key. No Press the display key: use temporarily. Setting your own area code In order to transfer phone numbers, it is essential that your area code (international and local area code) is saved on the phone. Some of these numbers are already preset. v Handset Area Codes Check that the (pre)set area code is correct. Change multiple line input: q Select/change input field. r Navigate in the input field. X If necessary, delete number: press the display key. ~ Enter number. Save Press the display key.

Example: Area Codes International code: 0000 0 Changing the Bluetooth name of the handset You can change the handset name used to identify it on the display of another Bluetooth device. v Data Transfer Bluetooth Own Device Name Change Press the display key ~ Change the name. Save Press the display key a Back: Press and hold key. Local area code: - [ 89 ] - 49 X Save Restoring the handset to the factory settings You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists (depending on base station) and the handset's registration to the base station as well as the content of My stuff are retained.

v Handset Reset Handset Yes Press the display key. a Press and hold (idle status). 27 Appendix Appendix Care Wipe the base station, charging cradle and handset with a damp cloth (do not use solvent) or an antistatic cloth. Never use a dry cloth. This can cause static.

The display is blank. 1. The handset is not turned on. Press and hold the end call key a. 2. The battery is flat. Charge or replace the batteries (page 6). The keys of a handset do not respond when pressed. The keypad lock is activated. Press and hold the hash key # (page 9).

"Base station x" flashes on the display. 1. The handset is outside the range of the base station. Move the handset closer to the base station. Contact with liquid ! If the handset has come into contact with liquid: 1. Switch off the handset and remove the battery pack immediately. 2. Allow the liquid to drain from the handset. 3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for at least 72 hours (not in a microwave, oven etc.

). 4. Do not switch on the handset again until it is completely dry. When it has fully dried out, you will normally be able to use it again. 2.

The handset has been deregistered. Register the handset (page 7). 3. The base station is not turned on. Check the base station mains adapter.

Base Search flashes in the display. The handset is set to Best Base and no base station is turned on or within range. Move the handset closer to the base station. Check the base station mains adapter. Handset does not ring. The ringer tone is deactivated. Activate the ringer tone (page 21). You have pressed the u (INT) key. The handset is "muted". Switch on the microphone again (page 12).

The other party cannot hear you. Questions and answers If you have any questions about using your handset, visit us at any time at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care). The table below contains a list of common problems and possible solutions. Registration or connection problems with a Bluetooth headset. You hear an error tone when keying an input (a descending tone sequence). Action has failed/invalid input. Repeat the operation. Watch the display and refer to the user guide if necessary.

28 Reset the Bluetooth headset (see the user guide for your handset). Delete registration data from the handset when deregistering the device (see page 26).

Repeat the registration process (see page 26). Appendix Service (Customer Care) You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at: [www.gigaset.com](http://www.gigaset.com).



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955548)

[GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)

<http://yourpdfguides.com/dref/3955548>

gigaset.

*com/customer care This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the Questions and Answers section of this user guide in the appendix. If the device needs to be repaired, please contact one of our Customer Care Centers: Abu Dhabi.*

.....

. .97 12 62 23 800 Argentina .....

.....

0800-888-9878 Australia .....

.....

.1300 665 366 Austria . 05 17 07 50 04 (0,065 Euro/Min.) Bahrain .....

.....

. .97 31 73 11 173 Belgium ..

.....

. . . . . 0 78 15 66 79 Bosnia Herzegovina .....

. . 033 276 649 Brazil ...

.....

.....

.....

. . Grande Capitais e Regies Metropolitanas: ...

.....

.....

. . . . . 4003 3020 ...

.....

.....

. . . . . R\$ 0,14 (US\$ 0,069) Demais localidades: .....

0800 888 3020 .....

.....

. . R\$ 0,20 (US\$ 0,098) Bulgaria. .

.....

. . . . . 02 873 94 88 Canada .....

.....

.....

. .866 247 8758 China . . . . . 0 21 400 670 6007 (RMB 0.11) Croatia ...

. . . . . 01 / 2456 555 (0,23 Kn) Czech Republic .....

.....

. . 233 032 727 Denmark ...

.....

. . . . . 35 25 86 00 Dubai .....

.....

.....

97 14 39 69 944 Egypt. ....

. . . . . 202 7623441 Finland .

.....

.....

. . . . . 09 23 11 34 25 France. . . 01 56 38 42 00 (Appel national) Germany . .

.....

. . .01805 333 222 (0,14 Euro/Min. aus dem Festnetz der Deutschen Telekom.

Fr Anrufe aus den Mobilfunknetzen knnen abweichende Preise gelten) Greece .....

. . 801 1000 500 (0,026 Euro) Hong Kong .....

. . . . . 2763 0203 ...

.....

.....

.....

. . 2389 7285 Hungary .....

. 06 14 71 24 44 (27 Ft) India . . . .  
 . . . . .  
 . . . . .Please refer to your . . . .  
 . . . . .  
 . . . . .  
 local warranty card Ireland . . . .  
 . . . . .  
 . 18 50 77 72 77 Israel . . . . .  
 . . . . .  
 . . . . . 1 700 700 727 Italy.  
 . . . . .  
 . . . . . 199.  
 15.11.15 Jordan . . . .  
 . . . . .  
 . . . 00962 6 5625460/1/2 Kuwait . . . . .  
 . . . . . 00965-2464993 Latvia . . . . .  
 . . . . .  
 . . . . .  
 . . . . . 7 50 11 18 Lebanon.  
 . . . . .  
 . . . 00961-1236110 Luxembourg . . . . .  
 . . . . .  
 . . . . 40 66 61 56 40 Malaysia . . . . .  
 . . . . .  
 . . . . .  
 603 77124304 Malta . . . . .  
 . . . . .  
 . . . . +353 21 4940 632 Mexico . .01800 999 4442738 (01800 999 Gigaset) Netherlands . . . . .  
 . . . . .0900-3333102 (0,25 Euro/min.) New Zealand . . . . .  
 . . . . .  
 . . 08 00 27 43 63 Norway . . . . .  
 . . . . .  
 . . . . . 22 70 84 00 Oman . . . . .  
 . . . . .  
 . . . . .  
 . 96 82 47 09 281 Poland . . . . .  
 . . . . . 0 801 140 160 Portugal . . . . .  
 . . . . .  
 . . . . .  
 (351) 808 781 223 Romania . . . . .  
 . . +4.021.529.7114. Russia . . . . .  
 . . . . .  
 . . . . .  
 . 8 (495) 228 1312 Serbia . . . . .  
 . . . . . 0800 222 111 Singapore . . . . .  
 . . . . .  
 . . . . .  
 . . . . . 6735 9100 Slovak Republic . . . . .  
 . . . . . 02 59 68 22 66 (4,428 sk) Slovenija . . . . .  
 . . . . .  
 . . . . .  
 . . . . 0 14 74 63 36 South Africa . . . . .  
 . . . . . 08 60 10 11 57 Spain . . . . .  
 . . . . .  
 . . . . .

..... 902 103935 Sweden . . . .

.....  
... 08 750 99 11 Switzerland . .

.....  
... 0848 212 000 (0,08 SFr./Min.) Taiwan . . . .

.....  
.. 02 266 24343 Thailand. . .

.....  
..... 02 722 1118 Turkey .

.....  
.....  
0216 459 98 59 Ukraine . . . .

..... +380-44-451-71-72 United Arab Emirates . . .

.. 0 43 66 03 86 United Kingdom . . . . . 0 84 53 67 08 12 USA .

.....  
.....  
..... 1-866 247-8758 . . . .

..... (toll free) Please have your record of purchase ready when calling. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. 29 Appendix Authorisation This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question. Country-specific requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/ CE. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs).

*Handset operating times/charging times* The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off.) Capacity (mAh) approx. 600 Standby time (hours) Talktime (hours) Operating time for 1.5 hrs calling per day (hours) Charging time, charging cradle (hours) Charging time, base station (hours) 130 7 70 800 180 10 90 1000 1200 220 12 115 265 14 135 6 9 11 13 Bluetooth Qualified Design Identity The Bluetooth QD ID for your Gigaset S68H is: B012741. 5 7 8 10 Specifications Recommended batteries Technology: Nickel-metal-hydride (NiMH) Size: AAA (Micro, HR03) Voltage: 1.2 V Capacity: 600/1200 mAh We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life: u Sanyo NiMH 800 u GP 850 mAh u Yuasa Technologies AAA 800 The device is supplied with two recommended batteries. 30 At the time of going to print, batteries up to 900 mAh were available and had been tested in the system.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: [www.gigaset.com/customercare](http://www.gigaset.com/customercare) Notes on the user guide Notes on the user guide This section explains the meaning of certain typographical conventions that are used in this user guide. a Press and hold the end call key until the handset returns to idle status. Press and hold (idle status). Example of a menu input The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes. Example of multiple line input In many situations you can change settings or enter data in several lines of a display. In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes. You will see the following display (example): Date/Time Date: [15.11.2007] Time: 11:11 With the handset in idle status, press v Display on the right of the control key (v) to open the main menu. Use the control keys q and r to select the icon. Settings appears in the display header. Press the OK display key to confirm the Settings function. The Settings submenu is displayed. Press on the bottom of control key q until the Display menu function is selected.

Press v or press the display key OK to confirm the selection. @@The second line is marked with [ ] to show it is active. Enter the date using the digit keys. @@Press v or press the display key OK to confirm the selection. @@@@ Enter the date using the digit keys. 31 Notes on the user guide The handset switches to idle status. Save the changes. Pressing the display key Save. Then press and hold the a key. Arabic 1x 2x 3x 4x 5x 6x 7x 8x 9x 10x 11x 12x Writing and editing text The following rules apply when writing a text: u Control the cursor with u v t s.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S68H user guide](http://yourpdfguides.com/dref/3955548)  
<http://yourpdfguides.com/dref/3955548>

u Characters are inserted on the left of the cursor. u Press the star key \* to show the table of special characters. u The first letter of the name of directory entries is automatically capitalised, followed by lower case letters. You can call up the table of special characters when writing an SMS using the \* key. Select the required character and insert it with Insert.

1) 2) 1 2 3 4 5 L M N O Q , ? 1) Space 2) Line break 2ab 4gh 5jk 6mn 7pq 8t 9wx 0 c 3de i l o rs uv yz f! When you press and hold a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field. Setting upper/lower case or digits Press the hash key # briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key # before entering the letter.

You can see in the display whether upper case, lower case or digits is selected. Writing an SMS/name (without predictive text) Press the relevant key several times to enter letters/characters. Standard characters 1x 2x 2) 3x 4x 5x 6x 7x 8x 9x 10x 2 3 4 5 L M N O Q 1) a d g j m p t w . b e h k n q u x , l c f i l o r v y ? 2 3 4 5 6 s 8 z ! 7 9 0 1) Space 2) Line break 32 Additional functions via the PC interface Writing SMS (with predictive text) EATONI predictive text helps you when you are writing SMS messages. Each key between Q and O is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel. SMS 268(1) Hello Peter, I cannot come today. W Additional functions via the PC interface You can connect the handset to your computer using Bluetooth (page 25).

The computer must be equipped with a suitable dongle. Your handset can communicate with the computer using the "Gigaset QuickSync" program (free download at [www.gigaset.com/gigasetS680](http://www.gigaset.com/gigasetS680)). You can u synchronise your handset's directory with Outlook, u download photos (.bmp) from the computer to the handset, u download pictures (.bmp) as screensaver from the computer to the handset. During the transfer of data between handset and PC, you will see on the display. During this time the keypad is disabled, and incoming calls will be ignored. 1 2 3 4 5 X hgi Abc Options 1 Remaining number of characters, in brackets: SMS part 1-n 2 SMS text 3 Selection line 4 EATONI is activated 5 Upper/lower case or digits If this letter is the one you want, confirm it by pressing the next key.

If it does not match the one you want, press the hash key # briefly until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field. If you press and hold the hash key # you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc". Accessories All accessories and batteries are available from your phone retailer. Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Activating/deactivating predictive text Precondition: You are writing an SMS. Options Press the display key. Predictive Text Select and press OK (= on). a Press the end call key briefly to return to the text field. Enter the text.

33 Index Index A Accessories . . . . .

. . . . .  
33 Acknowledge tones . . . . .

. . . . .  
. . . . . 23 Activating advisory tones . . . . .

. . . . .  
23 appointment . . . . .

. . . . .  
. . . . . 24 Bluetooth mode . . . . .

. . . . .  
. . . . . 25 call acceptance . . . . .

. . . . .  
. . . . . 20 handset . . . . .

. . . . .  
. . . . .  
. . . . .  
9 keypad lock . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 9 room monitor . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 17 Advisory tones . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 23 Alarm clock . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 23 Alert tone . . . . .

. . . . .  
. . . . .  
. . . . .  
. . . . . 21 Anniversary . . . . .

. . . . .  
. . . . .  
. . . . .  
15 deactivating . . . . .

.....	
... 16 missed .....	
.....	
.....	
.. 16, 25 saving in directory .....	
.....	
..... 15 Appointment .....	
.....	
.....	
.... 24 Appointment/anniversary display missed .....	
.....	
25 Appointments activating/deactivating .....	
.....	
24 deleting .....	
.....	
. 24 managing. ....	
.....	
.....	
. 24 Assigning a key .....	
.....	
... 18 Assigning numerical keys ..	
..... 18 Authorisation. .	
.....	
.....	
.. 30 Automatic call acceptance ...	
.....	
11, 20 last number redial. ....	
.... 16 changing device name .	
.....	
. 26, 27 deregistering devices .....	
.....	
.. 26 list of known devices .....	
... 26 registering devices ..	
.....	
..... 26 transferring directory (vCard) .....	
.....	
. 15 C Calendar. ....	
.....	
.....	
... 24 Call accepting .....	
.....	
.. 11 answering (Bluetooth) ...	
.....	
.. 11 ending .....	
.....	
... 11 external. .	
.....	
.....	
.... 11 internal .....	
.....	
.....	
..... 12 Call acceptance .....	
.....	
.. 20 Call duration ...	
.....	
.....	

. 11 Call-by-call . . . . .	. . . . .
. 12 numbers . . . . .	. . . . .
. 13 Call-by-call list key . . . . .	. . . . .
. . . . . 1 Calling, external . . . . .	. . . . .
. . 11 Care of the telephone . . . . .	. . . . .
. . . . 28 Changing destination number . . . . .	. . . . .
. 18 device name (Bluetooth) . . . . .	. . . . .
. 26, 27 display language . . . . .	. . . . .
. . . . . 19 earpiece volume . . . . .	. . . . .
. . . . . 20 handsfree volume . . . . .	. . . . .
. . 20 ringer tone . . . . .	. . . . .
20 Charge status display . . . . .	. . . . .
. . . 1 CLIP picture . . . . .	. . . . .
13, 22 Confirmation tone . . . . .	. . . . .
. . . . . 23 Control key . . . . .	. . . . .
. . . . 1, 9 Correcting incorrect entries . . . . .	. . . . .
. . 11 Customer Care . . . . .	. . . . .
. . . . 29 B Base station connecting and installing . . . . .	. . . . . 5 range . . . . .
. . . . .	. . . . .
. . . . .	. . . . .
. . 5 Battery charging . . . . .	. . . . .
. . . . .	. . . . .
. . . . 1 display . . . . .	. . . . .
. . . . .	. . . . .
. . . . . 1 fitting . . . . .	. . . . .
. . . . .	. . . . .
. . 6 icon . . . . .	. . . . .
. . . . .	. . . . .
. . . . . 1 recommended batteries . . . . .	. . . . .
. . . . . 30 tone . . . . .	. . . . .



..... 23 Beep, see Advisory tones Birthday, see Anniversary Bluetooth answering a call .

.....

.... 11 34 D Deactivating advisory tones .

.....

.....

23 appointment .....

.....

.. 24 appointment reminder ...

..... 24 call acceptance ...

.....

.. 20 handset ...

.....

.....

.... 9 keypad lock .....

.....

.....

... 9 room monitor .....

.....

..... 18 Delete key.

.....

.....

.....

. 9 Deleting characters .....

.....

.....

11 Deregistering devices (Bluetooth) ... 26 Destination number (room monitor) . 17 Index Dialling call-by-call list. ....

.....

. 14 directory ....

.....

.....

. 14 quick dial .....

.....

.....

. 18 with quick dial .....

.....

..... 14 Dialling pause entering ...

.....

.....

..... 1 Directory .

.....

.....

.....

. 12 copying number from text. .... 15 managing entries .

.....

.....

... 14 opening ..

.....

.....



**You're reading an excerpt. Click here to read official SIEMENS  
GIGASET S68H user guide**  
<http://yourpdfguides.com/dref/3955548>