



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET S79H. You'll find the answers to all your questions on the SIEMENS GIGASET S79H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET S79H**  
**User guide SIEMENS GIGASET S79H**  
**Operating instructions SIEMENS GIGASET S79H**  
**Instructions for use SIEMENS GIGASET S79H**  
**Instruction manual SIEMENS GIGASET S79H**



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)  
<http://yourpdfguides.com/dref/3955698>

**Manual abstract:**

© 2010 Gigaset Communications GmbH. All rights reserved. Subject to availability. [www.gigaset.com](http://www.gigaset.com) GIGASET. The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use. Your phone can do a whole lot more: u You can synchronise your Directories on your telephone, mobile phone and PC via the USB port using the Gigaset QuickSync software ( page 54). u You can save appointments ( page 35) and anniversaries, e.g.

, birthdays ( page 30), in your phone and it will remind you of them in advance. u You can designate important people as VIPs to identify important calls from the ringtone ( page 27). u You can assign a picture to entries in the Directory in future the picture will appear every time you receive a call from this number ( page 27). u If you do not want to take calls where the caller has withheld their number, just set your handset to only ring if Calling Line Identification has not been withheld ( page 43). u If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient ( page 43).

VIP calls are still connected. u You can assign important numbers to the number keys on your phone. The number is then dialled by simply pressing a key ( page 40). u Adapt your Gigaset to suit your handsfree requirements ( page 43). u View your personal pictures as a screensaver slide show ( page 41). u You can set the display to large font to increase readability in particularly important situations (e.g., the Directory and lists) ( page 41). u You can adapt the menu display to suit your individual requirements so that only the most important functions (standard mode) or all functions (expert mode ) are displayed ( page 23). Menu options that are only available in expert mode are marked with the icon. u Gigaset Green Home Be environmentally aware when using your phone. Details about our ECO DECT products can be found at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care). You can find additional information about your phone at [www.gigaset.com/gigaset79h](http://www.gigaset.com/gigaset79h).

Have fun using your new phone! 1 The handset at a glance The handset at a glance 17 i V 1 2 07:15 INT 1 14 Oct 3 Calls SMS 4 16 15 14 13 5 6 12 11 10 9 7 8 1 Display in idle status 2 Battery charge status ( page 14) 3 Side keys Set call ( page 42) or ringtone volume ( page 43) 4 Display keys ( page 18) 5 Message key ( page 32) Access to Call and Message Lists; Flashes: new message or new call 6 End call key, On/Off key End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status) 7 Hash key Keypad Lock on/off (press and hold in idle status); Toggles between upper/lower case and digits 8 Mute key ( page 26) Mute the microphone 9 Microphone 10 Recall key - Consultation call (flash) - Insert a dialling pause (press and hold) 11 Star key Ringtone on/off (press and hold); with an open connection: switch between pulse dialling/tone dialling (press briefly); text input: open table of special characters 12 Headset socket ( page 15) 13 Key 1 Dial Network Mailbox (press and hold) 14 Talk key Flashes: incoming call; Accept a call; open Redial List (press briefly); start dialling (press and hold); When writing an SMS: send SMS 15 Speaker key Switch between earpiece and speaker mode 16 Control key ( page 17) 17 Signal strength ( page 14) Green: Eco Mode ( page 35) activated Illustration of handset on a base with SMS functionality. 2 The handset at a glance Display symbols The following symbols are displayed dependent on the settings and the operating status of your telephone: Signal strength i ( page 35) or Eco Mode+ icon ( page 35) Ringtone switched off ( page 44) Keypad Lock switched on ( page 20) Batteries are charged ( page 14) Charge status of the batteries ( page 14) i V 08:00 Alarm switched on and wake-up time set ( page 37) Current time ( page 13) Current day and month ( page 13) Name of the handset 07:15 14 Oct INT 1 TM 10 09 08 SMS 02 Calls u on the Network Mailbox ( page 32) u TM in the Missed Calls List ( page 32) u in the SMS List (dependent on base, page 31) u in the Missed Alarms List ( page 33) Number of new messages: Signalling External call ( page 25) Internal call ( page 26) Alarm ( page 37) Anniversary ( page 36) Appointment ( page 36) 3 Contents Contents Gigaset S79H more than just a telephone . . . . .

.....  
.....

..... 1 The handset at a glance . .

.....  
.....  
.....

.. 2 Display symbols . . .

.....  
.....  
.....

... 3 Safety precautions . . . . .

.....  
.....  
.....

.. 6 First steps . . . . .

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
*. 15 What would you like to do next? . . . .*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
*. . . . . 16 Using the phone . . .*

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
*. . 17 Using the control key . . .*

.....

.....  
.....  
.....  
.....

.....  
.....  
*. . . Using the display keys . .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
*. . . . . Using the keys on the keypad . .*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
*. . . . . Using the side keys . . . .*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
*. . . . Correcting incorrect entries . . . . .*

.....  
.....  
.....  
.....

.....  
.....  
*. . . . Using the menus .*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
*Activating/deactivating the handset* .....

.....  
.....  
.....

..... *Activating/deactivating Keypad Lock* .....

.....  
.....  
.....  
.....

..... *Using this guide* ..

.....  
.....  
.....

.....  
.....  
.....  
.....

..... *17 18 18 18 18 19 20 20 21 Menu overview* ..

.....  
.....  
.....

.....  
.....  
.....  
.....

*23 Making calls* .....

.....  
.....  
.....

.....  
.....  
.....

..... *25 Making an external call* .....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *Ending a call* ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
... *Accepting a call* .....

.....  
.....  
.....

.....  
.....  
.....  
..... *Using speaker mode* .....

.....  
.....  
.....

.....  
.....  
.....  
.. *Switching to mute* .....

.....  
.....  
.....

.....  
.....  
.....  
. *Making internal calls* .....

.....  
.....  
.....

.....  
.....  
.....  
... *Using the Directory* .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)  
<http://yourpdfguides.com/dref/3955698>

.....

.....

.....

.....

*. Using the Redial List . . . .*

.....

.....

.....

*. . . Using the Incoming SMS Message List (dependent on base) . .*

.....

*. . Using the Call Lists . . . . .*

.....

.....

.....

*. Opening lists with the message key . . . . .*

.....

.....

*. . . Using the Missed Alarms List . .*

.....

.....

.....

*. . 25 25 26 26 26 27 31 31 31 32 33 Using the Directory and lists . . . . .*

.....

.....

*27 4 Contents Using the Network Mailbox . . . . .*

.....

.....

*. . . . 34 Configuring fast access for the Network Mailbox .*

.....

.....

*. . . . 34 Viewing the Network Mailbox message .*

.....

.....  
.....  
.....  
..... 34 ECO DECT ..

.....  
.....  
.....  
.....

.....  
.....  
.....  
..... 35 Setting an appointment (Calendar) .....

.....  
.....  
.....  
..... 35 Displaying missed appointments, anniversaries .....

.....  
.....  
.....  
..... 37 Setting the Alarm Clock ...

.....  
.....  
.....  
.....

.....  
..... 37 Using a handset as a Room Monitor .....

.....  
..... 38 Setting up the handset .....

.....  
.....  
.....  
..... 40 Quickly accessing numbers and functions .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
..... Changing the display language .....

.....  
.....  
.....  
.....  
..... 38 Setting the display .....

.....  
.....  
.....  
.....  
.....



.....  
*Setting keypad illumination* .....

.....

.....

.....

.....

.....

..... *Activating/deactivating Auto Answer* .....

.....

.....

.....

.....

.....

..... *Changing the speaker/earpiece volume* .....

.....

.....

.....

.....

..... *Setting a handsfree profile* .....

.....

.....

.....

.....

.....

.....

..... *Changing ringtones* .....

.....

.....

.....

.....

.....

..... *Using the Resource Directory* ..

.....

.....

.....

.....

.....

.....

..... *Activating/deactivating Advisory Tones* .....

.....

.....

.....

..... *Setting your own area code* .....

.....

.....

.....

.....

.....

.....

..... *Restoring the handset default settings* .....

.....

.....

.....  
.....  
Service (Customer Care) . . . . .  
.....  
.....  
.....  
.....  
.....  
.....

..... Questions and answers . . . . .  
.....  
.....  
.....  
.....  
.....

..... Authorisaor areas and up to 50 m inside buildings. The range is reduced when Eco Mode ( page 35) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Please note: u Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices. u Protect your Gigaset from moisture, dust, corrosive liquids and fumes. Connecting the charger 2 1 Connect the flat plug from the power adapter 1. Plug the power adapter into the plug socket 2. 2 To disconnect the plug from the charger, press the release button 1 and disconnect the plug 2. 1 8 First steps Setting up the handset for use The display and keypad are protected by plastic films. Remove the protective films! Inserting the batteries and closing the battery cover Warning Use only rechargeable batteries recommended by Gigaset Communications GmbH ( page 52), i.e.

, never use a conventional (non-rechargeable) battery, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.

First insert the battery Then press the cover b until it clicks into place. cover at the top a. To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the left-hand side of the casing, then pull the battery cover in an upward direction. 9 First steps Insert the plastic cover provided for the headset socket to ensure optimum sound in speaker mode. Attaching the belt clip The handset has notches on each side to attach the belt clip. To attach press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches. To remove press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing and pull the clip in an upward direction. Placing the handset in the charger Place the handset in the charger with its display facing forward. To charge the batteries, leave the handset in the charger. Please note Only place the handset in the charger that is intended for it. 10 First steps Registering the handset A Gigaset S79H handset can be registered on up to four bases. You must initiate handset registration on the handset (1) and on the base (2). When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display, e.g.

, INT 1. If not, repeat the procedure. 1) On the handset Register display screen. A message appears stating that the handset is searching for a base that is ready for registration. Press the key below Register on the Please note If the handset is already registered to at least one base, start the registration process as follows: v Registration Register Handset If the handset is already registered to four bases, select the required base. 2) On the base Within 60 sec. press and hold the registration/paging key on the base (approx. 3 sec.). Please note For instructions on deregistering the handsets, please consult the base user guide.

11 First steps Initial charging and discharging of the batteries The correct charge level can only be displayed if the batteries are first fully charged and discharged. Charge the handset for 8.5 hours in the charger. Then remove the handset 8.5 hrs from the charger and do not replace it until the batteries are fully discharged.

u After the first battery charge and discharge, you may place your handset in Please note the charger after every call. u Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them. u The batteries may warm up during charging. This is not dangerous. u After a while, the charge capacity of the batteries will decrease for technical reasons.

12 First steps Setting the date and time Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used. Press the key below Time on the dis- Calls Time play screen to open the input field. (If you have already set the time and date, open the input field via the menu, page 24.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>

) Date/Time Date: 31.01.2009 Time: 00:00 The Date/Time submenu is shown on the display. The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g., 4 Q2QQ O for 14/10/2009.

Save Back Press the right or left control key to change the input position and correct an entry. Press down on the control key to switch to the Time input field.

Date/Time Date: Enter the hours and minutes as four 14.10.2009 Time: 00:00 digit numbers via the keypad, e.g., QM 5 for 07:15 am. Change the input position with the control key if necessary. Back Save 13 First steps Back Save Press the key below Save on the display screen to confirm your entry.

Date/Time Saved The display shows Saved.

You will hear a confirmation tone and the handset will automatically return to idle status. Display in idle status Once the phone is registered and the time is set, the idle status is shown as in this example. Displays u Reception between the base and the handset: i V 07:15 Poor to good: i INT 1 14 Oct No reception: | flashes Green: Eco Mode ( page 35) u Charge status of the batteries: y y { (empty to full) y flashes red: batteries almost empty Calls SMS xy x{ x{ (charging) u INT 1 Internal name of the handset If Eco Mode+ ( page 35) is activated, the icon is displayed in the top left corner of the display. Your phone is now ready for use! 14 First steps Connecting the headset After removing the plastic cover, you can connect a headset to the left-hand side of your handset with the 2.5 mm jack connector.

See the relevant product page at [www.gigaset.com](http://www.gigaset.com) for information on recommended headsets. The headset volume corresponds to the settings for the headset volume ( page 42). After using the headset, replace the plastic cover to enable optimum sound in speaker mode.

Connecting the USB data cable To connect the handset to a PC, you can connect a standard USB data cable with a mini-B connector to the back of your handset ( page 54). Remove the belt clip (if attached) Remove the battery cover ( page 9). Connect the USB data cable to a USB socket 1. 1 ( page 10). Please note Please connect your handset directly to the PC; do not connect via a USB hub. 15 First steps What would you like to do next? Now you have successfully set up your Gigaset, you will certainly want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects. If you are unfamiliar with menu-driven devices such as other Gigaset telephones, read the section entitled "Using the phone" first ( page 17). Information on ..

. Setting the ringtone and volume Setting the earpiece volume Setting Eco Mode / Eco Mode+ Transferring Directory entries from existing Gigaset handsets to new handset(s) Connecting the phone to the PC ... is located here. g page 43 g page 42 g page 35 g page 54 g page 29 If you have any questions about using your phone, please read the tips on troubleshooting ( page 48) or contact our Customer Care team ( page 47). 16 Using the phone Using the phone Using the control key The side of the control key that you must press in the respective operating situation is marked in black below (top, bottom, right, left, centre), e.g., v for "press right on the control key" or w for "press the centre of the control key". The control key has a number of different functions: When the handset is in idle status s v u Open the Directory.

Open the main menu. Open the Handsets list. In the main menu t, s, v or u Navigate to the required function. In submenus and lists t/s Scroll up/down line by line. Use the control key to move the cursor up t, down s, right v or left u.

Press and hold v or u to move the cursor word by word. In input fields During an external call s u t Open the Directory. Initiate an internal consultation call. Adjust the loudspeaker volume for earpiece and speaker mode. Functions when pressing the middle of the control key Depending on the operating situation, the key has different functions.

u In idle status, the key opens the main menu. u In submenus, selection and input fields, the key takes on the function of the display keys OK, Yes, Save, Select or Change. Please note These instructions demonstrate the main menu being opened by pressing the right of the control key and functions being actuated by pressing the appropriate display key. However, if you prefer, you can use the control key as described above. 17 Using the phone Using the display keys The functions of the display keys change depending on the particular operating situation. Example: Back Save Current display key functions. Display keys Some important display keys: Options Open a menu for further functions. Confirm selection. OK Delete key: delete character by character/word by word from right to left. Back Go back one menu level or cancel operation.

Save Store entry. Open the Redial list. Using the keys on the keypad c / Q / \* etc. Press the matching key on the handset. ~ Enter digits or letters. / Using the side keys Press the keys on the right of the handset to set the volume for the handset, ringtone, speaker, alarm, signalling of appointments and the headset depending on the situation. Correcting incorrect entries You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then: u Delete the character to the left of the cursor with the display key (press and hold to delete the word) u Insert characters at the cursor position u Overwrite the highlighted (flashing) character, e.g., when entering time and date.

18 Using the phone Using the menus Your telephone's functions are accessed using a menu that has a number of levels. The menu display can be complete (expert mode ) or restricted (standard mode). Expert mode is the active default setting. Settings or functions that are only available in expert mode are marked in these instructions with the icon. Switching between standard mode/expert mode and the menu overview ( page 23).

Main menu (first menu level) main menu. The main menu functions are shown in the display with icons. The icon for the selected function is highlighted and the name of the associated function appears in the display header. To access a function, i.e.

, to open the corresponding submenu (next menu level): Use the control key p to select the required function and press the display key OK. Briefly press the display key Back or the end call key a to revert back to idle status. When the handset is in idle status, press the right control key v to open the Settings Back OK Submenus The functions in the submenus are displayed as lists (example on the right). To access a function: Scroll to the function with the control key q and press OK. Briefly press the display key Back or the end call key a to return to the previous menu level/cancel the operation.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>

Settings Date/Time Audio Settings Display Language Registration Back OK 19 Using the phone Reverting to idle status You can revert to idle status from anywhere in the menu as follows: Press and hold the end call key a. or: Do not press any key: after 2 minutes the display will automatically revert to idle status. Settings that have not been saved by selecting the display keys OK, Yes, Save or Change are lost. For an example of the display in idle status ( page 14). Activating/deactivating the handset a With the phone in idle status, press and hold the end call key (confirmation tone) to switch off the handset.

Press and hold the end call key again to switch the handset on. Please note When the handset is switched on, an animation showing the Gigaset logo is displayed for several seconds. Activating/deactivating Keypad Lock Keypad Lock prevents any inadvertent use of the phone. # Press and hold the hash key in idle status to activate or deactivate Keypad Lock. You will hear the confirmation tone. If Keypad Lock is activated, you will see a message when you press a key. Keypad Lock deactivates automatically when you receive a call. It is reactivated when the call is finished. Please note When Keypad Lock is active, you cannot even call emergency numbers. 20 Using the phone Using this guide The operating steps are shown in abbreviated form.

Example: The illustration: v Display Large Font ( = on) means: Press right on the control key v to open the main menu. Back Settings Press right, left, down and up on the control key p to navigate to the Settings submenu. OK Press the display key OK to confirm your selection. Settings Date/Time Audio Settings Display Language Registration Press down on the control key s until the Display menu option appears on the display. Back OK Press the display key OK to confirm your selection.

21 Using the phone Display Screensaver Large Font Colour Schemes Backlight Press down on the control key s until the Large Font menu option appears on the display. Back Change Press the display key Change to activate/deactivate the function. Display Screensaver Large Font Colour Schemes Backlight The change is effective immediately and does not need to be confirmed. Back Change Press the key below Back on the display screen to jump back to the previous menu level. or Press and hold the end call key a to return to idle status.

22 Menu overview Menu overview The menu display can be Complete (expert mode ) or Simplified (standard mode). Menu options that are only available in expert mode are marked with the icon. To change these settings: Select v Menu View Simplified (standard mode) or Complete (expert mode) Select (the active mode is marked with ) To open the main menu: press v when the phone is in idle mode. Setting standard mode or expert mode Select Services Screensavers Caller Pictures Sounds (Menu dependent on base) Resource Directory Additional Features Call Lists All Calls Outgoing Calls Accepted Calls Room Monitor Capacity page 44 page 44 page 44 page 45 page 38 page 31 page 31 page 31 page 31 (Menu dependent on base) (Menu dependent on base) SMS Missed Calls Voice Mail Organizer Calendar Alarm Clock Directory Missed Alarms page 35 page 37 page 37 page 27 23 Menu overview Settings Date/Time Audio Settings page 13 Handset Volume Handsfree Profiles Ringtones(Handset) Ringtones (Base) Advisory Tones page 42 page 43 page 45 page 43 (dependent on base) (dependent on base) Music on hold Display + Keypad Screensaver Large Font Colour Schemes Keypad Illumination Language Registration Display Backlight page 41 Register Handset De-reg. Handset Select Base page 41 page 41 page 41 page 41 page 11 page 11 page 42 page 46 page 23 page 23 (dependent on base) (dependent on base) (dependent on base) Telephony Auto Answer (further submenus dependent on base) System Handset Reset (further submenus dependent on base) Simplified Complete Menu View Eco Mode Eco Mode Eco Mode+ 24 Making calls Making calls If the backlight is deactivated ( page 41) it is switched on by pressing any key. In this case the pressed key has no other function. Accepting a call The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key c. Accept the call by: Pressing the talk key c. Pressing the speaker key d. Press the Accept display key.

If the handset is in the charger and the Auto Answer function is activated ( page 42), the handset automatically answers the call when you remove it from the charger. To deactivate the ringtone, press the Silence display key. You can accept the call as long as it is displayed on the screen. Making an external call External calls are calls using the public telephone network. ~c Enter the number and press the talk key. or: c~ Press and hold the talk key c and then enter the number. You can cancel the dialling operation with the end call key a. You are shown the duration of the call while the call is in progress. Please note Dialling with the Directory ( page 27), Call List ( page 31), Redial List ( page 31) and Automatic Redial ( page 31) saves you from repeatedly keying in phone numbers. Ending a call a Press the end call key.

25 Making calls Using speaker mode In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call. Switching to mute You can deactivate the microphone in your handset during an external call. h Press key to mute the handset. The display shows Microphone is off.

Press the key again to unmute the microphone. u If the telephone is muted, all keys Activating/deactivating speaker mode Activating while dialling ~d Enter the number and press the speaker key. Inform your caller before you use the speaker function so that they know a third party may be listening. Please note except the mute key h and the end-call key a will not work. u A connected headset will also be muted.

Switching between earpiece and speaker mode d Press the speaker key. Activate/deactivate speaker mode during a call. If you wish to place the handset in the charger during a call: Press and hold the speaker key d while placing the handset in the base/charger and for a further 2 seconds. For instructions on adjusting the speaker volume ( page 42). Making internal calls Internal calls to other handsets registered on the same base are free. Calling a specific handset u ~ or: u s c u or: u \* Initiate internal call. Enter the number of the handset. Initiate internal call. Select handset. Press the talk key.

Please note If you have a headset connected, you can switch between the headset and speaker mode.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)  
<http://yourpdfguides.com/dref/3955698>

Calling all handsets ("group call") Press and hold. Initiate internal call. Press the star key. or Call All Select c Press the talk key. All handsets are called. Ending a call a Press the end call key. 26 Using the Directory and lists Using the Directory and lists The options are: u Directory u Redial List u Incoming SMS Message List (dependent on base) u Call Lists u Missed Alarms List You can create a personalised Directory for your own handset. You can also send lists/ entries to other handsets ( page 29). Using the Directory You can save up to 500 entries in the Directory.

Please note To quickly access a number from the Directory, (Quick Dial), you can assign the number to a key ( page 40). Directory In the Directory, you can save: u Up to three numbers and associated first names and surnames u E-mail addresses u Anniversaries with reminder u VIP ringtone with VIP icon u Caller Pictures Open the Directory in idle status using the s key. s <New Entry> You can enter data in the following fields: First Name: / Surname: Enter first names and/or surnames. If you do not enter a name in either of the fields, the phone number is saved and displayed in place of a surname. (For instructions on entering text and special characters, page 53.

) Phone (Home): / Phone (Office): / Phone (Mobile): Enter a number in at least one of the fields. When scrolling through the Directory, the entries are highlighted by a prefixed symbol: / k/ l. E-mail: Enter the e-mail address. Anniversary: Select On or Off. With setting On: Enter Annivers. (Date) and Anniversary (time) and select reminder type: Anniversary (tone) ( page 30). Caller Picture: If required, select a picture to be displayed when this person calls (see Using the Resource Directory, page 44). Prerequisite: Calling Line Identification (CLIP). Caller Melody (VIP): Mark a Directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it. VIP calls are recognised by the ringtone. When scrolling through the Directory, VIP entries are highlighted by the icon. Prerequisite: Calling Line Identification (CLIP). Save Press the display key. Saving a number in the Directory Length of the entries 3 numbers: each max. 32 digits First name and surname: each max.

16 characters E-mail address: max. 64 characters 27 Using the Directory and lists Order of Directory entries Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the Directory, this is incorporated into the sort order instead of the surname. The sort order is as follows: 1. Space 2. Digits (09) 3. Letters (alphabetical) 4. Other characters To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the Directory.

Managing Directory entries s s (Select entry) View Press the display key. The entry is displayed. Options Press the display key. The following functions can be selected with q: Display Number To edit or add to a saved number, or to save it as a new entry, press after the number is displayed. Delete Entry Delete selected entry.

Copy Entry to Internal: Send a single entry to a handset ( page 29). vCard via SMS: Send a single entry in vCard format via SMS. Viewing entries Selecting a Directory entry s Open the Directory. You have the following options: u Use s to scroll through the entries until the required name is selected. u Enter the first letters of the name (max.

8), if necessary scroll to the entry with the s key. The Directory searches for the surname. If a surname has not been entered, the Directory searches for the first name. Editing entries s s (Select entry) View Edit Press the display keys one after the other. Carry out changes and save. Using other functions Selecting from the Directory s s (Select entry) c Press the talk key. (If several numbers are entered, select the required number by pressing r and press the talk key c again). The number is dialled. s s (Select entry) Options (Open menu) The following functions can be selected with q: Display Number Edit or add to a saved number and then dial with c or save as a new entry; to do so, press after the number is displayed. Edit Entry Edit selected entry.

Delete Entry Delete selected entry. 28 Using the Directory and lists Copy Entry to Internal: Send a single entry to a handset ( page 29). vCard via SMS: Send a single entry in vCard format via SMS. Delete All Delete all entries in the Directory. Copy All to Internal: Send the complete list to a handset ( page 29). Available Memory Display the number of entries that are still available in the Directory ( page 27). Please note: u Entries with identical numbers are not overwritten on the receiving handset. u The transfer is cancelled if the phone rings or if the memory of the receiving handset is full. u Pictures and sounds assigned to entries are not transferred. Copying the displayed number to the Directory You can copy numbers displayed in a list, e. g., the Call List or the Redial List, or in an SMS, to the Directory. A number is displayed: Options Copy to Directory Complete the entry ( page 27). Using Quick Dial keys key ( page 40). Press and hold the required Quick Dial Transferring the Directory to another handset Prerequisites: u The sending and receiving handsets Copying a number or e-mail address from the Directory In some operating situations, you can open the Directory to copy a number or e-mail address, for example.

Your handset need not be in idle status. Depending on the operating situation, open the Directory with s or . q Select entry ( page 28). must both be registered to the same base. u The other handset and the base can send and receive Directory entries.

s s (Select entry) Options (Open menu) Copy Entry / Copy All to Internal s Select the internal number of the receiving handset and press OK. You can transfer several individual entries one after the other by responding to the Entry copied - Copy next entry? prompt with Yes. A successful transfer is confirmed by a message and confirmation tone on the receiving handset. 29 Using the Directory and lists Storing an anniversary in the Directory For each number in the Directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: Anniversary: Off). s s (Select entry) View Edit Press the display keys one after the other. s Scroll to the Anniversary line. v Select On. You can enter data in the following fields: Annivers. (Date) Enter day/month/year in 8-digit format. Anniversary (time) Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (tone) Select the reminder type. Save Press the display key. Miller, Frank Off SMS You can: Write an SMS. Off Press the display key to acknowledge and end the reminder call.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>

During the reminder call, you can permanently change the volume by pressing the side keys (louder) or (quieter). When you are on the phone, a reminder call is indicated on the handset with a single advisory tone. Anniversaries that are indicated during a call and are not acknowledged are entered in the Missed Alarms List ( page 33). SMS Please note A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

s s (Select entry) View Edit Press the display keys one after the other. s Scroll to the Anniversary line. v Select Off. Save Press the display key. Deactivating anniversaries Scheduling a reminder call on an anniversary In idle status, a reminder call is indicated on the handset display and by the selected ringtone and volume that has been set for internal calls ( page 43).

30 Using the Directory and lists Using the Redial List The Redial List contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the Directory, the corresponding name is displayed. c s c Using the Incoming SMS Message List (dependent on base) All received SMS messages are saved in the Incoming Message List. Using manual redial Press the key briefly.

Select entry. Press the talk key again. The number is dialled. When a name is displayed, you can display the corresponding phone number by pressing the display key View. c s Using the Call Lists Prerequisite: Calling Line Identification (CLIP). Your telephone stores various types of calls: u Accepted Calls u Outgoing Calls u Missed Calls You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category. When in idle status, open the Call Lists by selecting the Calls display key or via the menu: v Managing entries in the Redial List Press the key briefly. Select entry. Options Open menu.

The following functions can be selected with q: Copy to Directory Copy an entry to the Directory (page 27). Automatic Redial The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The speaker key flashes and "open listening" is activated. Party answers: Press the talk key c. The function is terminated. Party does not answer: The call is terminated after approx. 30 seconds. The function is terminated after pressing any key or after ten unsuccessful attempts. Display Number (as in the Directory, page 28) Delete Entry (as in the Directory, page 28) Delete All (as in the Directory, page 29) 31 Using the Directory and lists Viewing a list entry New messages are displayed at the top. Example of list entries: All Calls TM Frank Opening lists with the message key Use the message key f to open the following list selection: u Answering Machine List (dependent on base) or Network Mailbox, if your network provider supports this function and fast access is set for the Network Mailbox ( page 34).

u Incoming SMS Message List (dependent on base) u Missed Calls List u Missed Alarms List ( page 33) An advisory tone sounds as soon as a new message arrives in a list. The f key flashes (it goes off when the key is pressed). In idle status, the display shows an icon for the new message: Icon New message... .. on the Network Mailbox ..

. in the Missed Calls List ... in the SMS List (dependent on base) ... in the Missed Alarms List 14.10.09, 15:40 s 089563795 14.

10.09, 15:32 TM ...0123727859362922 14.10.09, 15:07 View Options u List type (in header) u Status of entry Bold: new entry u Number or name of caller u Date and time of call (if set, page 13) u Type of entry: Accepted Calls ( > ) Missed Calls ( TM ) Outgoing Calls ( s ) Press the talk key c to call the selected caller back. Select the View display key to access additional information, including for example the number linked to the name Select the Options display key to select the following options: Copy to Directory Copy the number to the Directory. Delete Entry Delete selected entry. Delete All Delete all entries.

When you quit the Call Lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in bold. TM The number of new entries is displayed under the corresponding icon. oe 10 09 02 08 Please note If calls are saved in the Network Mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

32 Using the Directory and lists After pressing the message key f, you can see all lists containing messages and the Network Mailbox List. Lists containing new messages are at the top of the list and are marked in a bold font. Each entry is displayed with: u Number or name u Date and time Messages & Calls Calls: Missed Alarms (3) (1) The most recent entry is at the head of the list. Press the display key Delete, to delete the selected entry. If ten entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Back OK Select a list with q. To open, press OK. Using the Missed Alarms List Missed (unacknowledged) appointments from the Calendar ( page 35) and anniversaries ( page 30) are saved in the Missed Alarms List under the following circumstances: u You do not accept an appointment/anniversary. u The appointment/anniversary was signalled during a phone call. @@@@u Open the list by pressing the message key f ( page 32). 33 Using the Network Mailbox Using the Network Mailbox The Network Mailbox is your network provider's Answering Machine within the network. You cannot use the Network Mailbox unless you have requested it from your network provider. Calling the Network Mailbox d Press and hold. You are connected directly to the Network Mailbox. Press speaker key d if required.

You will hear the Network Mailbox announcement. for the Network Mailbox Configuring fast access Viewing the Network Mailbox message When a message is recorded, you receive a call from the Network Mailbox. If you have requested Calling Line Identification, the Network Mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the Network Mailbox number is saved in the Missed Call List and the message key flashes ( page 32). With fast access, you can dial the Network Mailbox directly. Fast access is set for the Network Mailbox. You only need to enter the number of the Network Mailbox. Configuring fast access for the Network Mailbox and entering the Network Mailbox number Bases with an Answering Machine: v Set Key 1 Network Mailbox Select Network Mailbox and press Select ( = selected). Bases without an Answering Machine: v Network Mailbox To continue: ~ Enter the number for the Network Mailbox.

Save Press the display key. The setting for fast access applies to all Gigaset S79H handsets. Please note Enter the Network Mailbox phone number into your Directory along with the designation "Network Mailbox"; the display and the Call List will then show this designation.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>

34 ECO DECT ECO DECT You are helping to protect the environment with your Gigaset handset. v Calendar Oct 2009 Mo Tu We Th 01 Fr 02 09 16 23 30 Sa 03 10 17 24 31 Su 04 11 18 25 05 12 19 26 06 13 20 27 07 14 21 28 08 15 22 29 Reducing energy consumption By using an energy-saving power supply, your telephone consumes less power.

Reducing radiation (dependent on base) The radiation can only be reduced if your base supports this function. The transmission power of your telephone is automatically reduced depending on the distance to the base. You can reduce the radiation of the handset and base even further by using Eco Mode or Eco Mode+. For further information, please refer to your base user guide. Back Options u The current day is selected (highlighted in white).

u Days on which appointments have Setting an appointment (Calendar) You can use your handset to remind yourself of up to 30 appointments. Anniversaries ( page 30) entered in the Directory are automatically recorded in the Calendar. Saving an appointment Prerequisite: The date and time have already been set ( page 13), already been saved are highlighted in white. r/q Select the required day in the graphical calendar. The selected day is highlighted in white. The current day is no longer highlighted. w Press the centre of the control key. u If appointments have already been entered, this will open the list of saved appointments on that day. Select <New Entry> OK to open the data input window.

u If no appointments have been entered, the data input window will open immediately to add the new appointment. You can enter data in the following fields: Activation: Select On or Off. Date: Enter day/month/year in 8-digit format. Time: Enter hours/minutes in 4-digit format. Text: Enter text (max. of 16 characters). The text appears as the appointment name in the list and is displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed. 35 Setting an appointment (Calendar) Signal: Select the reminder type. Save Press the display key.

Managing appointments v Calendar r/q Please note If you have already saved thirty appointments, you will need to delete an existing appointment before adding a new one. Editing individual appointments Select a day in the graphical Calendar and press the control key w. (Days on which appointments have already been saved are highlighted in white in the Calendar). q Select appointment for the day. You have the following options: View Press the display key and edit or confirm the entry.

or Options Open the menu for editing, deleting and activating/deactivating. Signalling appointments and anniversaries An appointment reminder is signalled in idle status for 60 seconds with the selected ringtone at the volume that has been set for internal calls ( page 43). During the reminder call, you can permanently change the volume by pressing the side keys (louder) or (quieter). The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time. Deleting all appointments for one day Options Delete all Appts.

@ @ @ @ @ @ u The appointment/anniversary was signalled during a phone call. @ @ @ @ The icon n and the number of new entries are shown in the display. The most recent entry is at the head of the list. @ @ Information about the appointment/anniversary is displayed. @ @ The date and time will also be given. Delete Delete appointment. SMS Write an SMS. @ @ Time: Enter the wake-up time in 4-digit format. How often: Select Daily or Monday-Friday. Volume: Set the volume (16).

Melody: Select melody. Save Press the display key. In idle status, the icon and wake-up time are displayed. @ @ The wake-up call sounds for 60 seconds. @ @ @ @ @ @ OFF Press the display key. The wakeup call is deactivated. or Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ The handset's speaker is muted. @ @ @ @ For example, test its sensitivity.

@ @ u When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charger. This ensures that the battery does not run down. u Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.

u The connection to which the Room Monitor is diverted must not be blocked by an activated Answering Machine. 38 Using a handset as a Room Monitor v Room Monitor You can enter data in the following fields: Activation: Select On to activate. Alarm to: Select Internal or External. External number: Select the number from the Directory (press display key ) or enter it manually. Internal number: Select display key Change .

Select handset or Call All to call all registered handsets OK. In idle status, the destination number or the internal destination number is displayed. Sensitivity: Select noise level sensitivity (Low or High). Press Save to save the settings. When the Room Monitor function is activated, the idle display appears as shown below: i V Activating the Room Monitor and entering the destination number Changing the set destination number v Room Monitor Enter and save number as described in "Activating the Room Monitor and entering the destination number" ( page 39). Press the end call key a to cancel the call when the Room Monitor is activated. In idle status, press the display key OFF to deactivate Room Monitor mode. Cancelling/deactivating the Room Monitor Deactivating the Room Monitor remotely Prerequisites: The phone must support tone dialling and the Room Monitor should be set for an external destination number. Accept the call from the Room Monitor and press keys 9 ;. The Room Monitor function will deactivate after the call ends.

There are no further Room Monitor calls. The other Room Monitor settings on the handset (e.g., no ringtone) will remain activated until you press the display key OFF on the handset. To reactivate the Room Monitor with the same phone number: Turn on the activation again and save with Save ( page 39). INT 1 Room Monitor 0891234567 OFF Options 07:15 22 Oct 39 Setting up the handset Setting up the handset Your handset is preconfigured, but you can change the settings to suit your individual requirements. Briefly press the digit key. or Quickly accessing numbers and functions You can assign a number from the Directory to each of the digit keys Q and 2 to O. The left and right display keys have a default function. You can change the assignment ( page 40). The number is then dialled or the function started by simply pressing a key. Press the display key with the number/ name (abbreviated if necessary) to select the number or press the display key Change to change the assignment or to delete the assignment. Changing display key assignments display key. The list of possible key assignments is opened.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>

The following can be selected: Room Monitor Assign menu for setting and activating the Room Monitor to a key ( page 38). Alarm Clock Assign menu for setting and activating the Alarm Clock to a key ( page 37). Calendar Display graphical Calendar ( page 35). Redial Display the Redial List. More Functions..

. More features are available: Call Lists Display Call Lists ( page 31). INT Internal calls ( page 26). SMS (dependent on base) Assign menu for SMS functions to a key. Withhold Number Withhold phone number identification for next call. Select an entry and press OK. Press and hold the left or right side of the Assigning digit keys Prerequisite: You have not yet assigned a number to the digit key. Press and hold the digit key or Press the digit key briefly and press the display key QuickDial. The Directory opens. Select an entry and press OK.

The entry is saved to the corresponding digit key. Please note If you delete or edit the entry in the Directory at a later date, this will not affect the assignment to the number key. Selecting numbers/changing an assignment Prerequisite: The digit key already has a number assigned to it. When the handset is in idle status Press and hold the digit key: The number is dialled immediately. 40 Setting up the handset Changing the display language You can view the display texts in different languages. v Language The current language is indicated by . s Choose language and press Select. If you accidentally choose a language you do not understand: v l s s Press keys in sequence and confirm by selecting OK. s Select the correct language and press the right display key. s Save Select screensaver and press OK.

Press the display key. Briefly press the end call key a to return to the idle display. Please note If the analogue clock has been set as the screensaver, the second hand is shown only when the handset is in the base. Setting Large Font You can increase the font size of print and symbols in call lists and in the directory to improve readability. Only one entry is shown at a time on the display instead of several entries and names are abbreviated if necessary. v Display + Keypad Large Font Change Press display key (= on). Setting the display Setting the screensaver/slide show When in idle state, a picture or a slide show (all the pictures are displayed one after the other) from the Screensaver folder of the Resource Directory ( page 44) or the time can be displayed as a screensaver. This will replace the idle state display. The screensaver is not displayed in certain situations, e.g. , during a call or if the handset is de-registered. If a screensaver is activated, the Screensaver menu option is marked with . v Display + Keypad Screensaver The current setting is displayed. You can enter data in the following fields: Activation: Select On (screensaver is displayed) or Off (no screensaver). Selection : Select screensaver or View Press the display key. The active screensaver is displayed. Setting the Colour Scheme You can set the display to be shown in various colour combinations. v Display + Keypad Colour Schemes Select Colour Scheme (1 to 5) and press OK. Setting the display Backlight Depending on whether or not the handset is in the charger, you can activate or deactivate the Backlight. If it is activated, the display is permanently dimmed.

If the backlight is deactivated it is switched on by pressing any key. In this case the pressed key has no other function. v Display + Keypad Display Backlight The current setting is displayed. 41 Setting up the handset You can enter data in the following fields: In Charger Select On or Off. Out of Charger Select On or Off. Changing the speaker/earpiece volume You can set the loudspeaker volume for speaker mode and the earpiece volume to five different levels. During a conversation via the earpiece or in speaker mode: / Press the side key to call up the Handset Volume menu. Change the volume by pressing (louder) or (quieter). or t Press the control key to call up the Handset Volume menu. Set the earpiece or speaker volume by pressing r. The setting will automatically be saved after approximately 3 seconds or press the display key Save. If t is assigned a different function: Options Open menu. Volume Select and press OK. Configure setting (see above). u The settings for the earpiece also Please note With the On setting, the standby time of the handset can be significantly reduced.

Save Press the display key. Setting keypad illumination The brightness of the keypad illumination can be set to one of five levels. v Display + Keypad Keypad Illumination The current setting is displayed. You can enter data in the following fields: Brightness: Select 1 (darkest) to 5 (brightest). Save Press the display key.

Auto Answer Activating/deactivating Please note If this function is activated, you can simply lift the handset out of the charger without having to press the talk key c when you receive a call. v Telephony Auto Answer Change Press display key (= on). apply to a connected headset. u You can also set the call volume using the menu ( page 24). 42 Setting up the handset Setting a handsfree profile In idle state, you can set various handsfree profiles to optimally adapt your phone to your environment. Profile 1 The optimum setting for most connections and set as default. Profile 2 Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult). Profile 3 Optimises two-way conversations, both callers can hear each other, even if they talk at the same time. Profile 4 Optimised for special connections.

If the default setting (profile 1) does not provide optimum sound, please give this a try. v Audio Settings Handsfree Profiles Select handsfree profile (1 to 4) and press Select. Setting volume/melodies In idle status: v Audio Settings Ringtones(Handset) Volume / Melodies r Setting volume/melodies for internal calls and anniversaries. s Scroll to the next line. r Setting volumes/melodies for external calls. Save Press the display key to save the setting. While the phone is ringing, you can permanently change the volume by pressing the side keys (louder) or (quieter). You can specify a time period when you do not want the telephone to ring, e.g., during the night.

v Audio Settings Ringtones(Handset) Time Control Time Control: Select On or Off. If the Time Control is activated: Suspend ring. from: Enter the start of the period in 4-digit format. Suspend ring. until: Enter the end of the period in 4-digit format.

Additionally for external calls: Changing ringtones u Volume: You can choose between five volumes (15; e.g., volume 3 = S) and the "crescendo" ringtone (6; volume increases with each ring = ). u Ringtones: You can select a ringtone from a list of pre-loaded melodies.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>



You can select various ringtones, melodies or any sound from the Resource Directory ( page 44).

You can set different ringtones for the following functions: u Int. Calls u Extern. Calls Please note During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the Directory (VIP). Activating/deactivating the ringtone for anonymous calls You can set your phone not to ring for calls where Calling Line Identification has been withheld. The call will only be signalled on the display. 43 Setting up the handset In idle status: v Audio Settings Ringtones(Handset) Anon. Calls Silent Press Change to activate or deactivate the function (= on). Using the Resource Directory The Resource Directory on the handset manages sounds, which you can use as ringtones, and pictures (Caller Pictures and Screensavers). Prerequisite: Calling Line Identification (CLIP). The Resource Directory can manage the following media types: Type Sound Ringtones Monophonic Polyphonic Imported sounds Picture Caller Picture Screensaver Internal Internal Internal WMA, MP3, WAV BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels Format Activating/deactivating the ringtone You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call.

The ringtone cannot be re-activated while an external call is in progress. Deactivating the ringtone permanently \* Press and hold the star key. icon appears in the display. The Reactivating the ringtone \* Press and hold the star key. Deactivating the ringtone for the current call Silence Press the display key. Various mono and polyphonic sounds and pictures are preconfigured on your handset. You can listen to the available sounds and view the pictures. You can download pictures and sounds from a PC ( page 54). If there is not enough memory available, you must first delete one or more pictures or sounds.

Activating/deactivating the alert tone Instead of a ringtone, you can activate an alert tone.

When you receive a call, you will hear a short tone ("Beep") instead of the ringtone. \* Press and hold the star key and within 3 seconds: Beep Press the display key. A call will now be signalled by one short alert tone. appears in the display. v Screensavers / Caller Pictures / Sounds (select entry) Playing back sounds/viewing Caller Pictures Pictures: Press the display key.

The selected picture is displayed. Switch between pictures using the q key. If you have saved a picture in an invalid file format, you will see an error message after selecting the entry. View Sounds: The selected sound is played back immediately. Switch between the sounds using the q key.

44 You can set the volume during playback. Options Open menu. Volume Select and press OK. r Set volume. Save Press the display key. Advisory Tones Activating/deactivating Setting up the handset Deleting/renaming a picture/ sound You have selected an entry. Options Open menu. If a picture/sound cannot be deleted (), these options are not available. You can select the following functions: Delete Entry The selected entry is deleted. Rename Change the name (max.

16 characters) and press Save. The entry is stored with the new name. Checking the memory You can check how much memory is available for Screensavers and Caller Pictures. v Capacity Your handset uses Advisory Tones to tell you about different activities and statuses. The following Advisory Tones can be activated/ deactivated independently of each other: u Key click: every key press is confirmed. u Acknowledge tones: Confirmation tone (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the Call List Error tone (descending tone sequence): when you make an incorrect entry Menu end tone: when scrolling to the end of a menu u Battery tone: the battery requires charging. In idle status: v Audio Settings Advisory Tones You can enter data in the following fields: Key Tones: Select On or Off. Confirmation: Select On or Off. Battery: Select On or Off. Save Press the display key.

45 Setting up the handset code Setting your own area default settings Restoring the handset To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone. Some of these numbers are already preset. v Telephony Area Codes Check that the (pre)set area code is correct.

You can enter data in the following fields: q Select/change input field. r Navigate in the input field. If necessary, delete number: press the display key. ~ Save You can reset individual settings and changes that you have made. The following settings are not affected by a reset: u Registration to the base u Date and time u Entries in the Calendar u Entries in the Directory, the Call Lists, the SMS Lists and the content of the Resource Directory v System Handset Reset Yes Press the display key.

Enter number. Press the display key. Area Codes Example: International code: 00 - 44 Local area code: 0-[ ] Save 46 Service (Customer Care) You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal. Please register your phone right after purchase. This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email. Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation. United Kingdom [www.gigaset.com/uk/service](http://www.gigaset.com/uk/service)

Service Hotline: 0845 367 0812 (local call cost charge) Ireland [www.gigaset.com/ie/service](http://www.gigaset.com/ie/service) Service Hotline: 1850 777 277 (6.6561 Ct./Call)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/ countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. 47 Questions and answers If you have any questions about the use of your phone, you can contact us 24/7 at [www.gigaset.com/customer-care](http://www.gigaset.com/customer-care). The table below contains a list of common problems and possible solutions. The display is blank.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3955698)

[GIGASET S79H user guide](http://yourpdfguides.com/dref/3955698)

<http://yourpdfguides.com/dref/3955698>