



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET S820. You'll find the answers to all your questions on the SIEMENS GIGASET S820 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual SIEMENS GIGASET S820**  
**User guide SIEMENS GIGASET S820**  
**Operating instructions SIEMENS GIGASET S820**  
**Instructions for use SIEMENS GIGASET S820**  
**Instruction manual SIEMENS GIGASET S820**



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S820 user guide](http://yourpdfguides.com/dref/4574913)  
<http://yourpdfguides.com/dref/4574913>

**Manual abstract:**

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 1 Safety precautions . . . . .*

.....  
.....  
.....  
.....  
.....  
.....

*. . . . 4 Getting started .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*5 Display icons . . . . .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. . 15 Setting options . . .*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. . 17 Using the telephone . . . . .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.. 20 Making calls ...

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

23 Contacts (address book) .....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 27 SMS (text messages) .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

. 28 Calendar .....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 29 Alarm ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

. . . . .  
.....  
.. 30 Baby phone .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

.....  
..... @@ .....

..... 31 Bluetooth devices .....

.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 32 Customer Service & Assistance ...

.....  
.....  
.....  
.....  
.....  
.....

..... 33 Index ...

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 36 Template CES 131x195 Icol, Version 1, 12.03.2012 el en 3 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / security.fm / 9/4/12 Safety precautions Safety precautions Warning Read the safety precautions and the user guide before use. Explain their content and the potential hazards associated with using the device to your children. Use only the charger cradle indicated on the device. Use only rechargeable batteries that correspond to the specification (see "Technical Data"). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Rechargeable batteries, which are noticeably damaged, must be replaced. Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.

If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical Data"). Do not hold the rear of the handset

to your ear when it is ringing or when speaker mode is activated.

Otherwise you risk serious and permanent damage to your hearing. Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier. The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms. Do not use the devices in environments with a potential explosion hazard (e.g., paint shops).

If you give your Gigaset to a third party, make sure you also give them the user guide. @@It is also not possible to transmit emergency calls. @@@@In buildings this is up to 50 m, outdoors up to 300 m. The range is reduced when ECO DECT is activated. The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out. Please note: Template CES 131x195 1col, Version 1, 12.03.2012 u Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices u Protect your Gigaset from moisture, dust, corrosive liquids and fumes Wall mounting the base (optional) Approx. 2 mm 50 mm el en 5 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / starting.

fm / 9/4/12 Getting started Connecting the base with the phone network and the mains power supply 3 2 1 4 2 4 2 4 2 4 Please note: Plug the telephone cable into the connection socket 1 on the back of the base until it clicks into place, then push the cable into the clips Plug the charger cradle cable into the socket 2 on the back of the base and press firmly to ensure the power supply. It is important to twist the angle plug underneath the cable clips to ensure a firm fit First, connect the charger cradle 3 Then connect the phone jack 4 u The charger cradle must always be connected, as the phone will not operate without a power supply u Use only the charger cradle and phone cord supplied. Pin connections on telephone cables can vary Connecting the charger (if included) 4 2 3 2 4 Connect the flat plug to the charger cradle 1 Plug the charger cradle into the plug socket 2 1 Template CES 131x195 1col, Version 1, 12.03.2012 3 If you have to remove the plug from the charger again: Disconnect the charger cradle from the mains power supply 3 Press the release button 3 and disconnect the plug 4 6 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / starting.

fm / 9/4/12 Getting started Setting up the handset for use The handset's display and keys are covered with a protective film. Please remove the protective film. Caution Please do not use any touchscreen styli to operate the handset. Do not use any protective sleeves/films from other manufacturers, as they may restrict the operation of your handset. Inserting the rubber seal for the USB plug socket Open the battery cover and insert the rubber seal into the groove.

Inserting the battery and closing the battery cover Caution Use only rechargeable batteries recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type. 3 Insert the batteries with the polarity in the correct direction The polarity is indicated in the battery compartment. Template CES 131x195 1col, Version 1, 12.03.2012 3 3 Insert the battery cover from above Then press the cover until it clicks into place To reopen the battery cover to replace the battery: 3 Insert your fingernail into the notch on the top of the cover and push downwards el en 7 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / starting.fm / 9/4/12 Getting started Attaching the belt clip The handset has notches on each side for attaching the belt clip. u To attach – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches u To remove – press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing, and pull the clip in an upward direction Charging the battery The battery is supplied with a partial charge.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/4574913)

[GIGASET S820 user guide](http://yourpdfguides.com/dref/4574913)

<http://yourpdfguides.com/dref/4574913>

The batteries are fully charged when the lightning icon on the display goes out.

9.5 hr 14.5 hr or ☒ Place the handset into the base for 9.5 hours or into the charger for 14.5 hours Template CES 131x195 1col, Version 1, 12.03.2012 u The handset may only be placed in the designated base or charger u The battery is also charged if the handset is connected via a USB connection to a PC with a power supply of 500 mA u The battery may heat up during charging. This is not dangerous u After a time, the charge capacity of the battery will decrease for technical reasons Please note Registering the handset Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "Handset not registered to any base"), please register it manually. You must initiate registration on the base and on the handset:

1) On the base: press and hold the registration/paging key (at least 3 seconds) 2) On the handset; κά (el) Norsk Suomi Čeština L Ø ± ± ± ☒ The current language setting is indicated by ´.

Touch the P icon next to the language you want to set If your language is not displayed, the list may be "longer" than the display. You must then scroll through the list. To do this, put a finger on the display and move it slowly upwards. ☒ Touch the ´ icon. The setting is saved automatically You return to the Welcome page Welcome Date Setting the country The country in which you are going to use the phone and for which it is authorised must be indicated under Country.

01.04.2012 Display Language Template CES 131x195 1col, Version 1, 12.03.2012 Ελληνικά (el) Country Greece Area (Dial Code) (not configured) Skip Settings Save Settings If the setting is not correct: ☒ Touch the Country field ☒ Set the country as described above Please note If you have selected Other Country instead of a country, the Welcome page will also show the Country (Dial Code) entry.

☒ Press Country (Dial Code) and enter the International Prefix and International Area Code for the international country code as described below for the local area code el en 11 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / starting.fm / 9/4/12 Getting started Entering the local area code Area (Dial Code) (not configured) Skip Settings Save Settings ☒ Touch the Area (Dial Code) field Area (Dial Code) Local Prefix 0 Local Area Code 210 ç L Welcome Date %o The Local Prefix is the country-specific area code that precedes the Local Area Code when the country code is not dialled. In Greece, the "0" Local Area Code is then e.g., 210 for Athene. ☒ Enter the Local Prefix of your country (max. 4 characters; "0" in the example). The field is already populated for the selected country ☒ Briefly touch the second input field and enter the Local Area Code (maximum 8 characters, "210" in the example) You can correct incorrect entries using \$ ☒ Touch è after entering the numbers to save the entry 0 than 10 minutes talk time) Battery charging (current charge status): xy x{ 0%–10% 11%–33% 34%–66% 67%–100% xy x{ Ð ì Ò Ñ 76%–100% 51%–75% 26%–50% 1%–25% 1 1 ò Red: no connection to the base No Radiation activated: White if Maximum Range is on; Green if Maximum Range is off Bluetooth activated or Bluetooth headset/data device connected Ring tone deactivated "Beep" ring tone activated USB connection active } White if Maximum Range is on Green if Maximum Range is off { { y y y Template CES 131x195 1col, Version 1, 12.03.2012 ò ò ó Þ € el en 15 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / symbols.

fm / 9/4/12 Display icons Signalling display icons § Ø w Ú Establishing a connection (outgoing call) < Ø Ù Ú Connection established b Ø ð Ú Ø á Ú Connection cannot be established/connection terminated Birthday reminder call Internal/external call Alarm call Reminder call for appointment Other display icons + %o Information , (Security) prompt Warning Ž À Please wait ... Action complete (green) Action failed (red) Template CES 131x195 1col, Version 1, 12.03.2012 16 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / menutree.fm / 9/4/12 Setting options Setting options Open the Settings menu page: ☒ Briefly press menu key v when the handset is in idle mode ☒ Touch Settings in the header Please note Not all of the functions described in this user guide are available in all countries. Date + Time á Time Time Format Date Date Order Ringtones (Handset) 12 hrs / 24 hrs Day Month Year / Month Day Year Volume Crescendo Internal Calls External Calls Volume Crescendo Sound Confirmation Key Click Battery Warning Audio Settings ï Reminder Signal Advisory Tones Music on Hold Display i Screensaver Activation Selection In Charger Out of Charger Timeout Backlight Template CES 131x195 1col, Version 1, 12.03.2012 Language + Location Æ Display Language AM Phrase Language Country Area (Dial Code) This Handset Register/De-register Registered Handsets Connect to Base Î HS + Base Base 1 : Base 4 Best Base el en 17 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / menutree.

fm / 9/4/12 Setting options Ĩ System ECO DECT Repeater Mode Security Resets Max. Range No Radiation System PIN Handset Reset Base Reset Appointments Calls Messages Contacts Clean-up List Select Services ã □ Call Waiting Time Control Activation Mode VIP Callers Protection Mode Blocked Numbers Protection Mode Call Protection Anonymous Calls Black List í Quick Dial Key 2 : Key 9 Auto Answer Listening In Access Code Telephony ª Code to access line Use Pulse Tone 80 ms/ ... / 800 ms Dialling Mode Recall Template CES 131x195 1col, Version 1, 12.

03.2012 18 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / menutree.fm / 9/4/12 Setting options È SMS SMS Service Centres Active Send Centre Service Centr. 1 : Service Centr. 4 Bluetooth » Activation Search for Devices Known Devices Own Device Access Number Activate/Deactivate n Network Mailbox (dependent on your network provider) Please note This quick user guide only describes a small proportion of your telephone's functions. You will find an extensive description of all functions contained in the menu overview in the detailed user guide for your Gigaset S820 both on the enclosed CD and on the Internet at www.gigaset.com. Template CES 131x195 1col, Version 1, 12.03.2012 el en 19 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telephony.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET S820 user guide](#)

<http://yourpdfguides.com/dref/4574913>

fm / 9/4/12 Using the telephone Using the telephone Switching the handset on/off Press and hold the end call key a in idle status to switch the handset off. You will hear a melody Press and hold the end call key a again to switch the handset on again Returning to idle status Briefly press the end call key a Or: If you do not press any key and do not touch the display, the display automatically reverts to idle status after approximately three minutes Keypad and display lock Activating/deactivating the keypad and display lock Press and hold the # key to activate or deactivate the lock If a call is signalled on the handset, the keypad/display lock automatically deactivates and you can accept the call. The lock then reactivates automatically. This shows the size and position of the visible section.

The current setting appears in orange. Touch the icon to return to the previous display page Entering numbers and text Use the keypad to enter characters. When numerous number and/or text fields are displayed (e.g., First Name and Surname in a contacts entry), the first field is automatically activated. You need to touch any subsequent fields to activate them. A field is activated when the flashing cursor appears in the field. Briefly touch \$ to delete the character in front of the cursor. Touch and hold \$ to delete the word in front of the cursor. Template CES 131x195 1col, Version 1, 12.03.2012 First Name Edit James Surname Correcting incorrect entries Abc 123 ; - @ % L 22 el en Gigaset S820 QUG / Greek en /

A31008-M2404-T101-8U43 / telefony.fm / 9/4/12 Making calls u Each key between 0 and 9 is assigned several letters and characters. The selected character is highlighted. The display shows all the available information.

Menu key v T One Touch Call Touch f. The current setting appears on the display e. The setting is saved automatically after approximately 2 seconds and the display returns to the previous screen. Changing the earpiece, handsfree and headset volume Activating/deactivating the microphone (muting) If you turn the microphone off during a call, your caller can no longer hear you. Touch - to switch the microphone on and off Using provider-specific functions (network services) You have to request these services from your network provider (there may be additional charges).

Network services fall into two distinct groups: u Network services that are activated outside of a call for the next call or all subsequent calls (e.g., "Divert calls to a different phone connection", "Withhold number (no calling line identification)"). You can easily activate/deactivate these network services via the Select Services sub-menu on the Settings menu page u Network services that are activated during an external call, e.g., "Consultation call", "Swap between two callers", "Set up conference calls". These services are provided to you during an external call in the options bar (e.g., Consultation, Conference) For additional information on the network services, see the user guide on the enclosed CD and on the Internet at www.gigaset.

com. Template CES 131x195 1col, Version 1, 12.03.2012 26 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.fm / 9/4/12 Contacts (address book) Contacts (address book) Managing contacts entries Opening the contacts Menu key v α Contacts or during a call depending on the situation α or Options Contacts Creating a new entry Open the contacts If no entries have been created New Entry, otherwise Options New Entry Enter the components of each entry via the individual fields (name, number, eMail, ring tone, birthday, picture) New Entry Add Name Add Number Add eMail Add Ringtone Where necessary, scroll down to see additional components. Input in the eMail field: pressing the 0 key multiple times allows you to enter frequently used characters: @ . - 0 \_ To create an entry, you must enter at least one number. If available, confirm each entry with è. Touch ' to exit the menu without saving (exceptions: ring tone and caller picture). L Save The first number in each entry is automatically highlighted in green ( ý ).

This number is used when you open the contacts entry and press the talk key. Touch Save Viewing an entry (detail view) Template CES 131x195 1col, Version 1, 12.03.2012 Open contacts Touch the desired entry Touch N in the detail view u Change/delete first name, surname, number or eMail address: touch the entry Where necessary, touch the relevant field Delete data by touching ç Where necessary, enter new data Touch è to confirm. Touch ' to exit the menu without saving u Delete a caller picture or ring tone assignment: touch the relevant entry No Picture / No Ringtone u Delete a birthday: touch the Birthday field Deleting an entry Editing entries In the detail view: Options Delete Touch Yes to confirm Delete all contacts entries: Menu key v menu page Settings Ê System Clean-up List Contacts Delete all contact entries Touch Yes to confirm el en 27 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.

fm / 9/4/12 SMS (text messages) Transferring an entry/contacts to another handset Prerequisite: u The sending and receiving handsets must both be registered to the same base u The other handset and the base can send and receive contacts entries Transferring individual entries Menu key v α Contacts Touch the required entry Options Copy Internal Handset Select the recipient handset Transferring the entire contacts Menu key v α Contacts Options Copy List Internal Handset Select the recipient handset Adding a displayed number to the contacts Touch the desired number Touch ↵ New Entry: the number is copied as the first number of the entry with number type Home Select entry and - Add number: touch Add Or: Or: - Overwrite number: select corresponding number Touch Yes SMS (text messages) Your device is supplied ready for you to send text messages immediately. Prerequisites: u Calling Line Identification is enabled u Your network provider supports SMS within the fixed line network u To receive SMS messages, you must be registered with your network provider.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET S820 user guide](http://yourpdfguides.com/dref/4574913)  
<http://yourpdfguides.com/dref/4574913>

This usually occurs automatically when you send your first text message Writing and sending text messages Template CES 131x195 1col, Version 1, 12.03.2012 Your system can send a linked SMS (made from up to four individual SMS messages) as one message.

The messages are linked automatically. Menu key v - Write SMS Touch the To field Enter recipient number with prefix Touch è to confirm Touch the Message field Enter SMS text Touch è to confirm Send SMS: touch Send 28 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.fm / 9/4/12 Calendar Reading and managing SMS messages Open the detail view: touch the SMS entry. You have the following options: Press c: call the sender of the SMS p : delete SMS Options Reply: write and send an SMS to the sender Edit: change the SMS text and send it to a recipient Save Number: store the number in the contacts Touch the sender or highlighted number in the message text: Call the number or save in the contacts. The number cannot be divided by a space. If it contains a special character (+ - / etc.), it is regarded as two numbers. Deleting the entire contents of the SMS inbox or drafts list: Menu key v menu page Settings Ê System Clean-up List Messages Delete all received SMS Or: Delete all SMS drafts Touch Yes to confirm For information on setting SMS centres, see the user guide on the enclosed CD and on the Internet at [www.gigaset.com](http://www.gigaset.com).

Calendar You can remind yourself of up to 30 appointments. Birthdays in the contacts are transferred to the calendar. The current date is highlighted in white in the calendar. Days with appointments are marked with a coloured bar. When you select a day, it is briefly highlighted in colour. Template CES 131x195 1col, Version 1, 12.03.2012 Saving appointments to the calendar Prerequisite: the date/time has already been set (ç page 9). Menu key v J Calendar Set the month using f / g Touch the desired day New Entry The Text, Time, Reminder (you can set a reminder for up to one week in advance of the appointment) and Sound Signal are logged for each appointment. Touch Save Setting the tones and volumes of the reminder signal Menu key v menu page Settings i Audio Settings Reminder Signal Set the volume using Ô / Ó or set increasing volume using the switch next to Crescendo Sound Select the ring tone Touch ' to go back el en 29 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.

fm / 9/4/12 Alarm Showing/deleting stored appointments Menu key v J Calendar Touch the desired day to display the appointments list Touch the desired appointment Delete appointment p or select, edit and save the entry. Delete all missed appointments: Menu key v menu page Settings Ê System Clean-up List Appointments Delete all past appointments Touch Yes to confirm Alarm Menu key v Ü Alarm on/off Touch N to change the settings for the alarm: - Time Set the hour and minutes for the wake-up time (time setting ç page 10) - Active Days Set the days when you want the alarm to ring - Sound Select a ring tone for the wake-up call Touch Save and confirm the security prompt A wake-up call is signalled in the display and with the selected ring tone for a maximum of 60 seconds. During a call, the wake-up call is only signalled by a short tone. @@The wake-up call is deactivated and then repeated after 5 minutes. @@@@If the intercom is activated, you can respond to the baby phone.

@@The display backlight is reduced to 50%. @@For example, test its sensitivity. @@@@This guarantees optimised wireless management. To further reduce the transmission power: Shorten the range – reduces the transmission power by up to 80% Open the status page Max. Range off Completely deactivate the DECT-wireless module in idle status (Eco mode+) Open the status page No Radiation on Template CES 131x195 1col, Version 1, 12.

03.2012 el en 31 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.fm / 9/4/12 Bluetooth devices Bluetooth devices Up to 5 data devices (PC, PDA, mobile phone) and one Bluetooth headset can be registered on the handset. The distance to the Bluetooth device should not exceed 10 m. Activating/deactivating Bluetooth mode Menu key v menu page Settings 3 Bluetooth Activation on/off You can activate/deactivate Bluetooth mode using the status page (ç enclosed poster) or via Activation Search for Devices Known Devices Name Bluetooth on Searching for and pairing Bluetooth devices Starting the search Start the search via Search for Devices in the Bluetooth sub-menu Pairing the device – adding the device to the known devices list James' Borneo L Select the device in the Devices Found list TrustDevice If necessary, enter the PIN of the device you want to pair and touch è to confirm u PIN for a data device: enter any PIN on the handset and then also on the data device. PIN for a headset: In general, 0000 is preset. Therefore, you only need to enter the PIN in exceptional cases Editing the list of paired (trusted) devices A ô next to the device name in the list indicates a headset and = indicates a data device. Open the Known Devices list Select device View device information Touch ü to delete the device Touch Yes to confirm Or: Touch the Name field Change the name and touch è to confirm Rejecting/accepting an unpaired Bluetooth device Template CES 131x195 1col, Version 1, 12.03.2012 If an unknown Bluetooth device tries to establish a connection, you will be asked to enter the device's PIN (bonding).

u Reject: touch ' or a u Accept: enter device PIN Touch è to confirm Yes: add to the Known Devices list or No: use the device temporarily Changing the handset's Bluetooth name Menu key v Menu page Settings 3 Bluetooth Own Device Touch the name Touch ç to delete name Enter new name Touch è to confirm 32 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.



[You're reading an excerpt. Click here to read official SIEMENS](#)

[GIGASET S820 user guide](#)

<http://yourpdfguides.com/dref/4574913>



fm / 9/4/12 Customer Service & Assistance Customer Service & Assistance Step by step towards your solution with Gigaset Customer Care  
www.gigaset.com/service After purchasing your Gigaset phone, please register it at: www.gigaset.com/register Your personal customer account gives you  
rapid access to our customer advisers, the online forum and much more. Visit our Customer Care pages: www.gigaset.com/service Here you will find:  
uFrequently asked questions uFree software and user manual downloads uCompatibility checks Contact our Customer Care staff: Couldn't find a solution in  
the FAQs section? We are happy to help..

. ... by eMail: www.

gigaset.com/contact ... by telephone: Service Greece +30 2111 98 1778 (0.

026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.) Please have your proof of purchase ready  
when calling. Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with  
the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the  
equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the  
conditions for warranty (repair or exchange of product). In order to make use of the warranty, the product purchaser is asked to submit a receipt which  
proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased. Template CES 131x195 1col,  
Version 1, 12.03.2012 el en 33 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / telefony.

fm / 9/4/12 Customer Service & Assistance Authorisation This device is intended for analogue phone lines in the Greek telephone net. Country-specific  
requirements have been taken into consideration. We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other  
relevant regulations laid down in Directive 1999/5/EC. A copy of the Declaration of Conformity is available at this Internet address: www.gigaset.com/docs  
Guarantee Certificate Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's  
Guarantee under the conditions set out below: u In the case of new devices and their components exhibiting defects resulting from manufacturing and/or  
material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another  
device reflecting the current state of the art, or repair the said device. @ @ @ @ @ installation, configuration, software downloads). @ @ u The purchase  
receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within  
two months of the Guarantee default becoming evident. u Ownership of devices or components replaced by and returned to Gigaset Communications shall  
vest in Gigaset Communications.

u This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH,  
Businesspark Marximum Objekt 2 / 3.Stock, Modecenterstraße 17, 1110 Vienna, Austria. u Any claims that differ from or extend beyond these mentioned in  
this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be  
liable for any loss of business, profits or data, additional software loaded by the customer or other information.

@ @ @ @ @ @ @ u Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair. u  
The above provisions do not imply a change in the burden of proof to the detriment of the customer. To invoke this Guarantee, please contact the Gigaset  
Communications telephone service. The relevant number is to be found in the accompanying user guide. Please note Signs of wear on the display and housing  
are excluded from the warranty.

Template CES 131x195 1col, Version 1, 12.03.2012 el en 35 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / S820-QUGSIX.fm / 9/4/12 Index  
Index A Activating/deactivating functions . . . . .

21 Activating/deactivating the display lock . . 20 Alarm . . . . .

. . . . .  
. . . . .  
. . . . .

. . 30 Approval . . . . .

. . . . .  
. . . . .  
. . . . .

34 Area code - prefix . . . . .

. . . . .  
. . . . .

. 12 B Baby phone, baby alarm . . . . .

. . . . . 30 Back function . . . . .

. . . . .  
. . . . .  
. . . . .

22 Base connecting to power/telephone network . . . . .

. . . . .  
. . . . .

. . . 6 setting . . . . .

. . . . .  
. . . . .  
. . . . .

. 9 setting up . . . . .

. . . . .

.....	.. 5 wall mounting ...
.....	.....
.....	..... 5 Battery charging .
.....	.....
.....	.....
.....	..... 8 charging status ....
.....	.....
.....	..... 15 inserting ....
.....	.....
.....	.....
.....	... 7 Bluetooth activating .....
.....	.....
.....	... 32 changing device name . .
.....	.....
.....	.. 32 list of known devices .....
.....	.....
.....	... 32 registering devices . .
.....	.....
.....	..... 32 searching for devices. ....
.....	.....
.....	.....
.....	. 32 starting a search .....
.....	.....
.....	32 Charger (handset) connecting .....
.....	.....
.....	.....
.....	..... 6 setting up .....
.....	.....
.....	.....
.....	..... 5 Charger cradle .
.....	.....
.....	.....
.....	... 4 Cloud synchronisation .....
.....	.....
.....	..... 14 Configuring QuickDial .
.....	.....
.....	.....
.....	..... 25 Contacts .....
.....	.....
.....	.....
.....	... 27 copying number from text .....
.....	.....
.....	.....
.....	..... 28 managing entries .....
.....	.....
.....	.....
.....	.. 27 saving entry .....
.....	.....
.....	.....
.....	..... 27 sending entry/list to handset .
.....	.....

... 28 sending to handset . . . . .	
. . . . .	
28 synchronising with PC or MAC . . . . .	
.. s. CD Correcting incorrect entries . .	
. . . . .	
22 Customer Care . . . . .	
. . . . .	
. . . . .	
... 33 Customer Service & Assistance . . . . .	
.. 33 D Deactivating baby phone . . . . .	
. . . . .	
. 31 Destination number (baby phone) . . . .	
.. 31 Dialling using the call list . . . . .	
. . . . .	
. 24 using the redial list . . . . .	
. . . . .	
. . . . . 23 with contacts . .	
. . . . .	
. . . . .	
. . . . . 24 Display icons .	
. . . . .	
. . . . .	
. . . . . 15 Dot, green . .	
. . . . .	
. . . . .	
. . . . . 23, 24 E Earpiece mode . . . . .	
. . . . .	
. . . . .	
. . . . . Earpiece volume . .	
. . . . .	
. . . . .	
. . . . . ECO DECT .	
. . . . .	
. . . . .	
. . . . .	
Eco mode+ (switching off wireless module) . . . . .	
. . . . .	
. . . . .	
. . . . . Entering special characters.	
. . . . .	
. . . . .	
. . . . . Entering text . . . . .	
. . . . .	
. . . . .	
. . . . . Entering umlauts. . . . .	
. . . . .	
. . . . .	
. . . . . 26 26 31 31 23 22 23 C Calendar . . . . .	
. . . . .	
. . . . .	
. . . . .	
. . . . . 29 Call accepting . . . . .	
. . . . .	
. . . . .	
. . . . .	

25 external . . . . .

.....

.....

..... 23 internal . . . . .

.....

.....

.....

... 25 Caller picture . . . . .

.....

.....

.. 27 Calling external . . . . .

.....

.....

... 23 internal . . . . .

.....

.....

.....

25 Changing settings user interface elements. . . . .

.....

.... 21 Template CES 131x195 1col, Version 1, 12.03.2012 G Getting started . . . . .

.....

.....

.... 5 Green dot. . . . .

.....

.....

... 23, 24 Group call . . . . .

.....

.....

..... 25 Guarantee Certificate . . . . .

.....

.....

..... 34 36 el en Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / S820-QUGSIX.



**You're reading an excerpt. [Click here to read official SIEMENS GIGASET S820 user guide](http://yourpdfguides.com/dref/4574913)**  
<http://yourpdfguides.com/dref/4574913>

. . . . .  
    . 20 connecting charger . . . .  
    . . . . .  
    . . . . . 6 earpiece volume .  
    . . . . .  
    . . . . .  
    . . . 26 in idle status . .  
    . . . . .  
    . . . s. Poster, 1, 13 loading caller pictures . . . . .  
    . . . . .  
    . . . . . s.  
    CD loading pictures . . . . .  
    . . . . .  
    s. CD loading ring tones . . . .  
    . . . . .  
    . . . . . s.  
    CD muting . . . . .  
    . . . . .  
    . . . . .  
    . . . . . 26 paging . . .  
    . . . . .  
    . . . . .  
    . . . . .  
    . . . . . s. CD registering multiple handsets . . .  
    . . . . . s. CD setting . . . . .  
    . . . . .  
    . . . . .  
    . . . . .  
    . . . 9 setting up . . . . .  
    . . . . .  
    . . . . .  
    . . . . . 7 speaker volume .  
    . . . . .  
    . . . . .  
    . . . . 26 using it as a baby phone .  
    . . . . .  
    . . . 30 Handset + base . . . . .  
    . . . . .  
    . . . . .  
    . . . . 8 Handsfree volume . . . . .  
    . . . . .  
    . . . . .  
    26 Hearing aids . . . . .  
    . . . . .  
    . . . . .  
    . 4 M Making calls accepting a call . . . . .  
    . . . . .  
    . . . . .  
    . 25 external . . . . .  
    . . . . .  
    . . . . .  
    . . . . . 23 internal . . .

.....	
.....	
.....	
... 25 Making internal calls .....	
.....	
. 25 Marked characters .....	
.....	
.....	
23 Medical equipment .....	
.....	
.....	
4 Menu key .....	
.....	
.....s.	
Poster, 1 Menu pages .....	
.....	
.....s.	
Poster Menu tree .....	
.....	
.....	
..... 17 Menu, setting options .....	
.....	
.s. Poster, 17 Message pop-up .....	
.....	
.....s. Poster Messages page .....	
.....	
.....	
.....s. Poster Mini USB connection socket .....	
.....	
.....	
.. 1 Mounting the base on the wall .....	
.....	
.. 5 Muting the handset .....	
.....	
26 N Network services .....	
.....	
.....	
. Number as destination for baby phone .....	copying to contacts .
.....	
.....	
..... saving in contacts .....	
.....	
.....	
... Numbers entering ..	
.....	
.....	
..... 26 31 28 27 22 I Icons options bar.	
.....	
.....	
.....	
... 15 status bar .....	
.....	
.....	
..... 15 Idle display ..	
.....	
.....	

.. s. Poster, 1, 13 Idle status, returning to ..	.....
.... 20 Incorrect entry correction .....	.....
... 22 Installation wizard ..	.....
..... 9 Internal call.	.....
..... 25 O One touch call .....	.....
..... 25 Opening the submenu ..	.....
.... 22 Options .	.....
.. 22 Options bar ...	.....
..... 22 icons ...	.....
..... 15 Overview of handset .....	.....
.. s. Poster, 1 K Keypad/display lock on/off .	.....
1, 20 Keys end call/end key .....	.....
.. s. Poster, 1, 23 handset ...	.....
.... s. Poster, 1 menu key .....	.....
..... s. Poster, 1 paging key (base) .	.....
... 2 talk key ..	.....
.. s. Poster, 1 P Package contents ..	.....
.... 5 Paging .....	.....
.... 2 Paging key .....	.....

	. 2 Prefix for area code . . . . .
	.....
	.....
	12 Template CES 131x195 1col, Version 1, 12.03.2012 L List cleaning up . . . . .
	..... 27, 29, 30 known devices (Bluetooth) .
	.....
	.....
	32 Lock activating/deactivating . . . . .
	..... 20 Lower/upper case . . . . .
	.....
	.....
...	23 Q QuickSync (software for Windows and Mac) . . s. CD el en 37 Gigaset S820 QUG / Greek en / A31008-M2404-T101-8U43 / S820-QUGSIX.fm / 9/4/12 Index R Radiation . .
	.....
	.....
	.....
	..... 31 Range . . . . .
	.....
	.....
	..... 5 Rubber seal . . . . .
	.....
	.....
	.....
	.. 7 U Upper/lower case . . . . .
	.....
	.. 23 USB connection socket . . .
	.....
	..... 1 USB connection, rubber seal .
	.....
	.. 7 User interface elements . . . . .
	.....
	..... 21 Using the redial list . . . . .
	.....
	.....
	23 Using the telephone . . . . .
	.....
	... 20 S Safety precautions . . . . .
	.....
	.....
	.... 4 Selection fields . . . . .
	.....
	.....
..	22 Sending complete contacts to handset . . .
.....	28 contacts entry to handset . . . . .
.....	28 Setting an appointment . . .
	.....
	.....
..	29 Setting the area code . . . . .
	.....
	.....
	9 Setting the country . . . . .
	.....
	.....



9	Setting the date . . . . .	
	. . . . .	
	. . . . .	
. . . 9	Setting the display language . . . . .	
	. . . . . 9	Setting the time . . . . .
	. . . . .	
	. . . . .	
. . . . . 9	Setting up, handset . . . . .	
	. . . . .	
	. . . . .	
. . . 7	Settings menu . . . . .	
	. . . . .	
. . . . . s.	Poster, 17 Side keys . . . . .	
	. . . . .	
	. . . . .	
	. . . . .	
. . s.	Poster, 1 Signal strength . . . . .	
	. . . . .	
	. . . . .	
. . . . . 15	SMS . . . . .	
	. . . . .	
	. . . . .	
. . . . . 28	deleting . . . . .	
	. . . . .	
	. . . . .	
. . . . . 29	reading . . . . .	
	. . . . .	
	. . . . .	
. . . . . 29	sending . . . . .	
	. . . . .	
	. . . . .	
. . . . . 28	writing . . . . .	
	. . . . .	
. . . . . 28	Snooze mode (alarm) . . . . .	
	. . . . .	
	. . . . .	
. . . . . 30	Speaker . . . . .	
	. . . . .	
	. . . . .	
	. . . . .	
25	Status bar, icons . . . . .	
	. . . . . s.	
Poster, 1, 15	Status page . . . . .	
	. . . . .	
	. . . . . s.	
Poster	Switch . . . . .	
	. . . . .	
	. . . . .	
	. . . . .	
	. . . . .	
21	Switching microphone (handset) on/off . . . . .	
26	Switching off wireless module . . . . .	

.....  
.. 31 Synchronising directory .....

..... 14 Synchronising Google contacts ...  
.....  
. 14 Template CES 131x195 1col, Version 1, 12.03.2012 V VIP ring tone ..  
.....

.....  
.. 27 Volume handsfree/earpiece volume of handset ...  
.....  
.....

.. 26 Warranty .....

.....  
.....  
..... 34 Writing (SMS).  
.....

.....  
.....  
.....  
... 28 T Text message, see SMS Time, setting .....

.....  
.....  
... 9 Tones + signals ..  
.....

.....  
. 14 Touchscreen ....  
.....  
.....

..... 1 operating ...  
.....  
.....  
.....

.. 21 All rights reserved. Rights of modification reserved. 38 el en .



**You're reading an excerpt. Click here to read official SIEMENS  
GIGASET S820 user guide**  
<http://yourpdfguides.com/dref/4574913>