



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for SIEMENS GIGASET SL1. You'll find the answers to all your questions on the SIEMENS GIGASET SL1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SIEMENS GIGASET SL1 User guide SIEMENS GIGASET SL1 Operating instructions SIEMENS GIGASET SL1 Instructions for use SIEMENS GIGASET SL1 Instruction manual SIEMENS GIGASET SL1

Gigaset

EN Dear Customer,
Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continues the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.
We hope you enjoy your Gigaset.

DE Sehr geehrte Kunden, sehr geehrter Kunde,
die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführt. Ewige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.
Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.

FR Chère Cliente, Cher Client,
la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuit elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.
Nous vous souhaitons beaucoup d'agréments avec votre Gigaset.

IT Gentile cliente,
la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.

NL Geachte klant,
Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft voortgezet. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.
Wij wensen u veel plezier met uw Gigaset.

ES Estimado cliente,
la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.
Le deseamos que disfrute con su Gigaset.

PT Scares clientes,
Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.
Desejamos que tenham bons momentos com o seu Gigaset.

Issued by
Gigaset Communications GmbH
Schlierenstr. 66, D-42699 Bocholt
Gigaset Communications GmbH is a trademark
licensee of Siemens AG

DA Kære Kunde,
Gigaset Communications GmbH er retlig arvtager af Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videregiver Siemens AGs Gigaset-forretninger. Siemens AG eller SHCs eventuelle forklaringer i betjeningsvejledningen skal derfor forstås som Gigaset Communications GmbHs forklaringer.
Vi håber, du får meget glæde af din Gigaset.

FI Arvoisa asiakkaamme,
Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) yrityksen oikeudenomistaja, joka jatkaa puolestaan Siemens AG:n Gigaset-tuotemerkkisiä käyttöoppaita mahdollisesti esittävistä Siemens AG:n tai SHC:n selosteista on tämän vuoksi ymmärrettäväksi Gigaset Communications GmbH:n selosteina.
Toivomme teille paljon iloa Gigaset-laitteestanne.

SV Kära kund,
Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedriv Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.
Vi önskar dig mycket nöje med din Gigaset.

NO Kjære kunde,
Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur viderefører Gigaset-geopferen i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i brukerveiledningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.
Vi håper du får stor glede av din Gigaset-enhet.

EL Αγαπητέ πελάτη, κεντρική είδηση,
η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εταιρική διαχείριση της Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης, θεωρούνται κατά συνέπεια δηλώσεις της Gigaset Communications GmbH.
Σας ευχόμαστε καλό άνοιξιμό με τη συσκευή σας Gigaset.

HR Poštovani korisniče,
Gigaset Communications GmbH pravni je nasljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.
Nadamo se da će zadovoljstvom koristiti svoj Gigaset uređaj.

SL Spoštovani kupci!
Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC). Al naslednje dejavnosti znamko Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabo torej veljajo kot izjave podjetja Gigaset Communications GmbH.
Želimo vam veliko užitek ob uporabi naprave Gigaset.

© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)
<http://yourpdfguides.com/dref/3956125>

Manual abstract:

@@@We hope you enjoy your Gigaset. @@@@Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset. Chre Cliente, Cher Client, la socit Gigaset Communications GmbH succde en droit Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-mme les activits Gigaset de Siemens AG. Donc les ventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent tre comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrment avec votre Gigaset. Gentile cliente, la Gigaset Communications GmbH successore della Siemens Home and Office Communication Devices GmbH & Co. @@@@Le auguriamo tanta soddisfazione con il vostro Gigaset.

@@@@Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.

Wij wensen u veel plezier met uw Gigaset. Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continu el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.

SCaros clientes, Gigaset Communications GmbH a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negcios Gigaset, da Siemens AG. Quaisquer declaraes por parte da Siemens AG ou da SHC encontradas nos manuais de utilizao devero, portanto, ser consideradas como declaraes da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.

DA Kre Kunde, Gigaset Communications GmbH er retlig efterflger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreftrte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forst som Gigaset Communications GmbHs forklaringer. Vi hber, du fr meget glde af din Gigaset. Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yrityksen oikeudenomistaja, joka jatko puolestaan Siemens AG:n Gigaset-liiketoimintaa. Kyttoppaissa mahdollisesti esiintyvt Siemens AG:n tai SHC:n selosteet on tmn vuoksi ymmrrttv Gigaset Communications GmbH:n selosteina. Toivotamme Teille paljon iloa Gigaset-laitteestanne. Kra kund, Gigaset Communications GmbH vertar rtigheterna frn Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla frklaringar frn Siemens AG eller SHC i anvandarhandboken gller drfr som frklaringar frn Gigaset Communications GmbH.

Vi nskar dig mycket nje med din Gigaset. Kjre kunde, Gigaset Communications GmbH er rettslig etterflger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreftrte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor forst som meddelelser fra Gigaset Communications GmbH. Vi hper du fr stor glede av din Gigaset-enhet. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Gigaset Siemens AG. Siemens AG SHC Gigaset Communications GmbH. Gigaset. Postovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co.

KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumaciti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset ureaj. Spostovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG.

Vse izjave podjetja Siemens AG ali SHC v prirocnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH. Zelimo vam veliko koristkov ob uporabi naprave Gigaset. FI DE FR SV NO IT EL NL HR ES SL PT Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability. Rights of modifications reserved.

www.gigaset.com CS Vzen zkaznci, spolecnost Gigaset Communications GmbH je prvnm nstupcem spolecnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kter dle pejala segment produkt Gigaset spolecnosti Siemens AG. Jakkoli prohlsen spolecnosti Siemens AG nebo SHC, kter naleznete v uzivatelskch pruckch, je teba povazovat za prohlsen spolecnosti Gigaset Communications GmbH. Doufme, ze jste s produkty Gigaset spokojeni. Vzen zkaznk, Spolocnos Gigaset Communications GmbH je prvny nstupcom spolocnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktor zasa pokracovala v cinnosti divzie Gigaset spolocnosti Siemens AG. Z tohto dvodu je potrebn vsetky vyhlshenia spolocnosti Siemens AG alebo SHC, ktor sa nachdzaj v pouzvatelskch pruckch, chpa ako vyhlshenia spolocnosti Gigaset Communications GmbH. Verme, ze budete so zariadenm Gigaset spokojn.

Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rndul su, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmatii efectuate de Siemens AG sau SHC i incluse n ghidurile de utilizare vor fi, prin urmare, considerate a aparine Gigaset Communications GmbH. Sperem ca produsele Gigaset s fie la nlinea dorinelor dvs. Postovani potrosacu, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu nai u korisnickim uputstvima treba tumaciti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ete uzivati u korisenju svog Gigaset ureaja. , Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), Siemens AG.

, Siemens AG SHC, , Gigaset Communications GmbH. Gigaset. Tisztelt Vsr! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) trvnyes jogutdja a Gigaset Communications GmbH, amely a Siemens AG Gigaset zletgnak utdja. Ebb! kvetkezzen a Siemens AG vagy az SHC felhasznli kziknyveiben tallhat brmely kijelentst a Gigaset Communications GmbH kijelentsnek kell tekinteni.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)
<http://yourpdfguides.com/dref/3956125>

Remljk, megelgedssel hasznlja Gigaset kszlkt. PL SK Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobierc prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktra z kolei przejl segment produktw Gigaset od firmy Siemens AG. Wszelkie owiadczenia firm Siemens AG i SHC, ktre mona znale w instrukcjach obslugi, naley traktowa jako owiadczenia firmy Gigaset Communications GmbH. yczymy wiele przyjemnoci z korzystania z produktw Gigaset.

Sayin Mterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset iletmesini yrten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kilavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapilmi bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı mit ediyoruz. ! Gigaset Communications GmbH Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), , Gigaset Siemens AG. , Siemens AG SHC , Gigaset Communications GmbH. , Gigaset . TR RO RU SR BG HU Issued by Gigaset Communications GmbH Schlavenhorst 66, D-46395 Bocholt Gigaset Communications GmbH is a trademark licensee of Siemens AG Gigaset Communications GmbH 2008 All rights reserved. Subject to availability.

Rights of modifications reserved. www.gigaset.com s Be inspired ENGLISH Brief overview Signal strength 100 % i 75 % 50 % poor signal \ no signal (flashes) Talk key Answer a call Initiate dialling Switch from handsfree to "earpiece" mode Control key Opens the menu, directory, voice dialling. Navigation in the input field Handsfree key Switch from "earpiece" to handsfree mode Lights up: Handsfree is activated Flashes: incoming call, automatic last number redial Open directory Key 1 Select network mailbox/ answering machine (press for approx. 2 sec.) Star key Ringer on/off (press for approx. 2 seconds) Toggles between upper/ lower case and digits for text input Recall key Insert a dial pause (hold key down) Illustration of a handset that is registered to a base with SMS functionality. INT 1 20.05.

03 Display (display screen) Charge status = flat U fully charged = flashes: battery is almost flat or is charging Current functions and display keys The display keys give you access to the functions shown in the display. End call key, On/Off key 09:45 V SMS End call Cancel function One menu level back (short press) Back to idle status (press for approx. 1 second) Handset on/off (press for approx. 2 seconds) Message key Access to calls and messages list Flashes: new messages and calls Hash key Keypad lock on/off (press for approx. 1 second) Speed dial list key Open the speed dial list (short press) Microphone Socket for headset and PC interface 2 Contents Contents Brief overview .

.....

.....

.....

.... 2 Safety precautions .

.....

.....

.....

5 Preparing to use your phone

.....

..... 6 Preparing to use the handset . .

.....

.....

.....

.....

.....

... Registering . .

.....

.....

.....

.....

.....

.....

.. Changing the display language . . .

.....

.....

.....

.....

.....

..... Changing the base

.....

.....

.....

.....

.....

.....

... *Attaching the belt clip* ..

.....
.....
.....
.....

..... *Activating/deactivating the handset* ..

.....
.....
.....

.. *Activating/deactivating the keypad lock* ...

.....
.....
.....

... *6778888 Operating the telephone, menu guidance*

9 Keys

.....
.....
.....
.....
.....

.... *9 Main menu*

.....
.....
.....
.....

.. *10 Date and Time*

.....
.....

. *11 Setting the date and the time*

.....
.....

.... *11 Setting the alarm clock* .

.....
.....
.....

.. *11 Setting an appointment*

.....
.....

.....
.....
.....
12 Making calls.....

.....
.....
.....
.....

.....

.. 31 4 Safety precautions Safety precautions \$! Only use the power supply unit supplied, as indicated on the underside of the device. Fit only the recommended rechargeable battery (page 26)! Do not use any other type of battery or a non-rechargeable battery, as this could damage health and cause personal injury. < OE Insert the rechargeable battery ensuring correct polarity, and use it as directed in these instructions.

The operation of medicish). Select a language and confirm. Long press (back to idle status). OK a You have selected a language in error: Press v M 2, select the correct language with s and then press OK to confirm. 7 Preparing to use your phone Changing the base If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (Best Base).

v; s H/Set Settings OK ; s Select Base OK ; s (select registered base or Best Base) OK . Attaching the belt clip Push the belt clip onto the back of the handset until the lugs click into the recesses on either side of the handset. Activating/deactivating the handset To activate: press the 'end call' key a and hold. To deactivate: press the 'end call' key a again in the idle status and hold. The handset activates automatically when placed in the charger. Activating/deactivating the keypad lock Press the hash key R and hold (the icon appears in the display). To deactivate/unlock: press the hash key R again and hold. The keypad lock deactivates automatically when you receive a call. It re-activates when the call is finished. i When the keypad lock is active, you cannot even call emergency numbers.

8 Operating the telephone, menu guidance Operating the telephone, menu guidance Keys Control key The control key has four black arrows and associated icons. A certain function is activated depending on which side of the key you press. In the operating instructions, the side you must press is highlighted in black, e.g. key v for right = Open Menu. You can also use the control key to execute many of the functions of the right-hand display key. Example: Control key

Different functions of the control key: t s v u In the idle status Initiate voice-activated dialling (long press) Open directory Open the menu Open list of handsets In lists and menus Scroll up Scroll down In an input field Move the cursor up a line Move the cursor down a line Confirm the selected option Move the cursor to the right (same as OK) Go back one menu level, or Move the cursor to the left cancel Display keys The display keys are the horizontal rocker keys just below the display. Their function changes depending on the particular operating situation. The current function is shown in the display directly above the key to which it relates. Example: SMS Display keys 9 Operating the telephone, menu guidance The various icons have the following meanings when the keys are pressed: f Last number redial key: Open the list of the last 10 numbers you dialled.



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)
<http://yourpdfguides.com/dref/3956125>

OK key: Confirm menu function or confirm an input and store. **Menu key:** Open the main menu when in idle status Open a status-dependent menu while making a call. **Delete key:** Delete input from right to left one character at a time. **Escape key:** Go back one menu level, or cancel the operation. Open email directory.

OK C Reverting to idle status from anywhere in the menu Press the 'end call' key a for around 1 second, or do not press any key. The display automatically reverts to the idle status after 2 minutes. Changes which you have not confirmed or saved by pressing OK, Yes, Save, Send or with Save Entry OK will be lost. **Main menu** To open the main menu, press the right side of the control key v with the phone in the idle status and scroll to the required option with s. 1 2 3 4 5 6 7 8 9 SMS Select Services Add.

Features Calendar/Clock Audio Settings Call Charges H/Set Settings Base Settings Answer Machine The menu options that are available will depend on your base. 10 **Date and Time** Date and Time Setting the date and the time Correct date and time settings are essential if you want to know exactly when calls were received. v; s Calendar/Clock OK; s Date/Time OK; ~ (enter day/month/year); s (to the next line); ~ (enter hours/minutes); s (to the next line if necessary); r (select the 12 or 24 hour clock display); Save, a (back to idle status). Setting the alarm clock Precondition: The date and time have already been set (page 11). Activating and setting the alarm clock v; s Calendar/Clock OK; s Alarm Clock OK; r (select On); s ~ (enter the wake-up time); Save; a (return to idle status). @@A wake-up call will only work when the handset is in the idle status, it will not work when the Room Monitor or Walk and Talk functions are activated, or during a call or an automatic redial. To find out how to set the volume and melody, turn to page 22. Deactivating the alarm clock The alarm clock is set to a particular time but you do not want it to ring. v; s Calendar/Clock OK; s Alarm Clock OK. @@OK; s Appoint.

2 (example) OK. @@Once set, an appointment is displayed with the icon. @@@@Long press (back to idle status). ... @@@@To do this, press S for around 2 seconds. @@Or: Press u 2 (example). @@@@Press c (Talk key) (or display key Accept or handsfree key d). @@If the ringer is intrusive, press the display key Silence.

You can take the call so long as it is displayed on the screen. **Handsfree** Activating/deactivating handsfree Before you dial: ~ (enter the number); press d (the handsfree key). During a call: press d (the handsfree key). To deactivate: press c (the Talk key). @@@@You open the directory with the s key.

@@@You open the speed dial list with the C key. @@@@Press Save.; press a and hold (return to idle status).

@@@Scroll to the entry with s and then press v to open the menu. Use the s key to scroll to the function you require.

@@You can then tell who is calling you from the ringer melody. Precondition: Calling Line Identification. @@Stored voice patterns and speed dial numbers are not sent. The VIP settings are sent depending on the handset. @@@@To do this, you must first store a voice pattern, i.e. the name which you speak will be stored in the handset. Up to four users can store/record a voice pattern per entry. @@as User 2. A maximum of 23 voice patterns can be stored for directory entries.

An entry stored with a voice pattern is indicated by in the voice directory. Recording a voice pattern for an existing directory entry Record your voice pattern in quiet surroundings (holding the handset about 25 cm away). Step 1: Open the directory for voice-activated dialling: s (open directory); s(select entry); View; s User 2 (example) OK. Step 2: Begin recording: record; OK (Confirm the display prompt). Speak the name when prompted to do so by the display. Repeat the name when prompted again to do so. Your recording is stored automatically. Press a and hold (return to idle status). A message tells you if your speech pattern is too much like another user's. Close this message with , go back to the start of the voice pattern recording sequence and repeat the recording.

Using voice-activated dialling: Press t and hold and speak the name. Phone announces the caller's name When you receive an external call, you hear the ringer and the telephone announces the caller's name. Preconditions: Calling Line Identification. A voice pattern is stored (page 16). Activating/deactivating the name announcement v (open menu); s Audio Settings OK; s Ringer Settings OK; Ext.

Calls OK; 2x s (to the next-but-one line); activate/deactivate r (Announce); Save; press a and hold (return to idle status). 16 Using the directory and other lists Play the voice pattern Open the directory for voice-activated dialling (see Step 1, page 16). Now: s (select an entry); Play; press a and hold (back to idle status). Changing or deleting voice patterns Open the directory for voice-activated dialling (see Step 1, page 16). Now: s (select an entry); v (open menu); Record Name OK or s Delete Name OK; press a and hold (return to idle status).

Deleting a voice pattern does not affect the telephone number or name. The voice patterns of other users are also unaffected. Changing a user name s (open directory); s (select an entry); View; s User 2 (example); Edit; ~ (enter name) Save; press a and hold (return to idle status). Linking a call-by-call number with a phone number This function can be used to put a network provider's prefix (which is stored in the speed dial list) in front of the telephone number ("linking"). C (open the speed dial list); s (select an entry); (open menu); Display Number OK; s (open directory); s (select an entry) OK; or ~ enter the number; c. Last number redial list The last number redial list contains the ten last dialled numbers. Manual last number redial (open last number redial list); s (select an entry); c. Automatic redial With this function the number is automatically dialled every 20 seconds. When the other party answers the call, press c (the Talk key). If the call is not answered, ringing stops after about 30 seconds.

The function is cancelled after ten failed attempts. Press a (the 'end call' key); (open last number redial list); v (open menu); Automatic Redial OK. To cancel the redial: press the display key Off or any key. 17 Using the directory and other lists Managing entries in the last number redial list You can use the following menu functions: (open the redial list); s (select an entry); v (open menu); s (select function). Automatic Redial Display Number Copy to Directory Delete Entry Delete List Email directory You store email addresses in the email directory. You can store a maximum of 200 entries in the directory, email directory and speed dial list together. Email directory entries are managed in the same way as normal phone directory entries (page 15). Storing a new email address Step 1: Open the email directory: s (open directory) s E-mail Directory OK.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3956125)

[GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)

<http://yourpdfguides.com/dref/3956125>

Step 2: Create an email entry: New Entry OK ; ~ (enter address); (open menu); (select s, ".", "@" or the predictive text function as required OK). With the predictive text activated, press R once long and once short. Step 3: Save an email entry: (open menu); Save Entry OK ; press a and hold (return to idle status). When you have selected an entry, press the display key View, then Edit and enter the address. Save as described. Display available memory The memory space is divided up between the directory, the speed dial list (page 14) and the email directory (page 18).

The available memory of all these lists is displayed. s (open directory); s (select entry); v (open menu); s Available Memory OK ; press a and hold (return to idle status). 18 Using several handsets Using several handsets Transferring a call to another handset u (open internal list); select s (a particular handset or Call All); OK . The internal user answers: press a ('end call' key). If he does not answer or is busy, the call will come back to you automatically (Recall appears in the display).

Internal consultation calls You can make an internal call while an external call is in progress. u (open internal list); s (select handset), OK . @@Press the display key Accept or Reject. @@@@The handset should be between 1 and 2 metres away from the baby. The microphone must be directed towards the baby. @@The display and the key pad are not illuminated. @@@@@sensitivity and phone line. @@@@@Features OK ; Room Monitor OK . @@Once the room monitor is activated, switch directly to the room monitor setting with v (open menu). Deactivating the room monitor You can deactivate the room monitor remotely (depending on the base).

Take the call from the room monitor and press O R. The room monitor function will deactivate around 90 seconds after the call ends. The room monitor will make no further calls. The other room monitor functions on the handset (e.g. no ringer) will remain activated until you press the display key Off on the handset that is in the baby's room. i To reactivate the room monitor function with the same telephone number, you must turn on the activation again and save with Save. Setting the Walk and Talk mode The Walk and Talk function allows two handsets (maximum range 300 metres) to call each other no matter how far they are from the base. Precondition: Both handsets have been registered to the same base (recommended for the room monitor function) or Both handsets are registered to different bases and both are set to Best Base (page 8) or One of the handsets is not registered to any base and the registered handset is set to Best Base or Neither handset is registered to a base. In Walk and Talk mode the handsets cannot be reached by incoming calls.

The handset operating times are greatly curtailed. 20 Using several handsets Activating/deactivating the Walk and Talk mode v (open menu); s Add. Features OK ; s Walk and Talk OK . To deactivate: press the display key Off. Press c (Talk key) or d (handsfree key) The call will go to all handsets that are in Walk and Talk mode.

The loudspeaker volume and the advisory tones are set in exactly the same way as if your handsets were in range of the base (page 22). The ringers cannot be set in Walk and Talk mode. The ringer (page 23) and keypad lock (page 8) can be activated/deactivated in the Walk and Talk mode. To open the menu, press the display key . i The Walk and Talk mode is retained even when you switch your handset off and back on.

Using a handset in Walk and Talk mode as a room monitor (open menu); s Room Monitor OK ; r (select On); s (to the next line); select r (Low or High); Save. The room monitor will only call handsets that are in the Walk and Talk mode. W Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line. The distance between the handsets should not now be changed (range). Press the display key Off on the room monitor handset to deactivate the room monitor. The handset returns to the normal Walk and Talk mode. 21 Handset settings Handset settings Activating/deactivating Auto Answer If you have activated this function, when you get a call you can simply lift the handset out of its base or the charger without having to press the Talk key (the default setting is On). v (open menu); s H/Set Settings OK ; Auto Answer OK (= On); press a and hold (return to idle status).

Adjusting the loudspeaker volume You can adjust the handsfree volume on five levels and the earpiece volume on three levels you can even do this while an external call is in progress. v (open menu); s Audio Settings OK ; Handset Volume OK ; r (select handsfree volume); s (to the next line) r (select earpiece volume); Save; press a and hold (return to idle status). Ringer echo You can enhance the sound quality of the long ringer melodies (4-10). v (open menu); s Audio Settings OK ; s Ringer Echo OK (= On); press a and hold (back to idle status). Changing the ringer tone You can choose from six volumes and 26 melodies (including 16 polyphonic melodies). Polyphonic melodies are only available if they have previously been recorded with the Sound Manager or downloaded on the PC interface. Settings for external calls, time control and name announcement v (open menu); s Audio Settings OK ; s Ringer Settings OK ; Ext. Calls OK ; r (select volume); s (to the next line); r (select melody); s (to the next line if necessary); r (activate name announcement, page 16). Activating time control Select Time C.; r (select Time ctrl: On); s go to the line From: (4-digit input of the time period); s go to the line Until: (4-digit input of the time period); s r (enter ringer volume); Save (save time control); Save again (save setting); press a and hold (back to idle status).

Individual settings for internal calls, wake-up and appointments v (open menu); s Audio Settings OK ; s Ringer Settings OK ; s (select function) OK ; r (select volume); s (to the next line); r (select melody); Save (With the All setting you must also confirm the prompt with Yes.); press a and hold (return to idle status).

22 Handset settings Activating/deactivating the ringer All handsets ring when there is an incoming call. To deactivate the ringer: press the star key P and hold. The icon appears in the display.

To activate the ringer: press the star key P and hold. i To cancel the ringer for the current call, press the display key Silence. Activating/deactivating the alert tone When you deactivate the ringer you can activate an alert tone. When you get a call, you will hear a short tone (beep) instead of the ring tone. Press the star key P and hold and within 3 seconds press the display key Beep on.

You will now see in the display. To deactivate: press the star key P and hold. Vibration alarm Incoming calls and other messages are indicated by vibration. This setting is separate from the ringer settings. v (open menu); s Audio Settings OK ; s Silent Alert OK (= On); press a and hold (back to idle status).



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)
<http://yourpdfguides.com/dref/3956125>

Sound Manager You can record polyphonic melodies (max. length 4 seconds) or dub them using a data cable (page 28). You can store up to 16 melodies. Record a melody v (open menu); s Audio Settings OK ; s Sound Manager OK ; <New Sound> OK ; Record Sound? OK ; Press End or wait 4 seconds; Save; Edit Entry (enter melody name) Save; press a and hold (return to idle status). Play a melody v (open menu); s Audio Settings OK ; s Sound Manager OK ; s (select melody); Play; press a and hold (return to idle status).

Edit entry v (open menu); s Audio Settings OK ; s Sound Manager OK ; s (select melody); ; Volume OK (adjust volume) or s Edit Entry OK (edit name) or s View Entry OK (view filename) or s Delete Entry OK ; press a and hold (return to idle status). 23 Handset settings Activating/deactivating advisory tones Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated individually (the default setting is On). Key click (every key press is confirmed), Acknowledge tones (Confirmation tone, Error tone, End of menu tone), Battery tone. v (open menu); s Audio Settings OK ; s Advisory Tones OK ; r (activate Key Tones:); s (to the next line) r (activate Confirm.); s (to the next line); r (for Battery: select On, Off or During Call); Save; press a and hold (return to idle status). Restoring the handset factory settings You can reset individual settings and changes you have made. This will not affect entries in the directory, the calls list, the email directory or the speed dial list, the handset's registration to the base or screensavers and melodies that you have loaded. Press a to cancel the reset. v (open menu); s H/Set Settings OK ; s Reset Handset OK ; Yes (confirm the prompt); press a and hold (back to idle status) Factory settings of the handset Earpiece volume Handsfree volume Ringer volume Time control for ringer Ringer melody Name announcement Auto answer Battery tone/Key click/Confirmation tone Display language Alarm clock/appointment Appointment name Last number redial list Room monitor/room monitor sensitivity 1 3 5 deactivated Melody 1 deactivated activated activated country specific deactivated deleted empty deactivated/high page 22 page 22 page 22 page 22 page 22 page 16 page 22 page 24 page 7 page 11/ page 12 page 12 page 17 page 20 24 Appendix Appendix Care and contact with liquid ! Wipe the handset with a damp cloth (use no solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static. If the handset should come into contact with liquid, on no account switch the device on. Remove the battery immediately. Allow the liquid to drain out of the device, and then pat all parts of the device dry.

Keep the handset with the battery removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again. Customer Care Our online support on the Internet: www.my-siemens.com/customer-care If you need any repair work, or have a guarantee claim to submit, our Service-Center Ireland 18 50 77 72 77 will give you quick and reliable assistance.

Keep your till receipt handy. You will find more service numbers in the section entitled "Service" at the end of this booklet. Replacement or repair services are not offered in countries where our product is not sold by authorised dealers. Country-specific features have been taken into account. The SL1 handset is licensed throughout the EU and in Switzerland. The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive. Excerpt from the original declaration "We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured." Senior Approvals Manager The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

*25 Appendix Specifications Recommended battery Lithium-Ion (LiIon), 700 mAh (correct at time of going to press) The product is supplied with an approved battery only. Handset operating times/ charging time Capacity (mAh) 700 Standby time (hours) approx. 250 (10 days) Calling time (hours) approx. 15 Charging time (hours) approx. 2.5 These operating and charging times apply only when using the recommended battery. Character set chart Standard characters Press the relevant key repeatedly or hold it down: 1x Space 1 2 1 4 5 L M N O Q P R 2x 1 b e h k n q u x , 123 --> abc a d g j m p t w . Abc--> 123 c f i l 3x 4x 2 3 4 5 6 s 8 z ! / & 5x \$ 7 9 0 (6x +) 7x < 8x 9x : = > 10x 11 x 12 x 13 x 14 x o r v y ? \ % " ` ; _ # @ * Creating and editing text (without predictive text) The cursor is controlled with u v t s. Characters (to the left of the cursor) are deleted with fC . Characters are added to the left of the cursor. To switch from upper case (first letter upper case, all other letters lower case) to lower case, press P before you key in the letter. Pressing P again switches from lower case letters to digits. Press again to return from digits to upper case letters. The first letter of the name of directory entries is automatically capitalised, followed by lower case letters. 26 Appendix When you press a key and hold it, the characters of that key appear in the bottom display line and are highlighted one after the other.*

When you release the key the highlighted character is inserted into the input field. You can see in the display whether upper case, lower case or digits are selected: 'A' or 'a' appears on the bottom display line when you make an entry in the directory. Order of directory entries 1. Space (shown here as s) 2. Digits (09) 3.

Letters (alphabetical) 4. Other characters To work around the alphabetical order of the entries in the directory, insert a space before the name. This entry then goes to the first position (example: "sCarla"). You can also number the entries with digits (e.g. "1Jane", "2Mary", "3John"). Predictive text The EATONI predictive text helps you to write names (in the directory, speed dial list or email directory). Each key between Q and O is assigned several letters and characters which all appear on a selection line immediately above the display keys (beneath the text area) as soon as you press a key. When you are entering letters, the letter you are most probably looking for is reverse highlighted. This letter is at the beginning of the selection line and is transferred to the text area.

53 _____ abc Peter K KLJ5 The EATONI predictive text function is activated.



[You're reading an excerpt. Click here to read official SIEMENS](http://yourpdfguides.com/dref/3956125)

[GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)

<http://yourpdfguides.com/dref/3956125>

email address Selection line W If this letter is the one you want, confirm it by pressing the next key. @@@@v (open menu); s Predictive Text OK (= On); give the a 'end call' key a short press to return to the text field. Now enter your text. 27 Appendix PC Interface You can connect the SL 1 handset to your PC with a Siemens data cable. Your PC can now communicate with your SL 1 by means of the "Siemens Data Suite" software (downloaded free from <http://www.my-siemens.com/gigaset-sds>) and access the following handset parameters and lists: Read parameters Software version Type Manufacturer's code

Read/write access to The telephone directory The email directory The network provider list The appointments list The last number redial list Read/write access to other parameters Ringer settings Volume settings Load screensavers Load melodies Make and answer telephone calls Data transfer With some functions, large amounts of data are transferred between the handset and the external device (PC). In this case the handset switches to data transfer mode, and Data Transfer appears in the handset display. @@@@ To aim the cross-hairs, press: or To shoot the balloon down, press 5.

1 1 2 4 L MNO p 29 Appendix Warranty Certificate Ireland Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below: In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase. This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if: The device is opened (this is classed as third party intervention) Repairs or other work is done by persons not authorised by Siemens. Components on the printed circuit board are manipulated The software is manipulated Defects or damage caused by dropping, breaking, lightning or ingress of moisture.

This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.) Devices fitted with accessories not authorised by Siemens This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g.

installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident. Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens. This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 The Republic of Ireland. Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence. The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.

Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair. The above provisions do not imply a change in the burden of proof to the detriment of the customer. To make a claim under this Guarantee, please contact the Siemens helpdesk on 1850 777 277.

This number is also to be found in the accompanying user guide. 30 Index Index A Acknowledge tones.

.
... 24 Activate alarm clock . .

.
..... 11 appointment

.
... 12 keypad lock

.
. . 8 Walk and Talk . . .

.
..... 21 Activation handset.

.
. 8 Advisory tones

.
..... 24 Alarm clock . .

.
..... 11 Alert tone . .

.
.... 23 Anniversary .

.
..... 12 Appointment . .

.
..... 12 Auto answer

.

.....
22 D Date and time
.....
... 11 Date setting.
.....
.....
... 11 Deactivate appointment call
.....
..... 12 handset ...
.....
.....
..... 8 keypad lock .
.....
.....
... 8 ringer (handset) . .
.....
.....
... 23 wake-up call
.....
.....
. 11 Delete (voice pattern)
.....
... 17 Delete key
.....
.....
..... 10 Dialling pause
.....
.....
.. 13 Directory ...
.....
.....
..... 14 opening the
.....
.....
... 9 order of entries.
.....
..... 27 send an entry to a handset .
.....
.....
. 16 storing a number
.....
.....
14 Display 12/24 hour display
11, 12 changing language
.....
..... 7 keys
.....
.....
..... 9 memory .
.....
.....
.....
18 B Balloon Shooter
.....
..... 29 Battery charging
.....
.....
.....
.. 6 display ...
.....
.....
..... 6 inserting .
.....
.....

.....
 6 recommended battery
 26 Battery tone

 24 Belt clip .

 .. 8 Best base

 8 Block keypad lock .

 ... 8 E Earpiece mode.

 .. 2 Earpiece volume

 22 EATONI, see Predictive text Email directory ..

 18 End call

 ... 13 Enter appointment . .

 12 birthday/anniversary

 .. 12 wake-up time ...

 11 Enter birthday (as appointment) 12 Error/Error tone .

 24 Escape key.

 .. 10 C Call transfer ...

 19 Call waiting (internal call)

 19 Call-by-Call numbers
 14 Cancel (operation) ..

 .. 10 Care of the telephone ...

 25 Changing the base

 8 Character set chart .

 ... 26 Charging status display

 6 Confirmation tone.

 24 Consultation call (internal) 19 Control key ..

.....
.....
... 9 Cursor .
.....
.....
... 9 Customer Care ...
.....
.....
25 Customer Care (Service)
25 F Factory settings of the handset
.....
... 24 G Group call
.....
... 13 31 Index H Handset activate/deactivate .
.....
..... 8 belt clip ..
.....
.....
.....
8 change for best reception 8 change to another base .



[You're reading an excerpt. Click here to read official SIEMENS GIGASET SL1 user guide](http://yourpdfguides.com/dref/3956125)
<http://yourpdfguides.com/dref/3956125>

..... 8 list.
.....
.....
.....
..... 9 muting
.....
.....
..... 14 operating and charging times

..... 26 preparing to use.
.....
..... 6 register on another base. . .
..... 8 restore factory settings. . .

..... 24 use as room monitor . . .
.....
..... 19 Handset charging time . .
..... 26 Handsfree .

.....
.....
.....
13 Hash key

.....
..... 8 Hearing aids . .
.....
.....
..... 5 M Making calls.
.....
.....
..... 13 answering a call

..... 13 external . .
.....
.....
..... 13 internal .

.....
.....
.....
13 Medical appliances

..... 5 Melody polyphonic
.....
.....
..... 23 Memory.

.....
.....
..... 18 Menu back one menu level . .
.....

10 end tone.
.....
.....
..... 24 guidance through the menu 9 key . .

.....
.....
.....
..... 10 opening the

.....
..... 9 Microphone . . .

.....

 .. 2 Missed anniversary.

 .. 12 appointment

 12 Muting (handset) .

 14 I Internal calls.

 13 consultation .

 19 N Network provider (number list)
 .. 14 Number, see also Tel. Number or Entry 14 K Key 1 (fast access) ..

 2 Keys cancel .

 .. 10 control key.

 .. 9 display keys

 9 Escape/Menu/Delete/OK 10 key click.

 24 key press (confirmation tone) 24 keypad lock

 8 last number redial key

 10 O Open directory.

 9 menu

 9 Operating time in Walk and Talk mode.

 .. 20 of the handset

 .. 26 of the room monitor ...
 19 Operation (preparing to use your phone) .

 6 Order in directory.

 27 L Language, see Display Last number redial
 17 Last number redial list .

 17 List email directory.

.....	.. 18 handsets ...
.....
.....
.....	... 9 Loudspeaker volume
.....
.....	.. 22 P Pack contents.
.....
..... 6 PC Interface
.....
..... 28 Play (voice pattern)
.....
.....	17 Polyphonic melodies
.....
.....	.. 23 Power supply unit
.....
..... 5 Predictive text .
.....
..... 27 Preparing to use (the phone) ...
..... 6 Protective plastic film
.....
.....	... 6 32 Index R Reminder call .
.....
..... Ringer ...
.....
.....
.....
.....	Ringer echo
.....
..... Room monitor .
.....
..... 14 22 22 19 V Vibration alarm
.....
.....
.....	... 23 VIP (directory entry)
.....
..... 15 Voice patterns ...
.....
.....
..... 17 Voice-activated dialling
.....
..... 9, 16 Volume
.....
.....
..... 22 S Safety precautions ...
.....
.....	.. 5 Saving speed dial list entry ...
.....
..... 15 Select (menu option)
.....
..... 9 Select option (menu) ...
.....
.....
.....	9 Send a directory entry
.....
.....	.. 16 Service

.....

 25 Setting alarm clock

 11 appointment ..

 12 date

 ... 11 display language
 7 earpiece volume ..

 .. 22 loudspeaker volume.....

 22 ringer volume

 22 time

 ... 11 Signal strength ..

 . 2 Signal tone, see Advisory tones 24 Sound Manager

 .. 23 Specifications

 26 Speed dial key.

 14 Speed dial list ..

 . 14 store a number

 . 15 Storing directory entry.....

 .. 14 Switch off, see Deactivate ...
 11 W Wait melody.....

 14 Wake-up call

 11 Walk and Talk.....

 20, 21 Warning tone, see Advisory tones 24 Warranty

 . 30 T Talk

 .. 2 Telephone number pick from directory. . .

..... 15 store (directory).....

.....
14 Time setting

.....
..... 11 Tone error tone .

.....
.....
... 24 Tone (confirmation/error/batt./ end of menu).

..... 24 33 Service You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at: www.my-siemens.com.

com/customer-care. Abu Dhabi.....

.....
. 0 26 42 38 00 Argentina

..... 0 80 08 88 98 78 Australia ..

.....
... 18 00 62 24 14 Austria ..

.....
..... 05 17 07 50 04 Bahrain .

.....
.....
40 42 34 Bangladesh

..... 0 17 52 74 47 Belgium

.....
.....
0 78 15 22 21 Bosnia Herzegovina

.....
... 0 80 07 07 12 48 Brunei ..

.....
.. 02 43 08 01 Bulgaria.....

.....
02 73 94 88 Cambodia.....

..... 12 80 05 00 Canada

.....
1 88 87 77 02 11 China.....

..... 0 21 50 31 81 49 Croatia.....

.....
.. 0 16 10 53 81 Czech Republic

.. 02 33 03 27 27 Denmark.....

.....
.... 35 25 86 00 Dubai .

..... 0 43 96 64 33 Egypt ..

..... 0 23 33 41 11 Estonia.....

.....
.... 06 30 47 97 Finland.

09 22 94 37 00 France
.....
.. 01 56 38 42 00 Germany
.....
.. 01805 333 222 Greece
.....
. 0 80 11 11 11 16 Hong Kong
.....
. 28 61 11 18 Hungary
.....
. 06 14 71 24 44 Iceland
.....
..... 5 11 30 00 India
.....
..... 01 13 73 85 89 - 98 Indonesia
.....
. 0 21 46 82 60 81 Ireland
.....
.. 18 50 77 72 77 Italy
.....
..... 02 66 76 44 00 Ivory Coast
.....
.....
. 80 00 03 33 Jordan
.....
..... 0 64 39 86 42 Kenya
.....
.....
..... 2 72 37 17 Kuwait
.....
.....
.....
... 2 45 41 78 Latvia
.....
..... 7 50 11 14 Lebanon
.....
.....
..... 01 44 30 43 Libya
.....
.....
... 02 13 50 28 82 Lithuania
.....
..... 8 22 74 20 10 Luxembourg
.....
.....
.. 43 84 33 99 Macedonia
.....
..... 02 13 14 84 Malaysia
.....
.....
... 03 21 63 11 18 Malta
.....
..... 00 35 32 14 94 06 32 Mauritius
.....
.....
... 2 11 62 13 Mexico
.....
..... 01 80 07 11 00 03 Morocco
.....
.....

. . . . 22 66 92 09 Netherlands.

 0900-3333102 New Zealand
 08 00 27 43 63 Norway

 22 70 84 00 Oman

 . . 79 10 12 Pakistan

 . . 02 15 66 22 00 Philippines

 . 0 27 57 11 18 Poland

 . . 08 01 30 00 30 Portugal

 . . . 8 00 85 32 04 Qatar

 04 32 20 10 Romania

 . . 02 12 04 60 00 Russia

 (800) 200 10 10 Saudi Arabia

 0 22 26 00 43 Serbia

 01 13 22 84 85 Singapore

 . . . 62 27 11 18 Slovak Republic

 . . 02 59 68 22 66 Slovenia

 . . . 0 14 74 63 36 South Africa

 08 60 10 11 57 Spain

 . . . 9 02 11 50 61 Sweden

 0 87 50 99 11 Switzerland

 . 08 48 21 20 00 Taiwan

 . . 02 25 18 65 04 Thailand

 . . . 0 22 68 11 18 Tunisia

 0 71 86 19 02 Turkey

 0 21 65 79 71 00 Ukraine

 8 80 05 01 00 00 United Arab Emirates 0 43 31 95 78 United Kingdom

 . 0 87 05 33 44 11 USA

.....
... 1 88 87 77 02 11 Vietnam
.....
.....
. 45 63 22 44 34 .



[You're reading an excerpt. Click here to read official SIEMENS
GIGASET SL1 user guide
http://yourpdfguides.com/dref/3956125](http://yourpdfguides.com/dref/3956125)